

**PHILIPS**

Television

7419 Series

# User Manual

65PUG7419

Register your product and get support at  
[www.philips.com/TVsupport](http://www.philips.com/TVsupport)

# Content

---

<b>1 Home Screen</b>	<b>4</b>	<b>9.1 Network and Internet</b>	<b>23</b>
1.1 Introduction	4	9.2 Google Account	24
1.2 Dashboard and Settings	4	9.3 Internet	25
1.3 Google TV and Basic Mode	4		
1.4 Open the Home Screen	5	<b>10 Sources</b>	<b>26</b>
		10.1 Switch to a device	26
<b>2 Setting Up</b>	<b>6</b>	10.2 AirPlay and HomeKit	26
2.1 Read the Safety Instructions	6		
2.2 TV Stand and Wall Mounting	6	<b>11 Quick Menu and Frequent Settings</b>	<b>27</b>
2.3 Tips on Placement	6		
2.4 Power Cable	6	<b>12 Display and Sound</b>	<b>28</b>
2.5 Antenna Cable	7	12.1 Picture	28
		12.2 Screen	31
<b>3 Remote Control</b>	<b>8</b>	12.3 Sound	31
3.1 Key Overview	8	12.4 Audio Output	34
3.2 Pair Your Remote Control to the TV	9		
3.3 Voice Search	10	<b>13 Apps</b>	<b>36</b>
3.4 IR Sensor	10	13.1 About Apps	36
3.5 Batteries and Cleaning	10	13.2 Google play	36
		13.3 Start or Stop an App	37
<b>4 Switching On and Off</b>	<b>11</b>	13.4 Manage Apps	37
4.1 On or Standby	11		
		<b>14 System</b>	<b>38</b>
<b>5 Channel Installation</b>	<b>12</b>	14.1 Accessibility	38
5.1 Antenna/Cable Installation	12	14.2 About	38
5.2 Channel List Copy	12	14.3 Date and Time	39
		14.4 Language	40
<b>6 Channels</b>	<b>14</b>	14.5 Keyboard	40
6.1 Watching channels	14	14.6 Storage	40
6.2 Favorite Channels	15	14.7 Ambient Mode	40
		14.8 Power and Energy	40
<b>7 TV Guide</b>	<b>17</b>	14.9 Cast	41
7.1 TV Guide Data	17	14.10 System Sounds	41
7.2 Using the TV Guide	17	14.11 Child Lock	41
		14.12 Retail Mode Settings	42
<b>8 Connect Devices</b>	<b>18</b>	14.13 Restart	42
8.1 About Connections	18		
8.2 Home Theater System - HTS	19	<b>15 Eco Settings</b>	<b>43</b>
8.3 Digital Audio Out - Optical	20		
8.4 Smartphones and Tablets	20	<b>16 Remote and Accessories</b>	<b>44</b>
8.5 Blu-ray Disc Player	20	16.1 Bluetooth® On or Off	44
8.6 Game Console	20	16.2 Remote Control	44
8.7 USB Storage Device	21		
8.8 Photo Camera	21	<b>17 Videos, Photos and Music</b>	<b>46</b>
8.9 Computer	21	17.1 From a Computer or NAS	46
		17.2 Favorites Menu	46
<b>9 Connect Your TV</b>	<b>23</b>	17.3 Most Popular Menu and Last Played Menu	46

17.4 From a USB Connection	46	26.4 Works with Apple AirPlay	63
17.5 Play your Videos	46	26.5 Works with Apple Home	63
17.6 View your Photos	47	26.6 Dolby Atmos	63
17.7 Play your Music	48	26.7 DTS:X	64
		26.8 Wi-Fi Alliance	64
<b>18 Smartphones and Tablets</b>	<b>49</b>	26.9 Kensington	64
18.1 Philips Smart TV app	49	26.10 Other Trademarks	64
<b>19 Games</b>	<b>50</b>	<b>27 Disclaimer regarding services and/or software offered by third parties</b>	<b>65</b>
19.1 What You Need	50		
19.2 Gamepads	50		
19.3 Play a Game from a Game Console or Computer	50	<b>Index</b>	<b>66</b>
19.4 Gaming Bar	50		
<b>20 Netflix</b>	<b>52</b>		
<b>21 Alexa</b>	<b>53</b>		
21.1 About Alexa	53		
21.2 Using Alexa	53		
<b>22 Specifications</b>	<b>54</b>		
22.1 Power	54		
22.2 Operating System	54		
22.3 Reception	54		
22.4 Display Type	54		
22.5 Display Input Resolution	54		
22.6 Connectivity	54		
22.7 Sound	54		
22.8 Multimedia	54		
<b>23 Help and Support</b>	<b>56</b>		
23.1 Register your TV	56		
23.2 Using Help	56		
23.3 TV Diagnose and Self-diagnose	56		
23.4 Troubleshooting	57		
23.5 Online Help	59		
23.6 Support and Repair	59		
<b>24 Safety and Care</b>	<b>60</b>		
24.1 Safety	60		
24.2 Screen Care	61		
<b>25 Terms of Use</b>	<b>62</b>		
25.1 Terms of Use - TV	62		
25.2 Terms of Use - Smart TV	62		
<b>26 Copyrights</b>	<b>63</b>		
26.1 Google TV	63		
26.2 HDMI	63		
26.3 HEVC Advance	63		

# 1. Home Screen

---

## 1.1. Introduction

To enjoy the benefits of your Google TV, connect the TV to the Internet. Press **HOME** on your remote control to get your **Home screen**. Like on your Android smartphone or tablet, the Home screen is the center of your TV. From the Home screen you can decide what to watch by browsing entertainment options from app and live TV.

The Home screen is organized in rows to let you discover great content from your favorite apps. You can also add additional rows or find new apps to get more content. Apps may populate their recommendation (if available) with their own choices as an individual row on the home screen.

### Highlights on your home screen

With multiple tabs like **Search**, **For you**, **Films**, **TV Shows**, **Apps**, **Library** and **Philips**, you can discover movies and shows from your services and popular apps. Sign in to your Google Account to get personalized recommendations from your streaming services based on what you have watched and what interests you. You can also trigger Google search with voice or text input in the **Search** tab.

### Apps

The **Apps** tab of the Home screen contains all installed Apps that come with the TV and the Apps you have installed from Google Play™ Store. You can also install and add more apps as favorites from the **Apps** tab.

### Navigation

Decide what to watch next with easy-to-use navigation. Browse your personalized recommendations, pick up where you left off, or quickly find a certain app using the new tab system.

### Discover personalized recommendations

Browse shows and movies that you will love on all your favorite media services. Sign in to your Google Account to get started.

### Get recommendations across Google

Your services are saved to your Google Account so you can get better recommendations across Google.

### All about your Philips TV

The **Philips** tab includes information about your Philips TV. The **Smart TV Collection** row lists the apps that are designed for your TV and guides you on how to register your TV. The **How to...** row provides tips about common

operations on your TV. The **Help** row helps you to access the user manual, or perform TV diagnose or Self-diagnose to check your TV status.

See also [www.support.google.com/googletv](http://www.support.google.com/googletv)

---

## 1.2. Dashboard and Settings

### Dashboard

The Dashboard is a side panel in Google TV that provides access to Settings, device controls, notifications and more.

The Dashboard can be accessed in three ways as follows:

- 1 - Navigating to the profile icon in the upper right of the home screen.
- 2 - Press the **DASHBOARD** key on the remote control.
- 3 - Long press the **HOME** key on the remote control.

The dashboard contains the following features.

- **Profile:** to display the current user profile icon or to add a new user profile
- **Settings:** to access all setting menus for adjusting the TV settings.
- **Clock and screensaver:** to indicate the system clock and to activate screen saver immediately.
- **Sources:** to launch the input source list for switching to any of the connected devices.
- **Picture / Wi-Fi / Accessibility:** quick link to adjust Picture / Wi-Fi / Accessibility settings.
- **Notifications:** to provide you messages about the Google TV system; press **Clear all** to dismiss all notifications.

### Adjust settings

You can access the **Settings** menu via the dashboard in the top-right corner. Alternatively, you can access the **Frequent settings** menu and common menu items in the Philips TV Menu, which you can do directly from the remote control.

---

## 1.3. Google TV and Basic Mode

### Feature differences

You can set your TV to **Google TV** mode or **Basic Mode**.

Basic Mode contains only Live TV and External devices (e.g. HDMI) features. Google TV requires you to log in with your Google account and Internet connection. With

Google TV, you can enjoy all Basic Mode features and other Google personalized services. For example, movies and TV shows from your favorite streaming apps, personalized recommendations, and Google Assistant to search and control your TV with your voice.

Some features are not available in Basic Mode. For more information, please refer to the Google support page.

### Home screen differences

The Home screen in Basic Mode has only two rows with no tabs. The first **Home** row contains **Watch TV**, **TV Guide**, **Sources** and **Dashboard** icons for TV feature operations. The second **App** row contains all pre-installed Apps. The **Dashboard** in Basic Mode does not include personal profiles and can only perform setting changes and display system notifications.

The Home screen of Google TV has multiple tabs like **Home**, **Apps**, **Library** and **Search**. Each tab contains rows of apps, movies and shows from your services and popular apps. You can get personalized recommendations from your streaming services based on what you have watched and what interests you. You can also trigger Google search with voice or text input in the **Search** tab.

---

## 1.4. Open the Home Screen

To open the Home screen and open an item:

- 1 - Press **HOME**.
- 2 - Select an item and press **OK** to open or start it.
- 3 - Press **Back** continuously or press **HOME** to go back to the Home screen.


When opening the Home screen, the background application/content playback will stop. You have to select the application or content from the Home screen to resume.

## 2. Setting Up

---

### 2.1. Read the Safety Instructions

Please read the safety instructions before you use the TV.

To read the instructions, in **Help > User manual**, press the color key  **Keywords** and look up **Safety Instructions**.

---

### 2.2. TV Stand and Wall Mounting

#### TV Stand

You can find the instructions for mounting the TV stand in the Quick Start Guide that came with the TV. If you lose this guide, you can download it from [www.philips.com/TVsupport](http://www.philips.com/TVsupport).


Use the product type number of the TV to look for the **Quick Start Guide** to download.

#### Wall Mounting

Your TV is also prepared for the wall mount bracket (sold separately).

The wall mount size may vary depending on the different types of back cases; refer to the **Quick Start Guide** in your product package to see which size is for your TV.

Use the following wall mount dimensions when purchasing the wall mount.

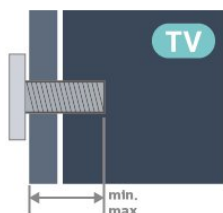

- 65PUx7419  
400x300, M8 (min.: 12 mm, max.: 22 mm)

#### Caution


Wall mounting the TV requires special skills and should only be performed by qualified personnel. The TV wall mounting should meet safety standards according to the TV's weight. Also read the safety precautions before positioning the TV.

TP Vision Europe B.V. bears no responsibility for improper mounting or any mounting that results in accident or injury.

---

### 2.3. Tips on Placement

- Position the TV where light does not shine directly on the screen.
- The ideal distance to watch TV is 2 to 5 times its screen height. When seated, your eyes should be level with the center of the screen.
- Recommended distance to the wall:
  - A. When wall mounted, position the TV from 7 to 10 cm away from the wall.
  - B. If the TV has a stand, position it 10 to 20 cm away from the wall depending on the size of the stand.

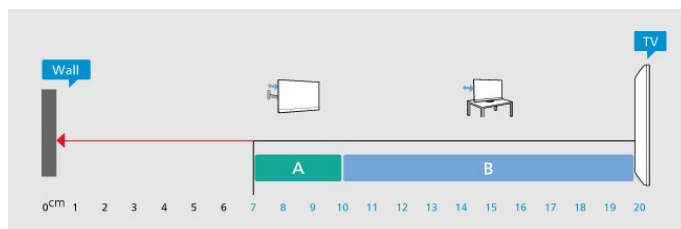


#### Note:

Please keep the TV away from dust-producing sources such as stoves. It is suggested to clean the dust regularly to avoid getting dust into the TV.

---

### 2.4. Power Cable

- Insert the power cable into the **POWER** connector on the back of the TV.
- Make sure the power cable is securely inserted in the connector.
- Make sure that the power plug, in the wall socket, is accessible at all times.
- When you unplug the power cable, always pull the plug, never pull the cable.

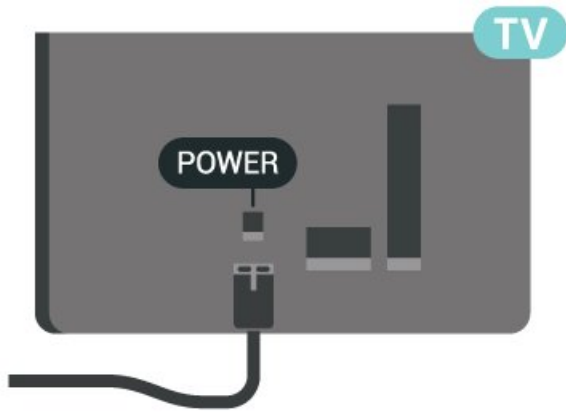


Although this TV has a very low standby power consumption, unplug the power cable to save energy if you do not use the TV for a long period of time.

For more information, in **Help**, press the color key **Keywords** and look up **Switching On** for more information on switching the TV on or off.

## 2.5. Antenna Cable

Insert the antenna plug firmly into the **Antenna** socket at the back of the TV.

You can connect your own antenna or an antenna signal from an antenna distribution system. Use an IEC Coax 75 Ohm RF antenna connector.

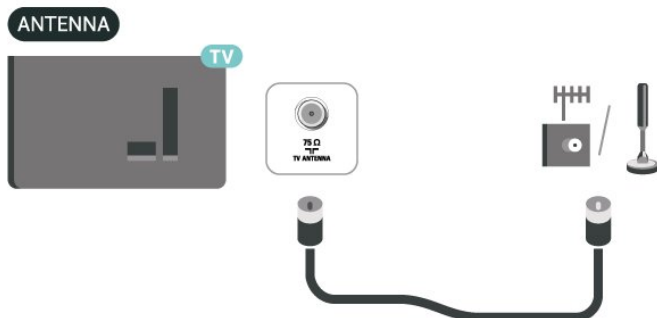

# 3. Remote Control

## 3.1. Key Overview

### Top

#### Hidden keys feature

Hidden keys offer more control functions when pressing the **123 key**. The **123 key** is in the middle of the remote control and is used to turn on/off hidden keys mode. When hidden keys mode is turned on, the **number keys** 0 to 9 and **media play control keys** appear with backlight and trigger the functions. When hidden keys mode is turned off by pressing the **123 key** again or is automatically turned off, the remote control works with the normal keys.

#### ⚠ Warning

Choking Hazard! This TV remote control contains small parts not suitable for children under 5 years old.



#### 1 - ⏻ (Standby / On)

To switch the TV on or back to Standby. Long press for three seconds to reboot the TV.

#### 2 - VOICE microphone

#### 3 - AMBILIGHT

To select one of the Ambilight styles.

\* Ambilight setting is only for models which support Ambilight function.

#### 4 - ➡ (SOURCES) (Dot)

- To open the Sources menu.
- To enter digital sub-channels.

#### 5 - ⚙ (DASHBOARD)

To launch Dashboard on the side of the screen to access Settings, device controls, notifications and more.

#### 6 - 🗣 (Google Voice Search)

To start the Google Voice Search.

### Middle



#### 1 - TV Guide (≡)

To open or close the TV Guide.

#### 2 - OK key

To confirm a selection or setting. To open the channel list while watching TV.

#### 3 - Arrow/navigation keys

To navigate up, down, left or right.

#### 4 - OPTIONS (+)

To open or close the Options menu. Long press to open program info.

#### 5 - ⬅ (Back)

To switch back to the previous channel you selected.

To return to the previous menu.

To go back to the previous App/Internet page.

#### 6 - Volume / 🔊 (Mute)

Move down or up to adjust the volume level. Press the middle of the key to mute the sound or to restore it.

#### 7 - 123 key

To turn the hidden function keys on or off and switch the keys between different sets of operations.

#### 8 - Quick Menu / MENU (≡)

To open the Quick Menu with typical TV functions.

#### 9 - Number keys (hidden keys, available by pressing the 123 key)

To select a channel directly.

#### 10 - CC

To enable/disable Closed Caption.

#### 11 - TV (TV) / EXIT

To switch back to watching TV or to stop an interactive



TV application. However, it might not work with some applications; behavior depends on third-party TV apps. This key changes to Number key **0** after pressing the **123** key.

## 12 - 🏠 (HOME)

To open the Home menu. Long press to access the Dashboard.

## 13 - ≡ (Channel)

Move down or up to switch to the next or previous channel in the channel list. To open the next or previous page in Text/Teletext. Press the middle of the key to open the channel list.

## Bottom



### 1 - ■ ■ ■ ■ Color keys

Direct selection of options. Press Blue key ■ to open the **Help**.

### 2 - NETFLIX

- If you have a Netflix subscription, you can enjoy Netflix on this TV. Your TV must be connected to the Internet.
- To launch Netflix, press NETFLIX to open Netflix immediately with the TV switched on or in standby. [www.netflix.com](http://www.netflix.com)





### 3 -

To launch the Amazon **prime video** App.

### 4 - Eco / Green key

Press to get a message reminding you to enter the **Eco settings** menu; long press to open the **Eco settings** menu directly. Once the **Eco settings** menu is triggered by long pressing the key a few times, the message will no longer appear.

### 5 - **Playback** (available when the **123** key is pressed)

- Play , to play back.
- Pause , to pause playback
- Rewind , to rewind
- Fast forward , to fast forward

### 6 - **YouTube**

To launch the YouTube App.

### 7 - (Apps) / Public Value\* / IVI\*\*

To launch **Your apps** page to display the list of Apps that are pre-installed, or installed by user.

\* When the country is set to **France**, the key will be the quick key to launch **Public Value** tab on Home screen.

\*\* When the country is set to **Russia**, the key will be the quick key to launch the **IVI** app.


## 3.2. Pair Your Remote Control to the TV

This remote control uses both Bluetooth® and IR (infrared) to send its commands to the TV.

- You can use this remote control via IR (infrared) for most operations.
- To use advanced features like voice search, you need to pair (link) the TV with the remote control.

When you start the initial TV installation, the TV invites you to press the **Home + Back** key to pair with the remote control. It is best to complete the pairing when you first install the TV.

Note:

- 1 - Once the remote control has entered pairing mode successfully, the LED indicator around the microphone on the front side of the remote control starts blinking.
- 2 - The remote control must be kept close to the TV (within 3 feet) during pairing in order to ensure success.
- 3 - If the TV does not launch the voice control field when you press , pairing was unsuccessful.
- 4 - It is advisable to wait until the set has fully started up and launched all background processes before pairing mode is entered as the toast message containing further instructions may appear too late, thereby negatively impacting the pairing procedure.

### Pairing or pairing again

If the pairing with the remote control was lost, you can pair the TV with the remote control again.

You can press the **Home + Back** keys (for approximately 3 seconds) to pair.

Alternatively, go to **Settings > Remote & accessories > Remote control settings > Pair remote control**, then follow the on-screen instructions.

A message appears when the pairing has been successful.

### Remote Control Software

**Settings > Remote & accessories > Remote control settings > Remote control info**

Once the remote control is paired, you can check the current remote control software version.

**Settings > Remote & accessories > Remote control**

## settings > Update remote control software

Check available remote control software for updates.



---

### 3.3. Voice Search

You can search for videos, music or anything else on the Internet by simply using your voice. You can speak into the microphone on the remote control.

You need to pair the remote control to the TV before use voice search.

To use Voice:

- 1 - Press and hold the  key on the remote control; the blue light on the remote control lights up, the search field opens, and the microphone is active.
  - 2 - Speak out what you are looking for with clear pronunciation. Once the voice input is done, release the  key to start the search. It might take some time for the results to appear.
  - 3 - In the list of search results, you can select the item you want.
- 

### 3.4. IR Sensor

The TV can receive commands from a remote control that uses IR (infrared) to send commands. If you use such a remote control, always make sure you point the remote control at the infrared sensor on the front of the TV.

#### Warning

Do not put any objects in front of IR sensor of the TV as it may block the IR signal.

---

### 3.5. Batteries and Cleaning

#### Replace batteries

Refer to the **Quick Start Guide** in your product package for detailed information about the remote control batteries.

If the TV does not react to a button being pressed on the remote control, the batteries might be dead.

To replace the batteries, open the battery compartment on the back of the remote control.

- 1 - Slide the battery door in the direction shown by the arrow.
- 2 - Replace the old batteries with new batteries. Make

sure the + and the - ends of the batteries line up correctly.

3 - Reposition the battery door and slide it back until it clicks.

- Remove the batteries if you are not using the remote control for a long time.
- Safely dispose of your old batteries according to the end of use directions.

#### Cleaning

Your remote control is treated with a scratch-resistant coating.

To clean the remote control, use a soft damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the remote control.


# 4. Switching On and Off

---


## 4.1. On or Standby

Make sure the TV is connected to the mains AC power. Connect the supplied power cord to the **AC IN** connector at the back of the TV. The indicator light at the bottom of the TV lights up.


### Switch on


Press  on the remote control to switch the TV on. You can also press the small joystick button on the bottom of the TV to turn the TV on in case you can't find the remote control or its batteries are dead.

### Reboot

Long press  on the remote control for 3 seconds to reboot the TV.

### Switch to standby

To switch the TV to standby, press  on the remote control. You can also press the small joystick button on the bottom of the TV.

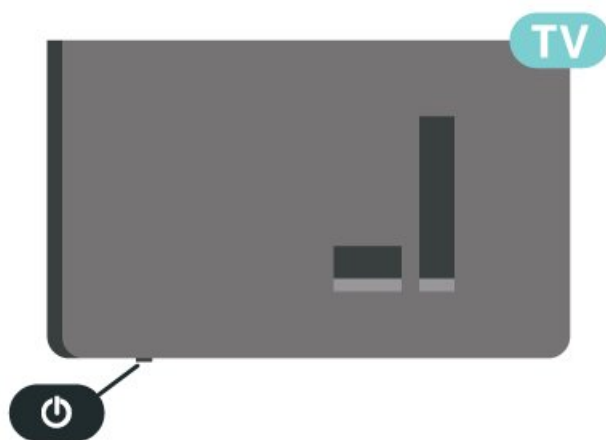

In standby mode, the TV is still connected to the mains power but consumes very little energy.

To turn off the TV completely, disconnect the power plug.

When disconnecting the power plug, always pull the power plug, never the cord. Ensure that you have full access to the power plug, power cord and outlet socket at all times.

# 5. Channel Installation

---

## 5.1. Antenna/Cable Installation

### Manual channel update

You can always start a channel update yourself.

To start a channel update manually:

- 1 - Select **⚙ Settings > Channels and Inputs > Channels > Antenna/Cable Installation** and press **OK**.
- 2 - Enter your PIN code if necessary.
- 3 - Select **Antenna/cable connection** and press **OK**.
- 4 - Select **Antenna or Cable** and press **OK**.
- 5 - Press **⬅ Back** to close the menu.

---

## 5.2. Channel List Copy

### Introduction

Channel List Copy is intended for dealers and expert users.

With Channel List Copy, you can copy the channels installed on one TV onto another Philips TV of the same range. With Channel List Copy, you avoid time-consuming channel search by uploading a predefined channel list on a TV. Use a USB flash drive of minimum 1 GB.

#### Conditions

- Both TVs are from the same year range.
- Both TVs have the same hardware type. Check the hardware type on the TV type plate on the back of the TV.
- Both TVs have compatible software versions.
- For the Netherlands or any of these cable operators (Switzerland: Sunrise/Austria: Magenta/Poland: UPC/Romania: Vodafone/Hungary: Vodafone/Ireland: Virgin Media), the channel list copy is limited to satellite channel list copy. The terrestrial and cable channels list will not be copied or erased.

#### Current channel version

To check the current version of the channel list:

- 1 - Select **⚙ Settings > Channels and Inputs > Channels**, select **Channel List Copy**, select **Current Version** and press **OK**.
- 2 - Press **OK** to close.

#### Current software version

You can go to **⚙ Settings > System > About > SW version** to view the version number of current TV software.

### Copy a Channel List

To copy a channel list:

- 1 - Switch on the TV. This TV should have channels installed.
- 2 - Plug in a USB flash drive.
- 3 - Select **⚙ Settings > Channels and Inputs > Channels > Channel List Copy** and press **OK**.
- 4 - Select **Copy to USB** and press **OK**. You might be asked to enter the Child Lock PIN code to copy the channel list.
- 5 - When copying is done, unplug the USB flash drive.
- 6 - Press **⬅ (left)** repeatedly if necessary, to close the menu.

Now you can upload the copied channel list onto another Philips TV.

### Channel List Version

Check the current version of the channel list:

- 1 - Select **⚙ Settings > Channels and Inputs > Channels** and press **➤ (right)** to enter the menu.
- 2 - Select **Channel List Copy** and select **Current Version**, then press **OK**.
- 3 - Press **⬅ (left)** repeatedly if necessary, to close the menu.

---

### Upload a Channel List to TV

#### To not Installed TVs

Depending on whether your TV is already installed or not, you must use a different method to upload a channel list.

#### To a TV that is not yet installed

- 1 - Plug in the power plug to start the installation and select language and country. You can skip the channel search. Finish the installation.
- 2 - Plug in the USB flash drive that holds the channel list of the other TV.
- 3 - To start the channel list upload, select **⚙ Settings > Channels and Inputs > Channels > Channel List Copy > Copy to TV** and press **OK**. Enter your PIN code if necessary.
- 4 - The TV notifies you if the channel list is copied to the TV successfully. Unplug the USB flash drive.

---

## To Installed TVs

Depending on whether your TV is already installed or not, you must use a different method to upload a channel list.

### To an already installed TV

1 - Verify the country setting of the TV. (To verify this setting, see chapter Reinstall All Channels. Start this procedure until you reach the country setting.

Press **← Back** to cancel the installation.)

If the country is correct, continue with step 2.

If the country is not correct, you need to start a reinstallation. See chapter Reinstall All Channels and start the installation. Select the correct country and skip the channels search. Finish the installation. When done, continue with step 2.

2 - Plug in the USB flash drive that holds the channel list of the other TV.

3 - To start the channel list upload, select **⚙ Settings > Channels and Inputs > Channels > Channel List Copy > Copy to TV** and press **OK**. Enter your PIN code if necessary.

4 - The TV notifies you if the channel list is copied to the TV successfully. Unplug the USB flash drive.

# 6. Channels

---

## 6.1. Watching channels

### Tune to a Channel

To start watching TV channels, press **TV**. The TV tunes to the channel you last watched.

#### Change Channels

To switch channels, press **≡ +** or **≡ -**.

If you know the channel number, type in the number with the number keys. Press **OK** after you entered the number to change immediately.

If the information is available from the Internet, the TV shows the current program name and details followed by the next program name and details.

#### Previous channel

To switch back to the previously tuned channel, press **← Back**.

You can also tune to channels from a **Channel List**.

### Lock a Channel

---

#### Lock and Unlock a Channel

To prevent children from watching a channel, you can lock a channel. To watch a locked channel, you must enter the 4-digit **Child Lock** PIN code first. You cannot lock programs from connected devices.

To lock a channel:

- 1 - Press **TV**.
- 2 - Press **OK** to open the channel list. If necessary, change the channel list.
- 3 - Select the channel you want to lock.
- 4 - Press **+ OPTIONS** and select **Lock Channel** and press **OK**.
- 5 - Enter your 4 digit PIN code if the TV asks for it. A locked channel is marked with a **🔒** (lock).
- 6 - Press **◀** (left) to go back one step, or press **← Back** to close the menu.

To unlock a channel:

- 1 - Press **TV**.
- 2 - Press **OK** to open the channel list. If necessary, change the channel list.
- 3 - Select the channel you want to unlock.
- 4 - Press **+ OPTIONS** and select **Unlock Channel** and press **OK**.
- 5 - Enter your 4 digit PIN code if the TV asks for it.
- 6 - Press **◀** (left) to go back one step, or press **← Back** to

close the menu.

If you lock or unlock channels in a channel list, you only have to enter the PIN code just once until you close the channel list.

For more information, in **Help**, press the color key **— Keywords** and look up **Child Lock** for more information.

---

### Age Rating

To prevent children from watching a program not suitable for their age, you can set an age rating.

Digital channels can have their programs age rated. When the age rating of a program is equal to or higher than the age you have set as age rating for your child, the program will be locked. To watch a locked program, you must enter the **Child Lock** code first.

To set an age rating:

- 1 - Select **⚙ Settings > System > Child Lock > Age rating lock** and press **OK**.
- 2 - Enter a 4-digit Child Lock code. If you did not set a code yet, select **Set code** in **Child lock**. Enter a 4-digit Child lock code and confirm. Now you can set an age rating.
- 3 - Back in **Age rating lock**, select the age and press **OK**.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

To switch off the parental age rating, select **Free**. However, in some countries you must set an age rating.

For some broadcasters/operators, the TV only locks programs with a higher rating. The parental age rating is set for all channels.

---

### Content rating

To set a content rating that will lock rated programs:

- 1 - Select **⚙ Settings > System > Child lock > Content rating lock** and press **OK**.
- 2 - Set the content and press **OK**. The selected content is blocked.
- 3 - Press **◀** (left) repeatedly if necessary, to close the menu.

## Channel Options

---

### Open options

While watching a channel, you can set some options.

Depending on the type of channel you are watching (analog or digital) or depending on your TV settings, some options are available.

To open the options menu:

- 1 - While watching a channel, press **+** **OPTIONS**.
- 2 - Press **+** **OPTIONS** again to close.

---

### Mono / Stereo

You can switch the sound of an analog channel to Mono or Stereo.

To switch to Mono or Stereo:

- 1 - Tune to an analog channel.
- 2 - Press **+** **OPTIONS**, select **Mono/Stereo** and press **➤** (right).
- 3 - Select **Mono** or **Stereo** and press **OK**.
- 4 - Press **◀** (left) to go back one step, or press **◀** **Back** to close the menu.

---

### Audio Language

For digital broadcast, you can select an available audio language temporarily if none of your preferred languages are available.

---

### Universal Access

⚙ **Settings > Channels and Inputs > Channels > Universal access.**

With Universal Access switched on, the TV is prepared for use for the deaf, hard of hearing, blind or partially sighted people.

### Universal access for blind or partially sighted people

⚙ **Settings > Channels and Inputs > Channels > Universal access > Audio description.**

Digital TV channels can broadcast special audio commentary describing what is happening on screen.

⚙ **Settings > Channels and Inputs > Channels > Universal access > Audio description > Mixed volume / Audio effects / Speech.**

- Select **Mixed volume**, you can mix the volume of the normal audio with the audio commentary.
- Switch **Audio effects** on for extra audio effects in the commentary audio, like stereo or fading sound.

- Select **Speech** to set speech preference, **Descriptive** or **Subtitles**.

### Dialog enhancement

⚙ **Settings > Channels and Inputs > Channels > Universal access > Dialog enhancement.**

Increase the intelligibility of dialog and commentary, if available. Only available when sound setting **Clear dialog** is **On** and audio stream is AC-4.

---

### Ginga

#### Switch off the Ginga feature

⚙ **Settings > Channels and Inputs > Channels > Ginga.**

---

### Service navigation

#### Service navigation

⚙ **Settings > Channels and Inputs > Channels > Service navigation.**

Switch the availability to navigate through primary channels only or all channels, on or off.

---

### Channel Logos

#### Switch off channel logos

⚙ **Settings > Channels and Inputs > Channels > Channel logos.**

The channel logo can be hidden or shown.

## 6.2. Favorite Channels

### About favorite Channels

In a favorite channel list, you can collect the channels you like.

You can create 4 different lists\* of favorite channels for easy channel zapping. You can name each Favorites List individually. You can only reorder channels in a Favorites List.

With a Favorites List selected, press the arrows **▲** (up) or **▼** (down) to select a channel, then press **OK** to watch the selected channel. You only tune to the channels in that list when using **TV +** or **TV -** keys.

## Create a favorites List

To create a favorite channels list:

- 1 - Press **TV**, to switch to TV.
- 2 - Press **OK** to open the current channel list.
- 3 - Press **+ OPTIONS**.
- 4 - Select **Create Favorites List** and press **OK**.
- 5 - In the list at the left, select a channel you want as a favorite and press **OK**. Channels come in the list at the right in the order you add them. To undo, select the channel in the list at the left and press **OK** again.
- 6 - If necessary, you can go on selecting and adding channels as favorites.
- 7 - To finish adding channels, press **← Back**.

The TV will ask you to rename the **Favorites List**. You can use the on-screen keyboard.

- 1 - Use the on-screen keyboard to delete the current name and enter a new name.
- 2 - When done, select **Close** and press **OK**.

The TV will switch to the newly created **Favorites List**.

You can add a range of channels in one go or start a **Favorites List** by duplicating the channel list with all channels and removing the channels you do not want.

The channels in the **Favorites List** are renumbered.

## Add a Range of Channels

To add a consecutive range of channels to a **Favorites List** in one go, you can use **Select Range**.

To add a range of channels:

- 1 - Open the **Favorites List** where you want to add a range of channels.
- 2 - Press **+ OPTIONS**, select **Select Range** and press **OK**.
- 3 - In the list at the left select the first channel of the range you want to add and press **OK**.
- 4 - Press **▼** (down) to select the last channel of the range you want to add. The channels are marked at the left.
- 5 - Press **OK** to add this range of channels and confirm.

You can also start creating a **Favorites List** from **Select Range**.

## Edit Favorites

To add a consecutive range of channels to a **Favorites List** in one go, you can use **Edit favorites**.

To add a range of channels:

- 1 - Open the **Favorites List** where you want to add a range of channels.
- 2 - Press **+ OPTIONS**, select **Edit favorites** and press **OK**.
- 3 - In the list at the left select the first channel of the range you want to add and press **OK**.
- 4 - Press **▼** (down) to select the last channel of the range

you want to add. The channels are marked at the right.  
5 - Press **OK** to add this range of channels and confirm.

You can also start creating a **Favorites List** from **Edit favorites**.

## Rename a Favorites List

To rename a **Favorites List**:

- 1 - Open the **Favorites List** you want to rename.
- 2 - Press **+ OPTIONS**, select **Rename Favorites List** and press **OK**.
- 3 - Use the on-screen keyboard to delete the current name and enter a new name.
- 4 - When done, select **Close** and press **OK**.
- 5 - Press **← Back** to close the channel list.

## Remove a Favorites List

To remove a **Favorites List**:

- 1 - Open the **Favorites List** you want to remove.
- 2 - Press **+ OPTIONS**, select **Remove Favorites List** and press **OK**.
- 3 - Confirm to remove the list.
- 4 - Press **← Back** to close the channel list.



# 7. TV Guide

---

## 7.1. TV Guide Data

With the TV Guide you can view a list of the current and scheduled TV programs of your channels. Depending on where the TV guide information (data) is coming from, analog and digital channels or only digital channels are shown. Not all channels offer TV Guide information. The TV can collect TV Guide information for the channels that are installed on the TV. The TV cannot collect the TV Guide information from channels viewed from a digital receiver or decoder.

---

## 7.2. Using the TV Guide

### Open the TV Guide

To open the TV Guide, press **TV GUIDE**. The TV Guide shows the channels of the selected tuner.

Press **TV GUIDE** again to close.

The first time you open the TV Guide, the TV scans all TV channels for program information. This may take several minutes. TV Guide data is stored on the TV.

### Tune to a program

From the TV Guide, you can tune to a current program.

To switch to the program (channel), select the program and press **OK**.

#### View program details

To call up the details of the selected program:

- 1 - Press **+ OPTIONS**, select **Program Info** and press **OK**.
- 2 - Press **← Back** to close.

### Change Day

The TV Guide can show the scheduled programs for the upcoming days (maximum up to 8 days).

Press the color key **Day** and select the day you need.

### Search by Genre

If the information is available, you can look up scheduled programs by genre like movies, sports, etc.

To search for programs by genre:

- 1 - Press **TV GUIDE**.
- 2 - Press **+ OPTIONS**.
- 3 - Select **Search by genre** and press **OK**.
- 4 - Select the genre you want and press **OK**. A list with the found programs appears.
- 5 - Press **← Back** to close the menu.

\* Note: The Search by genre function is only available for certain countries.

# 8. Connect Devices

## 8.1. About Connections

### Connectivity Guide

Always connect a device to the TV with the highest quality connection available. Also, use good quality cables to ensure a good transfer of picture and sound.

When you connect a device, the TV recognizes its type and gives each device a correct type name. You can change the type name if you wish. If a correct type name for a device is set, the TV automatically switches to the ideal TV settings when you switch to this device in the Sources menu.

### Antenna port

If you have a Set-top box (a digital receiver) or Recorder, connect the antenna cables to run the antenna signal through the Set-top box and/or Recorder first before it enters the TV. In this way, the antenna and the Set-top box can send possible additional channels to the Recorder to record.

### HDMI ports

#### HDMI Quality

An HDMI connection has the best picture and sound quality. One HDMI cable combines video and audio signals. Use an HDMI cable for High Definition (HD) TV signals.

For the best signal quality transfer, use an Ultra High Speed certified HDMI cable and do not use an HDMI cable longer than 5 m.

If a device connected with HDMI is not working correctly, check if a different **HDMI Ultra HD** setting can resolve this problem. In Help, press the color key **— Keywords** and look up **HDMI Ultra HD**.

#### Copy protection

HDMI ports support HDCP (High-bandwidth Digital Content Protection). HDCP is a copy protection signal that prevents copying content from a DVD disc or Blu-ray Disc. Also referred to as DRM (Digital Rights Management).

#### HDMI ARC and eARC

Only **HDMI 3** on the TV supports **HDMI ARC** (Audio Return Channel) and **HDMI eARC**.

If the device, typically a Home Theater System (HTS), soundbar or AV receiver, also has the HDMI ARC connection, connect it to **HDMI 3** on this TV. With the HDMI ARC connection, you do not need to connect the extra audio cable that sends the sound of the TV picture to the HTS. The HDMI ARC connection combines both signals.

**HDMI eARC** (Enhanced Audio Return Channel) is an advancement over the previous ARC. It covers all ARC features but with higher bandwidth and speed. eARC supports high-quality audio transmission up to 192kHz, 24-bit, uncompressed 5.1 and 7.1, and 32-channel uncompressed audio.

Note: **HDMI eARC** is only available on **HDMI 3**. Use **Ultra High-speed HDMI cable** for eARC. Only one eARC device is available at a time.



#### HDMI CEC - EasyLink

Connect HDMI CEC-compatible devices to your TV, you can operate them with the TV remote control. EasyLink HDMI CEC must be switched on in the TV and the connected device.

#### Switch on EasyLink

⚙ **Settings > Channels and Inputs > Inputs > EasyLink > EasyLink > On.**

#### Operate HDMI CEC-compatible devices with TV remote control

⚙ **Settings > Channels and Inputs > Inputs > EasyLink > EasyLink remote control > On.**

To turn on or off the EasyLink remote control function. Note that you can always control the volume of connected HDMI CEC-compatible devices irrespective of this setting.

### Power off HDMI devices with the TV

⚙ **Settings > Channels and Inputs > Inputs > EasyLink > EasyLink auto device off.**

Select **On** to allow the TV to turn the HDMI devices to standby. Select **Off** to disable this function.

### Power on the TV with HDMI devices

⚙ **Settings > Channels and Inputs > Inputs > EasyLink > EasyLink auto TV on.**

Select **On** to allow HDMI devices to wake up the TV from standby status. Select **Off** to disable this function.

### Power on the HDMI sound system with TV

⚙ **Settings > Channels and Inputs > Inputs > EasyLink > EasyLink auto ARC on.**

Select **On** to allow the TV to wake up the connected HDMI sound system from standby status. Select **Off** to disable this function.

### EasyLink 2.0 sound control

⚙ **Settings > Channels and Inputs > Inputs > EasyLink > EasyLink 2.0 sound control.**

Select **On** to control the sound settings of the HDMI sound system. You can adjust these settings via **Frequent settings** or ⚙ **Settings > Display & Sound > Sound**. This is only applicable to EasyLink 2.0-compliant HDMI sound systems.

#### Note:

- EasyLink might not work with devices from other brands.
- The HDMI CEC functionality has different names on different brands. Some examples are: Anynet, Aquos Link, Bravia Theater Sync, Kuro Link, Simplink and Viera Link. Not all brands are fully compatible with EasyLink. Example HDMI CEC branding names are property of their respective owners.

---

### HDMI Ultra HD

This TV can display Ultra HD signals. Some devices - connected with HDMI - do not recognize a TV with Ultra HD and might not work correctly or show distorted picture or sound.

To avoid the malfunctioning of such a device, you can adjust **HDMI Ultra HD** setting when the TV is in the HDMI source. The recommended setting for legacy devices is **Standard**.

### Set the signal quality for each HDMI connector

⚙ **Settings > Channels and Inputs > Inputs > HDMI (port) > HDMI Ultra HD > Standard, Optimal, or Optimal (Auto Game).**

To change the settings, switch to the HDMI source first. Select **Optimal** to enable the highest quality HDMI signal for 4K program or movie watching (such as Ultra HD 4K set-top box, 4K Blu-ray player or streaming box).

- The setting **Optimal** allows maximum up to Ultra HD (50Hz or 60Hz) RGB 4:4:4 or YCbCr 4:4:4/4:2:2/4:2:0 signals.
- The setting **Standard** allows maximum up to Ultra HD (50Hz or 60Hz) YCbCr 4:2:0 signals.

Maximum supported video timing format for HDMI Ultra HD options:

- Resolution: 3840 x 2160
  - Frame rate (Hz): 50Hz, 59.94Hz, 60Hz
  - Video data sub-sampling (bit-depth)
    - 8 bit: YCbCr 4:2:0, YCbCr 4:2:2\*, YCbCr 4:4:4\*, RGB 4:4:4\*
    - 10 bit: YCbCr 4:2:0\*, YCbCr 4:2:2\*, RGB 4:4:4\*
    - 12 bit: YCbCr 4:2:0\*, YCbCr 4:2:2\*
- \* Supported only when **HDMI Ultra HD** is set to **Optimal** or **Optimal (Auto Game)**.

Select **Standard** if the picture or sound is distorted.

- Set **Optimal (Auto Game)** to enable the TV to support the HDMI Variable Refresh Rate\* video (on some models only) and set the **Sound** style to **Game** whenever it is informed by the HDMI device connected to the TV.

\* With HDMI Variable Refresh Rate, the TV changes its refresh rate in real time according to the frame rate signal on top of all features supported in **Optimal (Auto Game)** to synchronize with every picture. It is applied to reduce the lag, judder and frame tearing for better gaming experience.

#### Note:

To watch HDR10+ from an HDMI source, you may need to power off your player and power it on again when the player connected to the TV is playing such content for the first time. HDR10+ content is supported only when **HDMI Ultra HD** is set to **Optimal** or **Optimal (Auto Game)**.

---

## 8.2. Home Theater System - HTS

## Connect with HDMI ARC/eARC

Use an HDMI cable to connect a Home Theater System (HTS) to the TV. You can connect a Philips Soundbar or an HTS with a built-in disc player.

### HDMI ARC

Only **HDMI 3** on the TV can offer the Audio Return Channel (ARC) signal. Once you have connected the Home Theater System, the TV can only send the ARC signal to this HDMI connection. With HDMI ARC, you do not need to connect the extra audio cable. The HDMI ARC connection combines both signals.

### HDMI eARC

HDMI eARC (Enhanced Audio Return Channel) is an advancement over the previous ARC. It supports the latest high-bitrate audio formats up to 192kHz, 24-bit, uncompressed 5.1 and 7.1, and 32-channel uncompressed audio. HDMI eARC is only available on HDMI 3.

### Audio to video synchronization (sync)

If the sound does not match the video on screen, you can set a delay on most Home Theater Systems with a disc player to match the sound with the video.

## Problems with HTS sound

### Sound with loud noise

If you watch a video from a plugged in USB flash drive or connected computer, the sound from your Home Theater System might be distorted. This noise is heard when the audio or video file has DTS sound but the Home Theater System has no DTS sound processing. You can fix this by setting the **Digital Out Format** of the TV to **Stereo**.

Select **Settings > Display & Sound > Audio out > Digital out format**.

### No sound


If you cannot hear the sound from the TV on your Home Theater System, check if you connected the HDMI cable to an HDMI ARC/eARC connection on the Home Theater System. HDMI ARC/eARC is only available on **HDMI 3**.

## 8.3. Digital Audio Out - Optical

Audio Out - Optical is a high quality sound connection.

This optical connection can carry 5.1 audio channels. If your device, typically a Home Theater System (HTS), has no HDMI ARC connection, you can use this connection

with the Audio In - Optical connection on the HTS. The Audio Out - Optical connection sends the sound from the TV to the HTS.

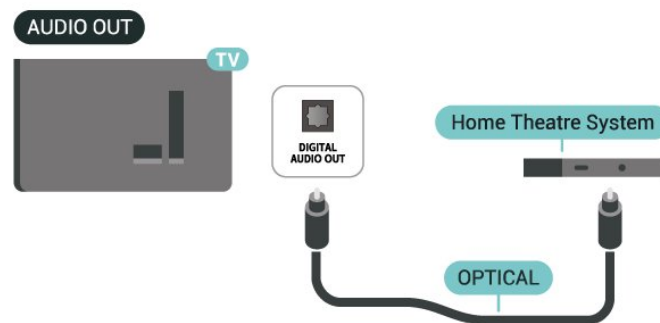

## 8.4. Smartphones and Tablets

To connect a smartphone or tablet to the TV, you can use a wireless connection. For a wireless connection, on your smartphone or tablet download the **Philips Smart TV** app from your favorite app store.

## 8.5. Blu-ray Disc Player

Use an **Ultra High speed HDMI** cable to connect the Blu-ray Disc player to the TV.

If the Blu-ray Disc player has EasyLink HDMI CEC, you can operate the player with the TV remote control.

In **Help**, press the color key **Keywords** and look up **EasyLink HDMI CEC** for more information.


## 8.6. Game Console

### HDMI

For best quality, connect the game console with an Ultra High speed HDMI cable to the **HDMI 1** or **HDMI 2** on the TV.

If an external audio system with HDMI ARC/eARC support is used together with TV and game console, the recommended connection is: connecting game console device's HDMI output to TV **HDMI 1** port and connecting TV **HDMI 3** to external audio system's HDMI input with another Ultra high speed HDMI cable. To have best


gaming audio effect matching video, you can set TV Audio output to Multichannel (bypass) here: **Settings** > **Display and sound** > **Audio output** > **Digital out format**.

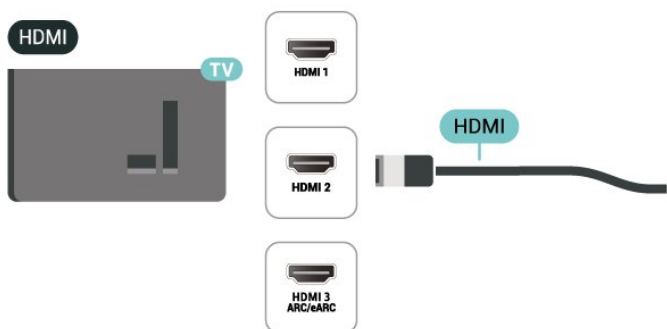

## 8.7. USB Storage Device

You can view photos or play your music and videos from a connected USB flash drive or USB Hard Drive.

Insert a USB storage device into one of the USB connectors on the TV while the TV is switched on.

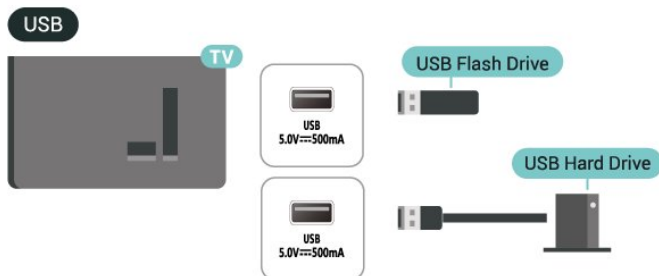

The TV detects the device and opens a list showing its content.

If the contents list does not appear automatically, press **SOURCES** and select **USB**.

To stop watching the USB storage device content, press **EXIT** or select another activity.

To remove the USB storage device safely:

- 1 - Press **HOME**.
- 2 - Select the **USB drive** under **Dashboard** > **Notifications** from top-right corner and press **OK**.
- 3 - Select your device and press **OK**.
- 4 - Select **Eject** and press **OK**.
- 5 - Wait until the eject procedure is finished and then pull out the USB storage device.

\* **Note:** Connect a USB storage device with a size of less than 2TB.

### Ultra HD on USB

You can view photos in Ultra HD resolution from a connected USB storage device. The TV will downscale the resolution to Ultra HD if the resolution of the photo is higher.

For more information on watching or playing content from a USB storage device, in **Help**, press the color key **Keywords** and look up **Photos, Videos and Music**.

## 8.8. Photo Camera

To view photos stored on your digital photo camera, you can connect the camera directly to the TV.


Use one of the **USB** connections on the TV to connect. Switch on the camera after you have made the connection.

If the contents list does not appear automatically, press **SOURCES**, and select **USB**.

Your camera might need to be set to transfer its content with PTP (Picture Transfer Protocol). Read the user manual of the digital photo camera.

### Ultra HD on USB

You can view photos in Ultra HD resolution from a connected USB device or flash drive. The TV will downscale the resolution to Ultra HD if the resolution of the photo is higher. You cannot play a video with native resolution higher than Ultra HD on any of the USB connections.

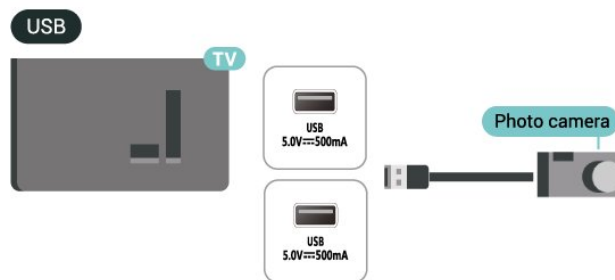

For more information on viewing photos, in **Help**, press the color key **Keywords** and look up **Photos, Videos and Music**.

---

## 8.9. Computer

You can connect your computer to the TV using a high-quality HDMI cable and use the TV as a PC monitor.

\* Note for NVIDIA graphics card users:

If you connect your computer to the TV via HDMI, NVIDIA cards may automatically output Variable Refresh Rate (VRR) video to the TV when the TV's **HDMI Ultra HD** setting is **Optimal (Auto Game)**. Always make sure to turn off the VRR function in graphics card before you change the TV's **HDMI Ultra HD** to **Optimal** or **Standard**; the TV UI selection **Optimal** or **Standard** will turn off VRR support in the TV.

\* Note for AMD Graphics card users:

If you connect your computer to the TV via HDMI, please ensure the following settings in the graphics card used to have proper performance.

- If graphics card output video is 4096 x 2160p or 3840 x 2160p and RGB pixel format is used, RGB 4:4:4 pixel format studio (limited RGB) shall be set in computer graphic card.

# 9. Connect Your TV

## 9.1. Network and Internet

### Home Network

To enjoy the full capabilities of your Philips Google TV, your TV must be connected to the Internet.

Connect the TV to a home network with a high-speed Internet connection. You can connect your TV wirelessly or wired to your network router.

### Connect to Network

#### Wireless Connection

##### What You Need

To connect the TV to the Internet wirelessly, you need a Wi-Fi router with a connection to the Internet.

Use a high-speed (broadband) Internet connection.



##### Turn Wi-Fi On or Off

⚙️ **Settings** > **Network and Internet** > **Wi-Fi** > **On/Off**.

##### Make the Connection

⚙️ **Settings** > **Network and Internet** > **Wi-Fi** > **On/Off**

1 - In the list of found networks, select on your wireless network. If your network is not in the list because the network name is hidden (you switched off the SSID broadcast of the router), select Add New Network to enter the network name yourself.

2 - Depending on the type of router, enter your encryption key - WPA2 or WPA3. If you entered the encryption key for this network before, you can select OK to make the connection immediately.

3 - A message will be shown when the connection is successful.

#### Problems

##### Wireless network not found or distorted

- Microwave ovens, DECT phones, or other Wi-Fi devices in your proximity might disturb the wireless network.
- Make sure that the firewalls in your network allow access to the TV's wireless connection.
- If the wireless network does not work properly in your home, try the wired network installation.

##### Internet does not work

- If the connection to the router is OK, check the router connection to the Internet.

##### The PC and Internet connection are slow

- Look in your wireless router's user manual for information on indoor range, transfer rate and other factors of signal quality.
- Use a high-speed (broadband) Internet connection for your router.

##### DHCP


- If the connection fails, you can check the DHCP (Dynamic Host Configuration Protocol) setting of the router. DHCP should be turned on.

In Help, press the color key **Keywords** and look up **Troubleshooting** for more information.

#### Wired Connection

##### What You Need

To connect the TV to the Internet, you need a network router with a connection to the Internet. Use a high-speed (broadband) connection to the Internet.

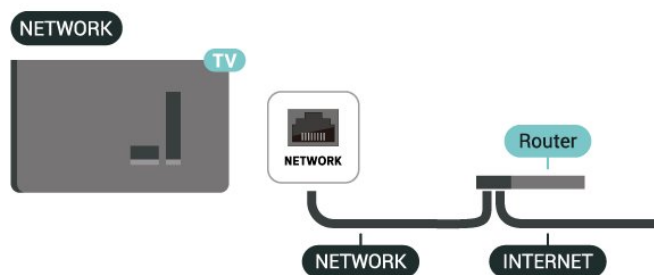

## Network and Internet Settings

### View Network Settings

⚙️ **Settings** > **Network and Internet** > **View network settings**.

You can view all current network settings here. The IP and MAC addresses, signal strength, speed, encryption method, Address/Netmask/Gateway/DNS of IPv4 or

IPv6, etc.

### Switch On with Wi-Fi (WoWLAN)

⚙ **Settings > Network and Internet > Switch On with Wi-Fi (WoWLAN).**

You can switch this TV on from your smartphone or tablet if the TV is in Standby. The setting Switch On with Wi-Fi (WoWLAN) must be switched on.

### Switch on with Chromecast

⚙ **Settings > Network and Internet > Switch on with Chromecast.**

Set it **On** to allow this TV to be switched on from a Chromecast app on your mobile device. Power consumption of the TV in standby status will be higher when this is switched on. The Wi-Fi (WoWLAN) setting should be turned on first before you can change the setting **Switch on with Chromecast**.

### Digital Media Renderer - DMR

⚙ **Settings > Network and Internet > Digital Media Renderer - DMR.**

If your media files do not play on your TV, make sure that the Digital Media Renderer is switched on. As a factory setting, DMR is switched on.

## Quick Connect

### Quick connect to your Wi-Fi

⚙ **Settings > Network and Internet > Quick connect.**

Quick connect helps you to quickly connect to your Wi-Fi by scanning QR code on your TV screen.

Join a Wi-Fi network by scanning the QR code with an Android phone and following the instructions. On the Android phone, go to **Settings > Network and Internet > Wi-Fi > Select Wi-Fi > Advanced > Add device** and then scan the QR code. Your TV will quickly join the Wi-Fi network with assistance from your Android phone.

## TV Control with Matter

### Connect your TV to a Matter smart home network

⚙ **Settings > Network and Internet > TV Control with Matter.**

Matter is the foundation for connected things and a protocol to connect compatible devices and systems. You can add your TV to a Matter smart home network by scanning the QR code or entering the setup code.

## Connects with Control4®

### Switch to enable connection with Control4®

⚙ **Settings > Network and Internet > Connects with Control4.**

Control4® is a provider of personalized automation and control solutions, helping to control multiple devices in your home. To connect your Philips Smart TV to Control4®, make sure your Control4® environment and devices are properly set.

---

## 9.2. Google Account

### Sign In

To enjoy the full capabilities of your Philips Google TV, you can sign in to Google with your Google Account.

By signing in, you will be able to play your favorite games across your phone, tablet and TV. You will also get customized video and music recommendations on your TV home screen, as well as access to YouTube, Google Play and other apps.

### Sign In

Use your existing **Google Account** to sign in to Google on your TV. A Google Account consists of an email address and a password. If you don't have a Google Account yet, use your computer or tablet to create one (accounts.google.com). If you did not sign in during the first TV installation, you can always sign in later.

To sign in after completing the TV installation:

- 1 - Select ⚙ **Settings > Account & Sign-in** and press **OK**.
- 2 - Select **Sign In** and press **OK**.
- 3 - Select **Use your remote** and press **OK**.
- 4 - With the on-screen keyboard, enter your email address and press **OK**.
- 5 - Enter your password and press **OK** to sign in.
- 6 - Press ◀ (left) repeatedly if necessary, to close the menu.

## Kids Profile

Once you have signed in to a Google Account, you may like to create a **Kids profile** for your kids. A Kids profile allows parents to grant their kids access to both general-audience TV apps and apps intended for kids. Parents select which apps to install, and can configure bedtime reminders and screen-time limits.

Under **Kids profile**, only allowed apps can be accessed and only **HDMI** connections are allowed as external sources.



## Create a Kids profile

You may use your existing **Google Account** to sign in to your TV or add an account to create a Kids profile.

- 1 - Select the **Profile** icon via the **Dashboard** in the top-right corner of Home screen.
  - 2 - Select an existing account if you've already created accounts, or select **+ Add account** and follow the instructions to add a new account.
  - 3 - Select **Add a kid** to create a personalized space for your kid.
  - 4 - During the onboarding process for **Kids profiles**, parents select which apps to install in the Kids profile from the apps on the Play Store that are rated for all ages.
- 

## 9.3. Internet

### Start Internet

You can browse the Internet on your TV. You can view any Internet website but most of them are not prepared for a TV screen.

- Some plug-ins (e.g. to view pages or videos) are not available on your TV.
- You cannot send or download files.
- Internet pages are shown one page at a time and full screen.

To start the Internet browser:

- 1 - Press **HOME**.
- 2 - Select **Your apps > WEB BROWSER** (second row of icons in Basic mode) and press **OK**.
- 3 - Enter an Internet address and select to confirm.
- 4 - To close Internet, press **← Back** and then confirm to leave on message screen.

\* Note: If **WEB BROWSER** is not in the **Your Apps** row, you can add the app manually.

# 10. Sources

---

## 10.1. Switch to a device

From the list of Sources, you can switch to any of the connected devices. You can switch to a tuner to watch TV or open the content of a connected USB storage device. You can switch to your connected devices to watch programs on that device, a digital receiver or a Blu-ray Disc player.

To switch to a connected device:

- 1 - Press **SOURCES** to open the Sources menu.
- 2 - Select one of the items in the source list and press **OK**. The TV will show the program or content of the device.

\* Note: A HDMI device listed in Source list as Unregistered cannot be controlled with the TV's remote control, as the communication protocol is limited.

---

## 10.2. AirPlay and HomeKit

### Streaming contents via AirPlay

You can stream media files from Apple devices to your TV via AirPlay. Go to **Settings > Channels and Inputs > Apple AirPlay and HomeKit** to enter **AirPlay and HomeKit Settings** page and make sure **AirPlay** is turned **On**. Your Apple device must be connected to the same Wi-Fi home network as your TV to stream content.

### Add your TV to Apple HomeKit

To add your TV to HomeKit and control your TV via Apple devices:


- 1 - Go to **Settings > Channels and Inputs > Apple AirPlay and HomeKit** to enter **AirPlay and HomeKit Settings** page.
- 2 - Select **Set Up** under the **HomeKit** section to generate a QR code on your TV.
- 3 - On your Apple device, open the **Home** app and tap **Add +** and then scan the QR code on the TV.
- 4 - Follow the instructions on your Apple device to add your TV to HomeKit.

# 11. Quick Menu and Frequent Settings

---

In the **Quick Menu** and **Frequent settings**, you will find a quick way to access TV functions and setting menus.

To open Quick Menu/Frequent settings and open an item:

- 1 - Press  **Quick Menu / MENU** to open **Quick Menu**.
- 2 - Press the arrows **<** (Left) or **>** (right) to switch between **Quick Menu** and **Frequent settings**.
- 3 - Select an item and press **OK** to open or start it.
- 4 - Press **<** **Back** to close **Quick Menu** or **Frequent settings** without starting anything.

\* Note: **Quick Menu** and **Frequent settings** are not available on third-party TV apps.

# 12. Display and Sound

---

## 12.1. Picture

### Picture Settings

---

#### About the Picture Settings Menu

The picture setting menu provides an easy flow to access multi-level picture settings from general to advanced. For some picture settings, values can be changed by breakaway menu to let you view all the setting values and preview the effects that will be applied.

On the first level of the Picture setting menu, you can always select an item and press the **OK** key to go to the next level of options. If a breakaway menu appears, you can slide or select a box to choose the setting values and preview the effect and then press **OK** to confirm the change. If there are other setting options on the same level, you can press the **▲** (up) or **▼** (down) key to scroll to them without leaving the breakaway menu. Once you have finished changing the settings, you can keep pressing the **← Back** key to leave or close the setting menus.

---

#### Picture Style

##### Select a style

⚙ **Settings > Display & Sound > Picture > Picture style.** Alternately, press **⚙ (DASHBOARD)** on the remote control and select **Picture > Picture style**.

For easy picture adjustment, you can select a preset picture style.

- Personal - The picture preferences you set during the first start up.
- Crystal Clear - Ideal for daylight viewing.
- Home Cinema - Ideal for daily movie home entertainment experience.
- ECO - Most energy conscious setting.
- Movie - Ideal for watching movies with original studio effect.
- Game\* - Ideal for playing games.
- Monitor\*\* - Ideal for computer application display. Original video is displayed with minimum processing.

\* Picture style - Game is only available in HDMI video and streaming video apps application.

\*\* Picture style - Monitor is only available when HDMI source video is applicable for PC application.

When TV receives HDR signal (Hybrid Log Gamma, HDR10 and HDR10+), select a picture style below:

- HDR Personal
- HDR Crystal Clear
- HDR Home Cinema
- HDR ECO
- HDR Movie
- HDR Game
- HDR Monitor

#### Restore Picture style

⚙ **Settings > Display & Sound > Picture > Restore picture style.**

Select to restore the picture style.

### Auto Film Picture style

#### Preferred Film Picture style

⚙ **Settings > Display & Sound > Picture > Auto Film Picture style > Preferred Film Picture style.**

You can select which **Picture style** will be automatically set when film content is detected. The preferred Film Picture style option is depending on the availability of

⚙ **Settings > Display & Sound > Picture > Picture style.**

\*Note: To automatically detect film content and set your preference Picture style, you need to switch on the **Auto Film Picture style** from **⚙ Settings > Display & Sound > Picture > Auto Film Picture style > Auto Film Picture style**.

#### Switch on/off Auto Film Picture style

⚙ **Settings > Display & Sound > Picture > Auto Film Picture style > Auto Film Picture style.**

Switch on or off to detect film content automatically and set your preference in the **⚙ Settings > Display & Sound > Picture > Auto Film Picture style > Preferred Film Picture style**.

### More Picture Settings

---

#### Contrast

---

#### Brightness

---

#### Ambient Light Level Optimization

⚙ **Settings > Display & Sound > Picture > Contrast > Brightness > Ambient light level optimization.**

Switch on to adjust the picture settings automatically to the lighting conditions of the room.

---

## Backlight Contrast

⚙️ Settings > Display & Sound > Picture > Contrast > Brightness > Backlight contrast.

Adjust the contrast value of the picture. You can decrease contrast value to reduce power consumption.

---

## Contrast Modes

⚙️ Settings > Display & Sound > Picture > Contrast > Brightness > Contrast mode.

Select **Normal**, **Optimized for picture**, or **Optimized for energy savings** to set the TV to automatically reduce the contrast for best power consumption or for best picture experience, or select **Off** to switch off the adjustment.

---

## Video Level

⚙️ Settings > Display & Sound > Picture > Contrast > Brightness > Video level.

Adjust the video contrast level.

---

## Dark Details

### Gamma

⚙️ Settings > Display & Sound > Picture > Contrast > Dark details > Gamma.

To set a nonlinear setting for picture luminance and contrast.

**Note:** Not available for some models when **Ambient dark detail optimization** or **Dark detail optimization** is set to **On**.

---

### Black Level

⚙️ Settings > Display & Sound > Picture > Contrast > Dark details > Black level.

To set the black level of the picture.

**Note:** Setting the black level far from reference value (50) may result in lower contrast (dark detail disappears or black picture becomes gray).

---

## Contrast Enhancement

### Dynamic Enhancement Level

⚙️ Settings > Display & Sound > Picture > Contrast > Contrast enhancement > Dynamic enhancement level.

Select **Off**, **Maximum**, **Medium**, or **Minimum** to set the level at which the TV automatically enhances the details in the dark, middle and light areas of the picture.

**Note:** Not available when an HDR signal is detected. Not available in **Monitor** mode.

---

## HDR Control

### HDR Tone Mapping

⚙️ Settings > Display & Sound > Picture > Contrast > HDR control > HDR tone mapping.

Set the method used in HDR tone mapping processing. **Off** is to disable TV internal tone mapping or follow HGiG (HDR Gaming Interest Group) gaming HDR standard to a matching gaming device. You can adjust the method to **Static** (if HDR10 signal detected) or **Dynamic** (if HDR10+ signal detected).

**Note:** Available when an HDR10 or HDR10+ signal is detected.

---

### HDR Effect Settings

⚙️ Settings > Display & Sound > Picture > Contrast > HDR control > HDR10 effect / HDR10+ effect / HLG effect.

When an HDR10/HDR10+/HLG signal is detected and **HDR tone mapping** is not set to **Off**, you can adjust the HDR effect level to **More details**, **Balanced**, or **More brightness** for each type of HDR content.

---

## Color

⚙️ Settings > Display & Sound > Picture > Color.

### Saturation

⚙️ Settings > Display & Sound > Picture > Color > Saturation.

To adjust the value of saturation for the colors.

**Note:** not available when picture style is **Monitor** or **HDR Monitor**.

### Adjust the tint setting

⚙️ Settings > Display & Sound > Picture > Color > Tint.

To adjust the tint setting value.

### Adjust the color enhancement

⚙️ Settings > Display & Sound > Picture > Color > Color enhancement.

Select **Maximum**, **Medium**, **Minimum** or **Off** to set the

level of the color intensity and the details in bright colors.

### Adjust color temperature

⚙ **Settings > Display & Sound > Picture > Color > Color temperature > Whitepoint.**

Select **Warm**, **Normal**, **Cool** or **Custom** to set the color temperature for your preference.

⚙ **Settings > Display & Sound > Picture > Color > Color temperature > 2 whitepoint alignment or 20 whitepoint alignment.**

Customize the whitepoint alignment based on the selected color temperature of the picture.

### Color control

⚙ **Settings > Display & Sound > Picture > Color > Color control.**

The **Color control** setting is only available when **Color enhancement** is set to **Off**. To adjust or reset to default values for **Hue**, **Saturation** and **Intensity** for the color **Red**, **Yellow**, **Green**, **Cyan**, **Blue** and **Magenta**. If you want to reset all values to default, select **Reset all to default**.

---

### Sharpness

#### Enhancement

⚙ **Settings > Display & Sound > Picture > Sharpness > Enhancement.**

To adjust the sharpness value of the picture.

#### Texture enhancement

⚙ **Settings > Display & Sound > Picture > Sharpness > Texture enhancement.**

Switch on to have superior sharpness in line edges and details. Not available when **Picture format** is set to **Fill Screen**.

---

### Picture Clean

#### Noise reduction

⚙ **Settings > Display & Sound > Picture > Picture clean > Noise reduction.**

Select **Off**, **Maximum**, **Medium**, or **Minimum** to set the level for removing the noise from video content. Noise is mostly visible as small moving dots in the on-screen picture.

### MPEG Artifact Reduction

⚙ **Settings > Display & Sound > Picture > Picture clean > Artifact Reduction.**

Select **Off**, **Maximum**, **Medium**, or **Minimum** to have different degrees of smoothing of artifacts in digital video content.

Artifacts are mostly visible as small blocks or jagged edges in on-screen images.

**Picture clean** is not available when **Picture style** is **Game**, **HDR Game**, **Monitor** or **HDR Monitor**.

---

### Motion

#### Motion styles

⚙ **Settings > Display & Sound > Picture > Motion > Motion styles.**

Motion styles provides optimized motion setting modes for different video content.

Select one of the motion styles to have a different viewing experience for motion video. (**Off**, **Pure Cinema**, **Movie**, **Standard**, **Smooth**, **Personal**)

Not available for below cases:

- ⚙ **Settings > Display & Sound > Picture > Picture style > Monitor**
- ⚙ **Settings > Display & Sound > Picture > Picture style > Game**

#### Smoothness

⚙ **Settings > Display & Sound > Picture > Motion > Smoothness.**

To make picture movement smooth by minimizing judder.

Select from **0** to **10** to have different degrees of reducing motion judder visible in movies on the TV. Select **0** when noise appears in the moving picture on-screen.

Note: Only available when **Motion styles** is set to **Personal**.

---

### Quick Picture Setting

During the first installation, you made some picture settings in a few easy steps. You can redo these steps with **Quick Picture Setting**.

To set the picture in a few easy steps:

- 1 - Select ⚙ **Settings > Display & Sound > Picture**.
- 2 - Select **Quick Picture Setting\*** and press **OK**.
- 3 - Use the navigation keys to select your preferred source, sharpness, contrast, color and motion settings.
- 4 - Select **Finish** or press ◀ (left) repeatedly if necessary,

to close the menu.

\* **Quick Picture Setting** is not available when **Picture style** is set to **Monitor/HDR Monitor/Game**.

## 12.2. Screen

### Picture Format

If the picture is not filling the whole screen, if black bars are showing on the top or bottom or at both sides, you can adjust the picture to fill the screen completely.

To select one of the basic settings to fill the screen:

1 - Press **⚙ Settings > Display & Sound > Screen > Picture format > Fill Screen, Fit to Screen, Wide Screen** and **Original**, and press **OK**.

2 - Press **◀** (left) repeatedly if necessary, to close the menu.

- **Fill Screen** – automatically enlarges the picture to fill the screen. Picture distortion is minimal, subtitles remain visible. Not suitable for PC input. Some extreme picture content can still show black bars. Picture content aspect ratio may change.

- **Fit to Screen** – automatically zooms in on the picture to fill the screen without distortion. Black bars may be visible. Not suitable for PC input.

- **Wide Screen** – automatically zooms in on the picture to 16:9 full screen. Picture content aspect ratio may change.

- **Original** – automatically zooms in on the picture to fit the screen at the original aspect ratio. No content lost visible.

To format the picture manually:

1 - Press **⚙ Settings > Display & Sound > Screen > Picture format > Advanced** and press **OK**.

2 - Use **Shift**, **Zoom**, and **Stretch** to adjust the picture.

3 - Or select **Undo** to return to the setting the picture had when you opened **Picture Format**.

- **Shift** – Select on the arrows to shift the picture. You can only shift the picture when it is zoomed in.

- **Zoom** – Select on the arrows to zoom in.

- **Stretch** – Select on the arrows to stretch the picture vertically or horizontally.

- **Undo** – Select to return to the picture format you started with.

Some Picture format setting selections may not be available in some conditions. For example, in video streaming, Android app application, gaming mode, etc.

## 12.3. Sound

### Sound Style

Select a style

**⚙ Settings > Display & Sound > Sound > Sound style.**

For easy sound adjustment, you can select a preset setting with sound style.

- **AI mode** - There are ideal styles for watching movies, listening to music or playing a game. Select AI mode for intelligent switching of sound style based on audio content.

- **Original** - Most neutral sound setting

- **Entertainment** - Ideal for watching movies

- **Music** - Ideal for listening to music

- **Spatial Music** - Ideal for gaming

- **Dialog** - Ideal for speech

- **Personal** - Access to more in-depth sound settings.

**Customize personal settings**

1 - Set the sound style to **Personal**.

2 - Go to **⚙ Settings > Display & Sound > Sound > Personal settings** to change personal sound settings.

**Restore personal settings**

**⚙ Settings > Display & Sound > Sound > Personal settings > Restore personal mode.**

Select to restore personal sound settings.

### Personal Settings

**Speaker virtualizer**

**⚙ Settings > Display & Sound > Sound > Personal settings > Speaker virtualizer.**

Select **On** or **Auto (Dolby Atmos)** to enable Dolby Atmos, which can add height dimension in sound. With height dimension, sound can be precisely placed and moved in three-dimensional space. Select **Off** to turn the function off.

**Clear dialog**

**⚙ Settings > Display & Sound > Sound > Personal settings > Clear dialog.**

Select **On** to get an improved sound quality for speech program.

**AI Equalizer**

**⚙ Settings > Display & Sound > Sound > Personal**

## settings > AI Equalizer.

Select **On** to enable intelligent equalizer adjustment based on audio content and custom settings.

### Custom AI Equalizer

⚙ **Settings > Display & Sound > Sound > Personal settings > Custom AI Equalizer.**

Press the **Arrow/navigation keys** to adjust the level of AI Equalizer.

### Restore personal settings

⚙ **Settings > Display & Sound > Sound > Personal settings > Restore personal mode.**

Select to restore personal sound settings.

## TV Placement

### TV placement

⚙ **Settings > Display & Sound > Sound > TV placement.**

Select **On a TV stand** or **On the wall** to have the best sound reproduction according to the setting.

## Personalized Sound

### Personalized sound settings

⚙ **Settings > Display & Sound > Sound > Personalized sound.**

### Personalize your TV speakers sound

Personalized sound settings allow you to create a personal profile based on your hearing abilities by taking a hearing test. You can choose your preferred sound settings so that you can hear more clearly and experience better sound, thereby enhancing your TV viewing experience.

### How do I test my hearing and set up my hearing profile?

Start the hearing test from ⚙ **Settings > Display & Sound > Sound > Personalized sound > Configure.** Create your own hearing profile with a short hearing test.

Before the test, you need to switch your current audio out to **TV speakers** as the setup affects the TV speakers only. The hearing test works best when carried out in silence; make sure your environment is quiet when testing.

Select **Let's start** and enter a profile name to start the

test.

During the test:

- You will hear a beep sound increasing in volume.
- Press **OK** button when you hear the beep sound.
- Then, you will hear a beep sound decreasing in volume.
- Press **OK** button when you don't hear the beep sound.
- The test will repeat 5 times with different tones.

Once the test is complete, your hearing test results will be presented, and you can then select **Save and exit** to store the profile. You can apply the current profile or create other profiles, with a maximum of 3 profiles. You can also **Rename profiles** or **Remove profiles** when needed.

## EasyLink 2.0

Control the sound settings of the HDMI sound system via EasyLink 2.0

⚙ **Settings > Display & Sound > Sound > EasyLink 2.0.**

You can adjust the individual sound settings of the HDMI sound system via **Frequent settings** or **Display & Sound > Sound**. This is only applicable to EasyLink 2.0-compliant HDMI sound systems. To switch on the control, make sure the **EasyLink 2.0 sound control** menu item is set to **On** under **Channels and inputs > Inputs**.

### Select sound style

⚙ **Settings > Display & Sound > Sound > EasyLink 2.0 > Sound style.**

Switch between the preset sound styles. There are ideal styles for watching movies, listening to music and other sound content.

- **Movie** - Ideal sound style for watching movies.
- **Music** - Optimized for listening to music.
- **Voice** - Enhances the dialog in the vocals.
- **Stadium** - Gives the feel of a large open-air stadium.
- **Custom** - Personalized sound mode. This setting is only available when the connected device is compatible with the TV.

### Adjust bass level

⚙ **Settings > Display & Sound > Sound > EasyLink 2.0 > Bass.**

Press the **Arrow/navigation keys** to adjust the bass level.

### Adjust treble level

⚙ **Settings > Display & Sound > Sound > EasyLink 2.0 > Treble.**

Press the **Arrow/navigation keys** to adjust the treble



level.

### Custom Equalizer

⚙ **Settings > Display & Sound > Sound > EasyLink 2.0 > Custom Equalizer.**

Adjust the frequency bands when the **Sound style** is set to **Custom**. Press the **Arrow/navigation keys** to adjust the AI Equalizer levels. This setting is only available when the connected device is compatible with the TV.

### Surround Sound

⚙ **Settings > Display & Sound > Sound > EasyLink 2.0 > Surround Sound.**

Select a surround effect from the preset types.

- Upmix - Upmix to take full advantage of all speakers.
- Standard - Speaker output through the original channels.
- Surround AI - Optimum surround effect using AI analysis.

### DRC

⚙ **Settings > Display & Sound > Sound > EasyLink 2.0 > DRC.**

Select the preferred Dynamic Range Control (DRC).

- Auto - Dynamic range is automatically adjusted.
- On - Optimize the dynamic range.
- Off - Turn off dynamic range adjustment.

### Height speakers

⚙ **Settings > Display & Sound > Sound > EasyLink 2.0 > Height speakers.**

Select the preferred height speakers movement. This setting is only available when the connected device is compatible with the TV.

- Auto - Dynamic movement depending on content.
- On - Always elevated.
- Off - Flat position.

### Select sound stage

⚙ **Settings > Display & Sound > Sound > EasyLink 2.0 > Sound stage.**

Select a listening experience. This setting is only available when the connected device is compatible with the TV.

- Auto - Dynamic setting changes depending on content.
- On - Immersive Sound Stage, good for watching movies.
- Off - Crystal Sound Stage, good for listening to music and dialog.

### Reset all to default

⚙ **Settings > Display & Sound > Sound > EasyLink 2.0 > Reset all to default.**

Reset all the EasyLink 2.0 sound settings back to the original factory settings.

There are more settings options that may be available if your HDMI sound system supports them:

**Subwoofer level** adjustment

**Dolby Atmos** adjustment

**Height level** adjustment

**DTS Virtual X** enable/disable

**TRUE Volume** enable/disable

**Night mode** enable/disable

**Auto volume** setting

**Display** enable/disable

## Room Calibration

### Room calibration

⚙ **Settings > Display & Sound > Sound > Room calibration.**

This calibration will allow the TV to determine the acoustics in your room and provide optimized sound quality through the TV speakers that best matches the acoustics.

You need to pair your remote control with the TV before starting the setup and make sure the TV **Audio out** setting is **TV speakers**. For a more accurate result, please keep the room quiet.

To start the room calibration:

- 1 - Hold your remote control at the listening position and point it toward the TV during the tuning process.
- 2 - Select **Calibrate now** or **Calibrate again** to start the calibration.
- 3 - A test sound will be played and measured through your remote control. Hold your remote control and point it toward the TV; this can take several seconds.
- 4 - Once your TV speakers are successfully calibrated, select **Test** to listen to the sound before and after the TV speakers are calibrated. Select **Apply** to accept the setting or select **Try again** to redo the calibration.
- 5 - When room calibration setup is successful and applied, the TV returns to the Settings menu. Now go to ⚙ **Settings > Display & Sound > Sound > Room calibration** and select **Apply calibration** to tune the audio output from TV speakers.

## Advanced Sound Settings

---

### Volume Control

#### Auto volume

⚙️ **Settings > Display & Sound > Sound > Advanced > Auto volume.**

Select **On** or **Off** to switch the auto volume adjustment on or off.

Select **Night Mode** for a more comfortable, quiet listening experience.

#### Delta volume

⚙️ **Settings > Display & Sound > Sound > Advanced > Delta volume.**

The Delta volume setting can be used to balance the sound level difference between the TV channel and the HDMI source input. Press the **Arrow/navigation keys** to adjust the delta value for TV speaker volume.

\* Note: Delta volume is available when the input source is set to HDMI or Analog sources and the Audio out is set to **TV speakers** or **HDMI sound system**.

## Dolby Atmos Notification

⚙️ **Settings > Display & Sound > Sound > Dolby Atmos notification.**

Switch **On** or **Off** the Dolby Atmos notification when Dolby Atmos content begins to play on your TV. The notification is only available when ⚙️ **Settings > Display & Sound > Audio out** is set to **TV speakers** and ⚙️ **Settings > Display & Sound > Sound > Personal settings > Speaker virtualizer** is set to **On** or **Auto (Dolby Atmos)**.

---

## 12.4. Audio Output

### Speakers and eARC

#### Audio out

⚙️ **Settings > Display & Sound > Audio out.**

Set the TV to play the sound on TV or on the connected audio system.

You can select where you want to hear the TV sound and how you want to control it.

- If you select **TV speakers**, the TV speakers are always on.
- If you select **Optical**, the TV speakers will be switched

off and Digital output/Optical will be turned on.

With an audio device connected with HDMI CEC, select **HDMI sound system**. The TV will switch off the TV speakers when the device is playing the sound.

#### eARC

⚙️ **Settings > Display & Sound > Audio output > eARC.**

Set eARC mode to **Automatic** or **Off**.

## Digital Output Settings

Digital output settings are available for optical and HDMI ARC sound signals.

#### Digital out format

⚙️ **Settings > Display & Sound > Audio output > Digital out format.**

Set the audio out signal of the TV to fit the sound capabilities of the connected Home Theater System.

- **Stereo (uncompressed)**: If your audio playback devices have no multichannel sound processing, select to only output stereo content to your audio playback devices.
- **Multichannel**: Select to output multichannel audio content (compressed multichannel sound signal) or stereo audio content to your audio playback devices.
- **Multichannel (bypass)**: Select to output Dolby Digital Plus or DTS content to your audio playback devices or Home theater system.

- Make sure your audio playback devices support Dolby Atmos feature.

- SPDIF output (DIGITAL AUDIO OUT) will be enabled when streaming Dolby Digital Plus content.

#### Digital out leveling

⚙️ **Settings > Display & Sound > Audio output > Digital out leveling.**

Adjust the loudness level of the HDMI sound system.

- Select **More** to have louder volume.
- Select **Less** to have softer volume.

#### Digital out delay

⚙️ **Settings > Display & Sound > Audio output > Digital out delay.**

For some Home Theater Systems, you might need to adjust the audio sync delay to synchronize the audio to the video. Select **Off** if a sound delay is set on your Home Theater System.

Digital out offset (Only available when Digital out delay set to On)

⚙ Settings > Display & Sound > Audio output > Digital out offset.

If you cannot set a delay on the Home Theater System, you can set the TV to sync the sound. You can set an offset that compensates for the time necessary for the Home Theater System to process the sound of the TV picture. You can set the value in steps of 5ms. Maximum setting is 60ms.

# 13. Apps

---

## 13.1. About Apps

You can find your favorite Apps on the **Your apps** row on the Home menu.

Like apps on your smartphone or tablet, the apps on your TV offer specific functions for an enriched TV experience. You can use the **WEB BROWSER** app to surf the Internet.

Apps can come from the Google Play™ Store. To get you started, some practical apps are pre-installed on your TV.

To install apps from the Google Play™ Store, the TV must be connected to the Internet. You must sign in with a Google Account to use the Google Play apps and Google Play™ Store. Select the app you want to install and select the **Install** button to start the installation. Once the app installation is done, you can select the **Open** button to open the app or **Uninstall** button to uninstall the app.

---

## 13.2. Google play

### Movies and TV

With the **Google TV** app, you can rent or buy movies and TV shows to watch on TV.

#### What You Need

- your TV must be connected to the Internet
- you must sign in with your Google Account on the TV
- add a credit card to your Google Account to purchase movies and TV shows

#### To rent or buy a movie or TV show:

- 1 - Press **HOME** and select **Apps** tab.
- 2 - Select the **Google TV** app and open it.
- 3 - Select a movie or TV show and press **OK**.
- 4 - Select the purchase you want and press **OK**. You will be taken through the purchase procedure.

#### To watch a rented or purchased movie or TV show:

- 1 - Press **HOME** and select **Apps** tab.
- 2 - Select the **Google TV** app and open it.
- 3 - Select the movie or TV show from your library in the app, select the title and press **OK**.
- 4 - You can use the **Stop**, **Pause**, **Rewind** or **Fast forward** buttons on the remote control.
- 5 - To stop the Movies & TV app, press **Back** repeatedly or press **tv EXIT**.

\* Note: If **Google TV** is not on the **Your Apps** row, you

can search for it using the search field to **Open** or **Install** it.

Find more information at  
[www.support.google.com/googletv](http://www.support.google.com/googletv)

### Music

With **YouTube Music**, you can play your favorite music on TV.

You can buy new music on your computer or mobile device. Or, on your TV, you can sign up for All Access, the Google Play Music subscription. Alternatively, you can play the music you already own, stored on your computer.

#### What You Need

- your TV must be connected to the Internet
- you must sign in with your Google Account on the TV
- add a credit card to your Google Account to add a music subscription

#### To start YouTube Music:

- 1 - Press **HOME** and select **Apps** tab.
- 2 - Select the **YouTube Music** app and open it.
- 3 - Select the music you want and press **OK**.
- 4 - To stop the Music app, press **Back** repeatedly or press **tv EXIT**.

\* Note: If **YouTube Music** is not on the **Your Apps** row, you can search for it using the search field to **Open** or **Install** it.

Find more information at  
[www.support.google.com/googletv](http://www.support.google.com/googletv)  
or [support.google.com/youtubemusic](http://support.google.com/youtubemusic)

### Games

With Google Play Games, you can play games on TV. Online or offline.

You can see what your friends are playing currently or you can join the game and compete. You can track your achievements or start wherever you left off.

#### What You Need

- your TV must be connected to the Internet
- you must sign in with your Google Account on the TV
- add a credit card to your Google Account to purchase new games

Start the Google Play Games app to select and install new game apps on your TV. Some games are free of charge. A message appears if a particular game needs a gamepad to play the game.

#### To start or stop a Google Play Game:

- 1 - Press **HOME** and select **Apps** tab.
  - 2 - Select the **Google Play Games** app and open it.
  - 3 - Select a game to play or select a new game to install and press **OK**.
  - 4 - When done, press **Back** repeatedly or press **TV EXIT** or stop the app with its dedicated exit/stop button.
- \* Note: If **Google Play Games** is not on the **Your Apps** row, you can search for it using the search field to **Open** or **Install** it.

Find more information at  
[www.support.google.com/googletv](http://www.support.google.com/googletv)

## Google Play Store

From the Google Play Store you can download and install new apps. Some apps are free of charge.

### What You Need

- your TV must be connected to the Internet
- you must sign in with your Google Account on the TV
- add a credit card to your Google Account to purchase apps

### To install a new app:

- 1 - Press **HOME** and select **Apps** tab.
- 2 - Select the **Google Play Store** app and open it.
- 3 - Select the app you want to install and press **OK**.
- 4 - To close the **Google Play Store**, press **Back** repeatedly or press **TV EXIT**.

### Parental Controls

In the Google Play Store, you can hide apps according to users/buyers maturity. You need to enter a PIN code to select or change the level of maturity.

### To set parental control:

- 1 - Press **HOME** and select **Apps** tab.
- 2 - Select the **Google Play Store** app and open it.
- 3 - Select **Settings > Parental controls**.
- 4 - Select the level of maturity you want.
- 5 - When prompted, enter the PIN code.
- 6 - To close the **Google Play Store**, press **Back** repeatedly or press **TV EXIT**.

\* Note: If **Google Play Store** is not on the **Your Apps** row, you can search for it using the search field to **Open** or **Install** it.

Find more information at  
[www.support.google.com/googletv](http://www.support.google.com/googletv)

## Payments

To make a payment on Google Play on TV, you must add a form of payment - a credit card (outside the United States) - to your Google Account. When you purchase a movie or TV show, you will be charged on this credit card.

### To add a credit card:

- 1 - On your computer, go to [accounts.google.com](http://accounts.google.com) and sign in with the Google Account you will use with Google Play on TV.
- 2 - Go to [wallet.google.com](http://wallet.google.com) to add a card to your Google Account.
- 3 - Enter your credit card data and accept the terms and conditions.

---

## 13.3. Start or Stop an App

You can start an app from the Home screen.

To start an app:

- 1 - Press **HOME**.
- 2 - Move to the **Your apps** row, select the app you want and press **OK**.
- 3 - You can also search for the app using the search field to **Open** or **Install** it.
- 4 - Alternatively, you can go to **Settings > Apps > See all apps** or **Show system apps** to select an app to open.
- 5 - To stop an app, press **Back** or press **TV EXIT** or stop the app with its dedicated exit/stop button.

---

## 13.4. Manage Apps

### ⚙ Settings > Apps.

If you stop an app and return to the Home menu, the app is not really stopped. The app is still running in the background to be readily available when you start it again. To run fluently, most apps need to save some data in the cache memory of the TV. It might be good to stop an app completely or clear the cache data of a particular app to optimize the overall performance of apps and to keep memory usage low on your TV. Also, it is best to uninstall apps that you are not using anymore. You can select **Apps > See all apps** or **Unused apps** to list your installed or used apps.

For each installed app, you can also set the permissions for **Manage updates**, **App permissions**, **Special app access** and **Security**.

Find more information at  
[www.support.google.com/googletv](http://www.support.google.com/googletv)

# 14. System

---

## 14.1. Accessibility

### ⚙ Settings > System > Accessibility.

With **Accessibility** switched on, the TV is prepared for use by deaf, hard of hearing, blind or partially sighted people.

#### High-contrast text

### ⚙ Settings > System > Accessibility > High contrast text.

Turn on to make texts displayed with higher contrast for easier reading.

#### Text to Speech

### ⚙ Settings > System > Accessibility > Text to speech.

Set to convert the text into speech for blind or partially sighted people.

#### Accessibility shortcut

### ⚙ Settings > System > Accessibility > Accessibility shortcut.

Quick access to Accessibility settings.

There are more services provided by Google, e.g., **Captions**, **TalkBack**, and **Switch Access**, to make your TV more accessible. To find more information about the services, visit [www.support.google.com/googletv/answer/10070337](http://www.support.google.com/googletv/answer/10070337)

---

## 14.2. About

### System Software Update


---

#### Update from Internet


If the TV is connected to the Internet, you may receive a message to update the TV software. You need a high-speed (broadband) Internet connection. If you receive this message, we recommend you to carry out the update.

With the message on-screen, select **Update** and follow the instructions on-screen.

You can also look for a software update yourself.

During the software update, there is no picture and the TV will switch off and on again. This might happen several times. The update can take a few minutes. Wait until the TV picture comes back on. Do not press the power switch  on the TV or on the remote control during the software update.

To look for a software update yourself:

- 1 - Select **⚙ Settings > System > About > System update > Internet (recommended)** and press **OK**.
- 2 - The TV will look for an update on the Internet.
- 3 - If an update is available, you can update the software right away.
- 4 - A software update can take several minutes. Do not press the  key on the TV or remote control.
- 5 - When the update is done, the TV will return to the channel you were watching.

---

#### Update from USB

It might be necessary to update the TV software.

You need a computer with a high-speed Internet connection and a USB flash drive to upload the software on the TV. Use a USB flash drive with at least 2Gb of free space. Make sure that write protection is switched off.

To update the TV software:

- 1 - Select **⚙ Settings > System > About > System update**.
- 2 - Select **USB** and press **OK**.


#### Identify the TV

- 1 - Insert the USB flash drive into one of the USB connections of the TV.
- 2 - Select **Write to USB** and press **OK**. An identification file is written on the USB flash drive.

#### Download the software

- 1 - Insert the USB flash drive into your computer.
- 2 - On the USB flash drive, locate the file **update.htm** and double click it.
- 3 - Click **Send ID**.
- 4 - If new software is available, download the .zip file.
- 5 - After the download, unzip the file and copy the file **autorun.upg** onto the USB flash drive. Do not place this file in a folder.

#### Update the TV software

- 1 - Insert the USB flash drive into the TV again. The update starts automatically.
- 2 - A software update can take several minutes. Do not press the  key on the TV or remote control. Do not remove the USB flash drive.
- 3 - When the update is done, the TV will return to the channel you were watching.

If a power cut occurs during the update, never remove the USB flash drive from the TV. When the power returns, the update will continue.

To prevent an accidental update of the TV software,

delete the autorun.upg file from the USB flash drive.

---

## Automatic Software Update

To switch on Automatic software update to update your TV software automatically. Leave the TV on standby.

- 1 - Select **⚙ Settings > System > About > System update > Automatic Software Update**.
- 2 - Follow the on-screen instruction.
- 3 - Press **◀** (left) repeatedly if necessary, to close the menu.

When the setting is enabled, the upgrade gets downloaded when the TV is powered ON and installed 15 minutes after the TV has gone into standby (as long as there are no alarms scheduled).

When the setting is disabled, the "Upgrade Now"/"Later" OSD will be shown.

---

## View Software Update History

Display the list of software versions that are successfully updated on the TV.

To view the software update history:

- 1 - Select **⚙ Settings > System > About > System update > View software update history**.
- 2 - The software update history on this TV will be listed.

---

## Reset

### Reinstall TV

**⚙ Settings > System > About > Reset > Factory reset**.

Reset and redo the complete TV installation.

### Reset all settings value to original TV settings

**⚙ Settings > System > About > Reset > Factory settings**.

Reset all settings to factory settings.

---

## Status

### Display TV status information

**⚙ Settings > System > About > Status**.

To display the TV status about IP address, Device, MAC address, Bluetooth® address, Serial Number, etc.

---

## Legal Information

### Open Source Software

This television contains open source software. TP Vision Europe B.V. hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open-source software packages used in this product for which such offer is requested by the respective licenses.

This offer is valid up to three years after product purchase to anyone in receipt of this information. To obtain the source code, please write in English to...

**open.source@tpv-tech.com**

---

### Open Source License

#### About Open Source License

README for the source code of the parts of TP Vision Europe B.V. TV software that fall under open source licenses.

This is a document describing the distribution of the source code used on the TP Vision Europe B.V. TV, which fall either under the GNU General Public License (the GPL), or the GNU Lesser General Public License (the LGPL), or any other open source license. Instructions to obtain copies of this software can be found in the Directions for Use.

TP Vision Europe B.V. MAKES NO WARRANTIES WHATSOEVER, EITHER EXPRESS OR IMPLIED, INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, REGARDING THIS SOFTWARE. TP Vision Europe B.V. offers no support for this software. The preceding does not affect your warranties and statutory rights regarding any TP Vision Europe B.V. product(s) you purchased. It only applies to this source code made available to you.

---

## System Information

To view the current TV software version:

- 1 - Select **⚙ Settings > System > About > Model, Android TV OS version, Android security patch level, Kernel version, Android TV OS build, SW version, Netflix ESN, Nagra device ID**.
- 2 - The version, release notes and creation date are shown. Also, the Netflix ESN Number and other information are shown if available.
- 3 - Press **◀** (left) repeatedly if necessary, to close the menu.

---

## 14.3. Date and Time

⚙ Settings > System > Date & Time.

### Automatic Date & Time

⚙ Settings > System > Date & Time > Automatic date & time.

Set to use network-provided time or **Off** to use system time.

### Set Date

⚙ Settings > System > Date & Time > Set date.

Set current date.

### Set Time

⚙ Settings > System > Date & Time > Set time.

Set current time.

### Set Time Zone

⚙ Settings > System > Date & Time > Set time zone.

Set current time zone.

### Use 24-Hour Format

⚙ Settings > System > Date & Time > Use 24-hour format.

Set to use 24-hour format to display the time.

---

## 14.4. Language

Change the language of the TV menu and messages

⚙ Settings > System > Language.

Select the language to display the TV menu and messages.

---

## 14.5. Keyboard

Settings for the connected keyboard and virtual keyboards

⚙ Settings > System > Keyboard.

Connect the USB keyboard to one of the USB connections on this TV. When the TV detects the keyboard for the first time, you can select your keyboard lay-out and test your selection. You can also manage the settings of connected keyboard and virtual keyboards.

---

## 14.6. Storage

### Internal shared storage

You can see how much storage space - the internal TV memory - you are using for your apps, videos, music, etc. You can see how much free space you still have available for installing new apps. Check your storage if apps start to run slow or in case of app trouble.

Select ⚙ Settings > System > Storage to see how much storage you are using.

---

## 14.7. Ambient Mode

Settings for Ambient mode

⚙ Settings > System > Ambient Mode.

Ambient mode is the screen saver to avoid displaying still images for a longer period of time. You can set the photo source, display weather or time information, and adjust the slideshow speed.

---

## 14.8. Power and Energy

### Set the Power on behavior

⚙ Settings > System > Power and Energy > Power on behavior.

Set the TV to stay on the **Google TV home screen** or on the **Last used input** when you power on the TV.

### Set Energy saver



## ⚙ Settings > System > Power and Energy > Power and Energy.

Set the time to turn off the TV display automatically to save energy. The time setting can be set for **When inactive** or **When watching**. When inactive, you can set the time to **15/20/30 minutes** or **1/4/8/12/24 hours**. When watching, you can set the time to **4/6/8 hours** or **Never**.

Set the TV to switch to Standby automatically after a preset time

⚙ Quick Menu / MENU > Frequent Settings > Sleep timer.

Alternatively, go to ⚙ Settings > System > Power and Energy > Sleep timer.

TV switches to standby mode automatically after a preset time. You can set the time to **10/20/30/40/50/60 minutes**. If set to **Off**, the sleep timer is switched off. You may stop the timer when the notification pop-up is at the last one minute.

Set screen off to save energy consumption

⚙ Quick Menu / MENU > Frequent Settings > Screen off.

Alternatively, go to ⚙ Settings > System > Power and Energy > Screen off. You can also press the **+ OPTIONS** key to access **Screen off** under TV and HDMI sources.

Select **Screen off**, and the TV screen is switched off. To switch the TV screen back on, press any key (except **AMBILIGHT\***, **🔊 Volume +** or **-**, **123 key** and **navigation** keys) on the remote control.

\* **AMBILIGHT** key function is only available on models which support Ambilight function.

Set TV switch off timer

MENU > Eco settings > Switch off timer.

Alternatively, go to ⚙ Settings > System > Power and Energy > Switch off timer.

When you set the switch off timer, the TV switches off automatically to save energy. You can set the time to **30/60/90/120/150/180/210/240 minutes**. If set to **Off**, the timer is disabled.

- The TV is automatically switched off when there is no user interaction for the time set.
- If the TV is used as a monitor or using a digital receiver to watch TV, and you do not use the TV's remote control, you should deactivate this automatic switch off.

Set no signal timer

MENU > Eco settings > No signal timer.

Alternatively, go to

## ⚙ Settings > System > Power and Energy > No signal timer.

When you set the no signal timer, the TV switches off automatically if it's not receiving signal from TV source or HDMI source for the time set. You can set the time to **10/15/20 minutes**.

## 14.9. Cast

### What You Need

If an app on your mobile device has Google Cast, you can cast your app on this TV. On the mobile app, look for the Google Cast icon. You can use your mobile device to control what's on TV. Google Cast works on Android and iOS.

\* Note: The Google Cast functionality works only in Google TV Mode and not in Basic TV mode.

Your mobile device must be connected to the same Wi-Fi home network as your TV.

### Apps with Google Cast

New Google Cast apps come available every day. You can already try it with YouTube, Chrome, Netflix, Photowall... or Big Web Quiz for Chromecast. See also [google.com/cast](https://google.com/cast)

Some Google Play products and features aren't available in all countries.

Find more information at [www.support.google.com/googletv](https://www.support.google.com/googletv)

### Cast to Your TV

To cast an app to the TV screen:

- 1 - On your smartphone or tablet, open an app that supports Google Cast.
- 2 - Tap the Google Cast icon.
- 3 - Select the TV you would like to cast to.
- 4 - Press play on your smartphone or tablet. What you selected should start playing on TV.

## 14.10. System Sounds

Settings for system sound

⚙ Settings > System > System sounds.

Enable or disable the system sounds.

---

## 14.11. Child Lock

### Set Code and Change Code

Set a new code or reset the change code

⚙ **Settings > System > Child lock > Set code / Change code.**

The child lock code is used to lock or unlock channels or programs.

**Note:**

If you forget your PIN code, you can override the current one by using the code **8888** and entering a new one.

### Content and Age Rating Lock

Set the lock to block the rated programs.

⚙ **Settings > System > Child lock > Content rating lock / Age rating lock.**

To prevent children from watching a program not suitable for them, you can set a lock to block the rated programs. Digital channels can have their programs rated by content. To watch a locked program, you must enter the Child lock code first.

---

## 14.12. Retail Mode Settings

### Home or Shop

Select the location of your TV

⚙ **Settings > System > Retail mode settings > Location.**

Select **Shop** and the picture style settings will be restored to default and you can adjust shop settings. Shop mode is for in-store promotion.

### Shop Setup

Adjust shop settings

⚙ **Settings > System > Retail mode settings > Shop setup.**

If the TV is set to **Shop**, you can set the availability of a specific demo for in-store use.

Adjust picture and audio

⚙ **Settings > System > Retail mode settings > Shop setup > Picture and audio.**

Select **Optimized for shop** or **Custom** for picture and audio settings.

Set Logos and banner

⚙ **Settings > System > Retail mode settings > Shop setup > Logos and banner.**

Set to display **Feature logos** or **Promotional Banner**, or **Off** to turn off.

Demo Me autostart

⚙ **Settings > System > Retail mode settings > Shop setup > Demo Me autostart.**

Turn **On/Off** the Demo Me autostart.

POS Sound

⚙ **Settings > System > Retail mode settings > Shop setup > POS Sound.**

Turn **On/Off** the POS Sound. This feature is intended for dealers.

---

## 14.13. Restart

⚙ **Settings > System > Restart**

**Note:**

- Disconnect the external USB hard disc before rebooting.
- Wait for few seconds, the TV restarts automatically.

This will remove unnecessary data and information in the memory.


If your TV runs low performance when using Apps, such as the video and audio are not synchronized or the App is running slow, reboot your TV for better performance.

# 15. Eco Settings

---

## Settings for Energy saving

**MENU > Eco settings > Energy saving.**


Select and confirm to apply the Eco settings. This may reset some picture settings to original values and reduce some brightness of the Ambilight.\* Note that the TV experience might be affected by this setting. The  green leaf icon is appended when Eco settings are applied.

\*Ambilight setting is only for models which support the Ambilight function.

## Set screen off to save energy consumption

**MENU > Eco settings > Screen off.**

Alternatively, you can also press the **OPTIONS** key to access **Screen off** under TV and HDMI sources.

Select **Screen off**, and the TV screen is switched off. To switch the TV screen back on, press any key (except **AMBILIGHT\***, ) **Volume + or -**, and **navigation** keys) on the remote control.

## Set TV switch off timer

**MENU > Eco settings > Switch off timer.**

When you set the switch off timer, the TV switches off automatically to save energy. Press the **Arrow/navigation keys** to adjust the time value. Select **Off** to deactivate the automatic turn off.

- The TV is automatically switched off when there is no user interaction for the time set.
- If the TV is used as a monitor or using a digital receiver to watch TV, and you do not use the TV's remote control, you should deactivate this automatic switch off.

## Set no signal timer

**MENU > Eco settings > No signal timer.**

When you set the no signal timer, the TV switches off automatically if it's not receiving signal from TV source or HDMI source for the time set. Press the **Arrow/navigation keys** to adjust the time value.

# 16. Remote and Accessories

---

## 16.1. Bluetooth® On or Off

### Pair Accessory

Position the Bluetooth® device within 5 meters of the TV. Read the user manual of the device for specific information on pairing and on wireless range. Make sure the Bluetooth® setting on TV is switched on.

Once a Bluetooth® device is paired, you can select it to play the TV sound. When a device is paired, you do not need to pair it again unless you remove the device.

To pair a Bluetooth® device with the TV:

- 1 - Switch on the Bluetooth® device and place it within range of the TV.
- 2 - Select **Settings > Remote & accessories > Pair accessory**.
- 3 - Select **Search** and press **OK**. Follow the instructions on screen. You will pair the device with the TV and the TV will store the connection. You might need to unpair a paired device first if the maximum number of paired devices was reached.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

### Device Operation

To connect or disconnect a Bluetooth® device:

- 1 - Select **Settings > Remote & accessories**.
- 2 - In the list, select a Bluetooth® device.
- 3 - Select **Connect** or **Disconnect** to connect or disconnect a Bluetooth® device.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

To rename a Bluetooth® device:

- 1 - Select **Settings > Remote & accessories**.
- 2 - In the list, select a Bluetooth® device.
- 3 - Select **Rename** to rename a Bluetooth® device.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

You can connect or disconnect a wireless Bluetooth® device. You can also remove a paired Bluetooth® device. If you remove a Bluetooth® device, the device will be unpaired.

To remove Bluetooth® device:

- 1 - Select **Settings > Remote & accessories**.
- 2 - In the list, select a Bluetooth® device.
- 3 - Select **Forget** to remove the Bluetooth® device.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

To view the Bluetooth® device information:

- 1 - Select **Settings > Remote & accessories**.
- 2 - In the list, select a Bluetooth® device.
- 3 - The Bluetooth® device information is listed on the bottom.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

---

## 16.2. Remote Control

### Pair Remote Control

#### Pairing or pairing again

When you start the initial TV installation, the TV invites you to press the **Home + Back** key to pair the remote control. If the pairing with the remote control is lost, you can pair it again by pressing the **Home + Back** key.

Alternatively, go to **Settings > Remote & accessories > Remote control settings > Pair remote control**, then follow the on-screen instructions.

A message appears when the pairing has been successful.

### Remote Control Info

#### View the remote control information

**Settings > Remote & accessories > Remote control settings > Remote control info**.

You can select **Version** to check the embedded software version of the remote control or select **Battery level** to see current battery percentage.

### Update Remote Control Software

#### Update remote control software

**Settings > Remote & accessories > Remote control settings > Update remote control software**.

Check available remote control software for updates. If a new software update is available for your remote control, you can start the software update. Install new batteries or fully charge the battery, and then position your remote control within one meter of the TV to

update the software.

# 17. Videos, Photos and Music

---

## 17.1. From a Computer or NAS

You can view your photos or play your music and videos from a computer or a NAS (Network Attached Storage) in your home network.

The TV and computer or NAS must be in the same home network. On your computer or NAS, you need to install Media Server Software. Your Media Server must be set to share your files with the TV. The TV shows your files and folders as they are organized by the Media Server or as they are structured on your computer or NAS.

The TV does not support subtitles on video streams from a computer or NAS.

If the Media Server supports searching for files, a search field is available.

To browse and play the files on your computer:

- 1 - Press **SOURCES**, select **Network** and press **OK**.
  - 2 - Select **Network Devices** and press **➤** (right) to select the device you need.
  - 3 - Once a Network device is connected, the **Network Devices** item will be replaced by the connected device name.
  - 4 - You can browse and play your files.
  - 5 - To stop playing videos, photos or music, press **TV EXIT**.
- 

## 17.2. Favorites Menu

Add a folder or a file to the favorites menu

- 1 - Press **SOURCES**, select **USB** and press **OK**.
- 2 - Select **USB Devices** and select a folder or a file.
- 3 - Press **Mark favorite** (green) to add the selected folder or file to the favorites menu.

View favorite files

- 1 - Press **SOURCES**, select **USB** and press **OK**.
- 2 - Select **♥ Favorites**.
- 3 - You can view all your favorite files in the list.

---

## 17.3. Most Popular Menu and Last Played Menu

View most popular files or clear the list

- 1 - Press **SOURCES**, select **USB** and press **OK**.
- 2 - Select **USB Devices** and select **★ Most popular**.
- 3 - Select one of the file and press **OK** to view files, or press **Clear all** to clear the list.

View last played files

- 1 - Press **SOURCES**, select **USB** and press **OK**.
  - 2 - Select **USB Devices** and select **▶ Last played**.
  - 3 - Select one of the files and press **OK** to view files, or press **Clear all** to clear the list.
- 

## 17.4. From a USB Connection

You can view your photos or play your music and videos from a connected USB flash drive or USB Hard Drive.

With the TV switched on, plug in a USB flash drive or a USB Hard Drive to one of the USB connections. The TV detects the device and will list your media files.

If the list of files does not appear automatically:

- 1 - Press **SOURCES**, select **USB** and press **OK**.
  - 2 - Select **USB Devices** and press **➤** (right) to select the USB device you need.
  - 3 - You can browse your files in the folder structure you have organized on the drive.
  - 4 - Press **Play All** to play all files in the USB folder, or press **Mark favorite** to add the selected folder to favorites menu - **♥ Favorites**.
  - 5 - To stop playing videos, photos or music, press **TV EXIT**.
- 

## 17.5. Play your Videos

### Play Videos

Open video folder

- 1 - Press **SOURCES**, select **USB** and press **OK**.
- 2 - Select **USB Devices** and press **➤** (right) to select the USB device you need.
- 3 - Select **Videos**, you can press **Mark favorite** to add the video folder to favorites menu - **♥ Favorites**.


Play a video

- 1 - Press **SOURCES**, select **USB** and press **OK**.
- 2 - Select **USB Devices** and press

➤ (right) to select the USB device you need.

3 - Select **Videos** and select one of the videos, and you can press **▶ Play All** to play all files in the folder or press **♥ Mark as favorite** to add the selected video to the favorites menu - **♥ Favorites**.

#### Control bar

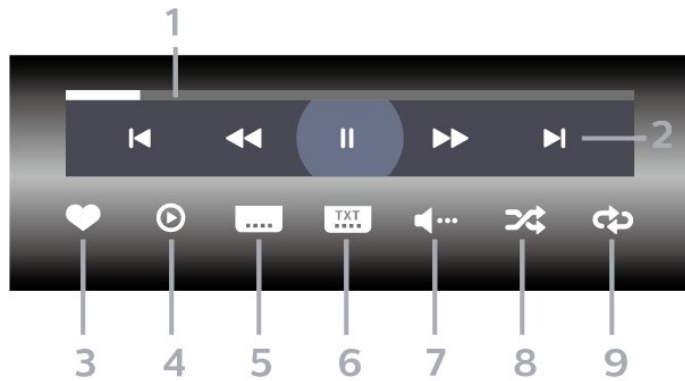

- 1 - Progress bar
- 2 - Playback control bar
  - ◀: Jump to the previous video in a folder
  - ▶: Jump to the next video in a folder
  - ⏮: Rewind
  - ⏭: Fast forward
  - ⏸: Pause the playback
- 3 - Mark as favorite
- 4 - Play All videos
- 5 - Subtitle: switch subtitles On, Off or On During Mute.
- 6 - Subtitle language: select a Subtitle Language
- 7 - Audio language: select an audio language
- 8 - Shuffle: play your files in a random order
- 9 - Repeat: plays all videos in this folder once or continuously

## Video Options

Browse video files:

- **List/Thumbnails** – List or thumbnails views
- **Shuffle** – Play your files in a random order
- **Repeat** – Plays all videos in this folder once or continuously

Playing video files:

- **Mark as favorite** – Mark the video as a favorite
- **Subtitle setting** – Set subtitle font size, color, position, etc.

## 17.6. View your Photos

### View Photos


#### Open photo folder

- 1 - Press **➤ SOURCES**, select **USB** and press **OK**.
- 2 - Select **USB Devices** and press **➤** (right) to select the USB device you need.
- 3 - Select **Photos**, and you can press **♥ Mark favorite** to add the photo folder to the favorites menu.

#### View a photo

- 1 - Press **➤ SOURCES**, select **USB** and press **OK**.
- 2 - Select **USB Devices** and press **➤** (right) to select the USB device you need.
- 3 - Select **Photos** and select one of the photos, and you can press **▶ Slide show** to play all files in the folder, or press **♥ Mark favorite** to add the selected photo to the favorites menu - **♥ Favorites**.

#### Control bar

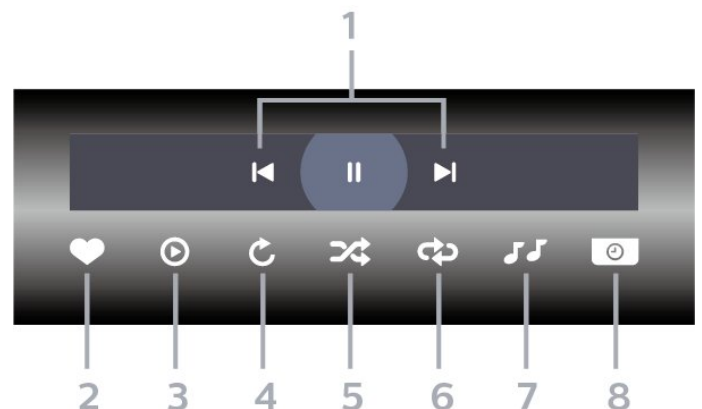

- 1 - Playback control bar
  - ◀: Jump to the previous photo in a folder
  - ▶: Jump to the next photo in a folder
  - ⏸: Pause the slideshow playback
- 2 - Mark as favorite
- 3 - Start a slideshow
- 4 - Rotate the photo
- 5 - Shuffle: play your files in a random order
- 6 - Repeat: plays all photos in this folder once or continuously
- 7 - Stop the music playing in the background
- 8 - Set the speed of the slide show

## Photo Options

Browse photo files:

- **Shuffle** – Play your files in a random order
- **Repeat** – Play the slide show once or continuously
- **Stop music** – Stop the background music playing
- **Slide Show Speed** – Set the speed of the slide show

- **Info** – Show photo information

Playing photo files:

- **Mark as favorites** – Mark the photo as favorite
- **Info** – Show photo information

---

## 17.7. Play your Music

### Play Music


Open music folder

- 1 - Press **SOURCES**, select **USB** and press **OK**.
- 2 - Select **USB Devices** and press **>** (right) to select the USB device you need.
- 3 - Select **Music**, and you can press **Mark favorite** to add the music folder to the favorites menu
  - **♥ Favorites**.
- 4 - You can quickly find music using classification
  - **Genres, Artists, Albums, Tracks**.

Play music

- 1 - Press **SOURCES**, select **USB** and press **OK**.
- 2 - Select **USB Devices** and press **>** (right) to select the USB device you need.
- 3 - Select **Music** and select one of the classifications to view music files.
- 4 - Select a music and you can press **Play All** to play all files in the folder, or press **Mark favorite** to add the selected music to the favorites menu - **♥ Favorites**.

Control bar

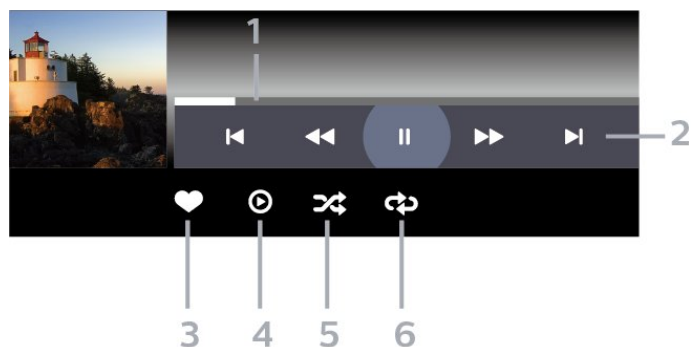

- 1 - Progress bar
- 2 - Playback control bar
  - **◀**: Jump to the previous music in a folder
  - **▶**: Jump to the next music in a folder
  - **◀◀**: Rewind
  - **▶▶**: Fast forward
  - **||**: Pause the playback
- 3 - Mark as favorite
- 4 - Play All music
- 5 - Shuffle: play your files in a random order
- 6 - Repeat: plays all music in this folder once or continuously

## Music Options

Browse music files:

- **List/Thumbnails** – List or thumbnails views
- **Shuffle** – Play your files in a random order.

- **Repeat** – Play All songs in this folder once or continuously.

Playing music files:

- **Mark as favorite** – Mark the music as favorite



# 18. Smartphones and Tablets

---

## 18.1. Philips Smart TV app

The **Philips Smart TV** app on your smartphone or tablet is your new TV buddy. The app lets you switch channels and adjust the volume — just like a remote control.

Download the Philips Smart TV app from your favorite app store today.

The Philips Smart TV app is available for iOS and Android and is free of charge.

Alternatively, you can go to **⚙ Settings > Network and Internet > Remote app QR code** and press OK; a QR code will be presented on the TV screen. Scan the QR code with your mobile device and follow the instructions to download and install the Philips Smart TV app. When using the app, your mobile device and Philips TV need to connect to the same Wi-Fi network.

# 19. Games

---

## 19.1. What You Need

On this TV, you can play games:

- from the Google Play Store in the Home menu
- from a connected Game Console

Games from the Google Play Store must be downloaded and installed on the TV before you can play them. Some games need a gamepad to play.

To install game apps from Google Play Store, the TV must be connected to the Internet and you need to agree to the Terms of Use to use the apps. You must sign in with a Google Account to use Google Play apps and Google Play Store.

---

## 19.2. Gamepads

To play games from the Internet on this TV, you can connect a selected range of wireless Gamepads. The TV can support 2 connected Gamepads at a time. When you connect the Gamepad, you can use it immediately.

---

## 19.3. Play a Game from a Game Console or Computer

To start a game from a Game Console or Computer the first time:

- 1 - Connect the Game Console or Computer to the TV with an Ultra High Speed HDMI cable before powering on the console or computer.
- 2 - Press **SOURCES** and select a game console or the name of the connection.
- 3 - Set **HDMI Ultra HD** to **Optimal** for standard gaming or to **Optimal (Auto Game)** for HDMI Variable Refresh Rate (on some models only).
- 4 - Power on the Game Console or Computer.
- 5 - Start the game.

For more information on connecting a Game Console, in **Help**, press the color key **Keywords** and look up **Game Console, connect**.

---

## 19.4. Gaming Bar

The Game bar is an integrated center for information display and setting control while playing a game. It provides a quick way to change picture, audio and Ambilight\* settings. You can also create up to 10 separate game profiles for different types of games for own preference. It is applicable for HDMI source as long as the **Picture style** is set to **Game/HDR Game**. Toggle to enable or disable from **HDMI (ports) > Options > Game bar**, or long press the **MENU** to enable/disable the Gaming bar when game signal detected and game mode is enabled.

\* Ambilight setting is only for models that support Ambilight function.

### Activation and deactivation

When TV auto switch to Game mode (via game detection) is activated, the TV will show a message to inform you that Game mode is enabled and the Game bar is available, press **OK** to activate the Game bar. To deactivate the Game bar, you can press **← Back** or it will close automatically after 20 seconds without interaction.

### Gaming information

Game bar will show the key information for the gaming.

**Frame rate:** current FPS (frame per second), displayed on top of screen.

**Profile name:** current applied profile of settings, displayed on top of Game bar.

**HDMI information:** current HDMI port, speed/mode and HDCP version, displayed under the profile name.

**Video source information:** displayed on bottom of Game bar.

- VRR type: current type of VRR
- Resolution: video source resolution
- Bit depth and pixel format: data information of current source
- SDR/HDR format: the supported HDR type or SDR of source
- Content type: video content is General, Game or Movie
- ALLM: to show the HDMI ALLM is supported
- Motion setting: current setting of Motion

### Game tools

The Game tools\* contains frequently used tools that can improve your gaming experience. Move the cursor to Profile name bar and press **OK** to enable or disable the game tools. Move the cursor to Game tool icon and press **OK** to turn on the green light on icon and enable the tool. Press **OK** again to disable the tool. Move down to

select **...** under the icon to enter the setting options for the Game tool.


**Crosshair:** enable/disable to show the dial point. You can adjust **Type**, **Size**, **Thickness** and **Color** of the crosshair from setting options.

**Shadow enhancer:** disable to use current **Black level** in **Picture settings**; enable to overwrite the setting to higher black level. You can adjust the type in setting options to apply different levels of enhancer.

**Color filter:** enable to adjust the color on screen. You can select one of color options and set to strengthen the color by **Single color** or exclude the color by **Exclude color**. While **Color filter** is enabled, the **Color enhancement** and **Color control** under **Picture > Color** settings are not accessible since only one of the three UI can take control each time.

\* Depending on your TV model, some tools may not be available on your TV.

## Game bar settings

Select the setting icon  on the left side of Game bar, and press **OK** to change the following settings:

**Profile:** the profile stores the settings of the Game bar. You can select a **Standard** profile or create your own profiles. The Game bar settings can be adjusted for different types of Games. When you are satisfied with current settings for specific game or game type, you can go to **Game bar setting > Profile** and select **Add profile** to store current settings and name the profile. Along with the **Standard** profile, you can create up to eight customized profiles. Once the customized profile is created, you can press left or right key to switch between the profiles from the **Profile name** bar.

**FPS indicator:** set to enable/disable and display position for the FPS information.

**HDMI Ultra HD:** quick link to adjust the HDMI Ultra HD setting.

**Motion:** quick link to adjust the Motion setting.

**HDR tone mapping:** quick link to adjust the HDR tone mapping setting.

**All picture settings:** quick link to adjust All picture settings.

**Ambilight\* style:** quick link to adjust the Ambilight settings.

**Sound style:** quick link to adjust the Sound style setting

**Profile restore:** restore default settings for the current profile.

\* Ambilight setting is only for models that support Ambilight function.

# 20. Netflix

---

If you have a Netflix subscription, you can enjoy Netflix on this TV. Your TV must be connected to the Internet. In your region, Netflix might only come available with future software updates.

To open Netflix, press **NETFLIX** to open the Netflix App. You can open Netflix immediately from a TV in standby.

[www.netflix.com](http://www.netflix.com)

## Note for Netflix Spatial Audio

Some Netflix content offers Spatial Audio sound effects. To enjoy this feature on your TV, follow these steps:

- 1 - Go to **⚙ Settings > Display & Sound > Audio output > Digital out format** and set the option to **Stereo (uncompressed)**.
- 2 - Go to **⚙ Settings > Display & Sound > Sound > Sound style** and set the style to **Personal**.
- 3 - Go to **⚙ Settings > Display & Sound > Sound > Personal settings > Speaker virtualizer** and select **Off** to turn off the Speaker virtualizer.

# 21. Alexa

---

## 21.1. About Alexa

Your TV supports Amazon Alexa\* voice control operations.

### About Alexa

Alexa is a cloud-based voice service available on Alexa Echo devices from Amazon and device manufacturers. With Alexa working on your TV, you can switch the TV on/off, change channels, adjust the volume and more.

To control your TV with Alexa, you will need:

- Philips Smart TV that supports Alexa
- Amazon Echo device
- Google account
- Mobile device, such as your smartphone or tablet
- Wi-Fi network

### About Alexa Skills

Alexa uses Alexa Skills to extend the voice control operations. Skills add new capabilities that create a more personalized experience with your Alexa-enabled TV. The "Philips Smart TV Voice Control" skill can be found in the Alexa Skills store. It offers various voice control commands that work with your Philips Smart TV.

\* Alexa is not available in all languages and countries. Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc., or its affiliates.

**Note:** The supported Ambilight styles may depend on specific TV models. Please refer the user manual of your TV to know the supported Ambilight styles.

---

## 21.2. Using Alexa

To use Alexa, you need to first set up the Alexa client service on your Philips Smart TV. Follow the instructions and complete the following steps:

- Select a name for your Smart TV for Alexa to recognize.
- Select a Google account and sign in.
- Return to this skill in the Alexa App on your phone to enable it, link accounts, and discover your devices.
- Return to your TV to complete setup.

### Setup on TV for Alexa

- 1 - Go to **Settings > Network and Internet > TV control with Amazon Alexa** to start the setup process.
- 2 - You need an Amazon Echo device and Alexa companion app (on mobile device or web version) to

start the setup.

3 - Follow the instructions on-screen to accept the Privacy Policy terms, name your TV and sign in to your Google account. The Google account is needed to pair with the Alexa device.

4 - On your mobile device, sign in with the same Google account in the Amazon Alexa companion app.

5 - Complete the following steps in the Amazon Alexa companion app. The first is to enable the "Philips Smart TV Voice Control" skill. The second is to link your Google account, and the final is to discover devices.

6 - Select **Enable** or **Disable** for the TV switch on setting. You can use Alexa to turn your TV On/Off by voice command.

7 - At the end of the setup screen, select **Done** to start using Alexa. Select **Manage TVs** to manage Alexa-paired TVs or unpair TVs.

Go to [alexa.amazon.com](https://alexa.amazon.com), click on Skills, and search for "Philips Smart TV Voice Control." The skill will be listed in the results.

---

## 22. Specifications

---

### 22.1. Power

Product specifications are subject to change without notice. For more specification details of this product, see [www.philips.com/TVsupport](http://www.philips.com/TVsupport)

#### Power

- Mains power: AC 110-240V +/-10%
- Ambient temperature: 5°C to 35°C (40°F to 95°F)
- Power saving features: Eco mode, Picture mute (for radio), Auto switch-off timer, Eco settings menu.

---

### 22.2. Operating System

Android OS:

Android 12

---

### 22.3. Reception

- Antenna input: 75 ohm coaxial (F-type)
- Tuner bands: Hyperband, UHF, VHF
- ISDBT
- Video playback: PAL
- Digital video playback: MPEG2 SD/HD (ISO/IEC 13818-2), MPEG4 SD/HD (ISO/IEC 14496-10)
- Digital audio playback (ISO/IEC 13818-3)

---

### 22.4. Display Type

#### Diagonal screen size

- 105 cm/42 inch
- 108 cm/43 inch
- 121 cm/48 inch
- 126 cm/50 inch
- 139 cm/55 inch
- 164 cm/65 inch
- 189 cm/75 inch
- 194 cm/77 inch
- 215 cm/85 inch

#### Display resolution

- 3840 x 2160

---

### 22.5. Display Input Resolution

#### Supported Computer/Video resolution

Resolution — Refresh rate

- 640 x 480 - 60 Hz
- 576p - 50Hz
- 720p - 50Hz, 60Hz
- 1920 x 1080p - 24Hz, 25Hz, 30Hz, 50Hz, 60Hz
- 2560 x 1440p - 60Hz
- 3840 x 2160p - 24Hz, 25Hz, 30Hz, 50Hz, 60Hz

#### Supported Video only resolution

Resolution — Refresh rate

- 480i - 60Hz (when **HDMI Ultra HD** is set to **Standard**)
- 576i - 50Hz (when **HDMI Ultra HD** is set to **Standard**)
- 1080i - 50Hz, 60Hz
- Variable refresh rate video 1080p, 1440p, 2160p with frame rate up to 48-60Hz when **HDMI Ultra HD** is set to **Optimal (Auto Game)**.

---

### 22.6. Connectivity

#### TV Side

- HDMI 3 in - ARC/eARC - UHD - HDR
- HDMI 2 in - UHD - HDR
- HDMI 1 in - UHD - HDR
- Antenna (75 ohm)
- USB 1 - USB 2.0
- USB 2 - USB 2.0

#### TV Rear

- Audio out - Optical Toslink
- Network LAN - RJ45

---

### 22.7. Sound

- Output power (RMS): 20W
- Dolby MS12 V2.6.2
- Dolby Atmos
- DTS:X
- Surround Virtualizer + Height Virtualizer
- Dolby Bass Enhancement
- Dolby Dialog Enhancement
- Dolby Volume (AVL/Night Mode)
- AI Sound
- AI EQ

---

## 22.8. Multimedia

### Connections

- USB 2.0
- Ethernet LAN RJ-45
- Wi-Fi 802.11a/b/g/n/ac, Dual Band
- Bluetooth® 5.0

### Supported USB file systems

- FAT 16, FAT 32, NTFS

### Playback formats

- Containers: PS, TS, M2TS, TTS, AVCHD, MP4, M4V, MKV, ASF, AVI, 3GP, QuickTime
- Video Codecs: AVI, MKV, HEVC, H.264/MPEG-4 AVC, MPEG1, MPEG2, MPEG4, VP9, HEVC (H.265), AV1
- Audio Codecs: MP3, WAV, AAC, FLAC
- Subtitles:
  - Formats: SRT, SMI, SSA, SUB, ASS, TXT
  - Character encodings: UTF-8, Central Europe and Eastern Europe (Windows-1250), Cyrillic (Windows-1251), Greek (Windows-1253), Turkish (Windows-1254), Western Europe (Windows-1252), Hebrew (CP-1255), Arabic (CP-1256), Baltic (CP-1257), Korean (Windows-949)
- Maximum Supported Data Rate:
  - MPEG-4 AVC (H.264) supported up to High Profile @ L5.2 80Mbps
  - H.265 (HEVC) supported up to main 10 high profile L5.1 with 100Mbps
  - AV1 supported up to main profile L5.1 with 80Mbps
- Image Codecs: JPEG, GIF, PNG, BMP, HEIF

### Wifi Certified

This TV is a Wi-Fi Certified device.

# 23. Help and Support

---

## 23.1. Register your TV



Register your TV and enjoy a range of benefits including full support (including downloads), privileged access to information about new products, exclusive offers and discounts, the chance to win prizes and even participate in special surveys about new releases.

Go to [www.philips.com/TVsupport](http://www.philips.com/TVsupport)

---


## 23.2. Using Help

### Open Help

Press the  key (blue) to open Help immediately. To look up topics alphabetically, press the color key  **Keywords**.

To read the Help as a book, select **Book**.

You can also open  **Help** in the Quick menu.

Before you execute the Help instructions, close Help. To close Help, press the color key  **Close**.

For some activities, like Text (Teletext), the color keys have specific functions and cannot open Help.

### TV Help on your tablet, smartphone or computer

To carry out extended sequences of instructions more easily, you can download the TV Help in PDF format to read on your smartphone, tablet or computer. Alternatively, you can print the relevant Help page from your computer.

To download the Help (user manual) go to [www.philips.com/TVsupport](http://www.philips.com/TVsupport)



>  **Help**

You can use more Help functions to diagnose and get more information about your TV.

- **TV information** - View the Model name, Serial number and Software version of your TV.
- **How to** - You can see instructions on how to install channels, sort channels, update TV software, connect external devices and use Smart functions on your TV.
- **TV diagnose** - Run TV diagnose to check the condition of your TV.
- **Self-diagnose** - You can check if the picture, sound, network and other settings are working OK.
- **User manual** - Read the user manual for TV information.



- **Troubleshooting** - Find a solution for frequently asked questions.
  - **Settings list copy to USB** - Copy the TV settings to a USB Flash Drive.
  - **Factory settings** - Reset all settings to factory settings.
  - **Reinstall TV** - Reinstall and redo the complete TV installation.
  - **Contact info** - Shows the telephone number or web address for your country or region.
- 

## 23.3. TV Diagnose and Self-diagnose

### TV diagnose

You can run the TV diagnose test to check the condition of your TV. At the end of the diagnosis, the TV will clear the cache memory and close any unused apps to continue the smooth functioning of your TV.



To run the TV diagnose test:

- 1 - Select  **Quick Menu / MENU** >  **Help** > **TV diagnose** and press **OK**.
- 2 - Select **Start** to run a series of diagnostic tests.
- 3 - When the test is completed, you can view the status of the following items.
  - Remote control
  - Power
  - Picture
  - Sound
  - External devices
  - Network
  - Tuner
  - Storage
  - Clear cache memory
  - Apps
- 4 - Select **Close** to close the result page and go back to the **TV diagnose** wizard.
- 5 - Select **Done** to exit from **TV diagnose**, select **Self-diagnose** to do other diagnostic checks, select **View results** to view the results page again.

### Self-diagnose

Self-diagnose can help you to troubleshoot your TV by checking the configuration of the TV.

To run Self-diagnose:

- 1 - Select  **Quick Menu / MENU** >  **Help** > **Self-diagnose** and press **OK**.
- 2 - Select the following items to check the configurations.
  - **Check the TV** - You can check if the picture, sound and other settings are working OK.
  - **Check the Network** - Check the Network Connection.
  - **Check the remote control** - Perform the test to verify the functionality of the remote control bundled with the



TV.

- **View weak signal history** - Display the list of channel numbers that were automatically saved when the signal strength was weak.
- **Optimize internal storage** - Free up space in the TV's internal storage for optimal performance.

---

## 23.4. Troubleshooting

### Switch On and Remote Control

#### The TV does not switch on

- Disconnect the power cable from the power outlet. Wait for one minute then reconnect it.
- Make sure that the power cable is securely connected.

#### Creaking sound at startup or switch off

When you are turn the TV on, off or to standby, you hear a creaking sound from the TV chassis. The creaking sound is due to the normal expansion and contraction of the TV as it cools and warms up. This does not affect performance.

#### TV does not respond to the remote control

The TV requires some time to start up. During this time, the TV does not respond to the remote control or TV controls. This is normal behavior.

If the TV continues to be unresponsive to the remote control, you can check if the remote control is working by means of a mobile phone camera. Put the phone in camera mode and point the remote control to the camera lens. If you press any button on the remote control and you notice the infra-red LED flicker through the camera, the remote control is working. The TV needs to be checked.

If you do not notice the flickering, the remote control might be broken or its batteries are low.

This method of checking the remote control is not possible with remote controls which are wirelessly paired with the TV.

#### The standby light keeps on blinking

Disconnect the power cable from the power outlet. Wait 5 minutes before you reconnect the power cable. If the blinking reoccurs, contact Philips TV Consumer Care.

### Channels

#### No digital channels found during the installation

See the technical specifications to make sure that your TV supports DVB-T or DVB-C in your country.

Make sure that all cables are properly connected and that the correct network is selected.

#### Previously installed channels are not in the channel list

Make sure that the correct channel list is selected.

### Picture

#### No picture/distorted picture

- Make sure that the antenna is properly connected to the TV.
- Make sure that the correct device is selected as the display source.
- Make sure that the external device or source is properly connected.

#### Sound but no picture

- Change to other video sources and then change back to current source, then do picture style restore in Picture settings or do Factory reset in General settings option.

#### Poor antenna reception

- Make sure that the antenna is properly connected to the TV.
- Loud speakers, unearthed audio devices, neon lights, high buildings and other large objects can influence reception quality. If possible, try to improve the reception quality by changing the antenna direction or moving devices away from the TV.
- If reception on only one channel is poor, fine-tune this channel with Manual Installation.

#### Poor picture from a device

- Make sure that the device is connected properly. Make sure the device's output video setting is the highest possible resolution if applicable.
- Restore picture style or change to other picture styles.

#### Picture settings change after a while

Make sure that **Location** is set to **Home**. You can change and save settings in this mode.

#### A commercial banner appears

Make sure that **Location** is set to **Home**.

#### Picture does not fit the screen

- Change to a different picture format.
- Change **Picture format** to **Original**.

#### Picture position is incorrect

- Picture signals from some devices may not fit the screen correctly. Check the signal output of the connected device.
- Change **Picture format** to **Original**.

#### Computer picture is not stable

Make sure that your PC uses the supported resolution and refresh rate.

## Sound

### No sound or poor sound quality

If no audio signal is detected, the TV automatically switches the audio output off — this does not indicate malfunction.


- Make sure that the sound settings are correctly set.
- Make sure that all cables are properly connected.
- Make sure that the volume is not muted or set to zero.
- Make sure that the TV audio output is connected to the audio input on the Home Theater System.

Sound should be heard from the HTS speakers.

- Some devices may require you to manually enable HDMI audio output. If HDMI audio is already enabled, but you still do not hear audio, try changing the digital audio format of the device to PCM (Pulse Code Modulation). Refer to the documentation accompanying your device for instructions.

## HDMI and USB

### HDMI

- Note that HDCP (High-bandwidth Digital Content Protection) support can delay the time taken for a TV to display content from an HDMI device.
- If the TV does not recognize the HDMI device and no picture is displayed, switch the source from one device to another and back again.
- If the picture and sound of a device connected to HDMI is distorted, connect the device to another HDMI port on TV and power reboot your source device.
- If the picture and sound of a device connected with HDMI is distorted, check if a different **HDMI Ultra HD** setting can resolve the problem. In Help, press the color key  **Keywords** and look up **HDMI Ultra HD**.
- If there are intermittent sound disruptions, make sure that output settings from the HDMI device are correct.
- If you use an HDMI-to-DVI adaptor or HDMI-to-DVI cable, make sure that an additional audio cable is connected to AUDIO IN (mini-jack only), if available.

### HDMI EasyLink does not work

- Make sure that your HDMI devices are HDMI-CEC compatible. EasyLink features only work with devices that are HDMI-CEC compatible.

### HDMI eARC is not working well

- Make sure the HDMI cable is connected to **HDMI 3**.
- Make sure an **Ultra High-Speed HDMI cable** is used for eARC connection.
- Only one eARC device is available at a time.

### No volume icon shown

- When an HDMI-CEC audio device is connected and you use the TV Remote Control to adjust the volume level from the device, this behavior is normal.

### Photos, videos and music from a USB device do not show

- Make sure that the USB storage device is set to Mass

Storage Class compliant, as described in the storage device's documentation.

- Make sure that the USB storage device is compatible with the TV.
- Make sure that the audio and picture file formats are supported by the TV.

### Choppy playback of USB files

- The transfer performance of the USB storage device may limit the data transfer rate to the TV which causes poor playback.

## Network

### Wi-Fi network not found or distorted

- Microwave ovens, DECT phones, or other Wi-Fi devices in your proximity might disturb the wireless network.
- Make sure that the firewalls in your network allow access to the TV's wireless connection.
- If the wireless network does not work properly in your home, try the wired network installation.

### Internet does not work

- If the connection to the router is OK, check the router connection to the Internet.

### The PC and Internet connection are slow

- Look in your wireless router's user manual for information on indoor range, transfer rate and other factors of signal quality.
- Use a high-speed (broadband) Internet connection for your router.

### DHCP

- If the connection fails, you can check the DHCP (Dynamic Host Configuration Protocol) setting of the router. DHCP should be turned on.

### Poor quality when watching streaming video

- The image/sound quality of streaming videos depends on the original video content provided by streaming video apps.
- To ensure the best experience watching streaming videos, a fast and stable network connection is essential. The recommended network connection speed for streaming videos are as follows:
  - Standard image quality (SD): 5 Mbps
  - High image quality (HD): 10 Mbps
  - 4K/Ultra HD (UHD): 25 Mbps

## Bluetooth®

### Unable to pair

- Make sure the device is in pairing mode. Read the user manual of the device.
- Keep the wireless speaker as close to the TV as possible.
- Trying to pair several devices with the TV at the same time may not work.

### Bluetooth® lost connection

- Always position the wireless speaker within a range of

15 feet from the TV.






#### Bluetooth® Audio and Video synchronization

• Before you purchase a wireless Bluetooth® speaker, find out about its Audio to Video synchronization quality, commonly called 'lip sync.' Not all Bluetooth® devices perform correctly. Ask your dealer for advice.





 
## Wrong Menu Language

### Wrong menu language

Change the language back to your language in Google TV mode.

- 1 - Press the  **DASHBOARD** key on the remote control to launch the **Dashboard** menu.
- 2 - Select the  icon and press **OK** to open the **Settings** menu.
- 3 - Press  (down) 6 times, and press **OK** to enter the **System** menu.
- 4 - Press  (down) 3 times, and press **OK** to enter the **Language** menu
- 5 - Select your language and press **OK**.
- 6 - Press  **Back** to close the menu.

Change the language back to your language in Basic Mode.

- 1 - Press the  **DASHBOARD** key on the remote control to launch the **Dashboard** menu.
- 2 - Select the  icon and press **OK** to open the **Settings** menu.
- 3 - Press  (down) 7 times, and press **OK** to enter the **System** menu.
- 4 - Press  (down) 3 times, and press **OK** to enter the **Language** menu
- 5 - Select your language and press **OK**.
- 6 - Press  **Back** to close the menu.

---

## 23.6. Support and Repair

For support and repair, call the Consumer Care hotline in your country. Our service engineers will take care of a repair, if necessary.

Find the telephone number in the printed documentation that came with the TV.

Or consult our

website [www.philips.com/TVsupport](http://www.philips.com/TVsupport) and select your country if needed.

### TV model number and serial number

You might be asked to provide the TV product model number and serial number. Find these numbers on the packaging label or on the type label on the back or bottom of the TV.

### Warning

Do not attempt to repair the TV yourself. This may cause severe injury, irreparable damage to your TV or void your warranty.

---

## 23.5. Online Help

To solve any Philips TV related problem, you can consult our online support. You can select your language and enter your product model number.

Go to [www.philips.com/TVsupport](http://www.philips.com/TVsupport)

On the support site you can find your country's telephone number to contact us as well as answers to frequently asked questions (FAQs). In some countries, you can chat with one of our collaborators and ask your question directly or send a question by email. You can download new TV software or the manual to read on your computer.

# 24. Safety and Care

---

## 24.1. Safety

### Important

Read and understand all safety instructions before you use the TV. If damage is caused by failure to follow instructions, the warranty does not apply.

### Risk of Electric Shock or Fire

- Never expose the TV to rain or water. Never place liquid containers, such as vases, near the TV. If liquids are spilt on or into the TV, disconnect the TV from the power outlet immediately. Contact Philips TV Consumer Care to have the TV checked before use.
- Never expose the TV, remote control or batteries to excessive heat. Never place them near burning candles, naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the TV.
- Never place heavy objects on the power cord.
- Avoid force coming onto power plugs. Loose power plugs can cause arcing or fire. Ensure that no strain is exerted on the power cord when you swivel the TV screen.
- To disconnect the TV from the mains power, the power plug of the TV must be disconnected. When disconnecting the power, always pull the power plug, never the cord. Ensure that you have full access to the power plug, power cord and outlet socket at all times.

### Risk of Injury or Damage to the TV

- Two people are required to lift and carry a TV that weighs more than 25 kg or 55 lbs.
- If you mount the TV on a stand, only use the supplied stand. Secure the stand to the TV tightly. Place the TV on a flat, level surface that can support the weight of the TV and the stand.
- When wall mounted, ensure that the wall mount can safely bear the weight of the TV set. TP Vision bears no responsibility for improper wall mounting that results in accident, injury or damage.
- Parts of this product are made of glass. Handle with care to avoid injury or damage.

#### Risk of damage to the TV!

Before you connect the TV to the power outlet, ensure that the power voltage matches the value printed on the

back of the TV. Never connect the TV to the power outlet if the voltage is different.

### Stability Hazards

This product is designed and intended for consumers and personal use in a domestic home environment, unless agreed otherwise with the manufacturer in writing. Failure to follow this recommendation or the instructions provided in the product user manual and the product support documentation can cause damage to the product and will void the warranty in such cases.

A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS ensure the television set is not overhanging the edge of the supporting furniture.
- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the television.
- ALWAYS use furniture that can safely support the television.
- ALWAYS educate children about the dangers of climbing on furniture to reach the television or its controls.
- ALWAYS route cords and cables connected to the television so that they cannot be tripped over, pulled or grabbed.
- NEVER place a television in an unstable location.
- NEVER place the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and television to a suitable support.
- NEVER place the television on cloth or other materials that may be located between the television and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.

If the existing television is going to be retained and relocated, the same considerations as above should be applied.

### Risk of Batteries

- Do not ingest the battery. Chemical burn hazard.
- The remote control may contain a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Risk of fire or explosion if the battery is replaced by an incorrect type.

- Replacement of a battery with an incorrect type that can defeat a safeguard (e.g. in the case of some lithium battery types).
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

## Risk of Overheating

Never install the TV in a confined space. Always leave a space of at least 4 inches (10 cm) around the TV for ventilation. Ensure curtains or other objects never cover the ventilation slots on the TV.

## Lightning Storms

Disconnect the TV from the power outlet and antenna before lightning storms.  
During lightning storms, never touch any part of the TV, power cord or antenna cable.

## Risk of Hearing Damage

Avoid using earphones or headphones at high volumes or for prolonged periods of time.

## Low Temperatures

If the TV is transported in temperatures below 5°C or 41°F, unpack the TV and wait until the TV temperature reaches room temperature before connecting the TV to the power outlet.

## Humidity

In rare occasions, depending on temperature and humidity, minor condensation can occur on the inside of the TV glass front (on some models). To prevent this, do not expose the TV to direct sunlight, heat or extreme humidity. If condensation occurs, it will disappear spontaneously while the TV is playing for a few hours. The condensation moisture will not harm the TV or cause malfunction.

---

## 24.2. Screen Care

- Never touch, push, rub or strike the screen with any object.
- Unplug the TV before cleaning.
- Clean the TV and frame with a soft damp cloth and wipe gently. Avoid touching the Ambilight\* LEDs on the backside of the TV. Never use substances such as alcohol, chemicals or household cleaners on the TV.
- To avoid deformations and color fading, wipe off water drops as quickly as possible.
- Avoid stationary images as much as possible. Stationary images are images that remain onscreen for extended periods of time. Stationary images include onscreen menus, black bars, time displays, etc. If you must use stationary images, reduce screen contrast and brightness to avoid screen damage.

\* Ambilight LED is only for models which support Ambilight function.

# 25. Terms of Use

---

## 25.1. Terms of Use - TV

2024 © TP Vision Europe B.V. All rights reserved.

This product was brought to the market by TP Vision Europe B.V. or one of its affiliates, hereinafter referred to as TP Vision, which is the manufacturer of the product. TP Vision is the warrantor in relation to the TV with which this booklet was packaged. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners. TP Vision reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

The written material packaged with the TV and the manual stored in the memory of the TV or downloaded from the Philips website [www.philips.com/TVsupport](http://www.philips.com/TVsupport) are believed to be adequate for the intended use of the system.

The material in this manual is believed adequate for the intended use of the system. If the product, or its individual modules or procedures, are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. TP Vision warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied. TP Vision cannot be held responsible neither for any errors in the content of this document nor for any problems as a result of the content in this document. Errors reported to Philips will be adapted and published on the Philips support website as soon as possible.

Terms of warranty - Risk of injury, damage to TV or void of warranty!

Never attempt to repair the TV yourself. Use the TV and accessories only as intended by the manufacturer. The caution sign printed on the back of the TV indicates risk of electric shock. Never remove the TV cover. Always contact Philips TV Customer Care for service or repairs. Find the telephone number in the printed documentation that came with the TV. Or consult our website [www.philips.com/TVsupport](http://www.philips.com/TVsupport) and select your country if needed. Any operation expressly prohibited in this manual, or any adjustments and assembly procedures not recommended or authorized in this manual, shall void the warranty.

Pixel characteristics

This TV product has a high number of color pixels. Although it has effective pixels of 99.999% or more, black dots or bright points of light (red, green or blue) may appear constantly on the screen. This is a structural

property of the display (within common industry standards) and is not a malfunction. Therefore, please note that this is not subject to repair, exchange or refund within and/or out of the warranty period.

Backlight characteristics

All Philips TVs have undergone stringent tests and checks before shipment to you. You can rest assured that we place utmost importance on the quality of our TVs so you don't suffer any viewing displeasure while watching your TV. However, please note that backlight bleeding (the 'Mura effect') and/or background light unevenness that can only be observed in dark images or in a very dark and dim room are considered to be within normal TV specifications. Such occurrences do not represent deterioration nor should be regarded as a defect of the TV. Hence, we regret that claims of this nature for warranty cover, free-of-charge service, replacements or refunds cannot be accepted within and/or outside of the warranty period.

TP Vision is committed to developing, producing and marketing products that cause no adverse health effects. TP Vision confirms that, as long as its products are handled properly for their intended use, they are safe to use according to scientific evidence available today. TP Vision plays an active role in the development of international safety standards, enabling TP Vision to anticipate further developments in standardization for early integration in its products.

---

## 25.2. Terms of Use - Smart TV

You can see the terms of use, privacy policy, and also set privacy settings of your Smart TV.

To open the terms of use on the Smart TV page:

- 1 - Press **HOME** to open the Home menu.
- 2 - Select **Apps** to open apps.

## 26. Copyrights

---

### 26.1. Google TV

Google TV is the name of this device's software experience and a trademark of Google LLC. Google, YouTube and other marks are trademarks of Google LLC.



### 26.2. HDMI

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade Dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



### 26.3. HEVC Advance

Covered by one or more claims of the HEVC patents listed at [patentlist.accessadvance.com](http://patentlist.accessadvance.com). Future proof with advanced HEVC decoding.



### 26.4. Works with Apple AirPlay

Use of the Works with Apple AirPlay badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.

Apple, AirPlay and Apple Home, Homekit are trademarks of Apple Inc., registered in the U.S. and other countries and regions.



### 26.5. Works with Apple Home

Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Apple, AirPlay and Apple Home, Homekit are trademarks of Apple Inc., registered in the U.S. and other countries and regions.



### 26.6. Dolby Atmos

Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation.

Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright ©



---

## 26.10. Other Trademarks

All other registered and unregistered trademarks are the property of their respective owners.

---

## 26.7. DTS:X

For DTS patents, see <http://patents.dts.com>.  
Manufactured under license from DTS Licensing Limited.  
DTS, DTS:X, and the DTS:X logo are registered trademarks or trademarks of DTS, Inc., in the United States and other countries. © 2021 DTS, Inc. ALL RIGHTS RESERVED.



---

## 26.8. Wi-Fi Alliance

The Wi-Fi CERTIFIED™ Logo is a registered trademark of Wi-Fi Alliance®.



---

## 26.9. Kensington

(If applicable)

Kensington and Micro Saver are registered US trademarks of ACCO World Corporation with issued registrations and pending applications in other countries throughout the world.





## **27. Disclaimer regarding services and/or software offered by third parties**

---

Services and/or software offered by third parties may be changed, suspended or terminated without prior notice. TP Vision does not bear any responsibility in these sorts of situations.

# Index

---

<b>A</b>		HDR Effect Settings	29
Age Rating	14	HDR Tone Mapping	29
AirPlay and HomeKit	26	Home	4
Alexa	53	<b>I</b>	
Ambient Light Level Optimization	28	Ideal viewing distance	6
Ambient mode	40	<b>K</b>	
Apps	36	Kids Profile	24
Audio Out Settings	34	<b>M</b>	
Auto Film Picture style	28	Media	46
<b>B</b>		Media files, from a computer or NAS	46
Backlight Contrast	29	Media files, from a USB drive	46
Black Level	29	MPEG Artifact Reduction	30
Blu-ray Disc player, connect	20	<b>N</b>	
Bluetooth®, Remove device	44	Network Installation	23
Bluetooth®, Select device	44	Network, connect	23
Brightness	28	Network, setting	23
<b>C</b>		Network, Wired	23
Channel	14	Network, Wireless	23
Channel List Copy	12	<b>O</b>	
Channel List Copy, copy	12	Online support	59
Channel List Copy, current version	12	Open Source Software	39
Channel List Copy, upload	12	Optimal (Auto Game)	19
Channel, switch to a channel	14	<b>P</b>	
Channel, TV guide	17	Personal mode, Clear dialog	31
Child Lock	42	Personal mode, Equalizer	31
Connectivity Guide	18	Personalized Sound	32
Connects with Control4®	24	Photos, Videos and Music	46
Consumer Care	59	Picture Settings Menu	28
Contact Philips	59	Picture Style	28
Content rating	14	Picture, picture format	31
Content rating lock	42	Picture, quick settings	30
Contrast, Contrast Mode	29	Placement of TV	6
<b>D</b>		Problems, Channels	57
Dark Details	29	Problems, Connection, Internet	58
Dashboard	4	Problems, Connection, Wi-Fi	58
Display and Sound	28	Problems, HDMI Connection	58
Dolby Atmos	31	Problems, Picture	57
Dolby Atmos notification	34	Problems, Remote control	57
Dynamic Enhancement Level	29	Problems, Sound	58
<b>E</b>		Problems, USB Connection	58
EasyLink 2.0	32	Problems, Wrong menu language	59
EasyLink HDMI CEC	18	<b>Q</b>	
Eco Settings	43	Quick Connect	24
<b>F</b>		Quick Menu	27
Frequent Settings	27	<b>R</b>	
<b>G</b>		Register your product	56
Game Console, connect	20	Repair	59
Gaming	50	Reset	39
Gaming Bar	50	<b>S</b>	
Gamma	29	Safety Instructions	60
Ginga	15	Screen care	61
<b>H</b>		Self-diagnose	56
HDMI Ultra HD	19	Service navigation	15
HDMI Variable Refresh Rate	19		
HDR Control	29		

Sharpness, MPEG Artifact Reduction	30
Shop Setup	42
Smoothness	30
Software, Update	38
Sound, style setting	31
Switching On	11
<b>T</b>	
Terms of Use	62
Troubleshooting	57
TV Control with Matter	24
TV diagnose	56
TV Guide	17
TV Guide Data	17
<b>V</b>	
Video Level	29
View Software update history	39
<b>W</b>	
Watch TV	14
Wifi	23
Wired Network	23
Wireless Network	23



All registered and unregistered trademarks are property of their respective owners.  
Specifications are subject to change without notice.  
Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.  
This product has been manufactured and is sold under the responsibility of TP Vision Europe B.V., and TP Vision Europe B.V. is the warrantor in relation to this product.  
2024© TP Vision Europe B.V. All rights reserved.

[www.philips.com/welcome](http://www.philips.com/welcome)