



Quick Start Guide Philips RO Water Station ADD6901


First time use

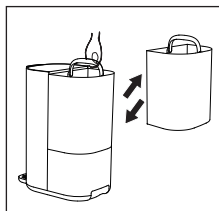


Take the tap water tank from the appliance for cleaning and easy refill.

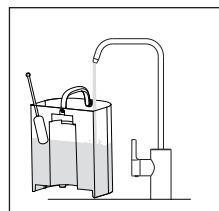


Clean the water tank using brush and dishwashing liquid.

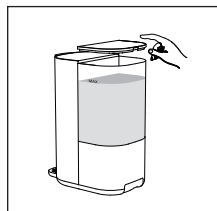


Fill the water tank to the MAX-line and insert it back in. Put the lid on the water tank.

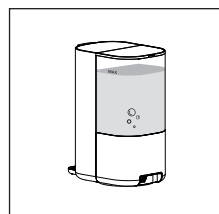

When a new filter has been installed, micro air-bubbles are generated causing the extracted water to appear white and cloudy. This is a normal phenomenon. Perform the two-key-emptying procedure until no more micro bubbles appear (after approx. two raw-tanks-of-water):

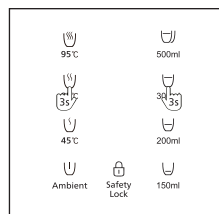


Two-key-emptying procedure (emptying internal tank and pipes):
- Long press "85°C" and "300ml" for 3 seconds. The appliance will extract water until the internal filtered-water-tank and water pipes are empty.

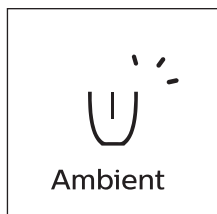


For first time use, select ambient water temperature to avoid dry-heating.


Daily use

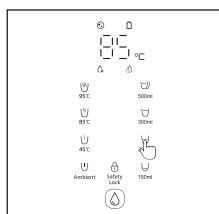

Set your desired water temperature and desired water dispensing volume.

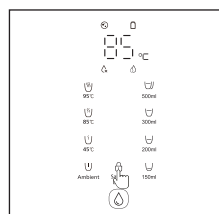

Press the lock button to disable child-lock mode* (*not needed if ambient temperature is selected)

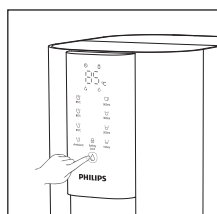


Press the water drop button to start dispensing.




© 2024 AquaShield
All rights reserved.
Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.
This product has been manufactured by and is sold under the responsibility of Hong Kong AquaShield Health Technology Company Limited and Hong Kong AquaShield Health Technology Company Limited is the warrantor in relation to this product.
Rev A JUN 24

IMPORTANT – Read Before Use


Daily maintenance

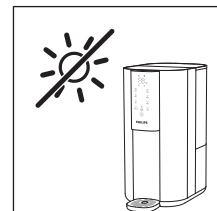


Avoid direct sunlight towards the water tank and water jugs.

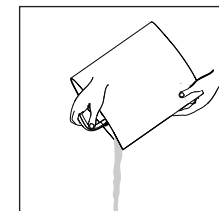


Always empty the 4L tap water tank before refilling it to its maximum line.

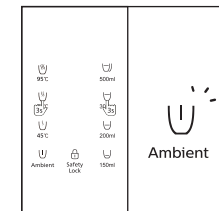


If the appliance has not been used for 24 hours, perform the two-key emptying procedure to empty the internal tank and water. Then first select ambient water temperature to avoid dry-heating.

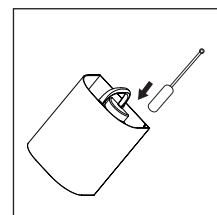

Clean the tap water tank (weekly), using brush and dish-washing liquid.

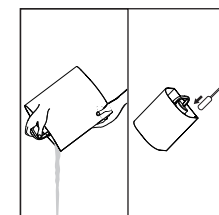


Empty and clean the water tank when the appliance will not be used for over one week.

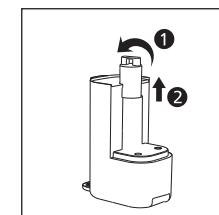


Take the filter cartridge out, seal it and store in a fridge (2-5 degrees).

Quarterly* descaling of the tap water tank with a citric acid solution


(* more frequently in areas with hard water)

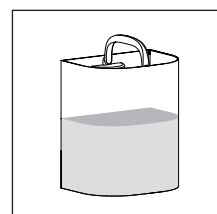

Fill the tap water tank half full, add citric acid solution and stir lightly.

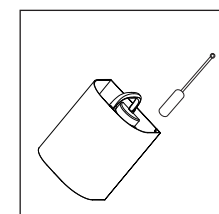

Leave the citric acid solution in the water tank soaking for 2 hours.

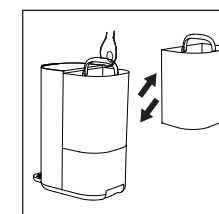

Discard the citric acid solution and rinse the tank with tap water before refilling and inserting back into the water station.

尺寸：120x180mm