

# PHILIPS

## Party Speaker

5000 Series

TAX5309



[www.philips.com/welcome](http://www.philips.com/welcome)



 
 
 
 
 


**en** Before using your Product, read all accompanying safety information

**es** Antes de usar el producto, lea toda la información de seguridad que lo acompaña

**fr** Avant d'utiliser votre produit, lisez toutes les informations de sécurité qui l'accompagnent.

**pt** Antes de utilizar o produto, leia todas as informações de segurança que o acompanham

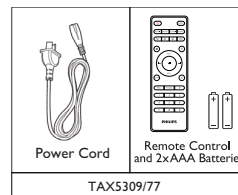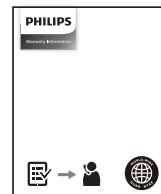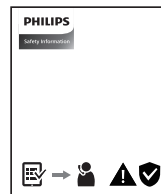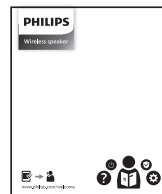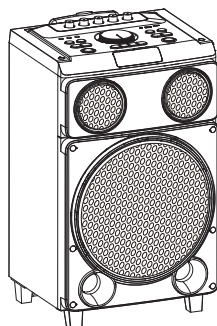

\*Power cord quantity and plug type vary by regions.

 


**en** Download Philips Entertainment App

**es** Descargar la aplicación Philips Entertainment

**fr** Téléchargez l'application Philips Entertainment

**pt** Transferir App Philips Entertainment

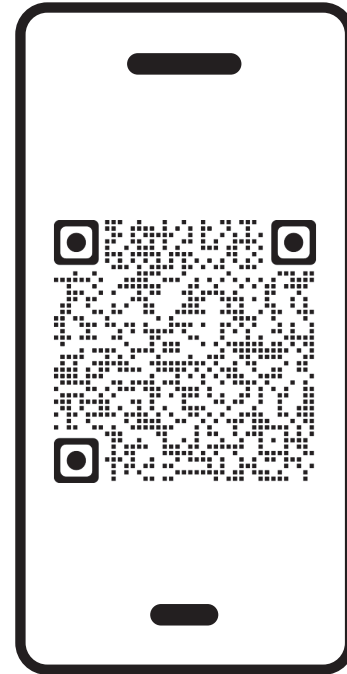


[philips.to/entapp](https://philips.to/entapp)


# 1


 
## 1

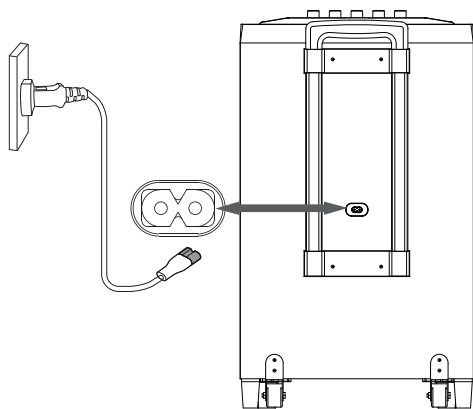


## 2

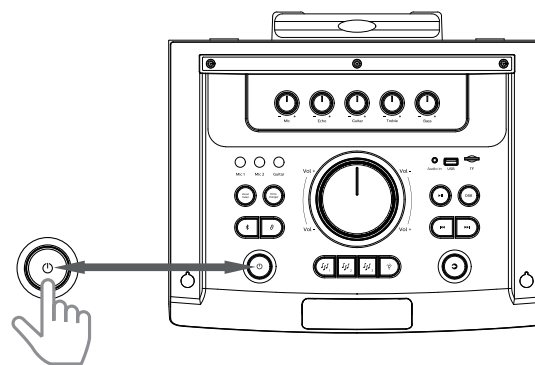 

3 sec.


# 2

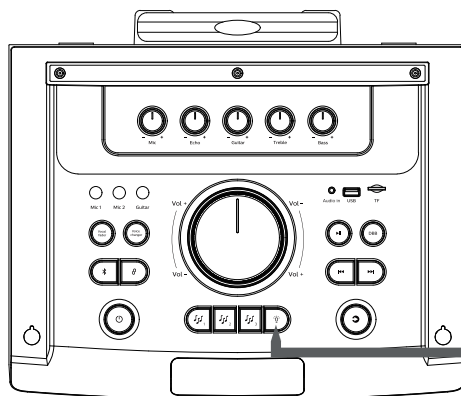 

1



 Short press

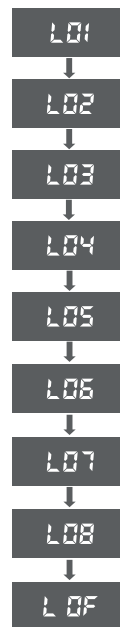

2




3 sec.


Strobe light

On/Off



# 3

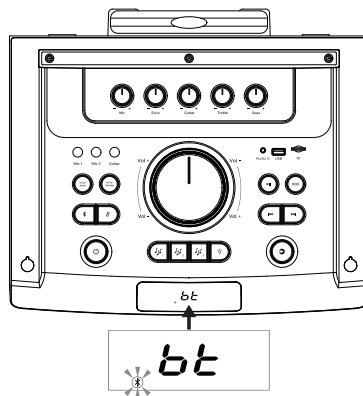 

1

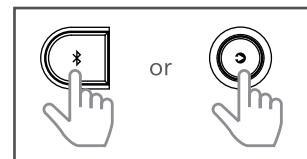 

2

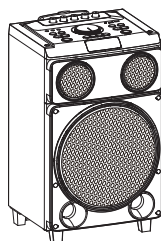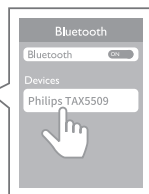  

≤ 10 m  
(≤ 32.8 ft.)

3



4




3 sec



# 4




 1

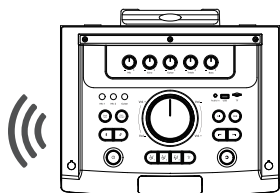

(A)  
Speaker

 
2

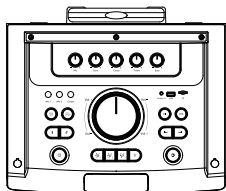

(A)  
Speaker



 
3

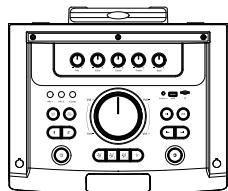


(B)  
Speaker




 
4

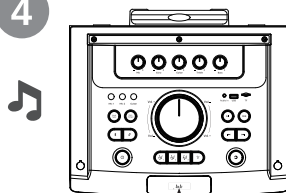

 
(A)  
Speaker

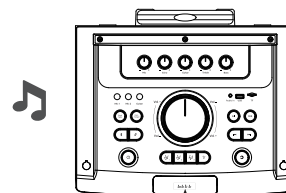

  (B)  
Speaker

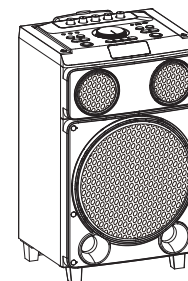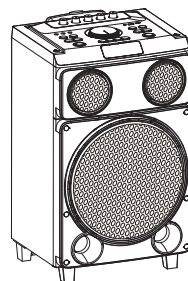

# 5

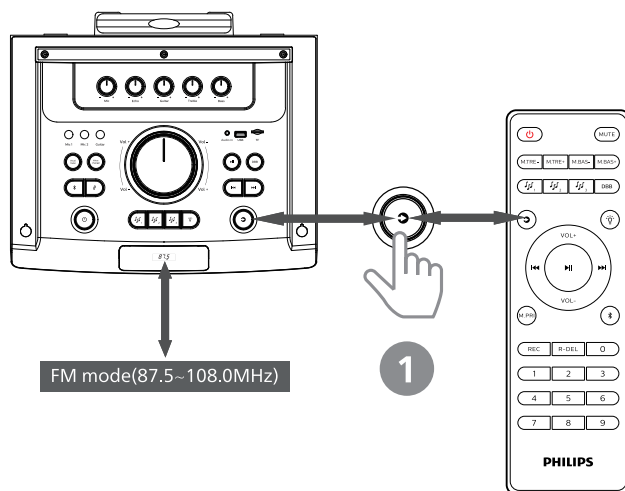 

FM mode(87.5~108.0MHz)

1

2

Automatically scan



Scan channel automatically



Select scanned channel

2

Manually scan



Scan channel manually



Scan channel manually




# 6


 
## 2

Audio in

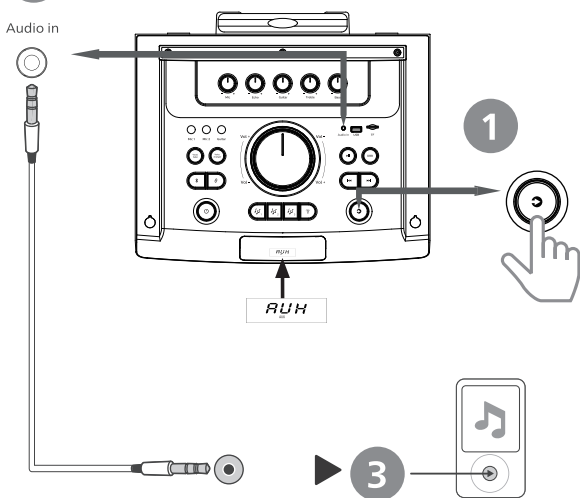


## 1




## 3



 
# 7



**Remark:** USB/TF Max support ≤ 128G

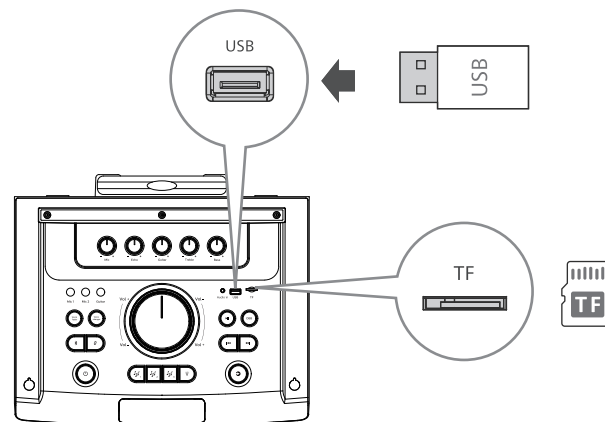 


# 8

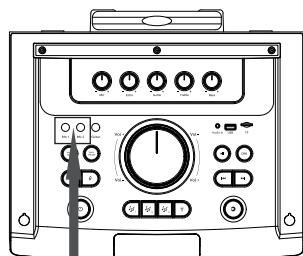 

1

Mic 1 or Mic 2  
6.3mm

 2




Mic

3



 
Echo

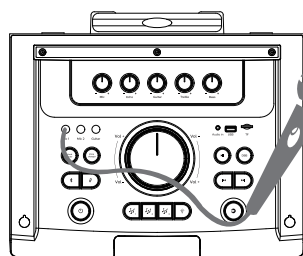

Vocal fader: On



 Vocal fader: Off

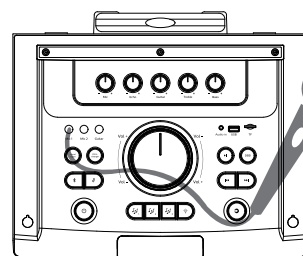

Voice 1



Voice 2






Voice 3



Voice 4




   Voice OFF

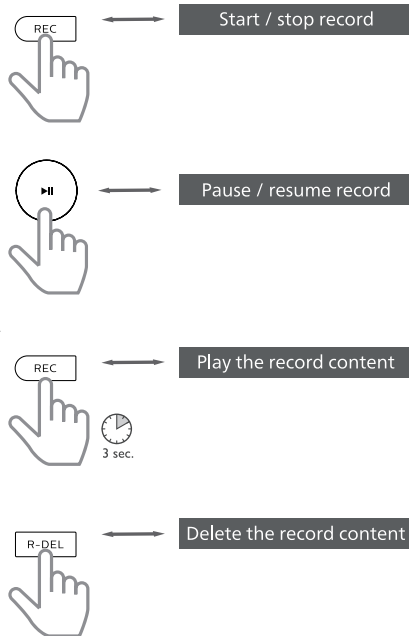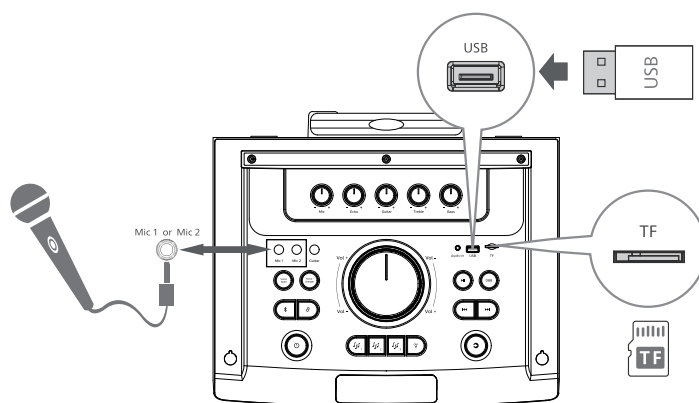

**Note:** The record function is not available in BT mode.

# 10

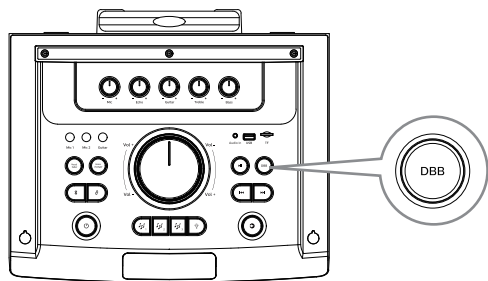 

DBB 1



DBB 2





DBB OFF

# 11



1

  Guitar 6.3mm

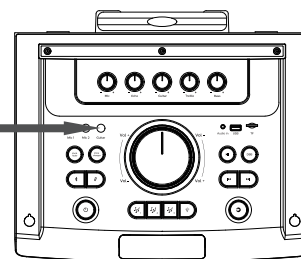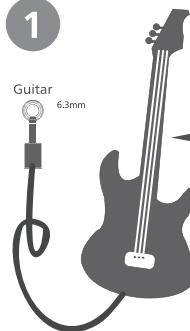

2



Guitar



**en** For more information about using this product, visit [www.philips.com/support](http://www.philips.com/support)

 
**es** Para obtener más información sobre el uso de este producto, visite [www.philips.com/support](http://www.philips.com/support)

**fr** Pour plus d'informations sur l'utilisation de ce produit, visitez [www.philips.com/support](http://www.philips.com/support)

**pt** Para obter mais informações sobre a utilização deste produto, visite [www.philips.com/support](http://www.philips.com/support).



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MMD Hong Kong Holding Limited is under license. Other trademarks and trade names are those of their respective owners.

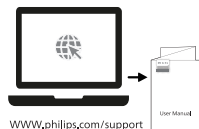



Specifications are subject to change without notice. Please visit [www.Philips.com/support](http://www.Philips.com/support) for the latest updates and documents.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.

TAX5309\_QSG\_V1.0

