

Important safety information

Only use the product for its intended household purpose. Read this important information carefully before you use the product and its batteries and accessories, and save it for future reference. Misuse can lead to hazards or serious injuries. The accessories supplied may vary for different products. Warning

• To charge the product, only use a certified safety extra low voltage (SELV) supply unit that complies with China GB standard GB4706.1-2005, 5 V $\overline{}$, \geq 1 A, IPX4, in order to guarantee electrical safety. We advise using Philips HQ87, or an equivalent certified supply unit. If you still need help, please contact the Philips Consumer Care Center. Using a non-certified supply unit may cause hazards or serious injuries. • Keep the USB cable and the USB supply unit dry (Fig. 1). • This shaver is waterproof (Fig. 2). It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can therefore only be used without cord. • This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. • Do not modify the supply unit. • Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit. • Do not use a damaged appliance. Replace damaged parts with new Philips parts. • Because of hygiene, only one person should use the appliance. • Unplug the appliance before cleaning it with water. • Only use cold or lukewarm water to clean the appliance. • Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids to clean the appliance. • Water may drip from the area around the light ring when you rinse it • Only use original Philips accessories or consumables. • Charge, use and store the product at a temperature between 10 °C and 35 °C. • Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures. • If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact Philips. • Do not place products and their batteries in microwave ovens or on induction cookers. • Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries. • If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Support

For all product support, please visit www.philips.com/support.

Recycling

• This symbol means that electrical products and batteries shall not be disposed of with normal household waste (Fig. 3). • Follow your country's rules for the separate collection of electrical products and batteries

Troubleshooting

Problem	Possible cause	Solution	验
The appliance does not work when I press the on/off button.	The appliance is still connected to a power source. For safety reasons, the appliance can only be used without cord.	Unplug the appliance and press the on/off button to switch on the appliance.	他保的要品件壁
	The rechargeable battery is empty.	Recharge the battery.	e 使 浦
	The travel lock is activated.	Press the on/off button for 3 seconds to deactivate the travel lock.	虑 清 •ì
	The shaving unit is soiled or damaged to such an extent that the motor cannot run.	Clean the shaving heads thoroughly or replace them.	勿 剂 刀 仅 电
The appli- ance does not shave as well as it used to.	Hairs or dirt obstruct the shaving heads.	Clean the shaving heads thoroughly.	1(电 射
	The shaving heads are damaged or worn.	Replace the shaving heads.	请 Ph 微

Problem	Possible cause	Solution
Water is leaking from the area around the light ring of the appliance.	During cleaning, water may collect between the inner body and the outer shell of the appliance	This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the appliance.

Removal of built-in rechargeable battery

The built-in rechargeable battery must only be removed by a qualified professional when the appliance is discarded. Before removing the battery, make sure that the appliance is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the appliance and when you dispose of the rechargeable battery.

When you handle batteries, make sure that your hands, the product and the batteries are dry.

To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard them.

- Pull the shaving unit off the shaver.
- Use a flathead screwdriver to remove the top cap 2 of the housing.
- Remove the screws
- Pull the inner parts out of the housing. If 4 necessary, use a pair of pliers.
- Remove the rechargeable battery 5

简体中文

重要安全信息

仅可将本产品用于预期家用用途。使用 本产品及其电池和附件之前,请仔细阅 读本重要信息,并妥善保管以供日后参 考。使用不当可能会导致危害或严重伤 随附的附件可能因产品而异。 害。

警告 •为产品充电时,请必须使用符合 GB4706.1-2005标准的5V----、 ≥1A、IPX4安全超低电压(SELV)电源 适配器,以确保电气安全。我们建议使 用飞利浦电源适配器HQ87或同等且经 认证的电源适配器。 若您需要帮助, 可 联系 飞利浦客户服务中心。 使用未经 认证的电源适配器可能会导致危害或严 重伤害。•警告符号注释(图1):禁止 在打开的水龙头下清洗USB线缆和电源 部件(需单独购买),请保持相关部件 干燥。•请保持 USB 线缆和 USB 电源 部件干燥 (图 1)。•警告符号注释:禁 止用在打开的水龙头下进行清洗(图1) •该剃须刀具有防水性能 (图 2)。 适 合在沐浴或淋浴时使用,也可以放在水 龙头下清洗。 出于安全原因,该剃须刀 在使用时不能连接电线。•符号注释: 适合于在洗澡或淋浴时使用 (图 2)。 允 许在盛水的浴缸、淋浴、洗脸盆或其他 器皿附近使用本器具。•本产品也可以 由8岁或以上年龄的儿童以及肢体不健 全、感觉或精神上有障碍或缺乏相关经 佥和知识的人士使用,但前提是有人对 也们使用本产品进行监督或指导,以确 **呆他们安全使用,并且让他们明白相关** り危害。 切勿让儿童玩弄本产品。 不 要让儿童在无人监督的情况下对本产。 品进行清洁和保养。•请勿改装电源部 +。•请勿在包含电动空气清新器的墙 街座上或其周围使用电源部件,以免

热或释放有毒有害物质,切勿打开、改 装、刺穿、损坏或拆卸产品或电池。切 勿使电池短路、过度充电或反向充电。 •如果电池损坏或出现泄漏,请避免与 皮肤或眼睛接触。如果不慎接触,请立 即用清水冲洗并就医。

电磁场 (EMF)

本Philips产品符合所有有关暴露于电磁 场的适用标准和法规。

支持

有关所有产品支持,请访问 www.philips.com/support.

回收

•此符号表示电器产品和电池不能与一 般的生活垃圾一同弃置(图3)。•请遵 守您所在国家/地区有关分类回收电器 产品和电池的规定。

故障处理方法

问题	可能的原 因	解决方法
按下开/ 关按 , 产 时, 不工 作。	产接出原产用连线 品。全本使 用于因品时接。 。	拔掉产品插头并 按开/关按钮打 开产品。
	充电电池 的电量已 耗尽。	给电池充电。
	旅行锁功 能处于激 活状态。	长按开/关按钮3 秒解除旅行锁功 能。
	剃须件染或 汤 将 染 动 供 魂 或 天 、 、 、 、 、 、 、 、 、 、 、 、 、 、 、 、 、 、	彻底清洁剃须刀 头或将其更换。
产品的 剃须效 果不如 以前 好。	毛发或污 垢堵塞 了剃须刀 头。	彻底清洁剃须刀 头。
	剃须刀头 已损坏或 磨损。	更换剃须刀头。
水从本 产品附 区 切 品 。	在程 可在 和 即 定 子 引 内 子 引 内 子 内 内 子 内 内 子 内 の 子 内 の 子 内 の 子 内 の 子 内 の 子 の の 子 の の の の	这是正常现象, 而且没有危险, 因为所有电子元 件都封闭在产品 内部的密封电源 部件中。

取出内置充电电池

在废弃器具前,必须将电池从器具中取 出。在取出电池时,器具必须要断电。 电池应安全地处置。

当您使用工具打开产品时以及在您弃置 充电电池时,请采取必要的安全保护措 施。

处理电池时,请确保您的双手、产品和 电池都是干燥的。

为避免电池拆卸后发生意外短路,切勿 让电池端子接触金属物体(例如硬币、 发夹、戒指)。 切勿用铝箔包裹电池。

PHILIPS X5000 Series



用备留料 . 75% 循环再造纸 3000.146.5649.1 (12/12/2024) All rights reserved © 2024 Koninklijke Philips N.V.



PHILIPS

产品: 飞利浦电动剃须刀 型号: XP521 IPX7 型 5: AF321 额定电压: 3.6V -----额定输入功率: 1.6W 充电电压/电流: 5V-----生产日期: 请见产品本体 产地: 中国广东珠海 **=**/1A 珠海经济特区飞利浦家庭电器有限公司 珠海市金湾区三灶镇定湾二路365号 全国顾客服务热线: 4008 800 008 本产品根据国标 GB4706.1-2005, GB4706.9-2008制造

不包含电源适配器。使用者必须使用符合 GB4706.1-2005标准的5V ==== 、≥1A、 IPX4电源适配器,以确保电气安全。

PHILIPS

产品: 飞利浦电动剃须刀 型号: XQ522 额定电压: 3.6V ----额定输入功率: 1.6W 充电电压/电流: 5V ----生产日期: 请见产品本体 产地: 中国广东珠海 IPX7 =/1A

珠海经济特区飞利浦家庭电器有限公司 珠海市金湾区三灶镇定湾二路365号 全国顾客服务热线: 4008 800 008

GB4706 9-2008制造

电源部件受到不可修复的损坏。 • 请勿 **吏用已经损坏的产品。** 请用新的飞利 甫部件更换损坏的部件。 • 出于卫生考 息,仅能由一个人使用本产品。•用水 青洁产品前,请先将电源插头拔掉。 请仅使用冷水或温水清洁产品。•切 7使用压缩气体、钢丝绒、研磨性清洁 到或腐蚀性液体清洁设备。 • 冲洗剃须 D时,水可能从光环附近区域漏出 • 请 Q使用飞利浦原装附件或消耗品。•充 电、使用和存放本产品的温度应介于· 0°C至35°C之间。•请将产品和 电池远离火源,切勿将其暴露于阳光直 · 处或高温下。 • 如果产品异常发热或 定出异味、变色或充电时间比平时长, 青停止使用并停止为其充电,并联系 hilips。•切勿将产品及其电池放置在 微波炉中或电磁炉上。•为防止电池发

在丢弃之前,请用胶带将电池端子粘住 或将电池放在塑料袋中。

- 1 将剃须刀头部件拉出剃须刀。 2 用平头螺丝刀卸下外壳的顶盖。 3 卸下螺丝。 4 从外壳中抽出内部部件。如有必 要,可使用钳子。
- 5 取出充电电池。

「包含电源适配器。使用者必须使用符合 GB4706.1-2005标准的5V ===、≥1A、 IPX4电源适配器,以确保电气安全。

PHILIPS	
产品: 飞利浦电动剃须刀 型号: XQ523 額定电压: 3.6V 额定输入功率: 1.6W 充电电压/电流: 5V /1A 生产日期: 请见产品本体 产地:中国广东珠海	IPX7
珠海经济特区飞利浦家庭电器有限公 珠海市金湾区三灶镇定湾二路365号 全国顾客服务热线:4008 800 008	·司
本产品根据国标 GB4706.1-2005, GB4706.9-2008制造	
不包含电源适配器。使用者必须使用 GB4706.1-2005标准的5V 、≥ IPX4电源适配器,以确保电气安全。	

PHILIPS

产品: 飞利浦电动剃须刀 型号: XP524 IPX7 额定电压: 3.6V----额定输入功率: 1.6W 充电电压/电流: 5V----/1A 生产日期:请见产品本体 产地:中国广东珠海

珠海经济特区飞利浦家庭电器有限公司 珠海市金湾区三灶镇定湾二路365号 全国顾客服务热线: 4008 800 008 本产品根据国标 GB4706.1-2005, GB4706.9-2008制造

不包含电源适配器。使用者必须使用符合 GB4706.1-2005标准的5V —— 、≥1A、 IPX4电源适配器,以确保电气安全。

PHILIPS

产品: 飞利浦电动剃须刀 型号: XU525 额定电压: 3.6V ----额定输入功率: 1.6W 充电电压/电流: 5V ----/1A 生产日期: 请见产品本体 产地: 中国广东珠海 本产品包含以下部件: 剃须刀数量: 1件(IPX7) 紫外线盒数量: 1件(IPX4) 陎海经济特区飞利浦家庭电器有限公司

珠海市金湾区三灶镇定湾二路365号 全国顾客服务热线: 4008 800 008 本产品根据国标 GB4706.1-2005, GB4706.9-2008制造

不包含电源适配器。使用者必须使用符合 GB4706.1-2005标准的5V===、≥1A、 IPX4电源适配器,以确保电气安全。

	产品中有害物质的名称及含量					
部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCB's 集成电路板	х	0	0	0	0	0
Electrical contact pins 电接触片	х	0	О	0	0	о
Power plug 电源插头	Х	0	0	0	0	0
Internal metal parts 内部金属件	х	о	0	0	0	о
本表格依据SJ/T 11364的规定编制。						
O:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。						
X: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。						

•该表格中所显示的"有害物质"在产品 正常使用情况下不会对人身和环境产生 任何伤害。•该表格中所显示的"有害物 质"及其存在的部件向消费者和回收处 理从业者提供相关物质的存在信息,有 助于产品废弃时的妥善处理。 保留备用

发行日期: 10/12/2024











