

How to use

FR Comment utiliser















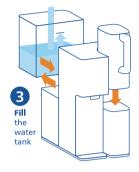

 






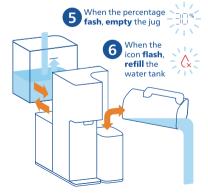





Place container (min. 70oz)





Precautions

First Time Use

- For first time use, in order to avoid dry-heating and protect the machine, please extract some ambient water before extracting hot water.
- For first time use, or if the machine hasn't been used for a long time, fill the raw water tank and discard all the filtered water.
- For first time use, when air passes the high-precision filter elements, micro bubbles are generated causing the water in the pure water jug appears white and cloudy. This is a normal phenomenon.
- For the first time use, TDS value will be displayed 3 minutes after powering on.
- To prevent excess steam, the local boiling point should be checked and adjusted; when the filtration is done and extracting water at 203 °F for the first time, boiled water will flow out from the nozzle and the boiling point calibration will be completed automatically. This procedure will last for 15-20 seconds. A container with a volume not less than 16,90z should be placed under the nozzle during this procedure.

Note: Steam might be ejected during automatic boiling point calibration, please be aware of burn hazards.

Daily Use

It is recommended to discard the filtered water if the machine hasn't been used for over 24 hours.

Precautions when not in use

If the product will not be used for over one week, please empty the raw water tank and the filtered water jug, then disconnect the dispenser from power supply. Seal the filter cartridge and store it in the refrigerator (35-40 °°, do not put it in the freezer). When you use it again, please follow the cleaning procedures for first time use

Descale every 3 months

It is recommended to descale the tap water tank every 3 months to, avoid serious scaling in the raw water tank. Please refer to the user manual for the descaling procedures.

