






Television Quick Start Guide 720 Series

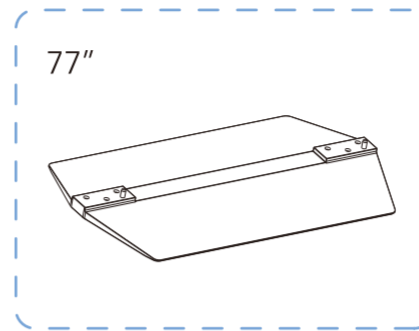

Tool needed for assembly

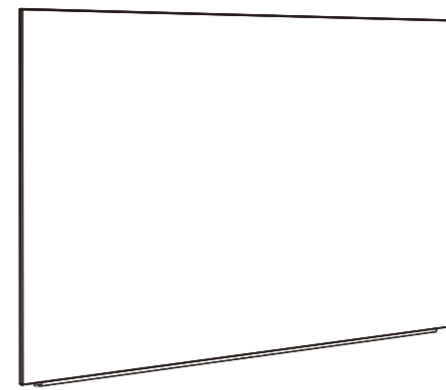

77" (M6x15mm): x6
M: Machine screw (/56,/98)

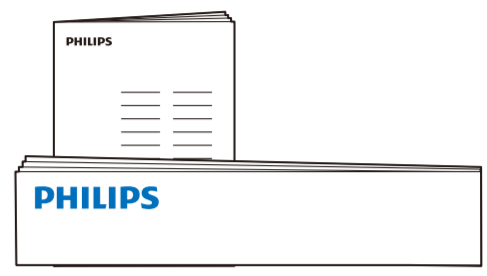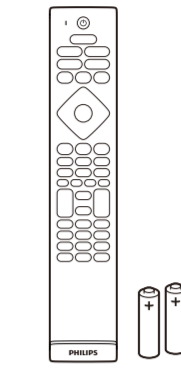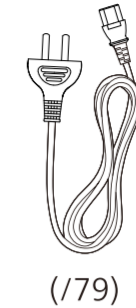

1 77"

2

3

The screen is fragile, it is forbidden to handle the bottom corner of screen!

A Desk Placement

B Wall Placement

A

77"

Recommended Wall Distance

10-20 cm

B

Diagonal (inch/cm)	X (mm)	Y (mm)	Screw Size	Screw Length (mm)
77" / 195	400	400	M8	10-20

Recommended Wall Distance

7-10 cm

4 Get Connected





www.philips.to/smartTV

The Philips Smart TV app lets you switch channels and adjust the volume - just like a remote control.

5 Register and Support

www.philips.com/TVsupport

Register your TV, find out more, download the user manual and get support

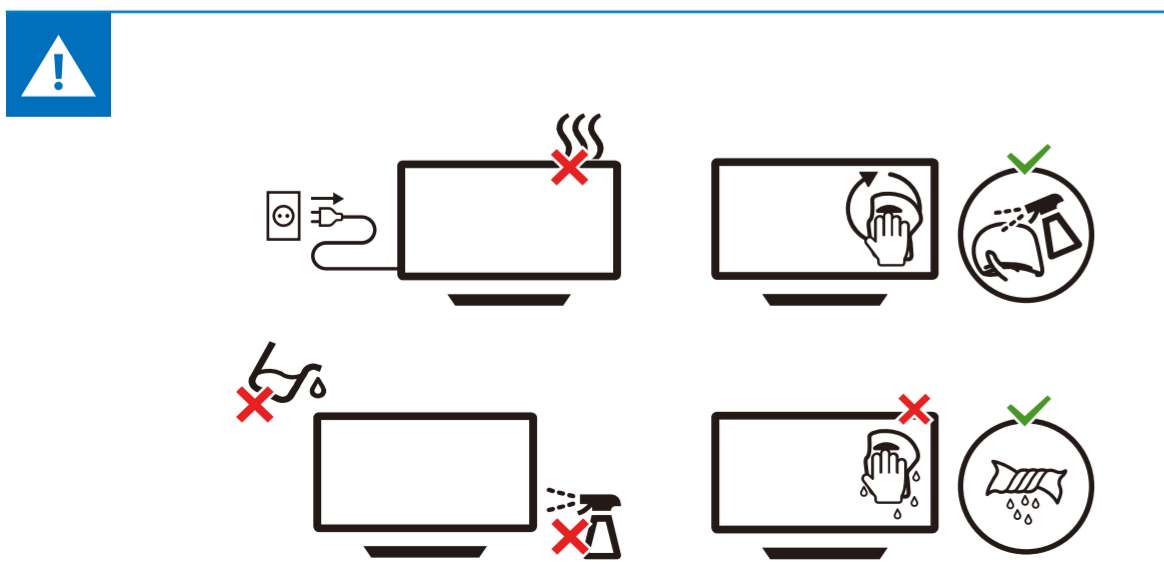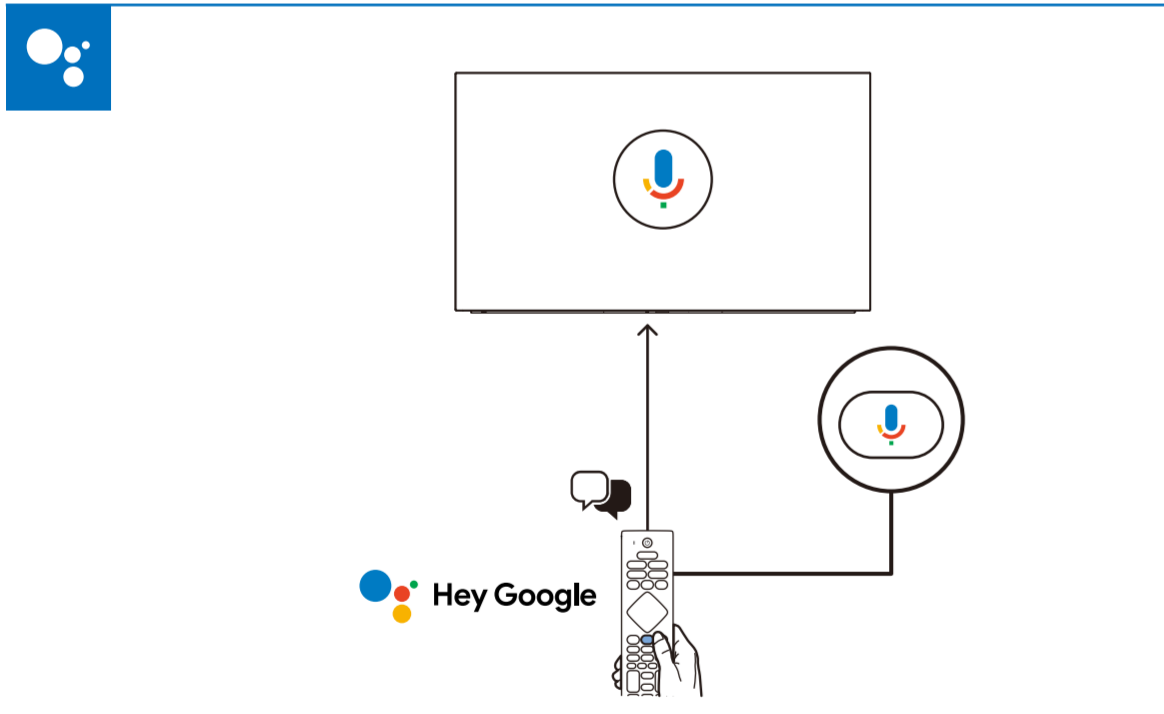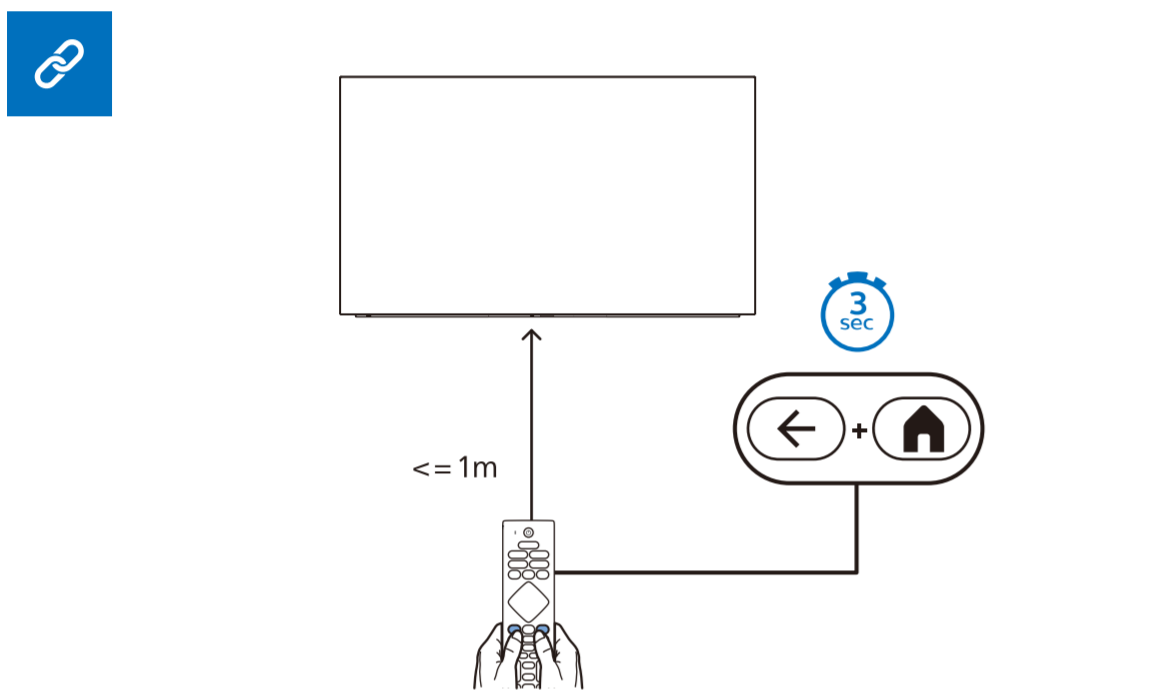
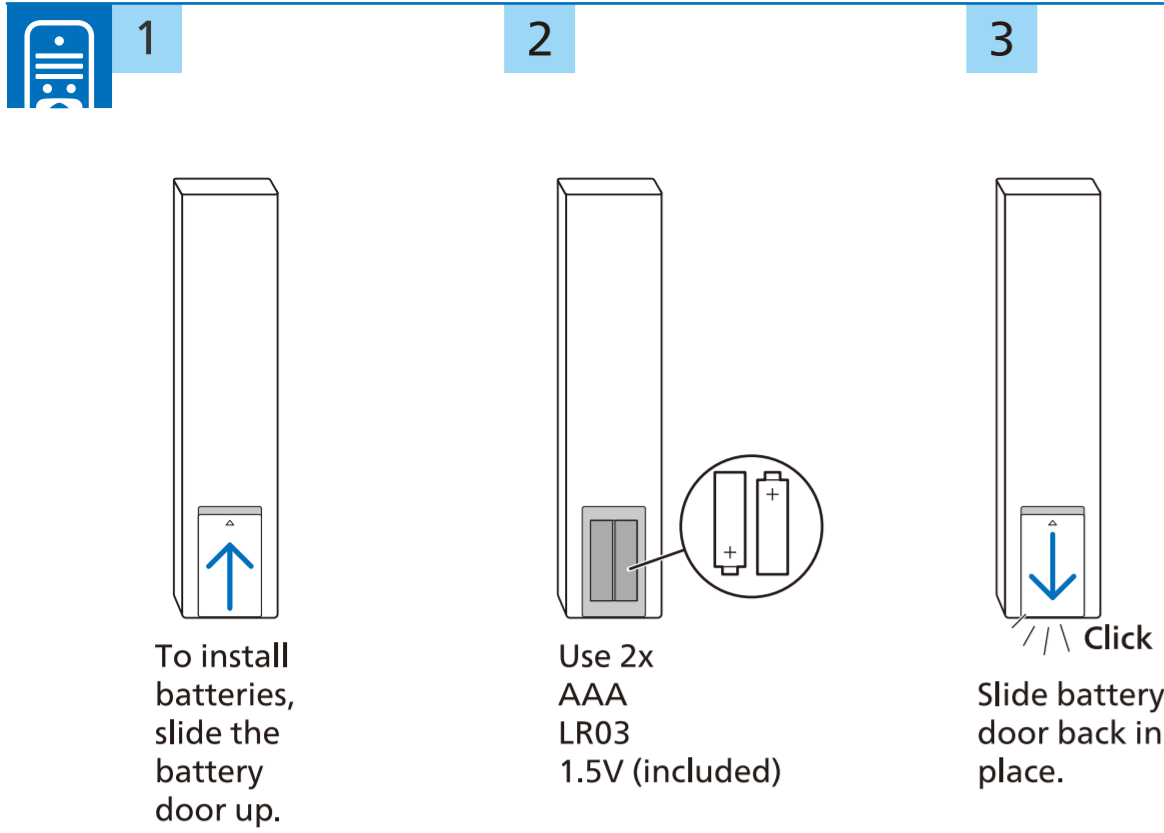


English Read the safety instructions.
Bahasa Malaysia Baca arahan Keselamatan.
Bahasa Indonesia Baca petunjuk keselamatan.

Deutsch Lesen Sie die Sicherheitshinweise.
Français Lisez les consignes de sécurité.
Português Leia as instruções de segurança.

ภาษาไทย โปรดอ่านคำแนะนำด้านความปลอดภัย
Tiếng Việt Hãy đọc chỉ dẫn an toàn.
简体中文 请阅读安全说明。

العربية قراءة تعليمات السلامة.

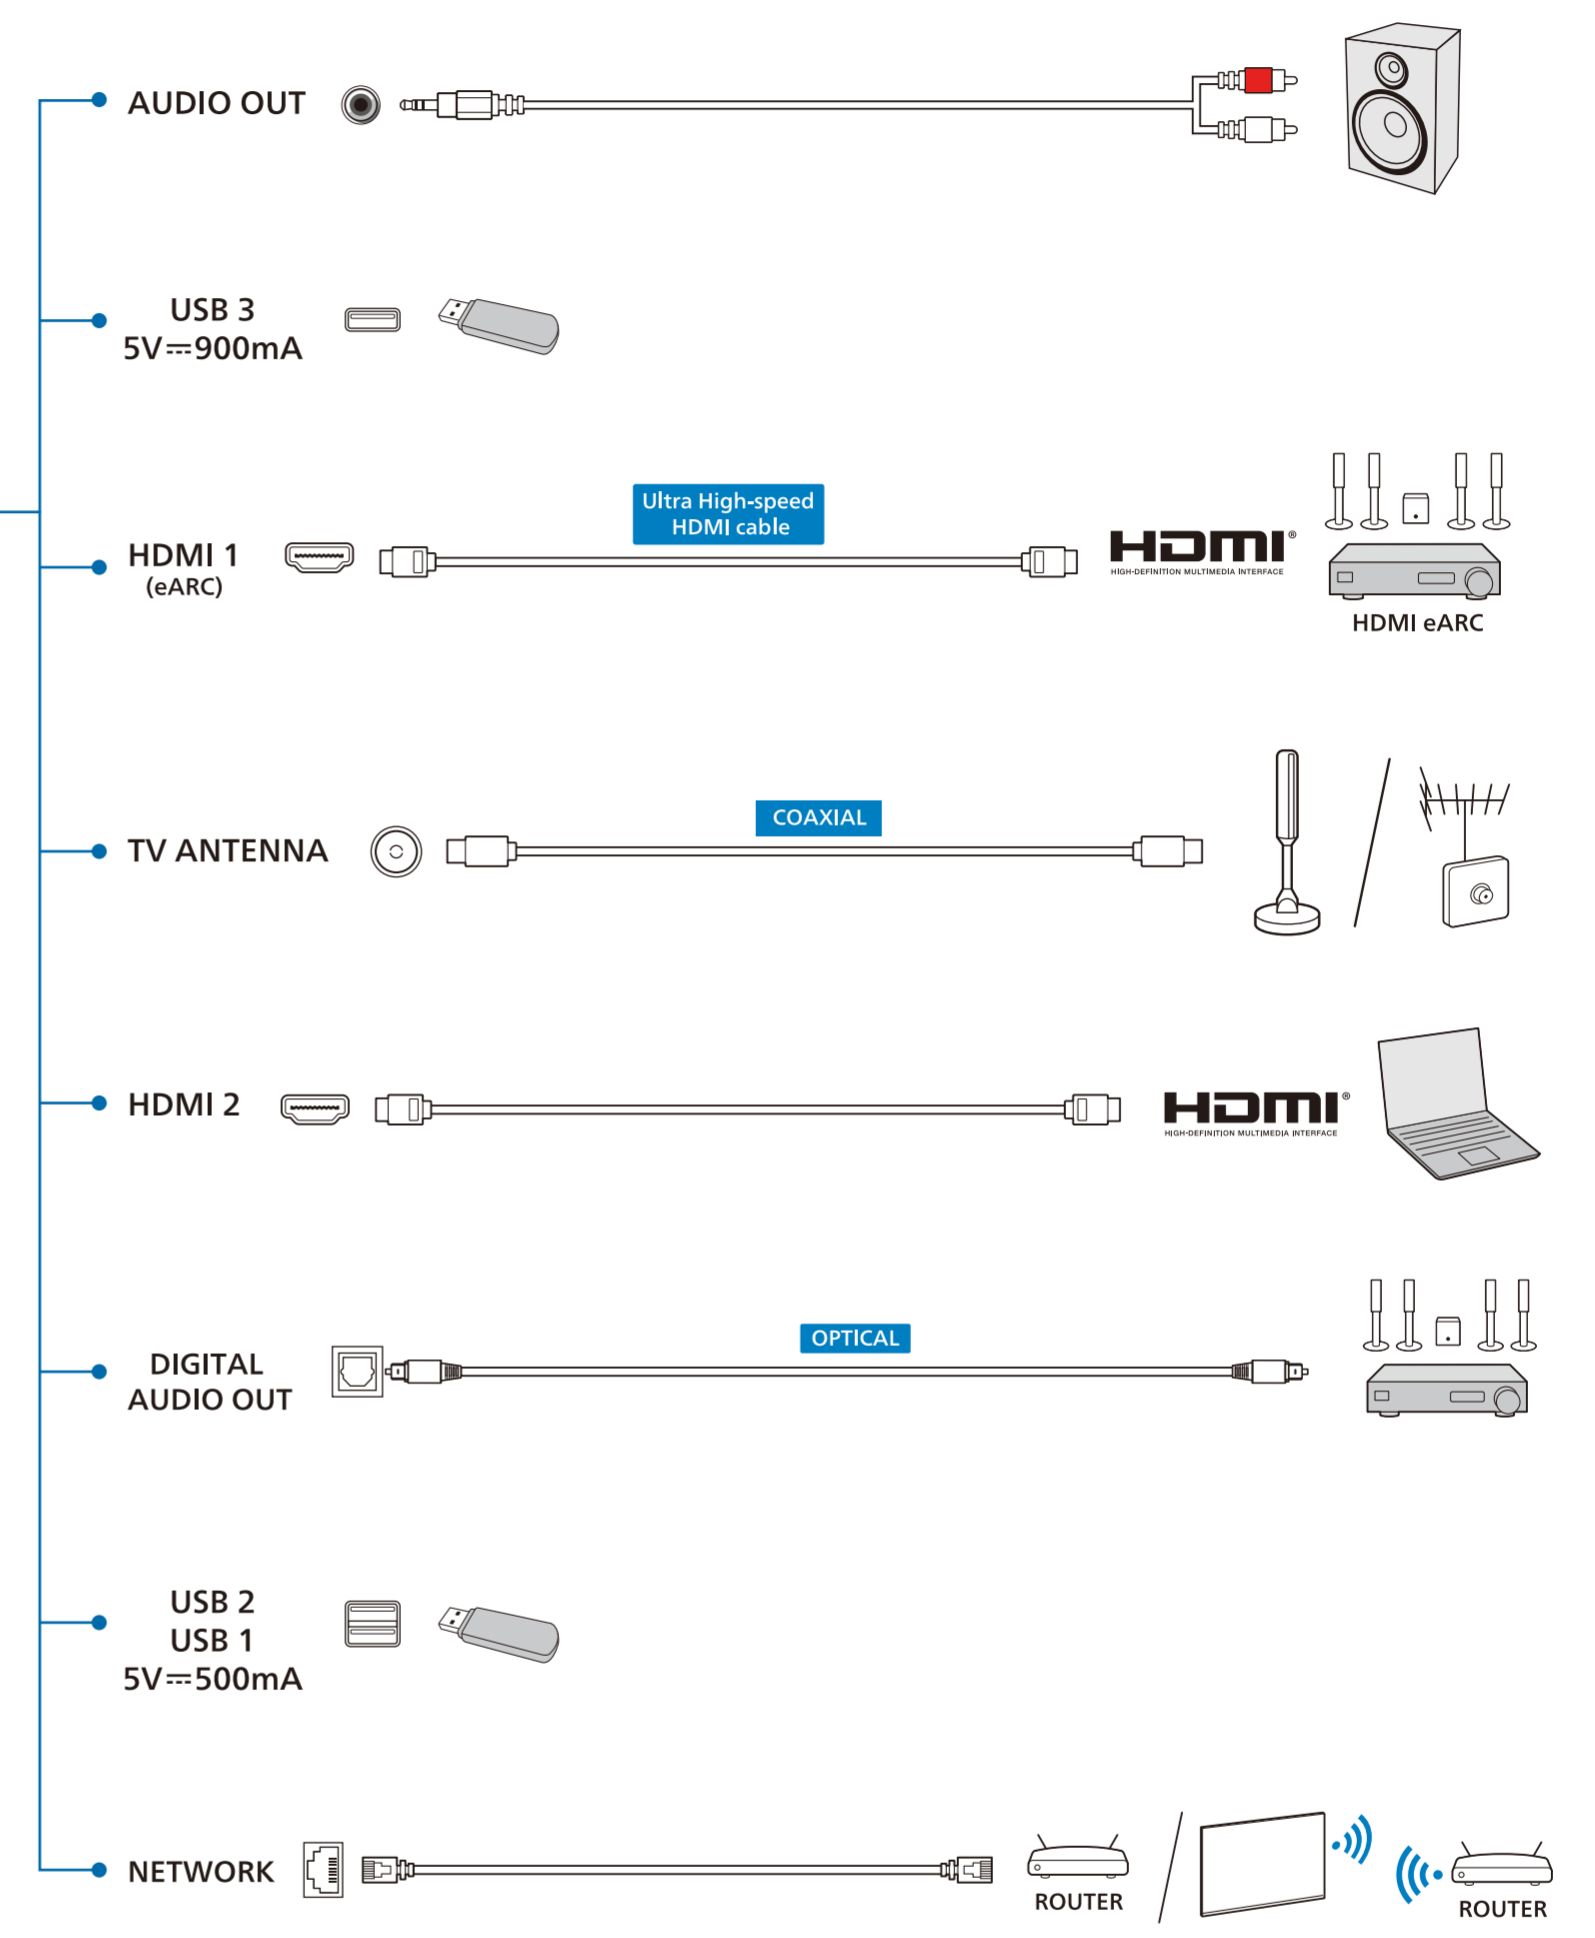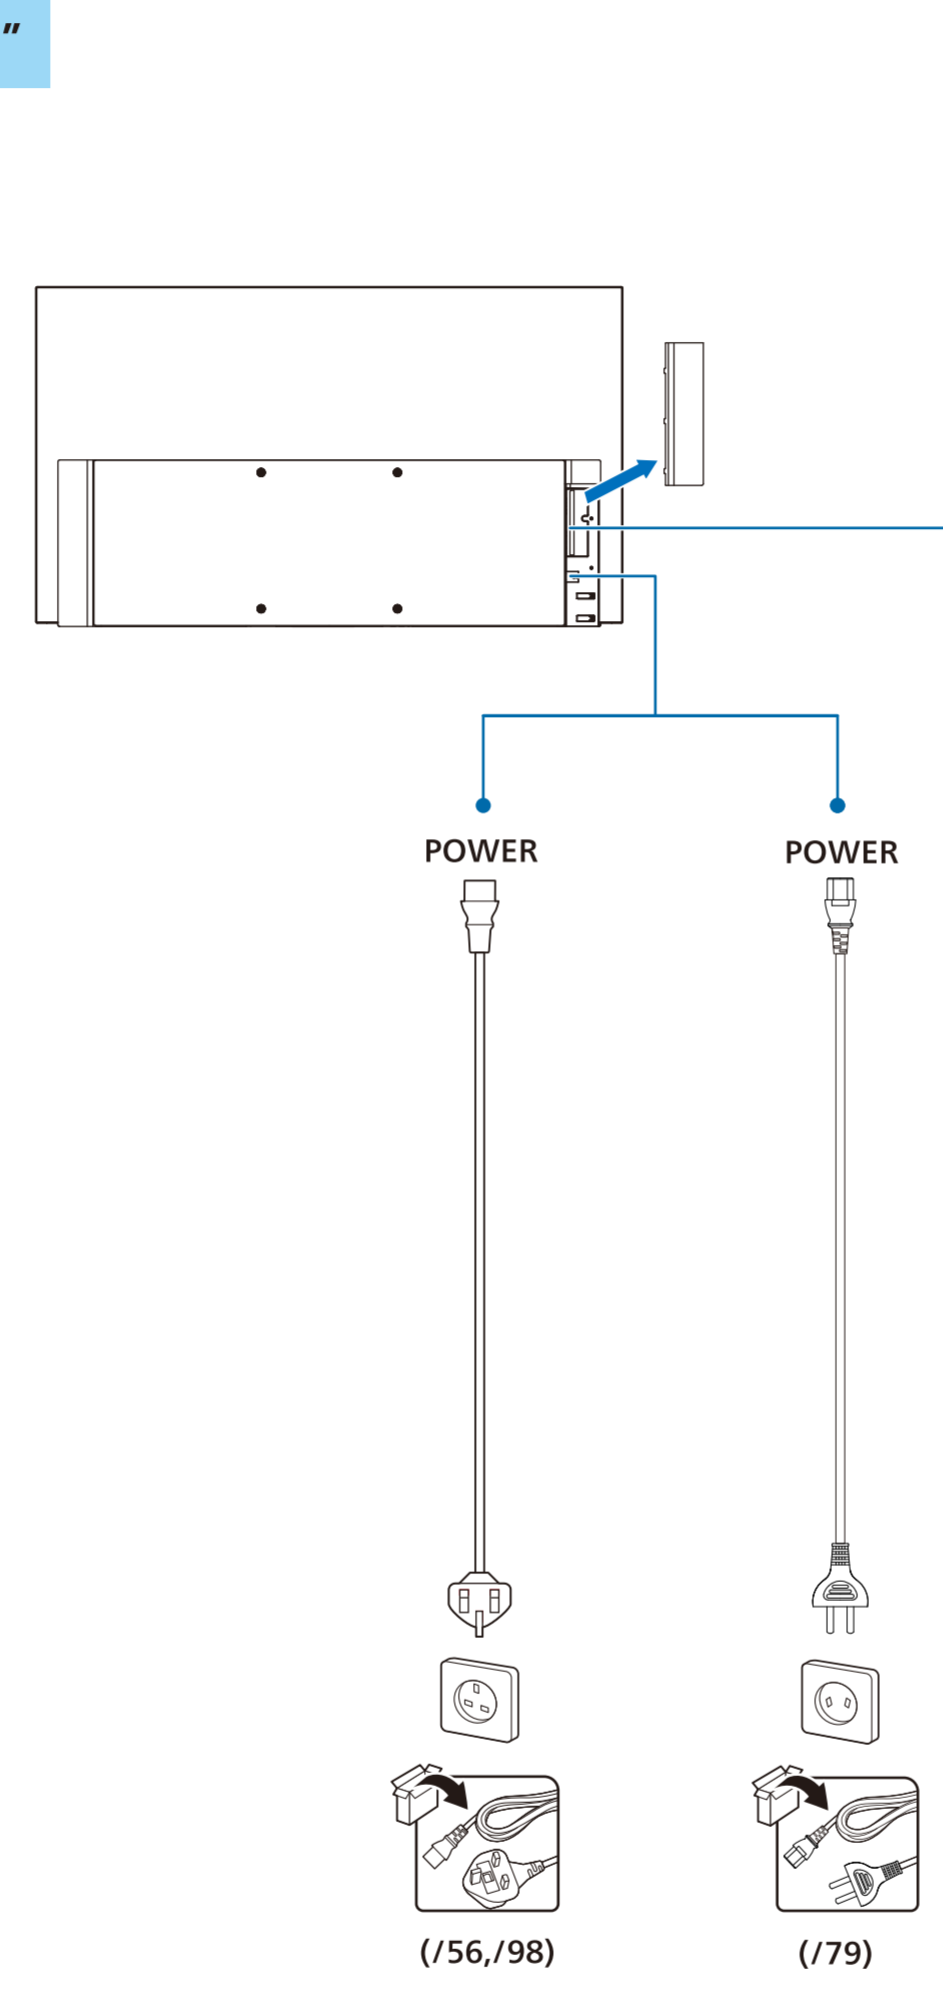

All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of TP Vision Europe B.V., and TP Vision Europe B.V. is the warrantor in relation to this product. 2025 © TP Vision Europe B.V. All rights reserved. www.philips.com/welcome