PHILIPS

EasyKey

7000 series

Palm vein smart door lock

DDL720-MVP-17HWS

User manual

Register your product(s) to get support from below link: www. philips.com/support



Contents

| 2. | Assembly | 03 |
|----|-----------------------------------|-----|
| | Disposal of used locks and batter | ies |
| | Caution | |
| | Safety | |

1. Important Information

Packing list Exploded views Notice before assembling Adjustable latch instructions Assembly steps

3. Get to know your lock 09

Exterior assembly Interior assembly

4. Settings

10

16

Instructions before setting Master mode Settings System settings Network settings APP download Device Addition

5. Get to use your lock

Outdoor/ indoor unlock Outdoor/ indoor lock Privacy mode Mechanical key unlock

02 6. Other features

19

22

24

Armed mode Mute mode Factory reset Doorbell Video and intercom Display

7. Indicators

Lock status indicator Low battery indicator Armed mode indicator Mute indicator Privacy mode indicator System lock-out indicator

8. Troubleshooting

Alert types How to apply external power source Battery replacement Battery charging

1. Important information

Safety

◆ Before using this product, please carefully read through and understand all instructions. Damage resulting from failure to follow these instructions is not covered by the warranty.

Please only use the accessories/components specified by the manufacturer.

Please only use alkaline batteries/lithium polymer batteries provided with this product, or batteries of the same specification/type.

Please do not attempt to forcibly disassemble the product to trigger an alert or cause damage.

Please avoid using sharp objects to scrape the fingerprint sensor, as this may result in permanent damage.

Please avoid exposing the product to areas where water may leak or splash.

◆ To prevent damage to the protective cover, do not expose the product to corrosive substances.

Please avoid hanging objects on the handle as it may interfere with the functioning of the lock.

Please use a soft, damp cloth to wipe fingerprints or dirt from the assembly surface.

Please do not remove the batteries while setting up or operating the product.

Please select professional personnel for door lock installation and follow the installation instructions provided by our company. Do not disassemble the door lock and ensure that the relevant sealed stickers are properly kept.

◆ After completing the installation and troubleshooting, please change the default master PIN code immediately. Ensure that the mechanical keys are stored properly and do not share the PIN codes with others.

When the door lock's low battery alert is triggered, promptly replace the batteries and ensure correct polarity, or recharge the batteries as needed.

Caution

Do not place the batteries near sources of ignition to prevent explosions.

Do not use any power source that does not meet safety requirements to power the product.

 Please avoid short-circuiting the battery's polarity with metal objects to prevent explosions.

 Please ensure that installation or any component replacement is carried out by Philips, a Philips authorized service center, or professional technicians.

Please refrain from using accessories or components made by unauthorized manufacturers or not explicitly recommended by Philips. Using such accessories and components may void the warranty.

Disposal of used products and batteries

You can have your products taken back at authorized Philips service centers. You may receive appropriate compensation if your products meet our refund conditions.

◆ Please familiarize yourself with local regulations regarding the disposal and separate collection of used batteries and products. Proper disposal of used products and batteries helps reduce negative impacts on the environment and human health. It's important to note that batteries should not be disposed of with regular household waste.

2 Assembly

Packing list

This packing list is for reference only. Please refer to the actual included items.



① Exterior assembly with silicon pad



(5) Mounting plate



2 Interior assembly with silicon pad



⑥ QSG



③ Drilling template



⑦ Warranty card



1 Li-polymer battery



1



ielle.



(9) Key tag



10 Mechanical key



12 Strike plate



(13) Installation kit

Exploded views



- 1.Display × 1 2. Li-polymer battery × 1 3.M4 anchor screw × 6 4. Interior assembly × 1 5.Spring × 1
- 6.Square shaft × 1 7.M6 anchor screw × 3 8. Mounting plate × 1 9. Mortise × 1 10. Mortise anchor screw × 4
- 11. M6 screw tube × 3
- 12. Exterior assembly × 1
- 13. Plastic cover × 1
- 14. Lock cylinder × 1
- 15. Lock cylinder anchor × 1
- 16. Bottom deco cover × 1

Notice before assembling

This product applies to doors with swing directions as follows left-hand inswing, left-hand outswing, right-hand inswing, and right-hand outswing.



Attention

1. Please select the appropriate installation kit based on the door thickness.

2. The product supports door thickness ranging from 38 to 120mm. For thicknesses out of this range, please consult your local dealer.

Adjustable latch instructions



Assembly procedure

The following assembly steps apply to the right-hand swing doors. For left-hand swing doors, please read through the [Notice before assembling] and adjust the latch direction first.



To drill holes in the door according to the drilling template, mount the mortise into the jamb, and secure the four anchor screws.



Attention

Please make sure the dead bolt are retracted during assembly.



Install the screw tubes onto the exterior assembly, then insert the mortise tumbler into the tumbler hole.



Attention

M6 screw tube

1.Trim the tumbler to an appropriate length as per the door thickness.

2.Trimming requirement: insert the lock cylinder into the mortise, trim the tumbler when it protrudes from the door surface at a position between 18-25mm. After trimming, align it with the mortise and insert the lock cylinder.

Install the M6 screw tube on the

connecting cable

exterior assembly.



Attention

Select the appropriate length of screw tube based on the actual door thickness.

Attention

 Trim the plastic cover to an appropriate length according to the actual door thickness.
Trimming requirement after inserting the plastic cover into the lock cylinder, trim it when it protrudes from the door surface at a position between 37-41mm. After trimming, align it with the lock cylinder and insert the plastic cover.



Pass the connecting cable through the hole on the door. Align the keyway hole and the plastic cover, inserting them to closely fit against the exterior side of the door.



Closely align the mounting plate against the interior side of the door, and secure it tightly with the M6 anchor screw.





Mortises without detection switch do not have mortise cables.



Installation of the exterior assembly and mounting plate assembly is complete.





The inner panel installs the square shaft and spring and plugs the outer panel connecting wire and the lock connecting wire into the corresponding sockets on the inner panel.



Attention

Trim the deadlock latch to an appropriate length, ensuring that the remaining length of the deadlock latch is approximately 1cm shorter than the door thickness.



Install the interior assembly and lock the 6 M4 screws.



Install the battery, and put on the battery cover and bottom deco cover to complete the assembly.





▲ Attention

Insert the battery into the compartment according to the orientation indicated on the battery



11 Check the thumb turn, mechanical keys, and all components to ensure they are securely connected.



3 Get to know your lock

This packing list is for reference only. Please refer to the actual packing items.

Exterior assembly



| 1 | Palm vein | | | |
|----|------------------------------|--|--|--|
| 2 | Video module | | | |
| 3 | Lock status indicator | | | |
| 4 | Doorbell | | | |
| 5 | Keypad | | | |
| 6 | Key tag scanner | | | |
| 7 | Mute button | | | |
| 8 | Lock button | | | |
| 9 | Fingerprint recognition area | | | |
| 10 | Keyway hole | | | |
| 1 | Charging port | | | |
| 12 | 1 Low battery indicator | | | |

Inside escutcheon



| 1 | Display |
|---|---------------------|
| 2 | Li-polymer battery |
| 3 | RES button |
| 4 | [OPEN/CLOSE] button |
| 5 | Thumb turn |

4 Settings

Instructions before setting

The system modes include the general mode and dual verification mode.

| General mode | Door can be opened using any enrolled access method | | |
|------------------------|--|--|--|
| Dual verification mode | Door can be opened using any two combinations offingerprint, PIN code, key tag, or palm vein. | | |

♦ User code

You can delete a user's information by the user number without having to delete everything. You can record the user information in the following table for easy management and future reference.

| No. | Name | Fingerprint | PIN code | Key tag | Palm vein |
|-----|------|-------------|----------|---------|-----------|
| 00 | | | | | |
| 01 | | | | | |
| 02 | | | | | |
| 03 | | | | | |
| 04 | | | | | |
| 05 | | | | | |
| 06 | | | | | |
| 07 | | | | | |
| 08 | | | | | |
| 09 | | | | | |

Icon annotation



▲ Attention

1. When navigating the menu, to return to the previous menu, press the [*] key.

2. The default PIN code is 12345678.

3. Capacity:1 master PIN code, 100 fingerprints (including 1 master fingerprint), 20 user PIN codes, 100 key tags, and 50 palm vein.

Master mode



After illuminating the keypad, without inputting any other numbers, press the [*] key twice, then enter the master PIN code, and press [#] to confirm to enter master mode.

Attention

If the master PIN code is set to the default PIN code, you must change the master PIN code in master mode before proceeding with other operations.

Master fingerprint



After illuminating the keypad, without entering any other numbers, press the [*] key twice. Then, place the enrolled finger on the fingerprint sensor to enter master mode.

▲ Attention

1. The door lock does not have a master fingerprint by default. Please enroll a master fingerprint before use.

2.Do not enroll the master fingerprint to be the same as any user fingerprint.

Settings

Add a user PIN code



Press the [*] key twice, enter the master PIN code, and then press the [#] key to confirm.

1 1

Press [1] to enter settings, then press [1] again to add a user. The door lock will automatically detect and add PIN codes, fingerprints, and key tags. Users can simply add the desired access method.



Add a PIN code: Enter a new user PIN code, press [#] to confirm, then re-enter the PIN code and press [#] again. After the successful addition prompt, press [*] to return to the previous menu until exiting master mode.

Add a fingerprint: Place your finger on the fingerprint scanner. When prompted to "Please remove your finger and try again," lift and then re-place your finger on the scanner. Repeat this process several times. After hearing the successful addition prompt, press the [*] key to return to the previous menu until exiting master mode.

Add a key tag: Enroll a new key tag. After the successful addition prompt, press the [*] key to return to the previous menu until exiting master mode.

Add a one-time PIN code



Press the [*] key twice, enter the master PIN code, and then press the [#] key to confirm.



Press [1] to enter settings, then press [2] to add a one-time code.



Enter a 6-12 digit one-time code and press the [#] key to confirm. Re-enter the code and press the [#] key to confirm. After the voice prompts successful addition, press the [*] key to return to the previous menu until exiting master mode.

Add a palm vein



Press the [*] key twice, enter the master PIN code, and then press the [#] key to confirm.



Press [1] to enter settings, then press [3] to add a palm vein.



Straighten the palm of your hand, palm is facing the palm vein recognition area, 10 to 20 centimeters away from the door lock for entry. After the voice prompt for successful entry, press [*] to return to the upper menu until you exit the management mode.

▲ Attention

The palm of the hand should be facing the palm vein recognition area when recording, the angle of palm deflection is less than 25°, and the angle of rotation is less than 90°.

Add or modify the master fingerprint





Press the [*] key twice, enter the master PIN code, and then press the [#] key to confirm.



Press [1] to enter settings, then press [4] to enter the option for adding or modifying the master fingerprint.



No master fingerprint set : Input a new user fingerprint, which will automatically become the master fingerprint. After hearing the successful addition prompt, press the [*] key to return to the previous menu until exiting master mode. Master fingerprint already set : Input a new user fingerprint, which will replace the existing master fingerprint. After hearing the successful addition prompt, press the [*] key to return to the previous menu until exiting master mode.

Modify the master PIN code



Press the [*] key twice, enter the master PIN code, and then press the [#] key to confirm.



Press [1] to enter settings, then press [5] to modify the master PIN code.



Enter a new master PIN code, press [#] to confirm, then re-enter the PIN code, and press [#] to confirm. After the successful setting prompt, press the [*] key to return to the previous menu until exiting master mode.

Delete a user



Press the [*] key twice, enter the master PIN code, and then press the [#] key to confirm.



Press [1] to enter settings, then press [6] to delete a user.



Select the access method to delete Press [1] to delete a PIN code; Press [2] to delete a fingerprint; Press [3] to delete a key tag. Press [4] to delete a palm vein. Press [5] to delete all users.Follow the voice prompts for specific deletion instructions. After successful deletion, press the [*] key to return to the previous menu until exiting master mode.

System settings





Press the [*] key twice, enter the master PIN code, and then press the [#] key to confirm.

2

Press [2] to enter system settings, then press [1] to enter language settings.



Select your preferred language: For Chinese, press [1]; For English, press [2]. After hearing the successful prompt, press [*] to return to the previous menu until exiting master mode.

Attention

The default language is English.

Volume settings





Press the [*] key twice, enter the master PIN code, and then press the [#] key to confirm.

2 2

Press [2] to enter system settings, then press [2] again to enter volume settings.



Select your preferred volume: For high volume, press [1]; For low volume, press [2]; For mute mode, press [3]. After setting the volume successfully, press [*] to return to the previous menu until exiting master mode.

Attention

The default volume is high.

ECO settings





Press the [*] key twice, enter the master PIN code, and then press the [#] key to confirm.

2 3

Press [2] to enter system settings, then press [3] to enter ECO settings.



Select [1] to enable or disable the video function;

Select [2] to enable or disable the palm vein function;

Select [3] to adjust sensor sensitivity. After the voice prompt confirms the settings, press [*] to exit master mode.

Attention

ECO mode is off by default.

Dual verification



#

Press the [*] key twice, enter the master PIN code, and then press the [#] key to confirm.



Press [2] to enter system settings, then press [4] to enable or disable dual verification. After successful setup, press [*] to return to the previous menu until exiting master mode.

▲ Attention

The default system mode is 'General Mode'.

Auto mode



Press the [*] key twice, enter the master PIN code, and then press the [#] key to confirm.

2 6

Press [2] to enter system settings, then press [6] to enable or disable auto mode.

▲ Attention

1. Auto mode settings are disabled when the mortise includes a detection switch.

2. If a mechanical mortise without a detection switch is used, it defaults to manual mode, and users should then proceed to set it to auto mode.

3. After successfully setting to auto mode, you can adjust the latch bolt rebound duration based on the voice prompts, with the default rebound duration set to 3 seconds.

Network settings

Join a network



Press the [*] key twice, enter the master PIN code, and then press the [#] key to confirm.

4

Press [4] to enter network settings, after successful setup, the master mode will automatically exit.

Assembly settings

Door-swing settings





Press the [*] key twice, enter the master PIN code, and then press the [#] key to confirm.



Press [5] to enter assembly settings, then press [1] to enter door-swing settings. After successful setup, press [*] to return to the previous menu until exiting master mode.

Attention

1. The default latch bolt rebound duration is 300 milliseconds.

Torque settings



Press the [*] key twice, enter the master PIN code, and then press the [#] key to confirm.

5 2 *

Press [5] to enter assembly settings, select [2] to enter torque settings. After successful setup, press [*] to return to the previous menu until exiting master mode.

Latch bolt rebound duration



Press the [*] key twice, enter the master PIN code, and then press the [#] key to confirm.



Press [5] to enter assembly settings, then press [3] to set latch bolt rebound duration. After successful setup, press [*] to return to the previous menu until exiting master mode.

Attention

1. The default latch bolt rebound duration is 300 milliseconds.

2. The latch bolt rebound duration can be adjusted within the range of 200 to 500 milliseconds, with increments of 100 milliseconds per adjustment.

Network Connection

Download the official App

Please scan the QR code or go to the corresponding App Store to search and download "Philips Home Access".



Add door Lock to network

Scan QR code

Step1: Connect the door lock with power supply and find the QR codeunder the rear trim of the door lock.

Step2: Open the official App, tap [+] in the upper right corner of the APP homepage, and enter into the page for QR code scanning.

Step3: After scanning the QR code, please follow the prompts on the App to finish the network configuration.

Manually add

Step1: Open the official App, tap [+] in the upper right corner of the APP homepage, and choose to add the device manually.

Step2: Search the current door lock's model name from the manually-add-device page and enter into the network configuration page.

Step3: Follow the prompts on the App to finish the network configuration.

5 Get to use your lock

Outdoor/ indoor unlock

Outdoor unlock



① Touch to wake up the keypad, enter the pre-set PIN code, then press the [#] key to confirm.

② After the voice prompt "Door opened", push or pull the handle to open the door.



①Place the enrolled key tag properly on the key tag recognition area.

②After the voice prompt "Door opened", push or pull the handle to open the door.



①Place the finger with the preenrolled fingerprint correctly on the fingerprint scanner on the back of the handle.

②After the voice prompt "Door opened", push or pull the handle to open the door.



 $\textcircled{\sc 1}$ Place the palm vei with the preenrolled palm vein correctly on the palm vein recognition area.

②After the voice prompt "Door opened", push or pull the handle to open the door.

Indoor unlock





Outdoor/ indoor lock

After the door is closed, the main bolt will automatically extend to lock, accompanied by a voice prompt indicating that the door is closed.

Outdoor lock



If the automatic locking fails, press the lock button on the keypad after closing it.

Indoor lock

If the automatic locking fails, press the "CLOSE" button to manually lock the door after closing it.



Lever



To lock indoors, simply grip the handle and rotate it.

Lock-out mode



When the smart lock is locked, turn the thumb turn left or right to activate privacy mode (as shown in the left image). To deactivate privacy mode, turn the thumb turn to the middle position.

Mechanical key



① Take out the mechanical key from the packaging.



2 Remove the handle cover.



③ Insert the mechanical key into the keyway hole and rotate to unlock after inserting firmly.

Attention

1. Avoid using the mechanical key regularly. Only resort to it in emergencies such as drained battery, forgotten PIN code, or system malfunctions.

2. Store the mechanical key outside the home, ideally in the office, car, or a secure location, for easy access during emergencies.

6 Other features

Armed mode



Function:

Once the door lock is opened from the inside, it will trigger an alert.

How to use:

After locking the door, press [8] key to enter the armed mode.

Attention

1. Armed mode is only available for mortise locks equipped with a detection switch; mortise locks without a detection switch do not support this feature.

2. The armed mode does not affect unlocking from the outside.

Mute button



Function:

Activate mute mode by pressing the mute button to silence voice prompts during door unlock—great for quiet times to avoid disturbing others in the household.

How to use:

After locking the door, press [8] key to enter the armed mode.

Attention

1.Switching voice mode to mute mode: while the system is awake, press the "Mute" button for 2 seconds to enter mute mode. The voice prompt will say "Mute mode".

2.Switching mute mode to voice mode: while the system is awake, press the "Mute" button for 2 seconds to return to voice mode. The voice prompt will say "Voice mode".

Factory reset



Function:

Empty all user data and restore to factory default settings.

How to use:

Press the [RES] button twice with a sharp object to reset the lock, which will erase all user information.

Doorbell



Function:

The indoor speaker plays a dingdong sound, informing that someone is at the door.

How to use:

When the doorbell is pressed, the indoor chime will sound. At the same time, the door lock's camera will capture video of the visitor and send it to the linked app. Users can then remotely view their doorway in real time upon receiving the push notification on the app.

Attention

When the doorbell is pressed, the smile indicator will flash in blue.



Function:

The app's video viewing feature allows real-time monitoring of the doorstep and two-way communication.

How to use:

Once the door lock is connected to the app, you can use the video viewing feature to monitor the doorway in real-time and engage in two-way communication.

Display



Function:

When the doorbell is pressed, users can view their doorway via the indoor display.

How to use:

1. When the doorbell is pressed, the indoor display turns on. Pressing the button below the screen or opening the door from outside can turn off the display.

2. The display time-out duration and brightness can be set via the App.

Status indicator



Low battery indicator



Red:

when the door lock is awakened, it automatically checks the battery voltage. If the battery voltage is too low, the low battery indicator will illuminate. When unlocking, a voice prompt will remind you to replace the battery.

Armed mode indicator



System lock-out indicator



If there are five consecutive incorrect attempts within five minutes using fingerprint, PIN code, or key tag, the door lock will be locked for two minutes.

▲ Attention

Prompts will only appear upon touching to wake up the keypad or verifying access methods.

8 Troubleshooting

Alert types

Armed mode



Triggering:

when the door lock is in the armed mode, an alert will be triggered upon unlocking the lock from the inside.

Alert method:

continuous, repeated alert sound.

Off:

the alert ends upon successful verification of any access method.inside.

Low battery alert



Triggering:

when the system awakens, it will automatically check the battery voltage. If the battery voltage is low, an alert will be triggered, prompting you to replace the battery promptly.

Alert method:

a voice prompt "Low battery, please replace the battery" upon unlocking.

Off:

the alert will be off automatically.



Triggering1:

after the door gap is pried open, the assitant bolt will extend.

Alert method:

continuous, repeated alert sound. Off:

the alert will be off automatically or after

a successful verification of any access method.

Triggering2:

exterior assembly is pried open, and not properly aligned with the door.

Alert method:

continuous, repeated alert sound. Off:

the alert will automatically be off or upon successful verification of any access method from outside or unlocking from inside.

Latch abnormality alert



Triggering:

abnormal latch bolt operation resulting in unsuccessful locking or unlocking

Alert method:

continuous, repeated alert sound. Off:

the alert will be off automatically

Motion detection alert



Triggering1:

if suspicious individuals linger within the view of the main camera outside the door for a duration exceeding the preset value, it will activate a loitering alert.

Alert method:

the main camera will automatically capture video or images and send alert notifications to the app.

Off:

motion detection function is off by default. To use this function, you can enable or disable it in the app.

Attention

1. The motion detection alert is disabled by default. To enable this feature, please log in to the app, bind your door lock model, and go to the app's settings. Then, locate the "Loitering Alert" option and enable it.

2. Frequent use of video-related features drains the battery faster. To reduce battery consumption, it's recommended to set the motion detection sensitivity to the lowest level, reducing detection frequency.

How to apply external power source



When the battery voltage is low and you're unable to unlock the door from outside, you can use a 5V power bank as an emergency power source for the door lock. After unlocking the door, please replace the battery promptly. In case of system malfunction and inability to open the door from outside, you can also use a 5V power bank toprovide power to the door lock. Upon powering up, the system will automatically restart.

Battery replacement



The power source for the door lock is a 5000mAh lithium

1. press and hold the lower screen location area;

Push up to remove the screen assembly;
Remove the battery to replace.

Attention

Please utilize the provided battery with the product, as using alternatives may impact the functionality of the device.

Battery charging





Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of Shenzhen Conex Intelligent Technology Co., Ltd., and Shenzhen Conex Intelligent Technology Co., Ltd. is the warrantor concerning this product.