 


PHILIPS

Shaver

i9000

Prestige Ultra

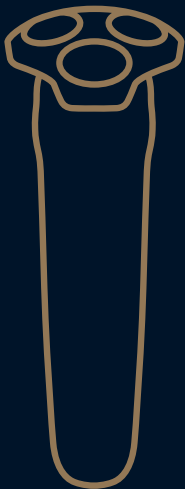



5



6



7



8



9



10



11



12



14



15



17



 
18

 
 


19



20

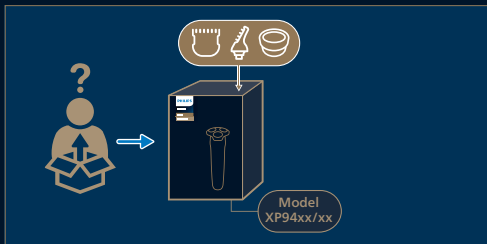

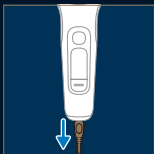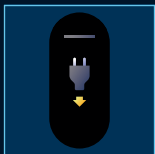




电量不足

电量耗尽

 
1

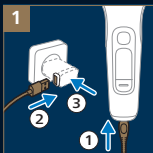

2



 3




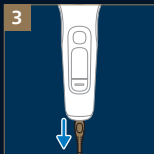




4




        
1x

 
 
 


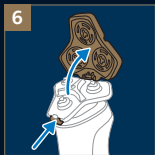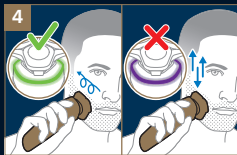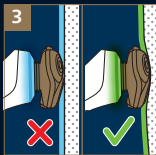 
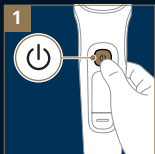 


 
 
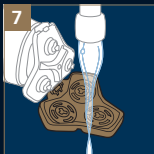 
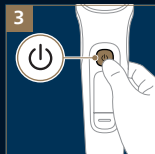 


 
 
 
 
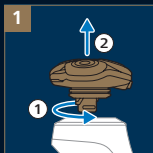 


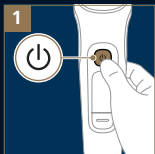 


 
 
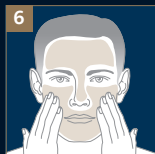 
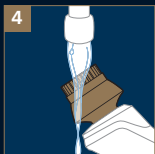 
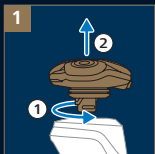 


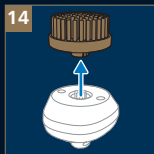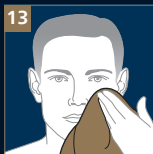

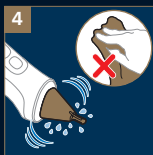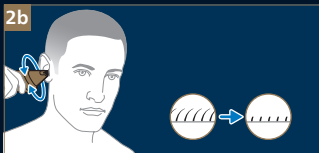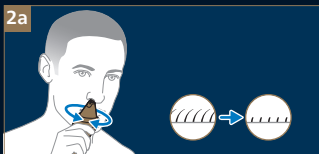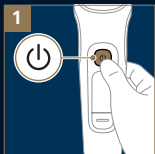

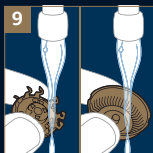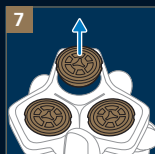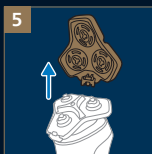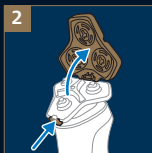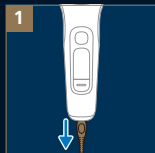

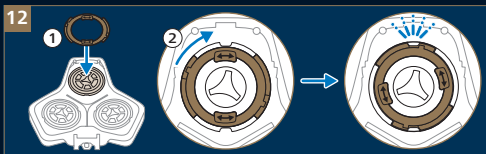

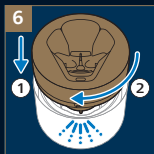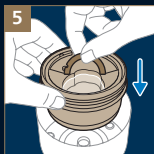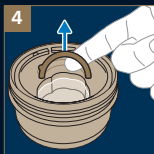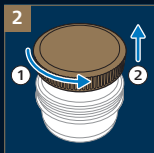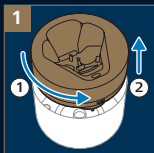



清洁须刀

1



 
2

 
 
 
 
 
 


 
 
 
 
 
 
 
 
3



4

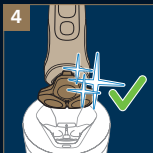

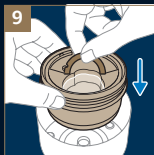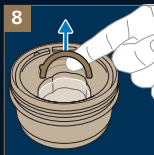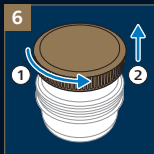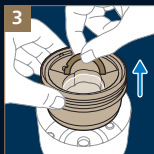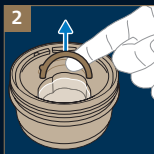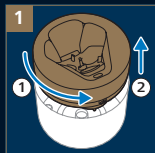

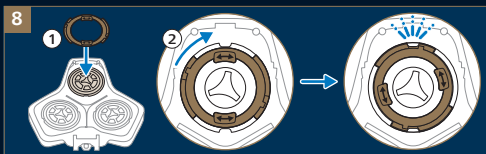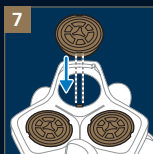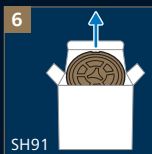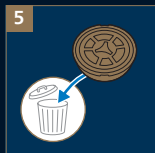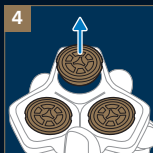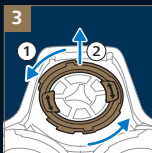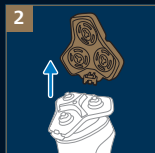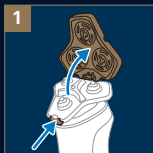



© 2025 Koninklijke Philips N.V.

All rights reserved

保留所有权利

3000.129.4696.2 (27/03/2025)



>75% recycled paper

>75% 循环再造纸



© 2024 Koninklijke Philips N.V.
All rights reserved
保留所有权利
3000.144.4780.1 (30/09/2024)
> 75% 循环再造纸
保留备用

1



2



3



4



English

Important safety information

Only use the product for its intended household purpose. Read this important information carefully (Fig. 1) before you use the product and its batteries and accessories, and save it for future reference. Misuse can lead to hazards or serious injuries. The accessories supplied may vary for different products.

Warning

- To charge the product, only use a certified safety extra low voltage (SELV) supply unit that complies with China GB standard GB4706.1-2005, 5 V $\overline{\text{---}}$, ≥ 1 A, IPX4, in order to guarantee electrical safety. Note: the supply unit of models XP9401 and XP9405 must be a safety extra low voltage (SELV) supply unit that complies with China GB standard GB4706.1-2005, 5 V $\overline{\text{---}}$, ≥ 1.5 A, IPX4. We advise using Philips HQ87, or an equivalent certified supply unit. If you still need help, please contact the Philips Consumer Care Center. Using a non-certified supply unit may cause hazards or serious injuries.
- Keep the USB cable, the USB supply unit and the charging stand (if provided) dry (Fig. 2).
- This symbol means: Forbidden to clean under a running tap (Fig. 2).
- This shaver is waterproof (Fig. 3). It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can therefore only be used without cord.
- This symbol means: Suitable to be used in the shower (Fig. 3). It is allowed to use this appliance close to a bathtub, shower or other containers filled with water.
- Do not modify the supply unit.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Unplug the appliance before cleaning it with water.
- Do not use a damaged appliance. Replace damaged parts with new Philips parts.
- Only use cold or lukewarm water to clean the appliance.
- Because of hygiene, only one person should use the appliance.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids to clean the appliance.
- Always place the cleaning system on a stable, level and horizontal surface to prevent leakage.
- Always make sure the cartridge compartment is closed before you use the cleaning system.
- Water may drip from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.
- Do not use the product on damaged skin or skin affected

by disease or severe skin irritation without consulting your doctor. • Do not use the cleansing brush if you take steroid-based medication. • Remove piercings, jewelry, glasses etc. before using the cleansing brush. • Be careful when handling your smartphone near water and in moist environments. • The radio waves of Bluetooth-enabled products may impair the operation of pacemakers and other medical devices. Consult your physician for advice and keep the product at least 20 cm away. • Only use original Philips accessories or consumables. • Charge, use and store the product at a temperature between 10 °C and 35 °C. • Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures. • If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact Philips. • Do not place products and their batteries in microwave ovens or on induction cookers. • Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries. • If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care.

Philips Quick Clean Pod Cartridge fluid

- Keep out of reach of children.
- Do not swallow.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Support

For all product support, please visit

www.philips.com/support.

Parts that are subject to normal wear (such as shaving heads and cutting units) are not covered by the international warranty.

Recycling

- This symbol means that electrical products and batteries shall not be disposed of with normal household waste (Fig. 4).
- Follow your country's rules for the separate collection of electrical products and batteries.

Removal of built-in rechargeable battery

The built-in rechargeable battery must only be removed by a qualified professional when the appliance is discarded. Before removing the battery, make sure that the appliance is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the appliance and when you dispose of the rechargeable battery.

When you handle batteries, make sure that your hands, the product and the batteries are dry.

To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard them.

- 1 Check if there are screws in the housing of the appliance. If so, remove them.
- 2 Remove any additional screws, panels or parts of the appliance until you see the printed circuit board with the rechargeable battery.
- 3 Remove the rechargeable battery.

Trademarks

Apple, the Apple logo, iPad, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Android is a trademark of Google Inc. Google Play and the Google Play logo are trademarks of Google Inc.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Koninklijke Philips N.V. is under license.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit **www.philips.com/support** for a list of frequently asked questions or contact the Consumer Care Center in your country.

Shaver

Problem	Possible cause	Solution
I cannot connect the shaver.	You have not downloaded the app.	Download the app.
	Your shaver and smartphone are not paired yet.	Pair your shaver and smartphone following the instructions in the app.
	The first pairing attempt failed.	Unpair your shaver and smartphone and try pairing them again.
	Your smartphone cannot find your shaver.	Make sure your smartphone is equipped with Bluetooth 4.1 or higher.
		Make sure Bluetooth is activated on your shaver and smartphone.

Problem	Possible cause	Solution
		Make sure that your smartphone is within one meter of your shaver to enable a Bluetooth connection.
		Make sure your shaver is charged.
I want to use the shaver without the app.		You do not have to connect your shaver with your smartphone before each shave. To get personalized shaving tips, just make sure that you connect it at least once every 20 shaves to synchronize your shave data.
The appliance does not work when I press the on/off button.	The appliance is still attached to the wall socket. For safety reasons, the appliance can only be used without cord.	Unplug the appliance and press the on/off button to switch on the appliance.
	The rechargeable battery is empty.	Recharge the battery.
	The travel lock is activated.	Press the on/off button for 3 seconds to deactivate the travel lock.
	The shaving unit is soiled or damaged to such an extent that the motor cannot run.	Clean the shaving heads thoroughly or replace them.
The appliance does not shave as well as it used to.	The shaving heads are damaged or worn.	Replace the shaving heads.
	Hairs or dirt obstruct the shaving heads.	Clean the shaving heads thoroughly.
Water is leaking from the bottom of the appliance.	During cleaning, water may collect between the inner body and the outer shell of the appliance.	This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the appliance.

Philips Quick Clean Pod

Problem	Possible cause	Solution
My shaver isn't clean after using the Philips Quick Clean Pod.	You removed the shaver before the cleaning program was finished.	Leave the shaver in the Philips Quick Clean Pod for the full cleaning program. Each cleaning program takes approximately 1 minute. The cleaning icon goes out when the cleaning program is finished.
	The Philips Quick Clean Pod Cartridge needs to be replaced.	Replace the Philips Quick Clean Pod Cartridge.
	The Philips Quick Clean Pod is tilted.	Place the Philips Quick Clean Pod on a flat surface.
My Philips Quick Clean Pod does not switch on.	The Philips Quick Clean Pod is powered by the motor of the shaver.	Place the shaver into the Philips Quick Clean Pod. Switch on the shaver.
	The shaver is connected to the wall socket.	Disconnect the shaver from the supply unit.
	The shaver battery is empty.	Charge the shaver before using the Philips Quick Clean Pod.
My Philips Quick Clean Pod is overflowing.	You regularly use the Philips Quick Clean Pod after rinsing the shaver but not shaking off excess water.	Shake off excess water after rinsing the shaving heads each time before putting the shaver into the Philips Quick Clean Pod.
	You shaved with shaving gel or foam and did not rinse the shaver before using the Philips Quick Clean Pod.	Rinse the shaving heads thoroughly before using the Philips Quick Clean Pod.

重要安全信息

仅可将本产品用于预期家用用途。使用本产品及其电池和附件之前，请仔细阅读本重要信息 (图 1)，并妥善保管以供日后参考。使用不当可能会导致危害或严重伤害。随附的附件可能因产品而异。

警告

- 为产品充电时，请务必使用符合 GB4706.1-2005 标准的 5V $\overline{\text{—}}$ 、 $\geq 1\text{A}$ 、IPX4 安全超低电压 (SELV) 电源适配器，以确保电气安全。注：关于型号 XP9401 和 XP9405，其电源适配器应符合 GB4706.1-2005 标准的 5V $\overline{\text{—}}$ 、 $\geq 1.5\text{A}$ 、IPX4 安全超低电压 (SELV)。我们建议使用飞利浦电源适配器 HQ87 或同等且经认证的电源适配器。若您需要帮助，可联系飞利浦客户服务中心。使用未经认证的电源适配器可能会导致危害或严重伤害。
- 保持 USB 线缆、USB 电源部件和充电座 (如有提供) 干燥 (图 2)。
- 警告符号注释：禁止用在打开的水龙头下进行清洗 (图 2)。
- 该剃须刀具有防水性能 (图 3)。适合在沐浴或淋浴时使用，也可以放在水龙头下清洗。出于安全原因，该剃须刀在使用时不能连接电线。
- 符号注释：适合于在洗澡或淋浴时使用 (图 3)。允许在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本器具。
- 请勿改装电源部件。
- 本产品也可以由 8 岁或以上年龄的儿童以及肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人士使用，但前提是有人对他们使用本产品进行监督或指导，以确保他们安全使用，并且让他们明白相关的危害。切勿让儿童玩弄本产品。不要让儿童在无人监督的情况下对本产品进行清洁和保养。
- 用水清洁产品前，请先将电源插头拔掉。
- 请勿使用已经损坏的产品。请用新的飞利浦部件更换损坏的部件。
- 请仅使用冷水或温水清洁产品。
- 出于卫生考虑，仅能由一个人使用本产品。
- 切勿使用压缩气体、钢丝绒、研磨性清洁剂或腐蚀性液体清洁设备。
- 清洁系统必须放在稳定、平坦的水平表面上，以防漏液。
- 使用清洁系统前，请始终确保滤芯仓已关闭。
- 冲洗剃须刀时，水可能从产品底部的插口漏出。这是正常现象，而且没有危险，因为所有电子元件都封闭在剃须刀内部的密封电源部件中。
- 请勿在包含电动空气清新器的墙壁插座上或其周围使用电源部件，以免电源部件受到不可修复的损坏。
- 请勿在未咨询医生的情况下，在受损伤的皮肤或受到疾病或严重过敏影响的皮肤上使用本产品。
- 如果您服用了类固醇类药物，请勿使用洁面刷。
- 使用洁面刷前，请摘下穿环、首饰、眼镜等配饰。
- 在靠近水边或在潮湿的环境中使用智能手机时请多加留意。
- 带有蓝牙功能产品的无线电波可能会影响心脏起搏器及其他医疗设备的工作。请咨询您的医生，并将本产品保持至少 20 厘米的距离。
- 请仅使用飞利浦原装附件或消耗品。
- 充电、使用和存放本产品的温度应介于 10°C 至 35°C 之间。
- 请将产品和电池远离火源，切勿将其暴露于阳光直射处或高温下。
- 如果产品异常发热或发出异味、变色或充电时间比平时长，请停止使用并停止为其充电，并联系 Philips。
- 切勿将产品及其电池放置在微波炉中或电磁炉上。
- 为防止电池发热或释放有毒有害物质，切勿打开、改装、刺穿、损坏或拆卸产品或电池。切勿使电池短路、过度充电或反向充电。
- 如果电池损坏或出现泄漏，请避免与皮肤或眼睛接触。如果不慎接触，请立即用清水冲洗并就医。

飞利浦须刀清洁中心滤芯液

- 请置于儿童接触不到的地方。
- 切勿吞食。

电磁场 (EMF)

本 Philips 产品符合所有有关暴露于电磁场的适用标准和法规。

支持

有关所有产品支持，请访问

www.philips.com/support.

正常使用会出现磨损的部件（例如剃须刀头和修剪部件）不在国际保修条款的涵盖范围之内。

回收

· 此符号表示电器产品和电池不能与一般的生活垃圾一同弃置 (图 4)。

· 请遵守您所在国家/地区有关分类回收电器产品和电池的规定。

取出内置充电电池

在废弃器具前，必须将电池从器具中取出。在取出电池时，器具必须要断电。电池应安全地处置。

当您使用工具打开产品时以及在您弃置充电电池时，请采取必要的安全保护措施。

处理电池时，请确保您的双手、产品和电池都是干燥的。

为避免电池拆卸后发生意外短路，切勿让电池端子接触金属物体（例如硬币、发夹、戒指）。切勿用铝箔包裹电池。在丢弃之前，请用胶带将电池端子粘住或将电池放在塑料袋中。

- 1 检查产品的外壳中是否有螺丝。如果有，请将其拆下。
- 2 请拆下产品的其他螺丝、面板或部件，直到看见带有充电电池的印刷电路板。
- 3 卸下充电电池。

- 2 请拆下产品的其他螺丝、面板或部件，直到看见带有充电电池的印刷电路板。

- 3 卸下充电电池。

商标

Apple、Apple 徽标、iPad 和 iPhone 是 Apple Inc. 在美国和其他国家/地区注册的商标。App Store 是 Apple Inc. 的服务商标。

Android 是 Google Inc. 的商标。
Google Play 和 Google Play 徽标是
Google Inc. 的商标。

Bluetooth® 文字标志和徽标是归 Bluetooth SIG, Inc. 所有的注册商标, Philips Personal Care 对此类标志的任何使用均已获得许可。

产品中有害物质的名称及含量						
部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCB's 集成电路板	X	○	○	○	○	○
Electrical contact pins 电接触片	X	○	○	○	○	○
Power plug 电源插头	X	○	○	○	○	○
Internal metal parts 内部金属件	X	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。

○: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。
X: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

· 该表格中所显示的“有害物质”在产品正常使用情况下不会对人身和环境产生任何伤害。
· 该表格中所显示的“有害物质”及其存在的部件向消费者和回收处理从业者提供相关物质的存在信息，有助于产品废弃时的妥善处理。

PHILIPS 产品：飞利浦电动剃须刀 型号：X9000 额定电压：3.6V  额定输入功率：1.7W 充电电压/电流：5V /1A 生产日期：请见产品本体 产地：中国广东珠海	IPX7
本产品的型号核准代码标识在产品标签上	
珠海经济特区飞利浦家庭电器有限公司 珠海市金湾区三灶镇定湾二路365号 全国顾客服务热线：4008 800 008 本产品根据国标 GB4706.1-2005， GB4706.9-2008， 工信部无【2021】129号制造 不包含电源适配器。使用者必须使用符合 GB4706.1-2005标准的5V 、≥1A、 IPX4电源适配器，以确保电气安全。	
PHILIPS 产品：飞利浦电动剃须刀 型号：X9001 额定电压：3.6V  额定输入功率：1.7W 充电电压/电流：5V /1A 生产日期：请见产品本体 产地：中国广东珠海	IPX7
本产品的型号核准代码标识在产品标签上	
珠海经济特区飞利浦家庭电器有限公司 珠海市金湾区三灶镇定湾二路365号 全国顾客服务热线：4008 800 008 本产品根据国标 GB4706.1-2005， GB4706.9-2008， 工信部无【2021】129号制造 不包含电源适配器。使用者必须使用符合 GB4706.1-2005标准的5V 、≥1A、 IPX4电源适配器，以确保电气安全。	

PHILIPS

产品：飞利浦电动剃须刀
型号：X9002
额定电压：3.6V
额定输入功率：1.7W
充电电压/电流：5V /1A
生产日期：请见产品本体
产地：中国广东珠海

IPX7

本产品的型号核准代码标识在产品标牌上

珠海经济特区飞利浦家庭电器有限公司
珠海市金湾区三灶镇定湾二路365号
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005,
GB4706.9-2008,
工信部无【2021】129号制造

不包含电源适配器。使用者必须使用符合
GB4706.1-2005标准的5V、≥1A、
IPX4电源适配器，以确保电气安全。

PHILIPS

产品：飞利浦电动剃须刀
型号：XP9200
额定电压：3.6V
额定输入功率：2.85W
充电电压/电流：5V /1A
生产日期：请见产品本体
产地：中国广东珠海

IPX7

本产品的型号核准代码标识在产品标牌上

珠海经济特区飞利浦家庭电器有限公司
珠海市金湾区三灶镇定湾二路365号
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005,
GB4706.9-2008,
工信部无【2021】129号制造

不包含电源适配器。使用者必须使用符合
GB4706.1-2005标准的5V、≥1A、
IPX4电源适配器，以确保电气安全。

PHILIPS

产品：飞利浦电动剃须刀
型号：XP9201
额定电压：3.6V
额定输入功率：2.85W
充电电压/电流：5V /1A
生产日期：请见产品本体
产地：中国广东珠海

IPX7

本产品的型号核准代码标识在产品标牌上

珠海经济特区飞利浦家庭电器有限公司
珠海市金湾区三灶镇定湾二路365号
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005,
GB4706.9-2008,
工信部无【2021】129号制造

不包含电源适配器。使用者必须使用符合
GB4706.1-2005标准的5V、≥1A、
IPX4电源适配器，以确保电气安全。

PHILIPS

产品：飞利浦电动剃须刀
型号：XP9202
额定电压：3.6V
额定输入功率：2.85W
充电电压/电流：5V /1A
生产日期：请见产品本体
产地：中国广东珠海

IPX7

本产品的型号核准代码标识在产品标牌上

珠海经济特区飞利浦家庭电器有限公司
珠海市金湾区三灶镇定湾二路365号
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005,
GB4706.9-2008,
工信部无【2021】129号制造

不包含电源适配器。使用者必须使用符合
GB4706.1-2005标准的5V、≥1A、
IPX4电源适配器，以确保电气安全。

PHILIPS

产品：飞利浦电动剃须刀
型号：XP9204
额定电压：3.6V
额定输入功率：2.85W
充电电压/电流：5V /1A
生产日期：请见产品本体
产地：荷兰

IPX7

本产品的型号核准代码标识在产品标牌上

飞利浦（中国）投资有限公司
上海市静安区灵石路718号A1幢
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005,
GB4706.9-2008,
工信部无【2021】129号制造

不包含电源适配器。使用者必须使用符合
GB4706.1-2005标准的5V、≥1A、
IPX4电源适配器，以确保电气安全。

PHILIPS

产品：飞利浦电动剃须刀
型号：XP9209
额定电压：3.6V
额定输入功率：2.85W
充电电压/电流：5V /1A
生产日期：请见产品本体
产地：中国广东珠海

IPX7

本产品的型号核准代码标识在产品标牌上

珠海经济特区飞利浦家庭电器有限公司
珠海市金湾区三灶镇定湾二路365号
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005,
GB4706.9-2008,
工信部无【2021】129号制造

不包含电源适配器。使用者必须使用符合
GB4706.1-2005标准的5V、≥1A、
IPX4电源适配器，以确保电气安全。

PHILIPS

产品：飞利浦电动剃须刀
型号：XP9210 IPX7
额定电压：3.6V 
额定输入功率：2.85W
充电电压/电流：5V /1A
生产日期：请见产品本体
产地：中国广东珠海

本产品的型号核准代码标识在产品标牌上

珠海经济特区飞利浦家庭电器有限公司
珠海市金湾区三灶镇定湾二路365号
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005,
GB4706.9-2008,
工信部无【2021】129号制造

不包含电源适配器。使用者必须使用符合
GB4706.1-2005标准的5V、≥1A、
IPX4电源适配器，以确保电气安全。

PHILIPS

产品：飞利浦电动剃须刀
型号：XP9212 IPX7
额定电压：3.6V 
额定输入功率：2.85W
充电电压/电流：5V /1A
生产日期：请见产品本体
产地：中国广东珠海

本产品的型号核准代码标识在产品标牌上

珠海经济特区飞利浦家庭电器有限公司
珠海市金湾区三灶镇定湾二路365号
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005,
GB4706.9-2008,
工信部无【2021】129号制造

不包含电源适配器。使用者必须使用符合
GB4706.1-2005标准的5V、≥1A、
IPX4电源适配器，以确保电气安全。

PHILIPS

产品：飞利浦电动剃须刀
型号：XP9400
额定电压：3.6V 
额定输入功率：2.85W
充电电压/电流：5V /1A
生产日期：请见产品本体
产地：荷兰

本产品的型号核准代码标识在产品标牌上

飞利浦（中国）投资有限公司
上海市静安区灵石路718号A1幢
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005,
GB4706.9-2008，工信部无【2021】
129号制造

不包含电源适配器。使用者必须使用符合
GB4706.1-2005标准的5V、≥1A、
IPX4电源适配器，以确保电气安全。

PHILIPS

产品：飞利浦电动剃须刀
型号：XP9401
额定电压：3.6V 
额定输入功率：2.85W
充电电压/电流：5V /1.5A
生产日期：请见产品本体
产地：荷兰
本产品包含以下部件：
剃须刀数量：1件(IPX7)
紫外线盒数量：1件(IPX4)

本产品的型号核准代码标识在产品标牌上

飞利浦（中国）投资有限公司
上海市静安区灵石路718号A1幢
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005,
GB4706.9-2008，工信部无【2021】
129号制造

不包含电源适配器。使用者必须使用符合
GB4706.1-2005标准的5V、≥1.5A、
IPX4电源适配器，以确保电气安全。

PHILIPS

产品：飞利浦电动剃须刀
型号：XP9402
额定电压：3.6V 
额定输入功率：2.85W
充电电压/电流：5V /1A
生产日期：请见产品本体
产地：荷兰

本产品的型号核准代码标识在产品标牌上

飞利浦（中国）投资有限公司
上海市静安区灵石路718号A1幢
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005,
GB4706.9-2008，工信部无【2021】
129号制造

不包含电源适配器。使用者必须使用符合
GB4706.1-2005标准的5V、≥1A、
IPX4电源适配器，以确保电气安全。

PHILIPS

产品：飞利浦电动剃须刀
型号：XP9403
额定电压：3.6V 
额定输入功率：2.85W
充电电压/电流：5V /1A
生产日期：请见产品本体
产地：荷兰

本产品的型号核准代码标识在产品标牌上

飞利浦（中国）投资有限公司
上海市静安区灵石路718号A1幢
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005,
GB4706.9-2008，工信部无【2021】
129号制造

不包含电源适配器。使用者必须使用符合
GB4706.1-2005标准的5V、≥1A、
IPX4电源适配器，以确保电气安全。


问题	可能的原因	解决方法
	旅行锁功能处于激活状态。	长按开/关按钮3秒解除旅行锁功能。
	剃须刀头部件被污染或损坏，导致马达无法运行。	彻底清洁剃须刀头或将其更换。
产品的剃须效果不如以前好。	剃须刀头已损坏或磨损。	更换剃须刀头。
	毛发或污垢堵塞了剃须刀头。	彻底清洁剃须刀头。
水从产品底部漏出。	在清洁过程中，水可能聚集在产品的机身内部与外壳之间。	这是正常现象，而且没有危险，因为所有电子元件都封闭在产品内部的密封电源部件中。

飞利浦须刀清洁中心

问题	可能的原因	解决方法
使用飞利浦须刀清洁中心后，剃须刀依旧不干净。	您在清洁程序结束前取出剃须刀。	请将剃须刀放在飞利浦须刀清洁中心中以完成整个清洁程序。每个清洁程序大约需要1分钟。清洁程序结束后，清洁图标熄灭。
	需要更换飞利浦须刀清洁中心滤芯。	更换飞利浦须刀清洁中心滤芯。
	飞利浦须刀清洁中心倾斜。	将飞利浦须刀清洁中心置于平面上。
飞利浦须刀清洁中心无法启动。	飞利浦须刀清洁中心由剃须刀的马达驱动。	将剃须刀放入飞利浦须刀清洁中心中。打开剃须刀。
	剃须刀连接了电源插座。	断开剃须刀与电源部件的连接。
	剃须刀电池电量耗尽。	在使用飞利浦须刀清洁中心前，请给剃须刀充电。
飞利浦须刀清洁中心溢水。	经常在冲洗剃须刀后但未甩掉多余水分时使用飞利浦须刀清洁中心。	每次冲洗剃须刀头后都要甩掉多余的水分，然后再将剃须刀放入飞利浦须刀清洁中心中。
	您在使用剃须啫喱或剃须泡沫剃须后，并未冲洗剃须刀，就使用飞利浦须刀清洁中心。	使用飞利浦须刀清洁中心之前，请彻底冲洗剃须刀头。

PHILIPS

 紫外线
便携充电盒

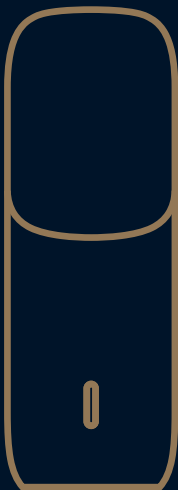



4



 
 
5

 
 
 


 
 
 
 
 
6

 


7

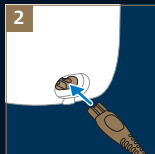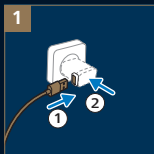

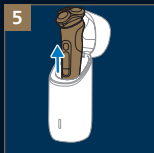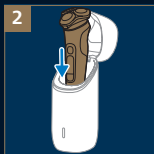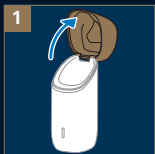

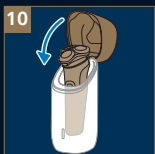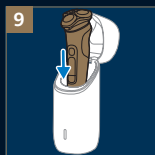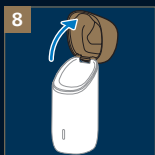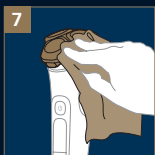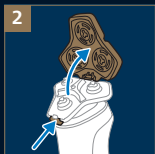

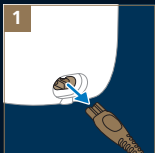



© 2024 Koninklijke Philips N.V.
All rights reserved
保留所有权利
3000.135.7818.1 (11/12/2024)



>75% recycled paper
>75% 循环再造纸



English

Important safety information

Only use the product for its intended household purpose. Read this important information carefully (Fig. 1) before you use the product and its batteries and accessories, and save it for future reference. Misuse can lead to hazards or serious injuries. The accessories supplied may vary for different products.

Warning

• Only use a certified safety extra low voltage (SELV) supply unit that complies with China GB standard GB4706.1-2005, 5 V $\overline{\text{---}}$, $\geq 1.5\text{ A}$, IPX4 in order to guarantee electrical safety. We advise using Philips HQ87, or an equivalent certified supply unit. If you still need help, please contact the Philips Consumer Care Center. Using a non-certified supply unit may cause hazards or serious injuries. • Keep the product, the USB cable and the USB supply unit dry (Fig. 2). • Symbol explanation: Do not rinse this appliance under the tap (Fig. 2). • This appliance is not washable. Never immerse the appliance in water and do not rinse it under the tap (Fig. 2). • Do not modify the supply unit. • This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. • Do not use a damaged appliance. Replace damaged parts with new Philips parts. • Because of hygiene, only one person should use the appliance. • Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids to clean the appliance. • Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit. • The cover of this product is equipped with an interlock to reduce the risk of excessive ultraviolet radiation. Do not tamper with or try to disable the interlock. • Stop using the product if the UV light remains on when the product is open. • The UV light may cause eye and skin irritation. Do not expose eyes and skin to UV light. • This product contains a magnet. If you have a pacemaker or other implanted device, consult your doctor or the manufacturer of the implanted device before you use this product. • Only use original Philips accessories or consumables. • Charge, use and store the product at a temperature between

10 °C and 35 °C. • Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures. • If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact Philips. • Do not place products and their batteries in microwave ovens or on induction cookers. • Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries. • If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Support

For all product support, please visit www.philips.com/support.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Problem	Possible cause	Solution
The UV power charger does not charge my shaver.	The rechargeable battery of the UV power charger is empty.	Recharge the battery of the UV power charger.
The UV program does not start.	The rechargeable battery of the UV power charger is empty.	Recharge the battery of the UV power charger.
	The cover of the UV power charger is not closed properly.	Place the shaver in the UV power charger properly. Make sure that the shaving unit is closed and close the cover of the UV power charger.

Recycling

• This symbol means that electrical products and batteries shall not be disposed of with normal household waste (Fig. 3). • Follow your country's rules for the separate collection of electrical products and batteries.

Removal of built-in rechargeable battery

The built-in rechargeable battery must only be removed by a qualified professional when the appliance is discarded. Before removing the battery, make sure that the appliance is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the appliance and when you dispose of the rechargeable battery.

When you handle batteries, make sure that your hands, the product and the batteries are dry.

To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard them.

- 1 Check if there are screws in the housing of the appliance. If so, remove them.
- 2 Remove any additional screws, panels or parts of the appliance until you see the printed circuit board with the rechargeable battery.
- 3 Remove the rechargeable battery.

简体中文

重要安全信息

仅可将本产品用于预期家用用途。使用本产品及其电池和附件之前，请仔细阅读本重要信息 (图 1)，并妥善保管以供日后参考。使用不当可能会导致危害或严重伤害。 随附的附件可能因产品而异。

警告

· 请必须使用符合GB4706.1-2005标准的5V $\overline{\text{---}}$ 、 $\geq 1.5\text{ A}$ 、IPX4、安全超电压 (SELV)电源适配器，以确保电气安全。我们建议使用飞利浦电源适配器HQ87或同等且经认证的电源适配器。若您需要帮助,可联系 飞利浦客户服务中心。使用未经认证的电源适配器可能会导致危害或严重伤害。· 保持产品、USB 线缆和 USB 电源部件干燥 (图 2)。· 警告符号注释: 禁止用在打开的水龙头下进行清洗 (图 2)。· 本产



© 2024 Koninklijke Philips N.V.
All rights reserved
保留所有权利
3000.144.4784.1 (13/12/2024)



品不可水洗。切勿将本产品浸入水中，也不要在水龙头下冲洗 (图 2)。· 请勿改装电源部件。· 本产品也可以由 8 岁或以上年龄的儿童以及肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人士使用，但前提是有人对他们使用本产品进行监督或指导，以确保他们安全使用，并且让他们明白相关的危害。切勿让儿童玩弄本产品。不要让儿童在无

人监督的情况下对本产品进行清洁和保养。· 请勿使用已经损坏的产品。请用新的飞利浦部件更换损坏的部件。· 出于卫生考虑，仅能由一个人使用本产品。· 切勿使用压缩气体、钢丝绒、研磨性清洁剂或腐蚀性液体清洁设备。· 请勿在包含电动空气清新器的墙壁插座上或其周围使用电源部件，以免电源部件受到不可修复的损坏。· 本产品的盖子配有联锁装置，可降低过量紫外线辐射的风险。请勿擅自改动或尝试禁用此联锁装置。· 如果在打开本产品时紫外线灯依然亮着，请停止使用。· 紫外线可能会刺激眼睛和皮肤。请勿将眼睛和皮肤暴露在紫外线灯下。· 本产品含有磁铁。如果您体内装有心脏起搏器或其他植入装置，使用本产品前，请咨询您的医生或植入装置制造商。· 请仅使用飞利浦原装附件或消耗品。· 充电、使用和存放本产品的温度应介于 10 ° C 至 35 ° C 之间。· 请将产品和电池远离火源，切勿将其暴露于阳光直射处或高温下。· 如果产品异常发热或发出异味、变色或充电时间比平时长，请停止使用并停止为其充电，并联系 Philips。· 切勿将产品及其电池放置在微波炉中或电磁炉上。· 为防止电池发热或释放有毒有害物质，切勿打开、改装、刺穿、损坏或拆卸产品或电池。切勿使电池短路、过度充电或反向充电。· 如果电池损坏或出现泄漏，请避免与皮肤或眼睛接触。如果不慎接触，请立即用清水冲洗并就医。

电磁场 (EMF)

本Philips产品符合所有有关暴露于电磁场的适用标准和法规。

支持

有关所有产品支持，请访问 www.philips.com/support。

故障种类和处理方法

本章归纳了使用本产品时最常见的一些问题。如果您无法根据以下信息解决问题，请访问 www.philips.com/support 查阅常见问题列表，或联系您所在国家/地区的客户服务中心。

问题	可能的原因	解决方法
紫外线电源充电器无法为剃须刀充电。	紫外线电源充电器的可充电电池电量已耗尽。	请为紫外线电源充电器的电池充电。
紫外线程序未能启动。	紫外线电源充电器的可充电电池电量已耗尽。	请为紫外线电源充电器的电池充电。
	紫外线电源充电器的盖子未盖好。	请将剃须刀正确放置在紫外线电源充电器中。确保剃须刀头部件已关闭，并盖紧紫外线电源充电器的盖子。

回收

· 此符号表示电器产品和电池不能与一般的生活垃圾一同弃置 (图 3)。· 请遵守您所在国家/地区有关分类回收电器产品和电池的规定。

取出内置充电电池

在废弃器具前，必须将电池从器具中取出。在取出电池时，器具必须要断电。电池应安全地处置。

当您使用工具打开产品时以及在您弃置充电电池时，请采取必要的安全保护措施。

处理电池时，请确保您的双手、产品和电池都是干燥的。

为避免电池拆卸后发生意外短路，切勿让电池端子接触金属物体（例如硬币、发夹、戒指）。切勿用铝箔包裹电池。在丢弃之前，请用胶带将电池端子粘住或将电池放在塑料袋中。

- 1 检查产品的外壳中是否有螺丝。如果有，请将其拆下。
- 2 请拆下产品的其他螺丝、面板或部件，直到看见带有充电电池的印刷电路板。
- 3 卸下充电电池。

产品中有害物质的名称及含量						
部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
塑胶件	O	O	O	O	O	O
五金件	O	O	O	O	O	O
电源线	O	O	O	O	O	O
PCBA组件	X	O	O	O	O	O
本表格依据SJ/T 11364的规定编制。 O: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。 X: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。 * 该表格中所显示的“有害物质”在产品正常使用情况下不会对人身和环境产生任何伤害。 * 该表格中所显示的“有害物质”及其存的部件向消费者和回收处理从业者提供相关物质的存在信息，有助于产品高废弃时的妥善处理。						

· 该表格中所显示的“有害物质”在产品正常使用情况下不会对人身和环境产生任何伤害。· 该表格中所显示的“有害物质”及其存在的部件向消费者和回收处理从业者提供相关物质的存在信息，有助于产品废弃时的妥善处理。