

15 保証とアフターサービス

保証書と修理サービスについて（必ずお読みください。）

【保証書・表面左側に付属】

●保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取っていただき内容をよくお読みのことと大切に保管してください。

保証期間	お買い上げ日から2年間
対象部分	本体、充電ケーブル(シュービングユニット、鼻毛トリマー、保護キャップ、携帯カバー、クリーニングブラシを除く)

【補修用性能部品の保有期間】

●補修用性能部品の保有期間は製造打ち切り後 6 年です。
●性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談は】

●修理に関するご相談ならびにご不明な点は、フィリップスサポートセンターにお問い合わせください。

【修理を依頼されるときは】

●修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。尚、異常のあるときはご使用を中止し、フィリップスサポートセンターにお問い合わせください。

【保証期間中は】

●製品と保証書をご用意いただき、フィリップスサポートセンターにお問い合わせください。保証書の記載内容により無料修理いたします。

【保証期間が過ぎるときは】

●修理によって商品の機能が維持できる場合は、補修用性能部品の保有期間内であれば、ご希望により有料で修理させていただきます。

【海外での本製品の保証及びアフターサービスについて】

●本製品の保証は海外においても有効です。（同シリーズ製品の取り扱いがある国に限りです）

●日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。

●海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お困りの点がございましたら下記までご連絡ください。
Philips Service Department P.O.Box 20100 9200 Ca Drachten
The Netherlands,http://www.philips.com/support

【お客様の個人情報のお取り扱いについて】

●お受けましたお客様の個人情報は、株式会社フィリップス・ジャパンのホームページ http://www.philips.com/jp/ に掲載されている「プライバシーに関する通知」に基づき適切に管理いたします。

便利メモ	
お買い上げ日	年　　月　　日
お買い上げ店名	TEL（　　）

ご使用の時、このような症状はありませんか？

- 本体にさわると時々電気を感じる。
- ごく小さい臭いがある。
- 充電ケーブルを動かすと通電したりしなくなったりする。
- その他の異常、故障がある。



このような症状の時は、故障や事故防止のため、電源をOFFにし、充電ケーブルを本体から外して、必ずフィリップスサポートセンターにお問い合わせください。

16 仕様

品番	S791/06	S792/06	S793/06
ハンドル品番	S791	S792	S793
替刃品番	SH92		
本体寸法 (高さ×幅×奥行)	88×59×34 mm		
本体質量	約150 g		
電源方式	充電式		
定格入力	DC5 V 1 A		
充電時間	充電ケーブル：約1時間／ワイヤレス充電パッド：約2時間		
使用時間	約60分		
使用充電池	リチウムイオン充電池 (Li-Ion)		

※改良の為、仕様を予告なく変更することがあります。

<p>株式会社 フィリップス・ジャパン</p> 〒106-0041 東京都港区南布台 1-3-1 南布台ヒルズビルJタワー 15階
--


17 無料修理規定

【無料修理規定】


- 取扱説明書、本体貼付ラベル等の注意事項に従った正常な使用状態で保証期間内に故障した場合は、無料修理します。
 - 保証期間内に故障して無料修理をお受けになる場合には、フィリップスサポートセンターにお問い合わせください。
 - ご購入商品の修理に関するご相談は、フィリップスサポートセンターにお問い合わせください。
 - 保証期間内でも次の場合には有料修理になります。
 - 使用上の誤り及び不当な修理や改造による故障及び損傷。
 - お買い上げ後の輸送、移動、落下等による故障及び損傷。
 - 火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障及び損傷。
 - 一般家庭以外（例えば、業務用の長時間使用）に使用された場合の故障及び損傷。
 - 保証書の提示がない場合。
 - 保証書にお買い上げ年月日、お客様名、販売店名の記入のない場合、或は文字を書き換えられた場合。
- ※保証書は、本書に明示した条件のもとにおいて無料修理を約束するものです。従って保証書を発行している者（保証責任者）、及びそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。保証期間経過後の修理についてご不明の場合は、フィリップスサポートセンターにお問い合わせください。
- ※保証期間経過後の修理-補修用性能部品の保有期間について詳しくは取扱説明書の保証とアフターサービスの項目をご覧ください。
- ※お客様にご記入いただいた個人情報（保証書の控え）は保証期間内のサービス活動及びその後の安全点検活動のために利用させていただきます。ご了承ください。また個人情報 は、株式会社フィリップス・ジャパンのホームページ http://www.philips.com/jp/ に掲載されている「プライバシーに関する通知」に基づき適切に管理いたします。

ENGLISH

S791/06, S792/06, S793/06

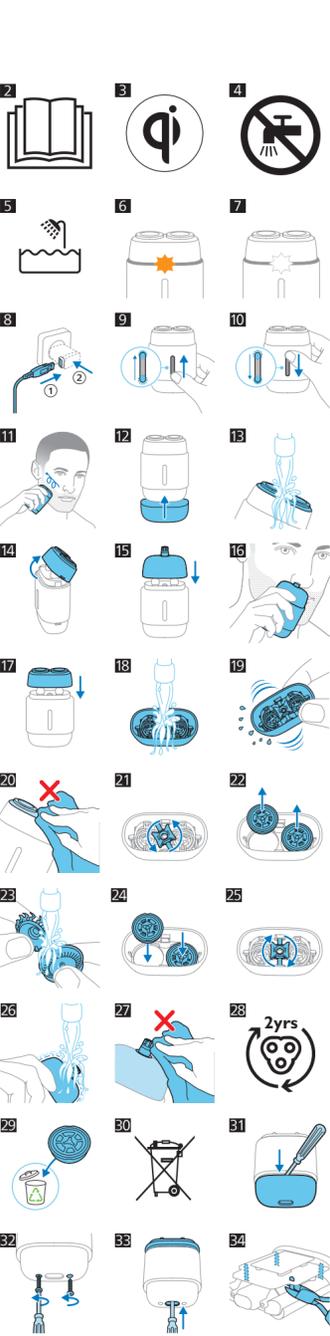

1

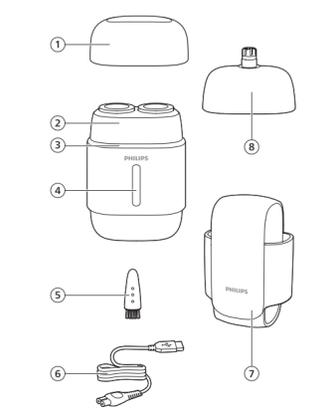

<div><div></div><div>English</div></div>
--

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at **www.philips.com/welcome**.

Important safety information

Only use the product for its intended household purpose. Read this important information carefully (Fig. 2) before you use the product and its batteries and accessories, and save it for future reference. Misuse can lead to hazards or serious injuries. The accessories supplied may vary for different products.

Warning

- To charge the product, only use a certified safety extra low voltage (SELV) supply unit with output rating 5 V_{dc} ≥ 1 A. For safe charging in a moist environment (e.g. in a bathroom), only use an IPX4 (splash-proof) supply unit. A suitable supply unit (e.g. Philips HQ87) is available via www.philips.com/support. If you need support finding the correct USB supply unit, contact the Consumer Care Center in your country. Using a non-certified supply unit may cause hazards or serious injuries.
- This product is Qi compliant (Fig. 3). To charge the product wirelessly, use a Qi-certified charging pad. Carefully shake off excess water before placing the product on the Qi charging pad. During charging, do not place any foreign (metal) objects on the Qi charging pad.
- Keep the USB cable, the USB supply unit and the charging stand (if provided) dry (Fig. 4).
- This appliance is waterproof (Fig. 5). It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the appliance can therefore only be used without cord.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not modify the supply unit.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.
- Do not use a damaged appliance. Replace damaged parts with new Philips parts.
- Because of hygiene, only one person should use the appliance.
- Unplug the appliance before cleaning it with water.
- Only use cold or lukewarm water to clean the appliance.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids to clean the appliance.
- Water may drip from the socket at the bottom of the appliance when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the appliance.
- This product contains a magnet. If you have a pacemaker or other implanted device, consult your doctor or the manufacturer of the implanted device before you use this product.
- Only use original Philips accessories or consumables.
- Charge, use and store the product at a temperature between 10 °C and 35 °C for optimal performance.
- Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures.
- If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact Philips.
- Do not place products and their batteries in microwave ovens or on induction cookers.
- Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries.
- If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General description (Fig. 1)

- Protection cap
- Shaving unit
- Charging light
- On/off swipe bar
- Cleaning brush
- USB cable
- Travel pouch
- Click-on nose trimmer attachment

Charge indications

Battery low

When the battery is almost empty (when there are only 5 or fewer shaving minutes left), the charging light flashes orange (Fig. 7).

Charging

When the shaver is charging, the charging light flashes white (Fig. 7).

Battery fully charged

When the battery is fully charged, the charging light lights up white continuously.

Note: After approx. 30 minutes, the charging light goes out to save energy.

Quick charge

When you start charging the empty battery, the charging light flashes white quickly. After approx. 3 minutes the charging light flashes white slowly. The shaver now contains enough energy for a 3-minute shave.

Charging

Charge the shaver before you use it for the first time and when the charging light indicates that the battery is almost empty.

When you charge the shaver for the first time or after a long period of disuse, let it charge until the charging light indicates that the battery is fully charged.

- Charging takes approx. 1 hour.
- Quick charge: After approx. 3 minutes of charging, the battery contains enough energy for a 3-minute shave.
- A fully charged shaver has a shaving time of up to 60 minutes.

Note: You cannot use the appliance while it is charging.

Charging with a USB supply unit

- Make sure that the appliance is switched off.
- Insert the small plug of the USB cable into the socket in the bottom of the appliance.
- Insert the USB plug into the USB supply unit (not provided).
- Insert the USB supply unit into the wall socket (Fig. 8).
- The charging light shows the charging status of the appliance (see 'Charge indications').
- After charging, remove the USB supply unit from the wall socket, pull the USB plug out of the supply unit and then pull the small plug out of the appliance.

Charging with a wireless Qi charging pad

This product supports wireless charging. When the battery is empty, it takes approx. 2 hours to fully charge the battery using a Qi-certified charging pad.

Note: The actual charging time may differ depending on conditions such as the technical specifications of the charging pad, the ambient temperature, and the technical specifications of the supply unit.

Using the appliance

Warning: Always check the appliance and all accessories before use. Do not use the appliance or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

Note: This appliance is waterproof (Fig. 5). It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the appliance can therefore only be used without cord.

Switching the appliance on and off

- To switch on the appliance, swipe upwards on the on/off swipe bar (Fig. 9).
- To switch off the appliance, swipe downwards on the on/off swipe bar (Fig. 10).

Shaving

For the best results on skin comfort, pre-trim your beard if you have not shaved for 3 days or longer. You can use this appliance either wet or dry, or even in the shower. For a wet shave, apply some water and shaving foam or gel to your skin and rinse the shaving heads under the tap with warm water before following the steps below.

- Switch on the appliance (Fig. 9).
- Move the shaver in circular movements over your skin to catch hair growing in all directions (Fig. 11). Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: You can attach the protection cap onto the bottom of the shaver for better grip during shaving (Fig. 12).

Note: Do not press too hard, as this can cause skin irritation.

Note: If you are shaving with gel or foam, rinse the shaving unit regularly during your shave to ensure that it continues to glide smoothly over your skin (Fig. 13).

- Switch off and clean the appliance after each use (see 'Cleaning and maintenance').
- Put the protection cap on the shaver after use to prevent the shaving heads from becoming damaged and dirty.

Note: Make sure you rinse all foam or shaving gel off the appliance.

Skin adaptation period

Your first shaves may not bring you the result you expect and your skin may even become slightly irritated. This is normal. Your skin and beard need time to adapt to any new shaving system. To allow your skin to adapt to this new appliance, we advise you to shave regularly (at least 3 times a week) and exclusively with this appliance for a period of 3 weeks.

Using the nose trimmer attachment

You can use the nose trimmer attachment to trim your nose hair.

Trimming nose hair

Make sure both the nose trimmer attachment and nasal passages are clean before trimming.

- Remove the shaving unit from the shaver (Fig. 14).
- Press the nose trimmer attachment onto the shaver (Fig. 15).
- Switch on the appliance (Fig. 9).
- Carefully insert the trimming head into one of your nostrils (Fig. 16).

Note: Do not insert the attachment more than 0.5 cm into your nostrils.

- Slowly move the trimming head around to remove all unwanted hairs in your nostrils.
- Switch off the appliance and clean the attachment after use (see 'Cleaning and maintenance').

Note: Dried nasal mucus can block the cutting element, preventing the appliance from switching on. If the cutting element is blocked, clean the attachment.

Cleaning and maintenance

Regular cleaning guarantees better shaving results.

Never clean, remove or replace the shaving unit while the shaver is switched on.

Do not touch shaving heads with hard objects as this may dent or damage the precision-made slotted shaving heads.

Do not use abrasives, scourers or aggressive liquids such as gasoline or acetone to clean the shaver.

Cleaning the shaver with the cleaning brush

Clean the shaver after every shave for optimal shaving performance.

- Switch off the shaver.
- Clean the surface of the shaving unit with the cleaning brush supplied.
- Remove the shaving unit from the shaver (Fig. 14).
- Clean the inside of the shaving unit with the cleaning brush.
- Clean the hair chamber with the cleaning brush.
- Put the shaving unit back onto the shaver (Fig. 17).

Cleaning the shaver under the tap

Caution: Always check if the water is too hot, to prevent burning your hands.

Clean the shaver after every shave for optimal shaving performance.

While rinsing shaving heads, water may drip out of the base of shaver. This is a normal occurrence. Internal electric parts are in a waterproof compartment so the shaver will be protected against water damage.

- Switch on the shaver. Rinse the shaving unit with cold or lukewarm water (Fig. 13).
- Switch off the shaver. Remove the shaving unit from the shaver (Fig. 14).
- Rinse the shaving unit and hair chamber with lukewarm water (Fig. 18).
- Carefully shake off excess water and let the shaver air dry (Fig. 19).

Caution: Never dry the shaving unit with a towel or tissue, as this may damage the shaving heads (Fig. 20).

- Put the shaving unit back onto the shaver (Fig. 17).

Thorough cleaning

Clean the shaving heads thoroughly once a month for optimal performance.

- Switch off the shaver.
- Remove the shaving unit from the shaver (Fig. 14).
- Rinse the shaving unit and hair chamber with lukewarm water (Fig. 18).
- Turn the lock counterclockwise and remove the retaining frame. Place it aside in a safe place (Fig. 21).
- Remove and clean one shaving head at a time. Each shaving head consists of a cutter and a guard (Fig. 22).

Note: Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally mix up the cutters and guards, it may take several weeks before optimal shaving performance is restored.

- Remove the cutter from the shaving guard and clean both parts under the tap (Fig. 23).
- Put the cutter back into the guard.
- Put the shaving heads back into the shaving unit (Fig. 24).
- Put the retaining frame back into the shaving unit and turn the lock clockwise (Fig. 25).
- Put the shaving unit back onto the shaver (Fig. 17).

Note: If you cannot attach the shaving unit onto the shaver easily, check if you have inserted the shaving heads properly and if the retaining frame is locked.

Cleaning the nose trimmer attachment

Clean the nose trimmer after each use to prevent clogging and damage.

- Make sure that the appliance is switched off.
- Rinse the cutting element with lukewarm water under the tap (Fig. 26).
- Switch on the appliance and rinse the cutting element once more to remove any remaining hairs. Then switch off the appliance again.
- Carefully shake off excess water and let the nose trimmer attachment dry.

Caution: Never dry the cutting element with a towel or tissue, as this may damage the cutting element (Fig. 27).

Replacement

Replacing the shaving heads

For maximum shaving performance, we advise you to replace the shaving heads every two years (Fig. 28). Replace damaged shaving heads immediately. Always replace the shaving heads with original Philips shaving heads (see 'Ordering accessories').

- Switch off the shaver.
- Remove the shaving unit from the shaver (Fig. 14).
- Turn the lock counterclockwise and remove the retaining frame. Place it aside in a safe place (Fig. 21).
- Remove the shaving heads from the shaving unit. Discard the used shaving heads immediately to avoid mixing them with the new shaving heads (Fig. 29).
- Place new shaving heads in the shaving unit (Fig. 24).
- Put the retaining frame back into the shaving unit and turn the lock clockwise (Fig. 25).
- Put the shaving unit back onto the shaver (Fig. 17).

Note: If you cannot attach the shaving unit onto the shaver easily, check if you have inserted the shaving heads properly and if the retaining frame is locked.

Storage

Put the protection cap on the shaver after use to prevent the shaving heads from becoming damaged and dirty.

Note: Always let the shaver dry completely before storing.

Storage in travel pouch

Store the shaver in the travel pouch supplied.

Note: Make sure the shaver is dry before you store it in the travel pouch.

Ordering accessories

To buy accessories or spare parts, visit **www.philips.com/parts-and-accessories** or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country.

The following accessories are available:

- SH92 Philips replacement shaving heads (for Japan)
- SH91 Philips replacement shaving heads (outside Japan)

Note: The availability of the accessories may differ by country.

Support

For all product support, please visit **www.philips.com/support**

Recycling

- This symbol means that electrical products and batteries shall not be disposed of with normal household waste (Fig. 30).
- Follow your country's rules for the separate collection of electrical products and batteries.

Removal of built-in rechargeable battery

The built-in rechargeable battery must only be removed by a qualified professional when the appliance is discarded. Before removing the battery, make sure that the appliance is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the appliance and when you dispose of the rechargeable battery.

When you handle batteries, make sure that your hands, the product and the batteries are dry.

To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard them.

Be careful, the battery strips are sharp.

Do not connect the shaver to the mains again after the rechargeable battery has been removed.

- Remove the shaving unit from the shaver (Fig. 14).
- Insert a flathead screwdriver between the plastic bottom cover and the housing to pry off the bottom cover (Fig. 31).
- Remove the two screws in the bottom of the shaver (Fig. 32).
- Insert a flathead screwdriver into the slot in the bottom of the shaver, and push the power unit out of the housing (Fig. 33).
- Cut the battery strips with a pair of cutting pliers, and remove the batteries (Fig. 34).