

Portable Radio TAR5600



User manual

Register your product and get support at www.philips.com/support

Contents

1	Important Safety	2 2
2	Your portable radio Introduction What's in the box Overview of the portable radio	3 3 4
3	Get started Charge the built-in battery Turn on/off or switch to standby Adjust volume Adjust display brightness Show menu in standby mode	5 5 5 5 5 6
4	Clock setting Automatically set the clock Manually set the clock Set time format Set date format	7 7 7 7 7
5	Alarm setting Set alarm time Activate/deactivate alarm timer Snooze the alarm Stop alarm sounds Set sleep timer	8 8 8 9 9
6	Listen to DAB radio Tune to DAB radio stations Auto scan Manual tuning Store and select favorite stations Store DAB radio stations Select a preset radio station Remove invalid stations DRC Show DAB information Show menu in DAB mode	10 10 10 10 10 11 11 11 11 11 12

7	Listen to FM radio Auto tuning Manual tuning Store FM radio stations automatically Store FM radio stations manually Store and select favorite stations Select a preset radio station Scan sensitivity setting Show RDS information Show menu in FM mode	13 13 13 13 13 13 14 14 14 15
8	Listen to Bluetooth® music Connect Bluetooth® Disconnect Bluetooth® Clear Bluetooth®pairing records Play music Show menu in Bluetooth® mode	16 16 16 16 16 17
9	Kitchen timer setting Set kitchen timer Stop kitchen timer sounds Cancel the kitchen timer	18 18 18 18
10	Other features Adjust sound effects Select menu language Listen through headphone Factory reset	19 19 19 19 19
11	Product specifications	20
12	Troubleshooting	21
	Notice Compliance	<mark>22</mark> 22

1 Important

Safety

- Read these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Keep this product away from direct sunlight, naked flames or heat.
- The product shall not be exposed to dripping or splashing.
- Place this product on a flat, hard and stable surface.
- Do not place any source of danger on the product (e.g. liquid filled objects, lit candles).
- Never place this product on other electrical equipment.
- Only use attachments/accessories specified by the manufacturer.
- Never remove the casing of this product, refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- A battery (battery pack or battery installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.
- Battery in extreme high or low temperatures during use, storage or transportation, and low air pressure at high altitude can pose safety hazards.
- Risk of explosion if a battery is replaced by an incorrect type.

- Do not replace a battery with an incorrect type that can defeat a safeguard (for example, some lithium battery types).
- Install all batteries correctly.
- Leaving a battery in an extremely high temperature surrounding, or an extremely low air pressure environment may result in an explosion or leakage of flammable liquid or gas.
- Batteries contain chemical substances. They should be disposed of properly.
- If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- When you change the batteries, always keep all new and used batteries out of reach of children. Ensure that the battery compartment is completely secure after you replace the battery.
- If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer.
- This product shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the product (e.g. liquid filled objects, lighted candles).
- Please use the product safely in an environment with temperature between 0°C and 45°C.



- To avoid risk of fire, the product is supplied only by external power source which output shall comply with PS1 (with output capacity less than 15W).
- The power delivered by the charger must be between min. 5 Watts required by the radio equipment, and max. 15 Watts in order to achieve the maximum charging speed.

2 Your portable radio

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/support.

Introduction


With this portable radio, you can

- Listen to DAB (Digital Audio Broadcasting), FM radio and Bluetooth® music;
- Set two alarms to ring at different times;

What's in the box

Check and identify the contents of your package:

- Main unit
- TYPE-C charging cable
- Quick start guide
- Safey sheet
- Warranty

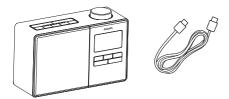






Note

 Images, illustrations and drawings shown on this user manual are for reference only. Actual product may vary in appearance.

Overview of the portable radio

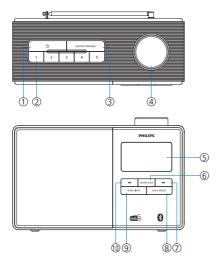

① (¹)

- Turn on/off or switch to standby.
- Stop alarm.
- 2 Favorite stations (1, 2, 3, 4, 5)
 - Store /directly access preset 1, 2, 3, 4 or 5.

③ SOURCE/SNOOZE


- Switch to DAB/FM/Bluetooth source.
- Snooze alarm.
- Stop alarm.
- Set kitchen timer.

④ Volume Knob

- Adjust volume.
- **5** Display panel
 - Display current status.

6 ENTER/SCAN

- Enter selected menu item list.
- Scan and store radio stations automatically.
- Play/pause.
- Bluetooth[®] pairing

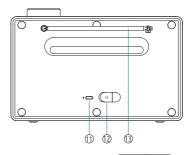



- ⑦ ▶▶
 - Set time.
 - Tune to a radio stations.
 - Navigate through the menu list.
 - Next track
- 8 BACK/PRESET
 - Back to previous menu.
 - Exit menu setting.
 - Store radio stations in memory.
 - Select a preset radio station.
- 9 MENU / INFO
 - Enter menu setting.
 - Display info.
- 10 🔫
 - Set time.
 - Tune to a radio stations.
 - Navigate through the menu list.
 - Previous track
- ① TYPE-C charging in port
- ① Headphone jack
- 13 DAB/FM antenna
- (4) Battery compartment lid

3 Get started

Always follow the instructions in this chapter in sequence.

Charge the built-in battery

The portable radio is powered by a built-in rechargeable battery.



Note

• A icon 'D' is shown when the battery power is low. Please recharge the built-in battery as soon as possible.

Connect the TYPE-C socket on the portable radio to an outlet (5V=1.5A) by using the provided TYPE-C cable.



- → When the portable radio is being charged, the icon ' 🕫 ' is shown.

Turn on/off or switch to standby

- Press ⁽¹⁾ to turn the unit on.
 → The radio switches to the last selected source.
- Press () to switch the unit to Standby.
 → The time (if set) is displayed.



Note

- Bluetooth device not connected for more than 15 minutes or connected but not playing, the radio switches to standby mode automatically.
- In any mode, press and hold tor 3 seconds to turn off the unit directly. The display screen turns off.

Adjust volume

While listening, rotate **VOLUME** knob to adjust volume.

Adjust display brightness


You can select different brightness levels or turn off the display screen.

- 1 Press MENU to access menu.
- 2 Press ►► / ◄◄ to select [DIM level], and then press ENTER to confirm.
- 3 Press ►► / ◄< to select brightness level (Auto, High, Medium, Low) or Off to turn off the display screen, and then press ENTER to confirm.
 - → If [Auto] is selected, it will enter high brightness level. When being idle for 10 seconds, it will enter low brightness level.
 - If [Off] is selected, the display screen will turn off. When pressing the button, it will enter high brightness level. When being idle for 10 seconds, the display screen will turn off.
- 4 Press BACK to exit the menu.

Show menu in standby mode

When the unit is in standby mode, you can access the menu for control options.

- 1 In standby mode, press MENU to access menu.
- 2 Press ►► / ◄< to select a menu option, and then press ENTER to confirm the option or enter the lower-level menu.
 - [DIM level]: adjust backlight settings.
 - [Alarm]: set alarm 1 or 2 on/off and alarm setup.
 - [Clock]: set time synchronization, date/time, select time format and date format.
 - [System]: adjust system settings.
- 3 Repeat Step 2 if any sub-option is available under one option.
- 4 Press BACK to return to the previous menu or press and hold BACK for 3 seconds to exit the menu.

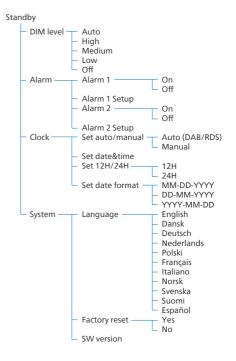

4 Clock setting

Note

• If no button is pressed within 30 seconds, the menu exits.

Automatically set the clock

- 1 Press MENU to access menu.
- 2 Press ►► / ◄< to select [Clock], then press ENTER to confirm.
- 3 Press ►► / ◄◄ to select [Set auto/manual], then press ENTER to confirm.
- 4 Press ►► / ◄◄ to select [Auto(DAB/RDS)], then press ENTER to confirm.
- 5 Press **BACK** to return to the previous menu or press and hold **BACK** for 3 seconds to exit the menu.

In DAB/FM RDS station, the unit can synchronize with time transmitted by DAB/FM RDS station (with CT information) automatically.

Manually set the clock

- 1 Press MENU to access menu.
- 2 Press ►► / ◄◄ to select [Clock], then press ENTER to confirm.
- 3 Press ►► / ◄◄ to select [Set date&time], then press ENTER to confirm.
- 4 Press ►► / ◄◄ to set hour , then press ENTER to confirm.
- 5 Press ►► / ◄◄ to set minute , then press ENTER to confirm.
- 6 Press ►► / ◄◄ to set month , then press ENTER to confirm.
- 7 Press ►► / ◄< to set day , then press ENTER to confirm.

8 Press ►► / ◄< to set year , then press ENTER to confirm.

➡ The time is set.

9 Press **BACK** to return to the previous menu or press and hold **BACK** for 3 seconds to exit the menu.

Set time format

- 1 Press MENU to access menu.
- 2 Press ►► / ◄◄ to select [Clock], then press ENTER to confirm.
- 3 Press ►► / ◄< to select [Set 12H/24H], then press ENTER to confirm.
- 4 Press ►► / ◄< to select [12H] or [24H], then press ENTER to confirm.
- 5 Press **BACK** to return to the previous menu or press and hold **BACK** for 3 seconds to exit the menu.

Set date format

- 1 Press MENU to access menu.
- 2 Press ►► / ◄◄ to select [Clock], then press ENTER to confirm.
- 3 Press ►► / ◄◄ to select [Set date format], then press ENTER to confirm.
- 4 Press ►► / ◄◄ to select [MM-DD-YYYY], [DD-MM-YYYY] or [YYYY-MM-DD] date format, then press ENTER to confirm.
- 5 Press **BACK** to return to the previous menu or press and hold **BACK** for 3 seconds to exit the menu.

5 Alarm setting

Set alarm time

- Note

• Make sure that you have set the clock correctly.

- 1 Press MENU to access menu.
- 2 Press ►► / ◄◄ to select [Alarm], then press ENTER to confirm.
- 3 Press ►► / ◄< to select [Alarm 1 Setup] or [Alarm 2 Setup], then press ENTER to confirm activated the alarm setup mode, the hour will blink.
- 4 Press ►► / ◄◄ to set hour, then press ENTER to confirm, the minute will blink.
- 5 Press ►► / ◄◄ to set minute , then press ENTER to confirm, the alarm repeat cycle will blink.
- 6 Press ►► / ◄< to select alarm repeat cycle (Once, Daily, Weekday or Weekend mode), then press ENTER to confirm, the alarm source will blink.
 - If [Once] is selected as the alarm period, please use ►► / ◄◄ and ENTER to set the alarm date.
- 7 Press ►► / ◄< to select alarm source (BUZZER, DAB or FM station), then press ENTER to confirm.
 - If [DAB] or [FM] is selected as the alarm source (default is BUZZER), the station preset number will blink, please use ►► / ◄◄ and ENTER to select DAB or FM preset radio station number.
- 8 Press **BACK** to return to the previous menu or press and hold **BACK** for 3 seconds to exit the menu.
 - → The corresponding alarm icon ⑦/③ will appear.

⊁ Tip

- The unit exits alarm setting mode after being idle for 30 seconds.
- If DAB/FM is selected as the alarm source but the preset station is not selected, BUZZER is activated automatically.
- Alarm timeout is 60 minutes if there is no user action.

Activate/deactivate alarm timer

- 1 Press MENU to access menu.
- 2 Press ►► / ◄◄ to select [Alarm], then press ENTER to confirm.
- 3 Press ►► / ◄< to select [Alarm 1] or [Alarm 2], then press ENTER to confirm.
- 4 Press ►► / ◄◄ to select [On] or [Off], then press ENTER to confirm activate or deactivate the alarm timer.
- 5 Press **BACK** to return to the previous menu or press and hold **BACK** for 3 seconds to exit the menu.
 - \rightarrow If the alarm timer is activated, the icon \bigcirc / O will appear.
 - If the alarm timer is deactivated, the icon
 ⑦/ ③ will disappear.

Snooze the alarm

- 1 When the alarm rings, press SNOOZE.
 - → The alarm snoozes and repeats ringing 10 minutes later (default is 10 minutes).
- During alarm snooze time, press **SNOOZE** to select another period (in minutes) to ringing gain.

10 → 20 → 30 → 40 → 50 → 60 (minutes)

2 During alarm snooze time, press () or **SNOOZE** for 3 seconds to cancel the alarm snooze. The alarm stops.

Stop alarm sounds

When the alarm sounds, press () or press and hold **SNOOZE** for 3 seconds.

 \mapsto The alarm stops but the alarm settings remain.

Set sleep timer

This portable radio can switch to standby mode automatically after the sleep time is set.

- 1 Turn on the unit.
- 2 Press MENU to access menu.
- 3 Press ►► / ◄◄ to select [Sleep timer], then press ENTER to confirm.
- 4 Press ►► / ◄◄ to select a period, then press ENTER to confirm.

 $15 \rightarrow 30 \rightarrow 45 \rightarrow 60 \rightarrow 90 \rightarrow 120 \text{ (minutes)}$

5 Press BACK to exit the menu.

 \mapsto The icon $\mathbf{z}^{\mathbf{Z}}$ shows on the screen.

• To deactivate the sleep timer: Repeat the above steps, set the sleep timer to Off.

6 Listen to DAB radio

- Note

- Keep the portable radio away from other electronic devices to avoid radio interference.
- For better reception, fully extend and adjust the position of the DAB/FM antenna.

Tune to DAB radio stations

The first time you select DAB radio mode, or if the station list is empty, the radio performs a full scan automatically.

- 1 Turn on the unit.
- 2 Press **SOURCE** to select DAB mode. → [Scanning...] is displayed.
 - → The radio scans and stores all the DAB radio stations automatically, and then broadcasts the first available station.
 - ➡ The station list is memorized in the radio. Next time when you turn on the radio, the station scan does not take place.
- 3 All the stations that have been found will be stored automatically. Press ►► / ◄< to explore the found stations, then press ENTER to confirm.
- 4 To re-tune, press **SCAN** for 3 seconds to perform a quick scan again.

Auto scan

Press and hold **SCAN** for 3 seconds to activate full scan mode.

- \mapsto [Scanning...] is displayed.
- → The radio scans and stores all the DAB radio stations automatically, and then broadcasts the first available station.
- → The station list is memorized in the radio. Next time when you turn on the radio, the station scan does not take place.

or

- 1 Press MENU to access DAB menu.
- 2 Press ENTER to enter [Full scan].
- 3 Press ►► / ◄◄ to select [Yes] (activate full scan) or [No], then press ENTER to confirm.
 → [Scanning...] is displayed.
 - → The radio scans and stores all the DAB radio stations automatically, and then broadcasts the first available station.
 - ➡ The station list is memorized in the radio. Next time when you turn on the radio, the station scan does not take place.

Manual tuning

As well as the auto tune function, you can manually tune the receiver. This can help you when aligning your aerial or when adding stations that were missed during auto tuning.

- 1 Press MENU to access DAB menu.
- 2 Press ►► / ◄◄ to select [Manual tune], then press ENTER to confirm.
- 3 Press ►► / ◄◄ to cycle through the DAB channels, which are numbered from 5A to 13F, then press ENTER to confirm.
 - → The unit will show the frequency and start to scan.
- 4 Press BACK to exit the menu.

Store and select favorite stations

- Note

- You can store the favorite stations in direct buttons 1, 2, 3, 4, 5.
- 1 In DAB mode, tune to a DAB radio station.
- 2 Press and hold **1**, **2**, **3**, **4** or **5** for 3 seconds to save the current station to the corresponding position directly.
 - \mapsto [Stored] is displayed.
 - ➡ The station is stored in the selected position.

• In DAB mode, press 1, 2, 3, 4 or 5 to select a preset radio station (1, 2, 3, 4 or 5) directly.

Store DAB radio stations

Note

- You can store a maximum of 20 DAB radio stations.
- 1 In DAB mode, tune to a DAB radio station.
- 2 Press and hold **PRESET** for 3 seconds to activate programming mode.
 - [Preset Store] and preset number is displayed.
- 3 Press ►► / ◄◄ to select a number.
- 4 Press PRESET again to confirm.
 - \mapsto [Stored] is displayed.
 - → The station is stored in the selected position.
- 5 Repeat steps 1 to 4 to store more DAB radio stations.

🔆 Tip

• To remove a pre-stored station, store another station in its place.

Select a preset radio station

In DAB mode, press **PRESET** to select a preset radio station.

or

- 1 In DAB mode, press PRESET.
- 2 Press ►► / ◄◄ to select a preset radio station.



Note

 After 3 seconds, preset radio station will be confirm automatically.

Remove invalid stations

- 1 Press MENU to access DAB menu.
- 2 Press ►► / ◄◄ to select [Prune], then press ENTER to confirm.
- 3 Press ►> / ◄< to select [Yes] (remove all the invalid stations from the station list) or [No], then press ENTER to confirm.
- 4 Press BACK to exit the menu.

DRC

Compress the dynamic range of a radio signal, so that the volume of quiet sounds is increased, and the volume of loud sounds is reduced.

- 1 Press MENU to access DAB menu.
- 2 Press ►► / ◄◄ to select [DRC level], then press ENTER to confirm.
- 3 Press ►► / ◄< to select [High], [Low] or [Off], then press ENTER to confirm.
- 4 Press BACK to exit the menu.

Show DAB information

While listening to DAB radio, press and hold **INFO** for 3 seconds to display the following information (if available):

- → DAB or DAB+
- ➡ Station Name
- → Scrolling text
- → Multiplex name
- 🛏 Channel
- → Frequency
- → Mode: Transfer speed
- → Mode: Channel type
- → Signal quality


Show menu in DAB mode

When you listen to DAB, you can access the menu for control options.

- 1 Press MENU to access DAB menu.
- 2 Press ►► / ◄< to select a menu option, and then press ENTER to confirm the option or enter the lower-level menu.
 - [Full scan]: scan and store all the available DAB radio stations.
 - [Manual tune]: tune to a specific channel/ frequency manually and add it to the station list.
 - [Prune]: remove all the invalid stations from the station list.
 - [DRC level]: compress the dynamic range of a radio signal, so that the volume of quiet sounds is increased, and the volume of loud sounds is reduced.
 - [Kitchen timer]: set kitchen timer.
 - [Sleep timer]: set sleep timer.
 - [DBB level]: adjust the sound reproduced.
 - [DIM level]: adjust backlight settings.
 - [Alarm]: set alarm on/off and alarm setup.
 - [Clock]: set time synchronization, date/time, select time format and date format.
 - [System]: adjust system settings.
- 3 Repeat Step 2 if any sub-option is available under one option.
- 4 Press **BACK** to return to the previous menu or press and hold **BACK** for 3 seconds to exit the menu.

Note

If no button is pressed within 30 seconds, the menu exits.

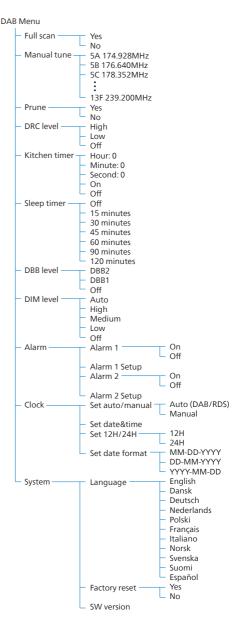

7 Listen to FM radio

=

Note

- Keep the portable radio away from other electronic devices to avoid radio interference.
- For better reception, fully extend and adjust the position of the DAB/FM antenna.

Auto tuning

- 1 Press 🕛 to turn on the unit.
- 2 Press SOURCE to select FM mode.
- 3 Press and hold ►► / ◄◄ for 3 seconds.
- → The portable radio tunes to a station with strong reception automatically.

Manual tuning

Press $\rightarrow / \blacktriangleleft$ to select a frequency to tune to a station manually.



Note

 The tuning grid of the portable radio is 50KHz. The radio frequency on the display panel will increase 0.05MHz by pressing ►> / ◄◄.

Store FM radio stations automatically



Note

You can store a maximum of 20 FM radio stations.

In FM tuner mode, press and hold **SCAN** for 3 seconds.

- → [Auto Scanning...] is displayed.
- → The radio scans and stores all the FM radio stations automatically, and then broadcasts the first available station.

Store FM radio stations manually

- 1 In FM tuner mode, tune to an FM radio station.
- 2 Press and hold PRESET for 3 seconds to activate programming mode.
 - → [Preset Store] and preset number is displayed.
- 3 Press ►► / ◄◄ to select a number.
- 4 Press PRESET again to confirm.
- 5 Repeat steps 1 to 4 to store more FM radio stations.

🔆 Тір

• To remove a pre-stored station, store another station in its place.

Store and select favorite stations

Note

- You can store the favorite stations in direct buttons 1, 2, 3, 4, 5.
- 1 In FM tuner mode, tune to an FM radio station.
- 2 Press and hold **1**, **2**, **3**, **4** or **5** (preset number) for 3 seconds to save the current station to the corresponding position directly.
 - → [Preset Store] is displayed.
 - → The preset number and station frequency are displayed.
- In FM tuner mode, press **1**, **2**, **3**, **4** or **5** to select a preset radio station (1, 2, 3, 4 or 5) directly.

Select a preset radio station

In FM tuner mode, press **PRESET** to select a preset radio statio.

or

- 1 In FM tuner mode, press PRESET.
- 2 Press ►► / ◄◄ to select a preset radio station.



 After 3 seconds, preset radio station will be confirmed automatically.

Scan sensitivity setting

- 1 Press MENU to access FM menu.
- 2 Press ENTER to enter [Scan setting].
- 3 Press ►► / ◄< to select [Strong] (strong stations only) or [All] (all stations), then press ENTER to confirm
- 4 Press BACK to exit the menu.

Show RDS information

RDS (Radio Data System) is a service that allows FM stations to show additional information.

- 1 Tune to an FM RDS station.
- 2 Press and hold **INFO** for 3 seconds to display the following information (if available):
 - → Station name
 - ➡ Program type such as [NEWS] (news), [SPOR T] (sport), [POP M] (pop music)...
 - ↦ Time
 - 🛏 Text
 - → Frequency


Show menu in FM mode

When you listen to FM, you can access the menu for control options.

- 1 Press MENU to access FM menu.
- 2 Press ►► / ◄< to select a menu option, and then press ENTER to confirm the option or enter the lower-level menu.
 - [Scan setting]: select the scan sensitivity (strong stations only or all stations).
 - [Kitchen timer]: set kitchen timer.
 - [Sleep timer]: set sleep timer.
 - [DBB level]: adjust the sound reproduced.
 - [DIM level]: adjust backlight settings.
 - [Alarm]: set alarm on/off and alarm setup.
 - [Clock]: set time synchronization, date/time, select time format and date format.
 - [System]: adjust system settings.
- 3 Repeat Step 2 if any sub-option is available under one option.
- 4 Press BACK to return to the previous menu or press and hold BACK for 3 seconds to exit the menu.

Note

• If no button is pressed within 30 seconds, the menu exits.

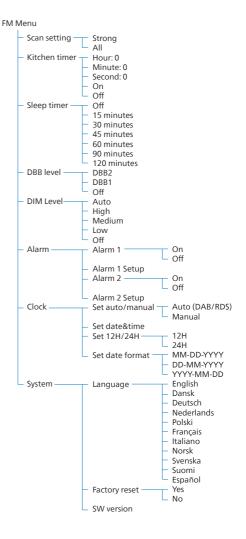

8 Listen to Bluetooth® music

Note

- The operational range between the unit and the device is approximately 30 metres (open area).
- Compatibility with all Bluetooth* devices is not guaranteed.
 Any obstacle between the device and the unit can reduce operational range.
- Keep this unit away from other electronic devices that may cause interference.
- The unit will also be disconnected when your device is moved beyond the operational range.

Connect Bluetooth®

- 1 Press **SOURCE** to select Bluetooth mode. → [Disconnected] will blink.
- 2 On your Bluetooth device, switch on Bluetooth, search for [Philips TAR5600] to start connection.
- 3 Select "Philips TAR5600". If connected successfully:
 - → You will hear a prompt sound.
 - \mapsto [Connected] will appear.

Disconnect Bluetooth®

- Switch to another source on the unit;
- Disable the function from your Bluetooth[®] device;
- Press and hold ENTER/SCAN for 3 seconds to disconnect Bluetooth connection.
 If disconnected successfully:
 - → You will hear a prompt sound.

or

- 1 Press MENU to access Bluetooth menu.
- 2 Press ENTER to select [Bluetooth pair].
- 3 Press ►► / ◄< to select [Yes] (disconnect the Bluetooth[®] and enter pairing state), then press ENTER to confirm.

Clear Bluetooth[®] pairing records

- 1 Press MENU to access Bluetooth menu.
- 2 Press ►► / ◄◄ to select [Bluetooth clean], then press ENTER to confirm.
- 3 Press ►► / ◄◄ to select [Yes] to disconnect current connection or select [No] to keep connection, then press ENTER to confirm.
- 4 Press BACK to exit the menu. → [Pairing...] will blink.

Play music

When playing music on your Bluetooth[®] device, you can use this unit to control the music playback.

- Press ENTER to pause/resume playback.
- Press ►► / ◄◄ to skip to a track.
- Rotate VOLUME knob to adjust the volume.

Show menu in Bluetooth® mode


When you listen via Bluetooth[®], you can access the menu for control options.

- 1 Press MENU to access Bluetooth® menu.
- 2 Press ►► / ◄< to select a menu option, and then press ENTER to confirm the option or enter the lower-level menu.
 - [Bluetooth pair]: select it to disconnect Bluetooth connection and enter pairing mode.
 - [Bluetooth clean]: clear Bluetooth pairing records.
 - [Kitchen timer]: set kitchen timer.
 - [Sleep timer]: set sleep timer.
 - [DBB level]: adjust the sound reproduced.
 - [DIM level]: adjust backlight settings
 - [Alarm]: set alarm on/off and alarm setup.
 - [Clock]: set time synchronization, date/time, select time format and date format.
 - [System]: adjust system settings.
- 3 Repeat Step 2 if any sub-option is available under one option.
- 4 Press **BACK** to return to the previous menu or press and hold **BACK** for 3 seconds to exit the menu.



Note

If no button is pressed within 30 seconds, the menu exits.

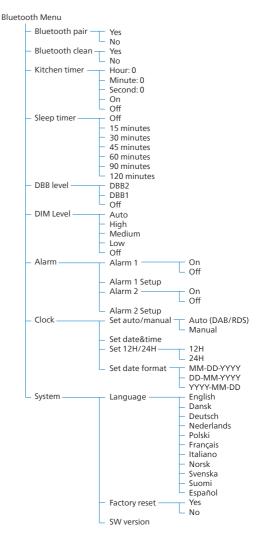

9 Kitchen timer setting



• The unit exits menu setting when idle for 30 seconds.

Set kitchen timer

Note

- 1 Press 🕛 to turn on the unit.
- 2 Press MENU to access menu.
- 3 Press ►► / ◄< to select [Kitchen timer], then press ENTER to confirm.
 - → The hour digits blink.



• Press and hold **SNOOZE** for 3 seconds to activate the kitchen timer setup mode directedly.

- 4 Press ►► / ◄◄ to set the hour, and then press ENTER to confirm.
 The minute digits blink.
- 5 Press ►► / ◄◄ to set the minute, and then press ENTER to confirm.
 The second digits blink.
- 6 Press ►> / ◄< to set the second, and then press ENTER to confirm.
 ► The [On] and [Off] is appear.
- 7 Press ►► / ◄◄ to select [On] (activate) or [Off] (deactivate) the kitchen timer, and then press ENTER to confirm.
- 8 Press **BACK** to return to the previous menu or press and hold **BACK** for 3 seconds to exit the menu.

 \rightarrow The icon \bigcirc and kitchen timer appear.

Note

• Kitchen timer timeout is 60 minutes if there is no user action.

Stop kitchen timer sounds

When the kitchen timer rings, press any key to stop the buzzer.

Cancel the kitchen timer

- 1 If you want to cancel the kitchen timer, press MENU to access menu.
- 2 Press ►► / ◄◄ to select [Kitchen timer], then press ENTER to confirm.
 ↓ [Cancel timer?] is displayed.
- 3 Press ►► / ◄◄ to select [Yes] (Cancel) or [No], then press ENTER to confirm.
- 4 Press BACK to exit the menu.

- Note

• The kitchen timer can only be cancelled when the unit is turned on.

10 Other features

Adjust sound effects

- 1 Turn on the unit.
- 2 Press MENU to access menu.
- 3 Press ►► / ◄◄ to select [DBB level], then press ENTER to confirm.
- 4 Press ►> / ◄ to select sound reproduced (DBB2, DBB1 or Off), then press ENTER to confirm.
- 5 Press BACK to exit the menu.

Select menu language

- 1 Press MENU to access menu.
- 2 Press ►► / ◄◄ to select [System], then press ENTER to confirm.
- 3 Press ►► / ◄◄ to select [Language], then press ENTER to confirm.
- 4 Press ►► / ◄◄ to select menu display language, then press ENTER to confirm.
 - → English
 Dansk
 Deutsch
 Nederlands
 Polski
 Français
 Italiano
 Norsk
 Svenska
 Suomi
 Español
- 5 Press **BACK** to return to the previous menu or press and hold **BACK** for 3 seconds to exit the menu.

Listen through headphone

Plug a headphone into the \bigcap socket in the back of the main unit.

Factory reset

- 1 Press MENU to access menu.
- 2 Press ►► / ◄< to select [System], then press ENTER to confirm.
- 3 Press ►► / ◄< to select [Factory reset], then press ENTER to confirm.
- 4 Press ►► / ◄◄ to select [Yes] (reset all radio settings to the factory default status), then press ENTER to confirm.
 - → [Restarting...] is displayed.

11 Product specifications

=

Note

Product information is subject to change without prior notice.

Amplifier	
Rated Output Power	5W RMS (THD 10%)
Tuner	
Tuning Range(FM)	87.5-108 MHz
Tuning Range(DAB)	174-240 MHz (Band III)
Tuning Grid	50 KHz
Sensitivity	
- Mono, 26 dB S/N Ratio	<22 dBf
Total Harmonic Distortion	<10%
Signal to Noise Ratio	>50 dBA
Plusteeth	

V5.3
2.4 Ghz~2.48 GHz
5.37 dBm
30m(open area)

General information	
USB port	5.0V 1.5A
Lithium battery	3.65V/2600mAh
Dimensions (W x H x D)	222x147x96 mm
Weight (Main unit)	877g

12 Troubleshooting



Warning

• Never remove the casing of the product.

To keep the warranty valid, never try to repair the device yourself. If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips webpage www.philips.com/support. When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

No power

- Make sure the portable radio is fully charged.
- Make sure the USB socket of the portable radio is properly connected.

No sound

- Adjust the volume on this portable radio.
- Adjust the volume on the connected device.
- Make sure that your Bluetooth device is within the operational range.

No response from the unit

• Restart the portable radio.

Poor radio reception

- Keep the portable radio away from other electronic devices to avoid radio interference.
- Fully extend and adjust the position of the antenna.

Alarm does not work

Set the clock/alarm correctly.

Clock/alarm setting erased

- Reset the clock/alarm.
- Replace the backup batteries.

The audio quality is poor after connection with a Bluetooth-enabled device

 The Bluetooth reception is poor. Move the device closer to this speaker or remove any obstacle between them.

Fail to find [Philips TAR5600] on your Bluetooth device for pairing

 
 Press and hold ENTER/SCAN for 3 seconds to enter Bluetooth pairing mode, and then try again.

Cannot connect with your Bluetooth device

- The Bluetooth function of your device is not enabled. Refer to the user manual of your device to find out how to enable the function.
- This portable radio is not in pairing mode.
- This portable radio is already connected to another Bluetooth-enabled device.
- Disconnect and try again.

Battery cannot be charged properly or the battery drains too quickly

- Replace the battery.
- 1 Open the battery compartment lid at the bottom of the unit, and remove the original battery from the battery compartment.



2 Put in a battery of the same type (not supplied).




- 3 Close the battery compartment lid.
- Rechargeable Li-ion Battery Specification: 1INR19/66

Model: TACR5001BA

Nominal Capacity: 3.65V, 2600mAh, 9.49Wh

Max Charge Voltage: 4.2V

TP Vision Europe B.V. Prins Bernhardplein200, 1097 JB Amsterdam, The Netherlands.

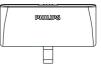

 If you want to purchase extra battery, please visit https://www.philips.com/support to get more information.

13 Notice

Compliance

Any changes or modifications made to this device that are not expressly approved by MMD Hong Kong Holding Limited may void the user's authority to operate the product. Hereby, TP Vision Europe B.V. declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU and UK Radio Equipment Regulations SI 2017 No 1206. You can find the Declaration of Conformity on www.philips.com/support.



This product complies with the radio interference requirements of the European Community.



This product is designed and manufactured with high-quality materials and components, which can be recycled and reused.



This symbol means the product must not be discarded as household waste and should be delivered to an appropriate collection facility for recycling. Follow local rules and never dispose of the product and rechargeable batteries with normal household waste. Correct disposal of old products and rechargeable batteries helps prevent negative consequences for the environment and human health.



This symbol means that the product contains batteries covered by European Regulation 2023/1542 which cannot be disposed of with normal household waste. Inform yourself about the the local separate collection system for electrical and electronic collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.

Bluetooth®

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MMD Hong Kong Holding Limited is under license. Other trademarks and trade names are those of their respective owners.



MMD Hong Kong Holding Limited. All rights reserved. Specifications are subject to change without notice. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.



TAR5600_00_UM_V1.0