

8 Parental Controls

Parental controls enable you to control whether the members of your household can view certain kinds of broadcast TV programs. When a program or feature is blocked, you can unblock it by entering a parental control PIN that only you know.

Note:

Parental controls block content from the TV tuner and from streaming options, if any, on the Home screen menu. Parental controls do not block content on other TV inputs or content from streaming channels you add to your TV.

Creating a parental control PIN

To create a new parental control PIN, from the Home screen menu navigate to **Settings > Parental controls**. The screen displays a numeric keypad. Use the purple directional pad to enter a four-digit code, and then press **OK**. Then repeat the process to enter the same PIN again, just to make sure you correctly entered the PIN you want to use.

Important:

If you forget your parental control PIN, the only way to recover is to perform a factory reset operation.

Blocking broadcast TV programs

Enabling parental control of TV programs

The first step in blocking TV programs is to enable parental control of TV programs.

To enable parental control of TV programs:

1. In the Home screen menu, navigate to **Settings > Parental controls**, and then enter your parental control PIN.
2. In the **Parental controls** screen, navigate to **TV tuner > Parental control of TV shows**.
3. Make sure the check box next to **Enable parental controls** is checked. If not, highlight it and press **OK**.


Blocking based on US TV ratings

To block TV programs based on US television ratings:

1. From the Home screen menu, navigate to **Settings > Parental controls**, and then enter your parental control PIN.
2. In the **Parental controls** screen, navigate to **TV tuner > TV ratings**. Choose among the following settings:
 - **Entire ratings** – Highlight the rating you want to block, and then navigate to the right and select the first option that blocks the entire rating level (and all higher rating levels).
 - **Individual content types** – Highlight the rating that contains the content type you want to block, and then select the content types you want to block from among those listed. Remember that blocking a content type in one rating blocks the equivalent content type in all higher rating levels.

Copyright

All other registered and unregistered trademarks are the property of their respective owners.

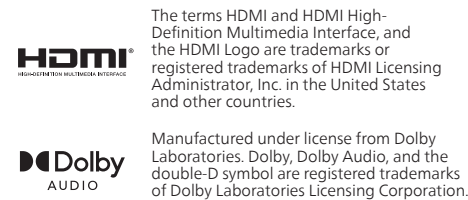

Portions of this software are copyright © The FreeType Project (www.freetype.org). The American Academy of Pediatrics discourages television viewing for children younger than two years of age. Some features may require an always-on broadband internet connection, firmware update and / or a minimum bandwidth.

Internet services vary by location. Skyworth Corporation Inc. does not warrant access to the portal or to any of the services, content, software and advertising. Skyworth Corporation Inc. may, in its sole discretion, add or remove access to any specific services, content, software and advertising at any time. Although Skyworth Corporation Inc. will strive to provide a good selection of services, content or software, Skyworth Corporation Inc. does not warrant continued access to any specific services, and content or software.


9 Troubleshooting

| Category | Problem | Tip |
|-------------------------------------|---|---|
| Power | No power | <ul style="list-style-type: none">• Ensure that the AC outlet supplies the proper voltage. Plug another electrical appliance into the AC outlet to ensure that the AC outlet operates normally.• If a power failure occurs, unplug the AC power cord for 1 minute to allow the unit to reset itself. |
| Remote | Remote buttons are not functional. | <ul style="list-style-type: none">• Re-insert or replace the AAA batteries with their polarities (+/-) as indicated on the remote battery area. |
| Network | Cannot connect the network. | <ul style="list-style-type: none">• Check if your router and/or modem is properly connected.• Check if the Ethernet cable connection between the TV and your router or modem is properly secured.• Power cycle the router and/or modem.• Check your network settings. |
| | Slow Data Connection or buffering. | <ul style="list-style-type: none">• Check the settings between your router and ISP modem or gateway (if applicable).• Connect to a stable wireless connection from home wireless or wired network.• The use of mobile hot spots or public wireless connections is not recommended. |
| Picture on HDMI Input | Television has sound with no picture or abnormal picture. | <ul style="list-style-type: none">• HDMI EDID Version setting is set to a different mode than your source device.• Change the resolution output of your source device. |
| Sound on HDMI with external devices | Television has no sound. | <ul style="list-style-type: none">• Please check to be sure the device is connected to the HDMI 1 (eARC) input on the TV. |

PHILIPS

Roku TV

7875 series Quick Start Guide




Scan to register

Register your product:

www.philips.com/my-tv

- Early access to exclusive offers and more!
- Keep track of your product warranty coverage
- Get easy access to product support




Scan to download

User Manual:

www.philips.com/support

For a detailed manual, please visit our support page and enter your TV model number to download.




Scan to call

Call us:

1-833-978-3323


To obtain assistance, contact Philips customer care center, In the U.S.A., Canada, Puerto Rico, or the U.S. Virgin Islands.




Scan to chat

Chat with us:

<https://tinyurl.com/y2e29xsq>



X41G435V813A54





Printed in China


1 Using the remote

How to install the batteries in the remote

Open the battery cover by firmly sliding down. Insert 2 AAA (1.5 V) batteries matching the polarity indicated inside battery compartment of the remote.

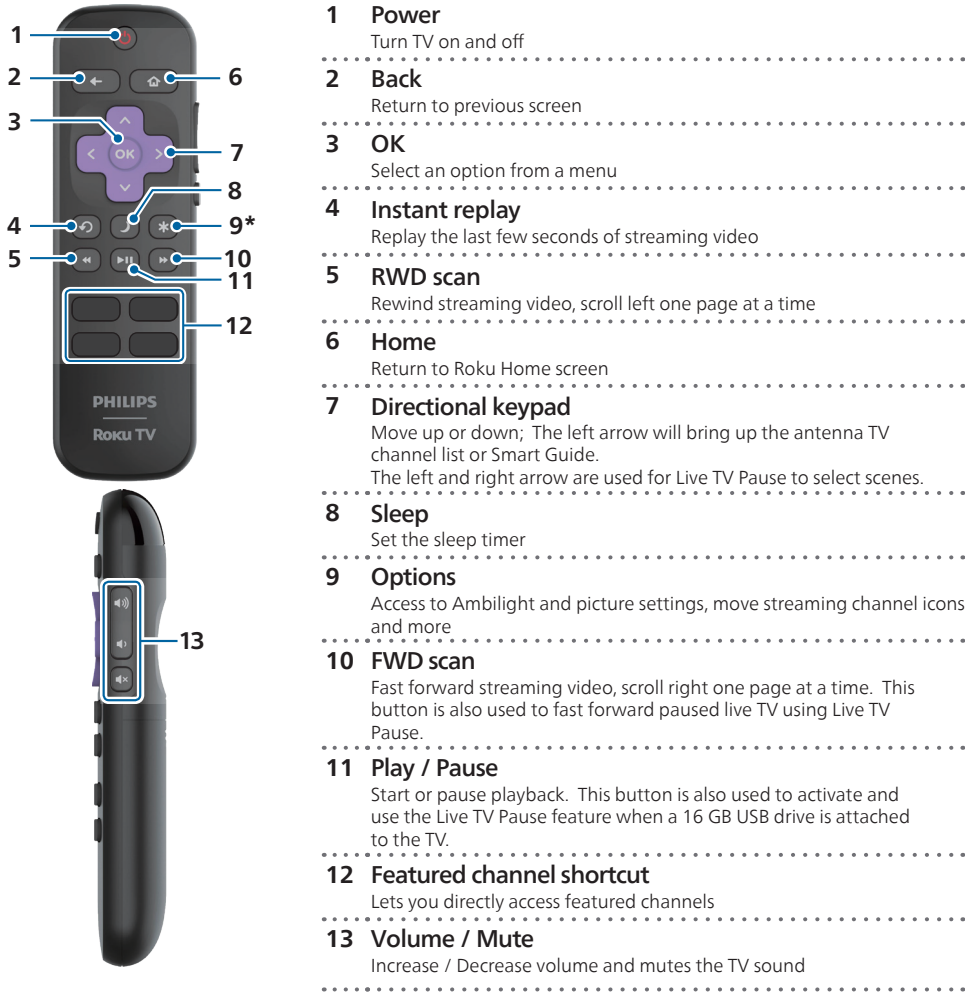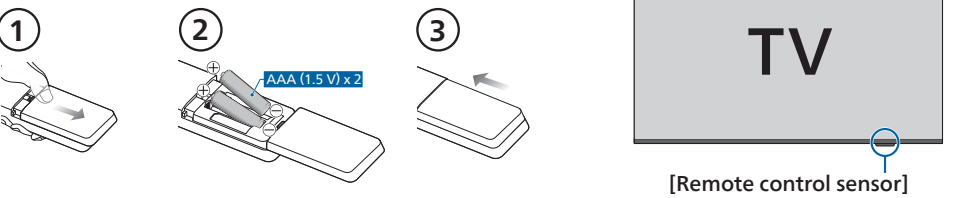

- 1 Power**
Turn TV on and off
- 2 Back**
Return to previous screen
- 3 OK**
Select an option from a menu
- 4 Instant replay**
Replay the last few seconds of streaming video
- 5 RWD scan**
Rewind streaming video, scroll left one page at a time
- 6 Home**
Return to Roku Home screen
- 7 Directional keypad**
Move up or down; The left arrow will bring up the antenna TV channel list or Smart Guide. The left and right arrow are used for Live TV Pause to select scenes.
- 8 Sleep**
Set the sleep timer
- 9 Options**
Access to Ambilight and picture settings, move streaming channel icons and more
- 10 FWD scan**
Fast forward streaming video, scroll right one page at a time. This button is also used to fast forward paused live TV using Live TV Pause.
- 11 Play / Pause**
Start or pause playback. This button is also used to activate and use the Live TV Pause feature when a 16 GB USB drive is attached to the TV.
- 12 Featured channel shortcut**
Lets you directly access featured channels
- 13 Volume / Mute**
Increase / Decrease volume and mutes the TV sound

* The  gives you easy access to picture settings, display options and more. Try it on every screen.

2 Prepare to activate your smart TV

- What you need (not included)
- **Wireless router** (needed to connect your TV to the Internet)
 - **Internet connection** (needed for streaming)
 - **Computer, tablet, or smartphone** (needed for setup)
 - **Roku account** (needed to access entertainment across thousands of streaming channels)

For additional support, please see online owner's manual at www.philips.com/support

Key things to know: A paid subscription or other payments may be required for some streaming channel content. Channel availability is subject to change and varies by country.


Your Roku account

- During guided setup, you will be prompted to create your Roku account online. See more information below.
- Roku accounts are free, and while a valid credit card number is not required to create your account, providing your credit card information makes renting and purchasing entertainment from the Roku Channel Store fast and convenient.
 - If you choose to save a payment method, you will be able to seamlessly rent content, download channels and subscribe to services without having to enter your credit card information each time.
 - A unique PIN can be added to the account to prevent unauthorized purchases.
- Tip:**
- Roku does not charge for activation support – **beware of scams.**

3 Plug in and turn on TV

Connect the AC power cord to the AC outlet. Press the power button on the TV's remote.


4 Follow the on-screen instructions



PHILIPS | Roku TV - Language

Let's get started

- English
- Deutsch
- Español
- Franghsk
- Portugals

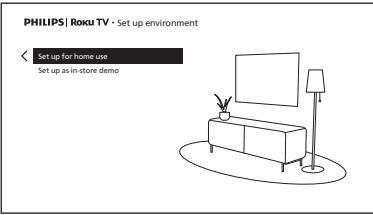

PHILIPS | Roku TV - Set up environment

Set up your home env

Set up an on-line device

5 Setting up Ambilight TV

Congratulations on your purchase of this Philips Ambilight TV. You are about to experience TV like never before. Philips Ambilight TV transforms watching TV into experiencing it, with dynamic lighting that enhances the viewing experience and more fully immerses you in content.

Please take a few minutes to familiarize yourself with the exciting ways that Ambilight TV can be configured to enhance content, from movies to gaming to even enhancing your room ambiance using Roku Backdrops while you are not watching TV.


To optimize your Ambilight TV experience, please follow the recommended installation distances noted in the Quick Install Guide and connect the TV to the internet during initial setup for a walkthrough of the Ambilight TV wall color personalization steps in the first-time setup. If you choose to use this TV in unconnected mode, you can still access the Ambilight TV personalization settings by pressing the * button during playback or navigating to the Ambilight settings under Settings in the Home Screen menu.

6 Download the Roku mobile app (optional)

- The free Roku mobile app allows you to use your mobile device as a fully functioning remote with voice search and keyboard.
- Download the Roku mobile app on your smartphone or tablet through Google Play or Apple App Store.
 - Simply search for "Roku app" and choose the "Roku" app provided by Roku Inc.
 - Follow the on-screen prompts and you are on your way.

7 Connect antenna or cable (optional)

With the tuner built-in you can connect your TV to antenna or cable (free cable only, does not work with cable TV using a set-top box) and enjoy over-the-air entertainment.

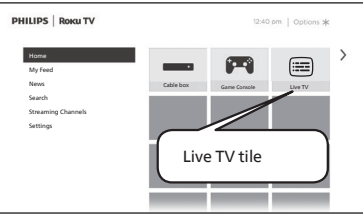

PHILIPS | Roku TV

Live TV tile

1. When the setup wizard is complete, select the Live TV tile from the home screen.
2. Follow the on-screen instructions.
3. Whenever you want to watch local broadcast TV, select this tile.

• User interface may vary.

- Tip:**
- While in the Live TV input, you can use your remote to access additional features.
- D-Pad left: Pressing this key brings up the smart guide, a list of live TV channels.
 - Play/Pause: Pause live TV for up to 90 minutes when a 16 GB USB drive is connected.
 - RWD scan and FWD scan: Allows you to fast forward and rewind while using the live TV Pause feature.
 - D-Pad left and right: Allows you to scroll through the paused live TV and select scenes.

The Philips trademark and the Philips shield emblem are registered trademarks of Koninklijke Philips N.V. used under license. Roku, Roku TV, the Roku logo, and the purple d-pad design are trademarks of Roku, Inc. All other trademarks and logos herein are the property of their respective owners.

