

13 保証とアフターサービス

保証書と修理サービスについて(必ずお読みください。)

【保証書・表面左側に付属】

•保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取っていただき内容をよくお読みのと大切に保管してください。

保証期間	お買い上げ日から2年間
対象部分	本体、充電ケーブル(シェービングユニット、保護キャップを除く)

【補修用性能部品の保有期間】

•補修用性能部品の保有期間は製造打ち切り後6年です。
•性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談は】

•修理に関するご相談ならびにご不明な点は、フィリップスサポートセンターにお問い合わせください。

【修理を依頼されるときは】

•修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。尚、異常のあるときはご使用を中止し、フィリップスサポートセンターにお問い合わせください。

【保証期間中は】

•製品と保証書をご用意いただき、フィリップスサポートセンターにお問い合わせください。保証書の記載内容により無料修理いたします。

【保証期間が過ぎているときは】

•修理によって製品の機能が維持できる場合は、補修用性能部品の保有期間内であれば、ご希望により有料で修理させていただきます。

【海外での本製品の保証及びアフターサービスについて】

•本製品の保証は海外においても有効です。(同シリーズ製品の取り扱いがある国に限ります)
•日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。
•海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お困りの点がございましたら下記までご連絡ください。

Philips Service Department P.O.Box 20100 9200 Ca Drachten The Netherlands, http://www.philips.com/support

【お客様の個人情報のお取り扱いについて】

•お受けましたお客様の個人情報は、株式会社フィリップス・ジャパンのホームページ http://www.philips.co.jp/ に掲載されている「プライバシーに関する通知」に基づき適切に管理いたします。

便利メモ			
お買い上げ日	年	月	日
お買い上げ店名	電話番号	()

ご使用の時、このような症状はありませんか？

- 本体にさわると時々電気を感じる。
- こげくさい臭いがする。
- 充電ケーブルを動かすと通電したり、しなかつたりする。
- その他の異常、故障がある。

このような症状の際は、故障や事故防止のため、電源をOFFにし、充電アダプタをコンセントから外して、必ずフィリップスサポートセンターにお問い合わせください。

※改良の為、仕様を予告なく変更することがあります。

14 仕様

品番	S2883/00
ハンドル品番	S2883
替刃品番	5H30
本体寸法(高さ×幅×奥行)	163×63×58 mm
本体質量	約144 g
電源方式	充電式
定格入力	DC5 V 1 A
充電時間	約1時間
使用時間	約35分
使用充電電池	ニッケル水素電池 (Ni-MH)

※改良の為、仕様を予告なく変更することがあります。

<p>株式会社 フィリップス・ジャパン</p> <p>〒106-0041 東京都港区麻布台 1-3-1 麻布台ヒルズ森JPタワー 15階</p>

15 無料修理規定

【無料修理規定】

- 取扱説明書、本体貼付ラベル等の注意書に従った正常な使用状態で保証期間内に故障した場合には、無料修理します。
- 保証期間内に故障して無料修理をお受けになる場合には、フィリップスサポートセンターにお問い合わせください。
- ご贈答品の修理に関するご相談は、フィリップスサポートセンターにお問い合わせください。
- 保証期間内でも次の場合には有料修理になります。

- ①使用上の誤り及び不当な修理や改造による故障及び損傷。
- ②お買い上げ後の輸送、移動、落下等による故障及び損傷。
- ③火災、地震、水害、落雷、その他の天災地変、公署や異常電圧による故障及び損傷。
- ④一般家庭以外(例えば、業務用の長時間使用)に使用された場合の故障及び損傷。
- ⑤保証書の提示がない場合。
- ⑥保証書にお買い上げ年月日、お客様名、販売店名の記入のない場合、或は字句を書き換えられた場合。

※保証書は、本書に明示した条件のもとにおいて無料修理をお約束するものです。従って保証書を発行している者(保証責任者)、及びそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。


保証期間経過後の修理についてご不明の場合は、フィリップサポートセンターにお問い合わせください。

※保証期間経過後の修理・補修用性能部品の保有期間について詳しくは取扱説明書の保証とアフターサービスの項目をご覧ください。

※お客様にご記入いただいた個人情報(保証書の控え)は保証期間内のサービス活動及びその後の安全点検活動のために利用させていただく場合がございます。ご了承ください。また個人情報は、株式会社フィリップス・ジャパンのホームページ http://www.philips.co.jp/ に掲載されている「プライバシーに関する通知」に基づき適切に管理いたします。

ENGLISH

1

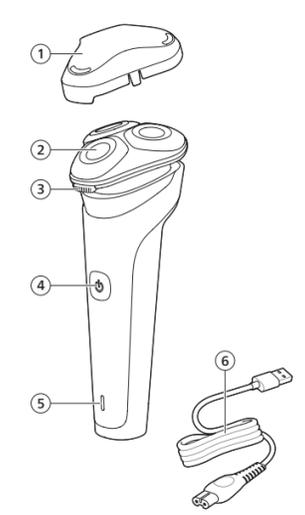

English

Important safety information

Only use the product for its intended household purpose. Read this important information carefully (Fig. 2) before you use the product and its batteries and accessories, and save it for future reference. Misuse can lead to hazards or serious injuries. The accessories supplied may vary for different products.

Warning

- To charge the product, only use a certified safety extra low voltage (SELV) supply unit with output rating 5 V, ≥ 1 A. For safe charging in a moist environment (e.g. in a bathroom), only use an IPX4 (splash-proof) supply unit. A suitable supply unit (e.g. Philips HQ87) is available via www.philips.com/support. If you need support finding the correct USB supply unit, contact the Consumer Care Center in your country (see the international warranty leaflet for contact details). Using a non-certified supply unit may cause hazards or serious injuries.

- Keep the USB cable, the USB supply unit and the charging stand (if provided) dry (Fig. 3).

- This appliance is waterproof (Fig. 4). It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the appliance can therefore only be used without cord.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Do not modify the supply unit.

- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.

- Do not use a damaged appliance. Replace damaged parts with new Philips parts.

- Because of hygiene, only one person should use the appliance.

- Unplug the appliance before cleaning it with water.

- Only use cold or lukewarm water to clean the appliance.

- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids to clean the appliance.

- Water may drip from the socket at the bottom of the appliance when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the appliance.

- Only use original Philips accessories or consumables.

- Charge, use and store the product at a temperature between 10 °C and 35 °C.

- Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures.

- If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact Philips.

- Do not place products and their batteries in microwave ovens or on induction cookers.

- Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries.

- If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at **www.philips.com/welcome**.

General description (Fig. 1)

- Protection cap
- Shaving unit
- Shaving unit release button
- On/off button
- Charging light
- USB cable

Note: A suitable supply unit (e.g. Philips HQ87) is available via www.philips.com/support.

Charge indications

Battery low

When the battery is almost empty (when there are only 5 or fewer shaving minutes left), the charging light flashes orange (Fig. 5).

When you switch off the product, the charging light continues to flash orange for a few seconds.

Charging

When the shaver is charging, the charging light flashes green (Fig. 5).

Battery fully charged

When the battery is fully charged, the charging light lights up green continuously (Fig. 6).

Note: After approx. 1 minute, the charging light goes out to save energy.

Quick charge

When you start charging the empty battery, the charging light flashes green quickly. After approx. 5 minutes the charging light flashes green slowly. The shaver now contains enough energy for a 5-minute shave.

Charging

Charge the shaver when the charging light indicates that the battery is almost empty.

- Charging takes approx. 1 hour.
- Quick charge: After approx. 5 minutes of charging, the battery contains enough energy for one full shave.
- A fully charged shaver has a shaving time of up to 35 minutes.

Note: When you charge the shaver for the first time or after a long period of disuse, let it charge until the charging light lights up continuously.

Note: You cannot use the appliance while it is charging.

Charging with a USB supply unit

Warning: Keep the USB cable and the USB supply unit dry (Fig. 3).

- Make sure that the appliance is switched off.
- Insert the small plug of the USB cable into the socket in the bottom of the appliance.
- Insert the USB plug into the USB supply unit (not provided) (Fig. 7).
- Insert the USB supply unit into the wall socket (Fig. 8).
- The charging light shows the charging status of the appliance (see 'Charge indications').
- After charging, remove the USB supply unit from the wall socket, pull the USB plug out of the supply unit and then pull the small plug out of the appliance.

Using the appliance

Warning: Always check the appliance and all accessories before use. Do not use the appliance or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

Note: This appliance is waterproof (Fig. 4). It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the appliance can therefore only be used without cord.

Switching the appliance on and off

- To switch on the appliance, press the on/off button once (Fig. 9).
- To switch off the appliance, press the on/off button once (Fig. 9).

Shaving

For the best results on skin comfort, pre-trim your beard if you have not shaved for 3 days or longer. You can use this appliance either wet or dry, or even in the shower. For a wet shave, apply some water and shaving foam or gel to your skin and rinse the shaving heads under the tap with warm water before following the steps below.

- Switch on the appliance (Fig. 9).
- Move the shaver in circular movements over your skin to catch hair growing in all directions (Fig. 10). Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, as this can cause skin irritation.

Note: If you are shaving with gel or foam, rinse the shaving unit regularly during your shave to ensure that it continues to glide smoothly over your skin (Fig. 11).

- Use the narrow sides of the shaving unit to shave in hard-to-reach areas such as along your jawline and under your nose.
- Switch off and clean the appliance after each use (see 'Cleaning and maintenance').
- Put the protection cap on the shaver after use to prevent the shaving heads from becoming damaged and dirty.

Note: Make sure you rinse all foam or shaving gel off the appliance.

Skin adaptation period

Your first shaves may not bring you the result you expect and your skin may even become slightly irritated. This is normal. Your skin and beard need time to adapt to any new shaving system. To allow your skin to adapt to this new appliance, we advise you to shave regularly (at least 3 times a week) and exclusively with this appliance for a period of 3 weeks.

Cleaning and maintenance

Cleaning the shaver

Clean the shaver after every shave for optimal shaving performance.

Water may drip from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.

- Switch on the shaver.
- Rinse the shaving unit with cold or lukewarm water (Fig. 11).
- Switch off the shaver. Press the shaving unit release button to open the shaving unit (Fig. 12).
- Rinse the shaving unit and hair chamber with lukewarm water (Fig. 13).
- Rinse the outside of the shaving unit with lukewarm water.
- Carefully shake off excess water and let the shaver air dry.

Caution: Never dry the shaving unit with a towel or tissue, as this may damage the shaving heads (Fig. 14).

- Close the shaving unit.

Thorough cleaning

Clean the shaving heads thoroughly once a month for optimal performance.

- Switch off the shaver.
- Press the shaving unit release button to open the shaving unit. Pull the shaving unit off the shaver (Fig. 15).
- Turn the retaining rings anticlockwise and remove them (Fig. 16). Place them aside in a safe place.
- Remove and clean one shaving head at a time. Each shaving head consists of a cutter and a guard (Fig. 17).

Note: Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally mix up the cutters and guards, it may take several weeks before optimal shaving performance is restored.

- Remove the cutter from the shaving guard and clean both parts under the tap (Fig. 18).
- Put the cutter back into the guard (Fig. 19).
- Put the shaving heads back into the shaving unit.

Note: Your shaver contains either shaving heads with projections or shaving heads with notches. In case of shaving heads with projections, make sure that the projections fit exactly into the recesses of the shaving head holder. In case of shaving heads with notches, make sure that the notches fit exactly onto the projections of the shaving head holder (Fig. 20).

- Place the retaining rings back onto the shaving heads, and turn the retaining rings clockwise to reattach them (Fig. 21).

Note: Each retaining ring has two projections that fit exactly into the recesses of the shaving head holder. Turn the ring clockwise until you hear a click to indicate that the ring is fixed (Fig. 22).

- Insert the hinge of the shaving unit into the slot in the top of the shaver. Then close the shaving unit (Fig. 23).

Replacement

Replacing the shaving heads

For maximum shaving performance, we advise you to replace the shaving heads every two years (Fig. 24). Replace damaged shaving heads immediately. Always replace the shaving heads with original Philips shaving heads (see 'Ordering accessories').

- Switch off the shaver.
- Press the shaving unit release button to open the shaving unit. Pull the shaving unit off the shaver (Fig. 15).
- Turn the retaining rings anticlockwise and remove them (Fig. 16). Place them aside in a safe place.
- Remove the shaving heads from the shaving unit. Discard the used shaving heads immediately to avoid mixing them with the new shaving heads (Fig. 25).
- Place new shaving heads in the shaving unit.

Note: Your shaver contains either shaving heads with projections or shaving heads with notches. In case of shaving heads with projections, make sure that the projections fit exactly into the recesses of the shaving head holder. In case of shaving heads with notches, make sure that the notches fit exactly onto the projections of the shaving head holder (Fig. 20).

- Place the retaining rings back onto the shaving heads, and turn the retaining rings clockwise to reattach them (Fig. 21).

Note: Each retaining ring has two projections that fit exactly into the recesses of the shaving head holder. Turn the ring clockwise until you hear a click to indicate that the ring is fixed (Fig. 22).

- Insert the hinge of the shaving unit into the slot in the top of the shaver. Then close the shaving unit (Fig. 23).

Storage

Put the protection cap on the shaver after use to prevent the shaving heads from becoming damaged and dirty.

Note: Always let the shaver dry completely before storing.

Ordering accessories

To buy accessories or spare parts, visit **www.philips.com/parts-and-accessories** or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

The following accessory is available:

- SH30 replacement Philips shaving heads

Support

For all product support, please visit **www.philips.com/support**.

Recycling

- This symbol means that electrical products and batteries shall not be disposed of with normal household waste (Fig. 26).
- Follow your country's rules for the separate collection of electrical products and batteries.

Removal of built-in rechargeable battery

The built-in rechargeable battery must only be removed by a qualified professional when the appliance is discarded. Before removing the battery, make sure that the appliance is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the appliance and when you dispose of the rechargeable battery.

When you handle batteries, make sure that your hands, the product and the batteries are dry.

To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard them.

Be careful, the battery strips are sharp.

- Press the shaving unit release button to open the shaving unit. Pull the shaving unit off the shaver (Fig. 15).
- Remove the two screws inside the hair chamber (Fig. 27).

- Pull the hair chamber upwards to remove it (Fig. 28).

- Insert a flathead screwdriver into the slot in the bottom of the shaver, and push the power unit out of the housing (Fig. 29).

- Cut the wires with a pair of cutting pliers or scissors (Fig. 30).

- Use a screwdriver to pry off the the printed circuit board (Fig. 31).

- Break the battery tabs with a pair of cutting pliers, and remove the batteries (Fig. 32).