

PHILIPS




Televisión

Guía de inicio rápido













Serie 6920



   Herramienta necesaria para el ensamble

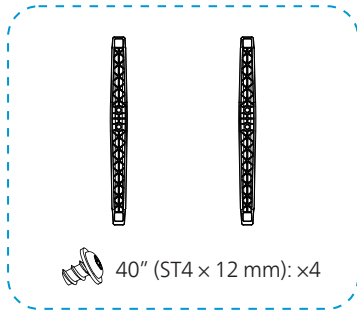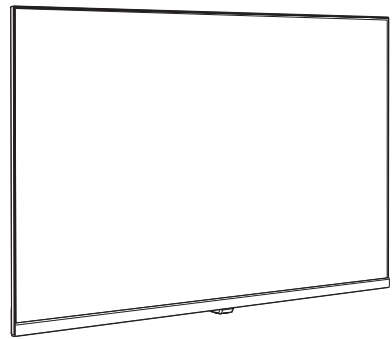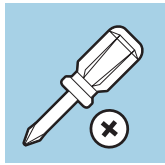


ST: Tornillo de rosca tipo cruz plano

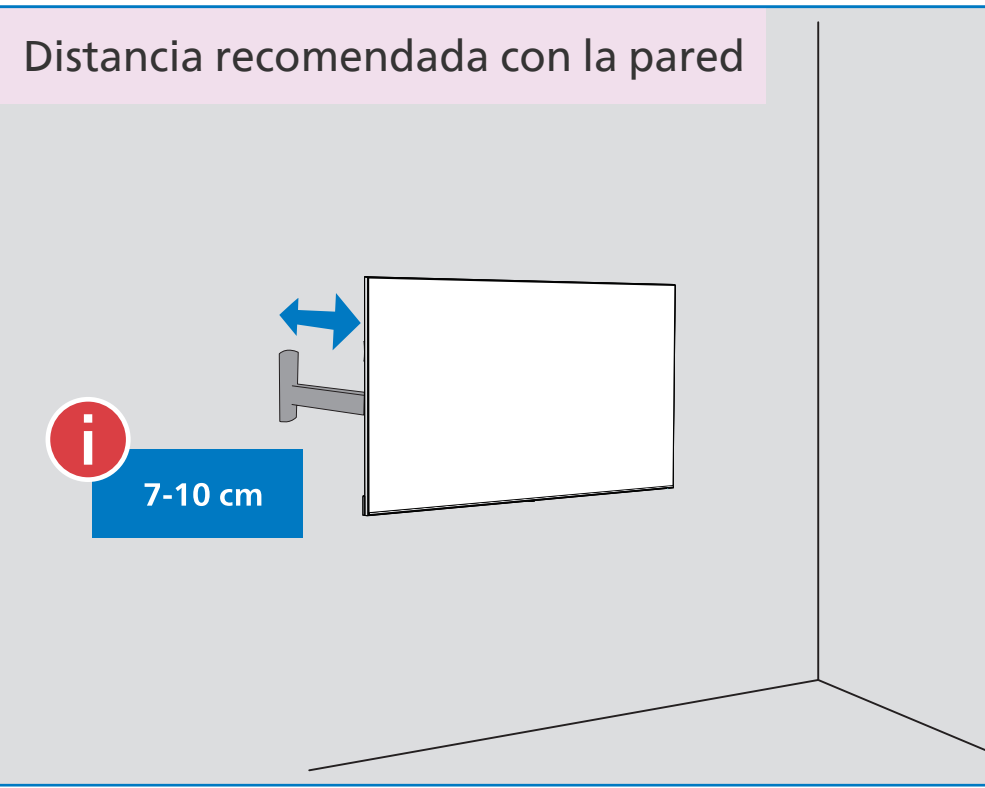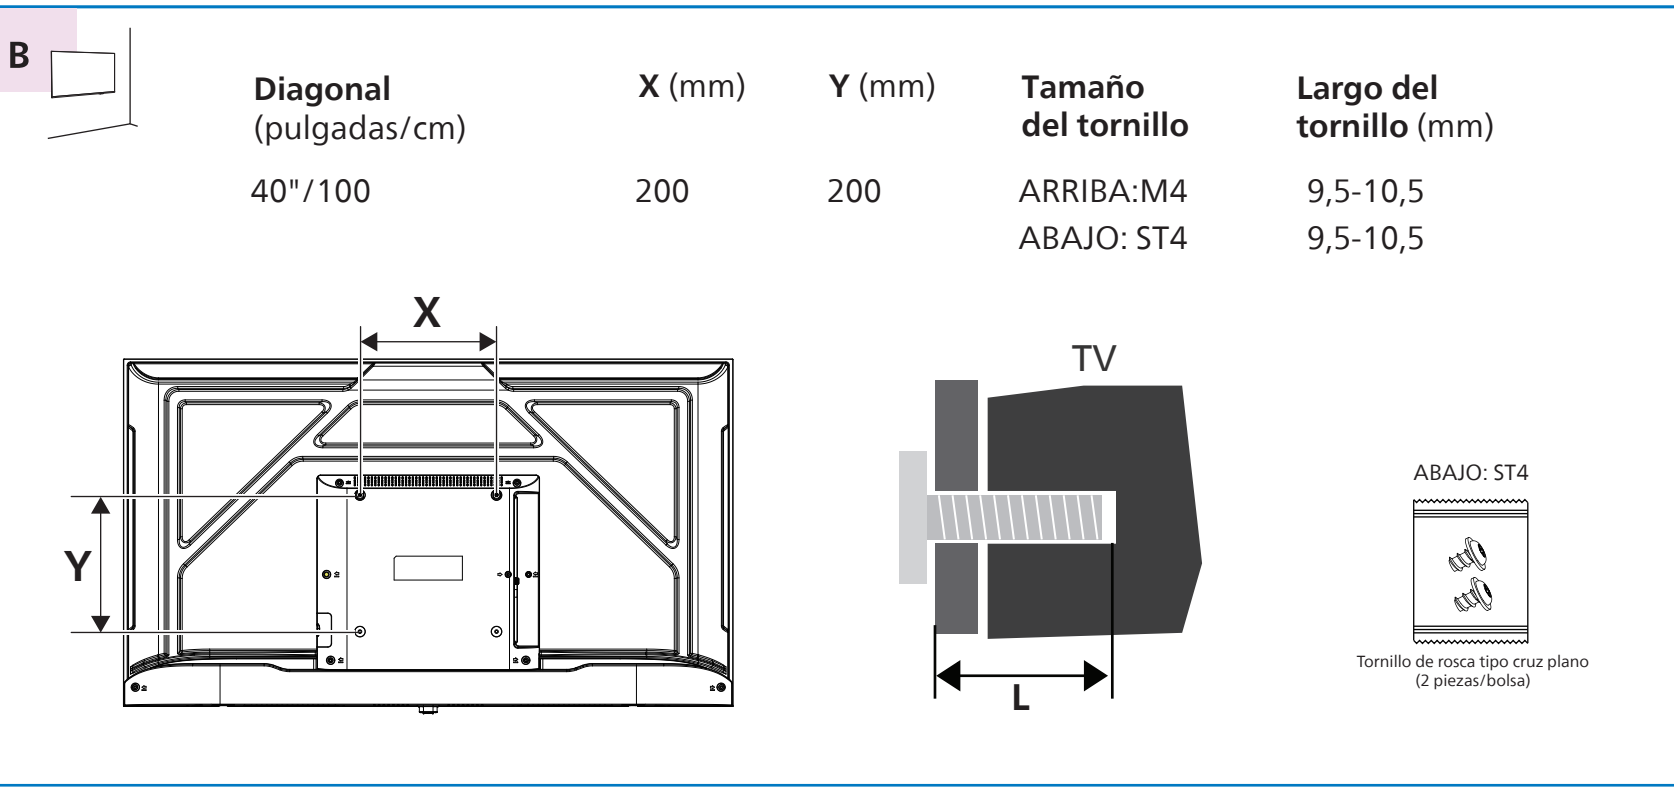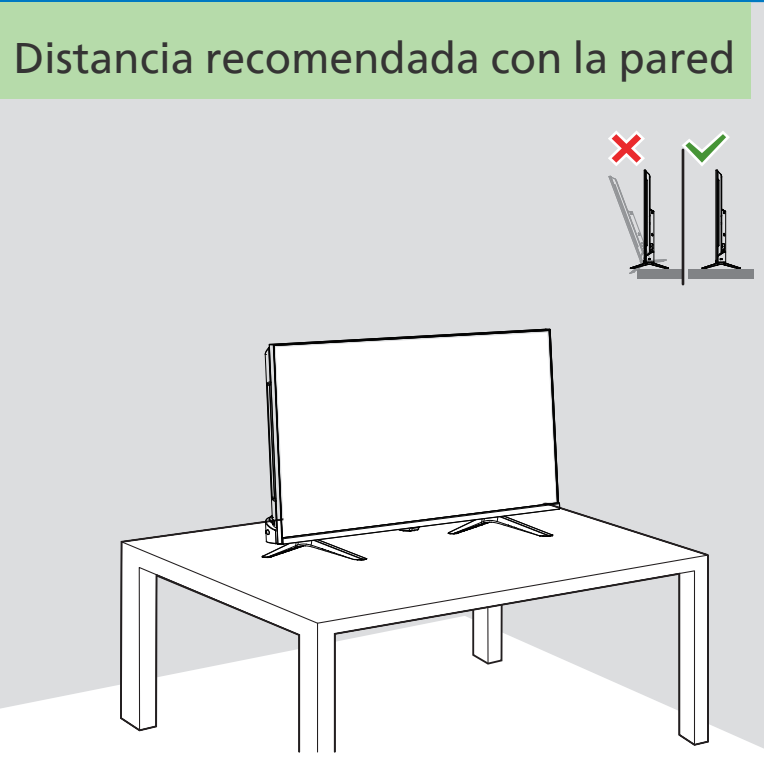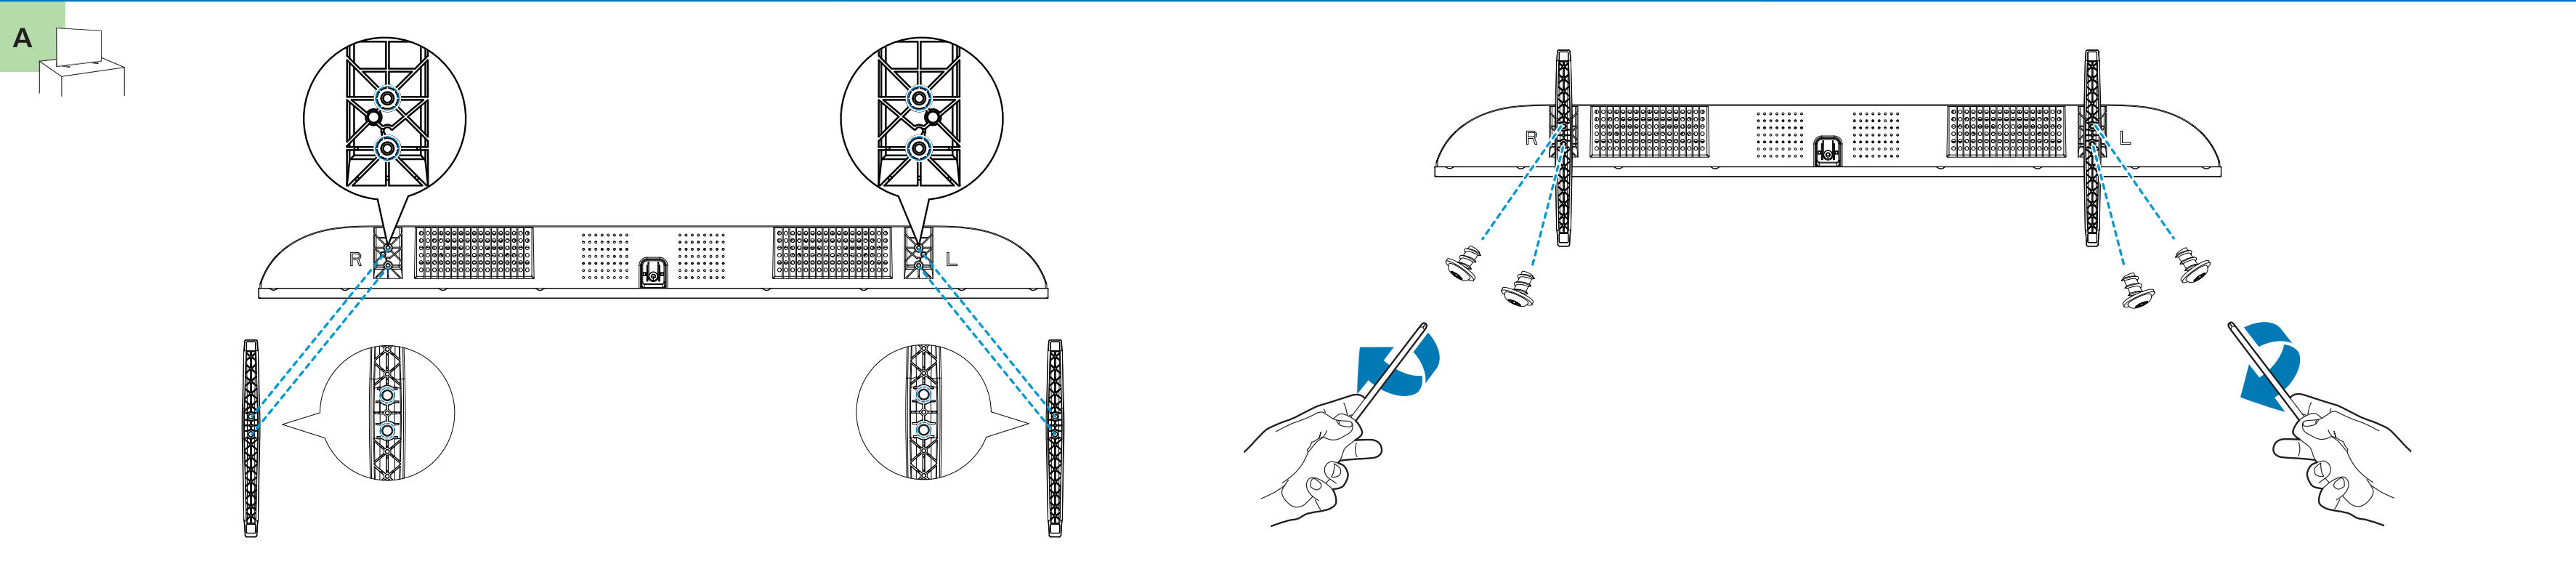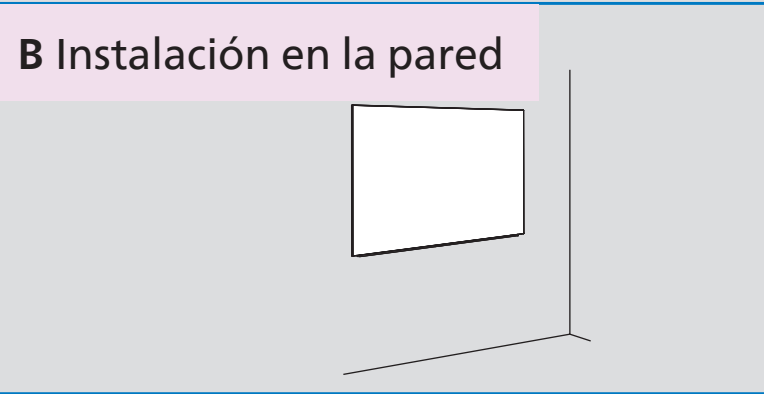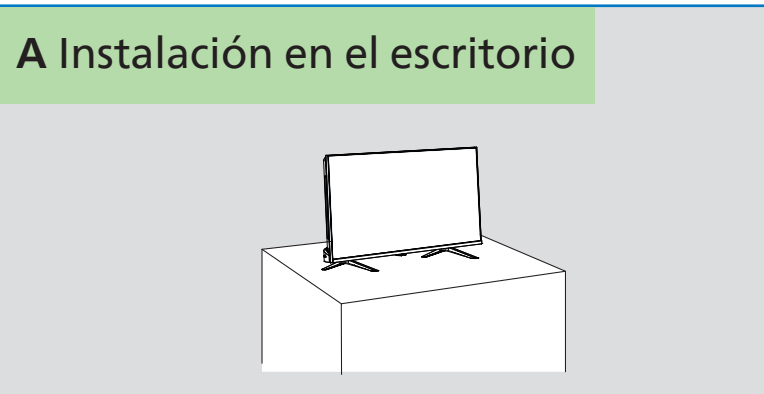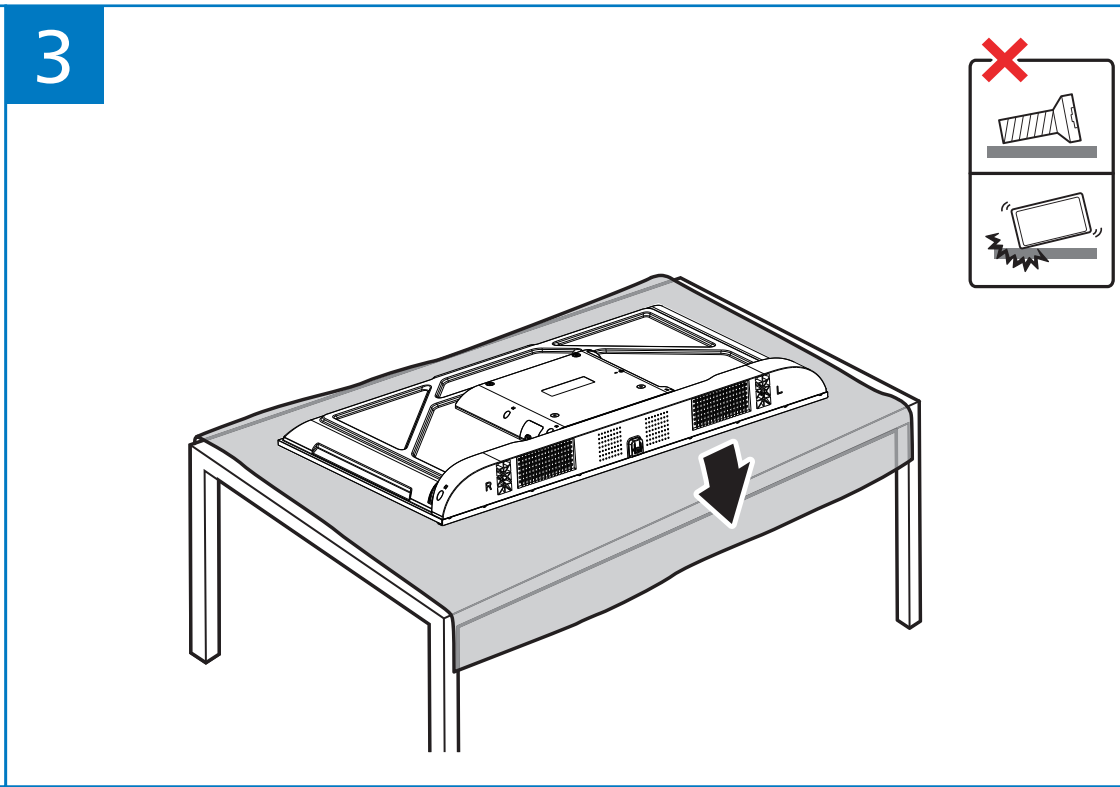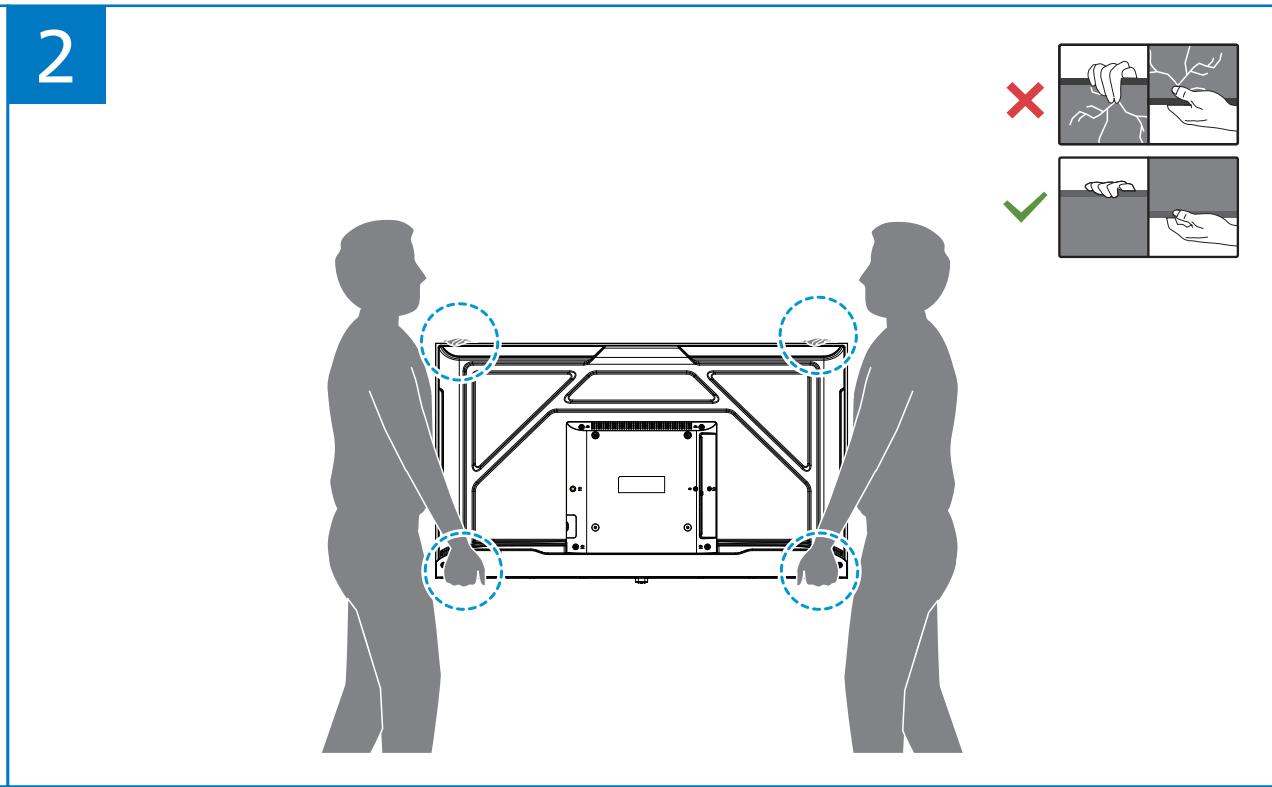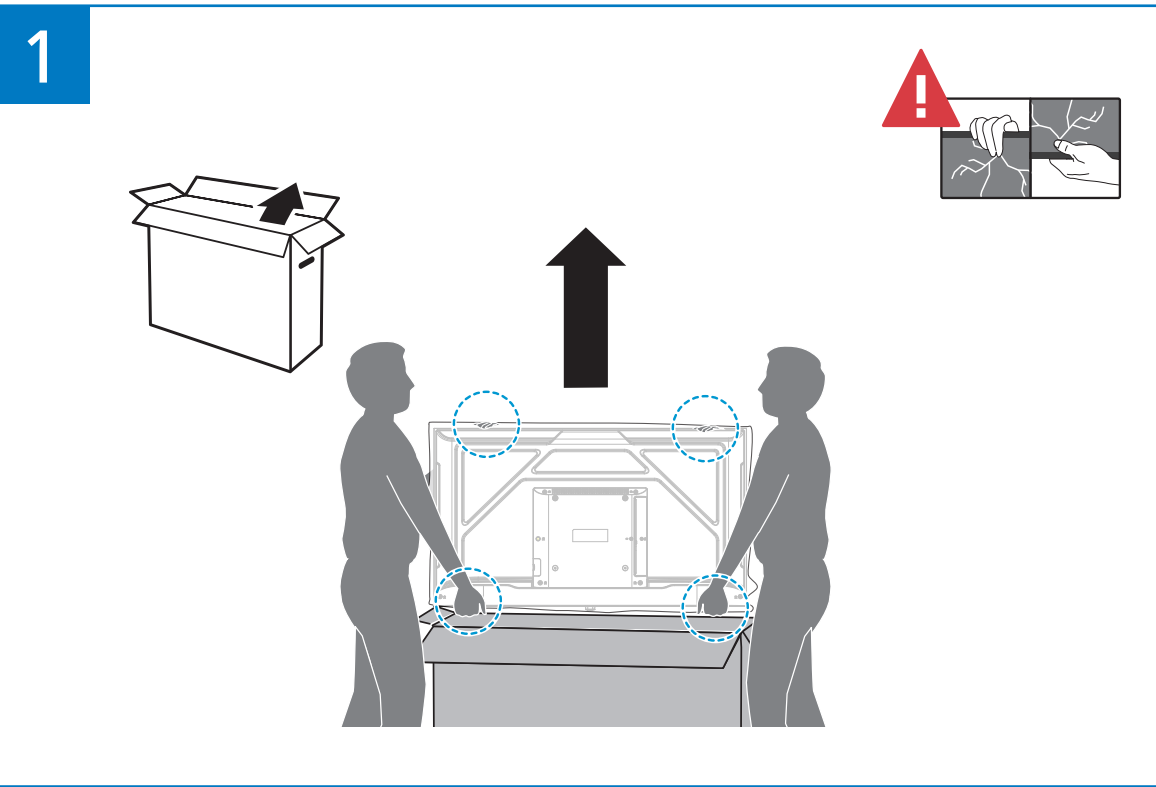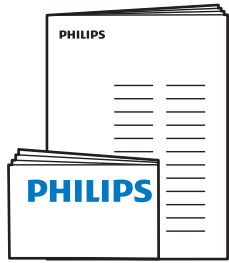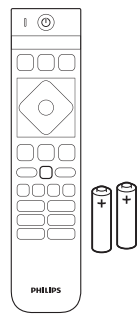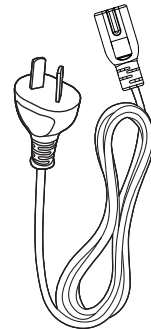            




1

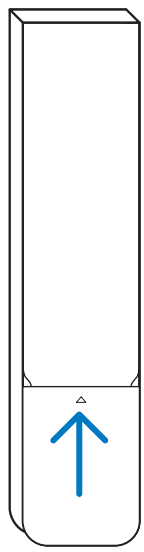 

Para instalar las baterías, deslice la tapadel compartimiento de las baterías hacia arriba.



 
1 2
3 4

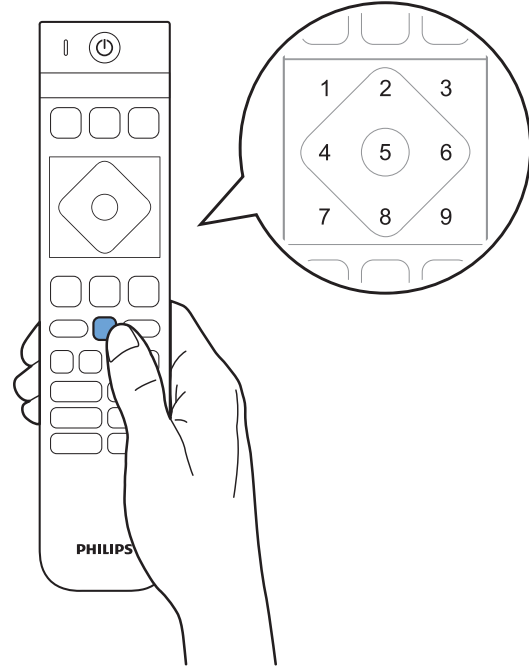

English
Español


Read the safety instructions.
Lea la información de seguridad.

 2



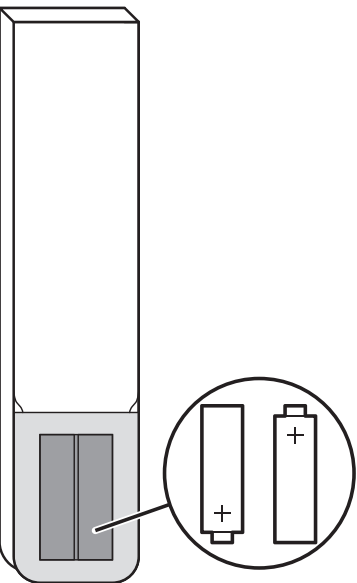


Usa 2 pilas AAA
R03P 1,5 V (incluido)

 3

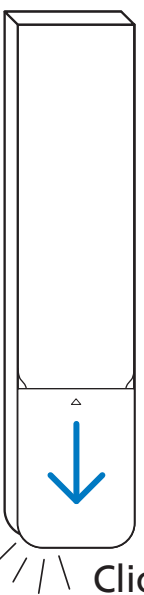

   Deslice la tapa del compartimiento nuevamente a su lugar.

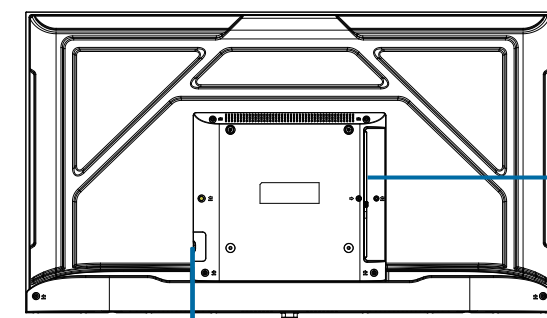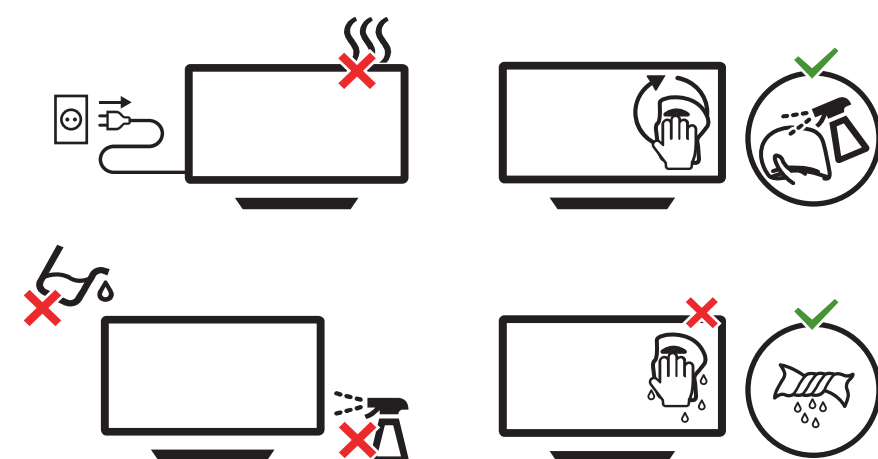

POWER

NETWORK

HDMI 2









HDMI 1
ARC

TV
ANTENNA

MINI AV-IN

USB-2
USB-1
5V 500mA

        DIGITAL
AUDIO OUT

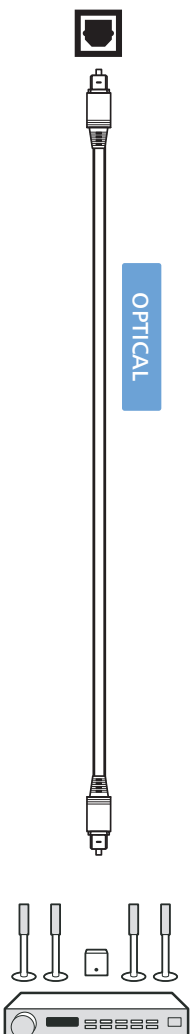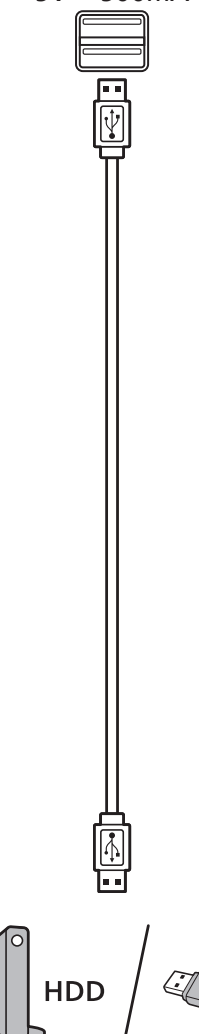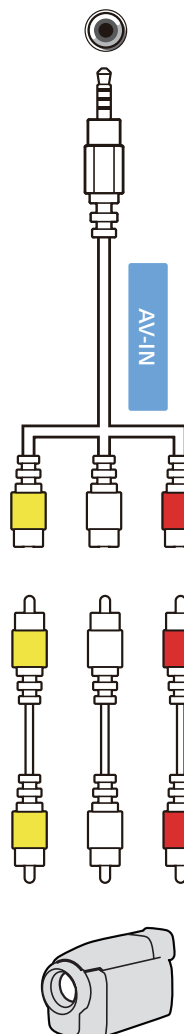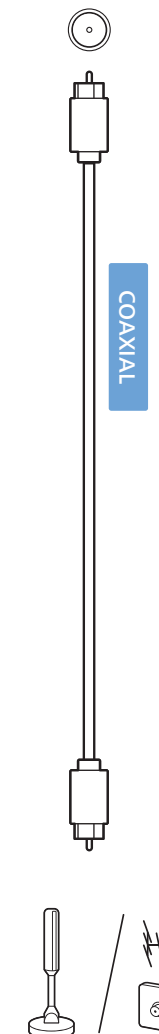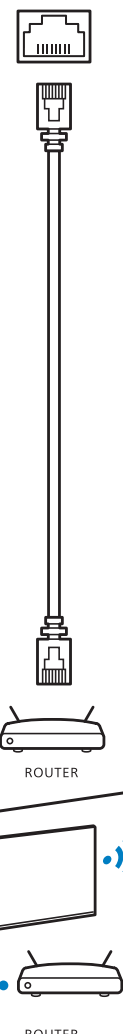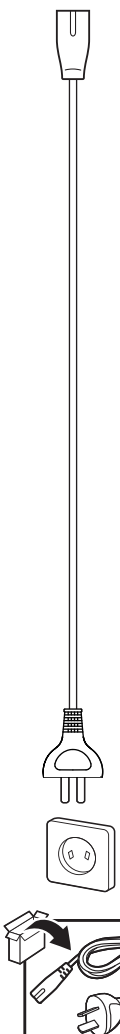

All registered and unregistered trademarks are property of their respective owners.
Specifications are subject to change without notice.
Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V.
and are used under license.
This product has been manufactured by and is sold under the responsibility of TP Vision
Europe B.V., and TP Vision Europe B.V. is the warrantor in relation to this product.
2025 © TP Vision Europe B.V. All rights reserved.
www.philips.com/welcome