


随附的附件可能因产品而异。 包装盒上会显示随附于您产品的附件。

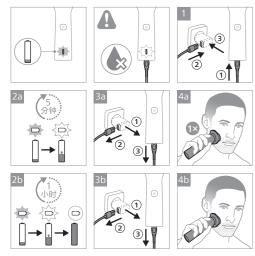





(




















清洁修剪器

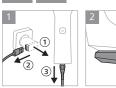



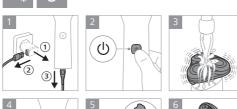

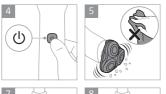













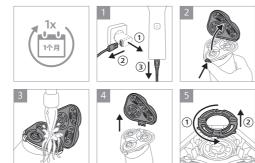

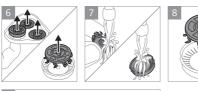

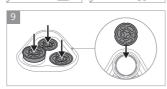



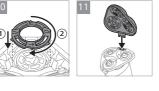

























Important safety information

Only use the product for its intended purpose. Read this important information carefully before you use the product and its batteries and accessories, and save it for future reference. Misuse can lead to hazards or serious injuries. Accessories supplied may vary for different products.

Warning

- The supply unit is not included. To charge the product, only use a supply unit that complies with China GB standard GB4706.1-2005, 5 V ---, ≥ 1 A, IPX4, in order to guarantee electrical safety. We advise using Philips HQ87, or an equivalent certified supply unit. To obtain HQ87, please consult the Philips service hotline. Using a noncertified supply unit may cause hazards or serious injuries.
- This shaver is waterproof (Fig. 2). It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can therefore only be used without cord.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Do not modify the supply unit.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.
- Do not use a damaged appliance. Replace damaged parts with new Philips parts.
- Because of hygiene, only one person should use the appliance.
- Unplug the appliance before cleaning it with water.
- Only use cold or lukewarm water to clean the appliance.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids to clean the
- Water may drip from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.
- Only use original Philips accessories or consumables.
- Charge, use and store the product at a temperature between 10 °C and 35 °C.
- Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures.
- If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact Philips.
- Do not place products and their batteries in microwave ovens or on induction cookers.
- Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries.
- If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

For all product support such as frequently asked questions, please visit www.philips.com/support.

Recycling

- This symbol means that electrical products and batteries shall not be disposed of with normal ousehold waste (Fig. 3).
- Follow your country's rules for the separate collection of electrical products and batteries.

Troubleshooting

Problem	Possible cause	Solution
The appliance does not work when I press the on/off button.	The appliance is still connected to a power source. For safety reasons, the appliance can only be used without cord.	Unplug the appliance and press the on/off button to switch on the appliance.
	The rechargeable battery is empty.	Recharge the battery.
	The travel lock is activated.	Connect the shaver to the power outlet to deactivate the travel lock.
	The shaving unit is soiled or damaged to such an extent that the motor cannot run.	Clean the shaving heads thoroughly or replace them.



X5009



>75 % recycled paper

用备留料 >75% 循环再造纸 (2202/30/21) 1.2798.480.0008 All rights reserved © 2022 Koninklijke Philips N.V.



	Problem	Possible cause	Solution
	The appliance does not shave as well as it used to.	Hairs or dirt obstruct the shaving heads.	Clean the shaving heads thoroughly.
		The shaving heads are damaged or worn.	Replace the shaving heads.
	Water is leaking from the bottom of the appliance.	During cleaning, water may collect between the inner body and the outer shell of the appliance.	This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the appliance.

Removal of built-in rechargeable battery

The built-in rechargeable battery must only be removed by a qualified professional when the appliance is discarded. Before removing the battery, make sure that the appliance is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the appliance and when you dispose of the rechargeable battery.

When you handle batteries, make sure that your hands, the product and the batteries are

To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard

Only remove the battery if it is completely empty.

- 1 Pull the shaving unit off the shaver.
- Use a flathead screwdriver to remove the top cap of the housing.
- 3 Remove the screws.
- 4 Pull the inner parts out of the housing. If necessary, use a pair of pliers.
- 5 Remove the rechargeable battery.









重要安全信息

仅可将本产品用于预期用途。 使用本产 品及其电池和附件之前,请仔细阅读本 重要信息,并妥善保管以供日后参考。 误用可能会导致危害或严重伤害。 随附 的附件可能因产品而异。

警告

- 不包含电源适配器。要为本产 品充电,使用者必须使用符合 GB4706.1-2005标准的5 V ...,≥ 1 A, IPX4电源适配器, 以确保电气 安全。我们建议使用飞利浦电源适 配器 HQ87或同等且经认证的电源 适配器。请咨询飞利浦服务热线以 获得HQ87。使用未经认证的电源适 配器可能会导致 危害或严重伤害。
- 警告符号注释(图 1):禁止在打开 的水龙头下清洗USB线缆和电源部 件(需单独购买),请保持相关部 件干燥。
- 该剃须刀具有防水性能(图 2)。适 合在沐浴或淋浴时使用, 也可以放 在水龙头下清洗。 出于安全原因, 该剃须刀在使用时不能连接电线。
- 符号注释:适合于在洗澡或淋浴时 使用(图2)。允许在盛水的浴缸、 淋浴、洗脸盆或其他器皿附近使用 本器具。
- 本产品也可以由8岁或以上年龄的 儿童以及肢体不健全、感觉或精神 上有障碍或缺乏相关经验和知识的 人士使用,但前提是有人对他们使 用本产品进行监督或指导,以确保 他们安全使用,并且让他们明白相 关的危害。 切勿让儿童玩弄本产 品。 不要让儿童在无人监督的情况 下对本产品进行清洁和保养。
- 请勿改装电源部件。

(

- 请勿在包含电动空气清新器的墙壁 插座上或其周围使用电源部件,以 免电源部件受到不可修复的损坏。
- 请勿使用已经损坏的产品。 请用新 的飞利浦部件更换损坏的部件。
- 出于卫生考虑,仅能由一个人使用 本产品。
- 用水清洁产品前,请先将电源插头 拔掉
- 请仅使用冷水或温水清洁产品。
- 切勿使用压缩气体、钢丝绒、研磨 性清洁剂或腐蚀性液体清洁设备。
- 冲洗剃须刀时,水可能从产品底部 的插口漏出。 这是正常的,而且没 有危险,因为所有电子元件都封闭 在剃须刀内部的密封电源部件中。
- 请仅使用飞利浦原装附件或消耗 品。
- 充电、使用和存放本产品的温度应 介于 10°C至 35°C 之间。
- 请将产品和电池远离火源,切勿将 其暴露于阳光直射处或高温下。
- 如果产品异常发热或发出异味、变 色或充电时间比平时长, 请停止使 用并停止为其充电,并联系飞利
- 切勿将产品及其电池放置在微波炉 中或电磁炉上。
- 为防止电池发热或释放有毒有害物 质,切勿打开、改装、刺穿、损坏 或拆卸产品或电池。 切勿使电池短 路、过度充电或反向充电。
- 如果电池损坏或出现泄漏,请避免 与皮肤或眼睛接触。 如果不慎接 触,请立即用清水冲洗并就医。

电磁场 (EMF)

本 Philips 产品符合所有有关暴露于电 磁场的适用标准和法规。

支持

有关常见问题等所有产品支持, 请访问 www.philips.com/support。

回收

- 此符号表示电器产品和电池不能与 一般的生活垃圾一同弃置 (图 3)。
- 请遵守您所在国家/地区有关分类回 收电器产品和电池的规定。

故障处理方法

问题 可能的原因 解决方法

产品仍连接电 拔掉产品插 按下开/ 头并按开/关 关钮 源。出于安 时,产 全原因,本产 按钮打开产 品不工 品在使用时 品。 不能连接电 线。

充电电池的电 给电池充电。 量已耗尽。

旅行锁已被激 将剃须刀连接 到电源插座 活。 上,以禁用旅 行锁。

剃须刀头部件 彻底清洁剃须 被污染或损 刀头或将其更 坏,导致马达 换。 无法运行。

刀头。

产品的 毛发或污垢堵 彻底清洁剃须 剃须 效 塞了剃须刀 果不 头。 如以前 好。

水从产

品底部

漏出。

剃须刀头已损 更换剃须刀 坏或磨损。 头。

在清洁过程 这是正常现 中, 水可能聚 象, 而且没有 集在产品的机 危险, 因为所 身内部与外壳 有电子元件都 封闭在产品内 之间。 部的密封电源 部件中。

取出内置充电电池

丢弃产品时,必须仅由有资质的专业 人员取出内置充电电池。 取出电池之 前,请确保产品与电源插座断开连接并 且电池电量已完全耗尽。电池应安全地 处置。

当您使用工具打开产品时以及在您弃置 充电电池时,请采取必要的安全保护措

处理电池时,请确保您的双手、产品和 电池都是干燥的。

为避免电池拆卸后发生意外短路,切勿 让电池端子接触金属物体(例如硬币、 发夹、戒指)。 切勿用铝箔包裹电池。 在丢弃之前,请用胶带将电池端子粘住 或将电池放在塑料袋中。

仅在电池电量完全耗尽后方可取出电 池。

- 将剃须刀头部件拉出剃须刀。 1
- 用平头螺丝刀卸下外壳的顶盖。
- 卸下螺丝。
- 从外壳中抽出内部部件。 如有必 要,可使用钳子。
- 5 取出充电电池。

- 该表格中所显示的"有害物质"在产 品正常使用情况下不会对人身和环 境产生任何伤害。
- 该表格中所显示的"有害物质"及其 存在的部件向消费者和回收处理从 业者提供相关物质的存在信息,有 助于产品废弃时的妥善处理。

保留备用

发行日期: 15/06/2022

产品中有害物质的名称及含量								
	有害物质							
部件名称 	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)		
PCB's 集成电路板	х	0	0	0	0	0		
Electrical contact pins 电接触片	x	0	0	0	0	0		
Power plug 电源插头	х	0	0	0	0	0		
Internal metal parts 内部金属件	x	0	0	0	0	0		
本表格依据SJ/T 11364的规定编制。								

O:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。 X: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求

PHILIPS

产品: 飞利浦电动剃须刀 一种 : 「利用电视剂次月 型号: X5001 额定电压: 3.6V === 额定输入功率: 1.6W 充电电压/电流: 5V ===/1A 生产日期: 请见产品本体 IPX7 产地:中国广东珠海

珠海经济特区飞利浦家庭电器有限公司 珠海市金湾区三灶镇定湾二路365号 全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005 GB4706.9-2008制造

不包含电源适配器。使用者必须使用符合GB4706.1-2005标准的5V=== 、≥1A、 IPX4电源适配器,以确保电气安全。

PHILIPS

产品: 飞利浦电动剃须刀 型号: X5002 额定电压: 3.6V= IPX7 额定输入功率: 1.6W 充电电压/电流: 5V===/ 生产日期: 请见产品本体 产地:中国广东珠海 珠海经济特区飞利浦家庭电器有限公司 珠海市金湾区三灶镇定湾二路365号

全国顾客服务热线: 4008 800 008 本产品根据国标 GB4706.1-2005 GB4706.9-2008制造

不包含电源适配器。使用者必须使用符合 GB4706.1-2005标准的5V === 、≥1A、 IPX4电源适配器,以确保电气安全。

PHILIPS

产品: 飞利浦电动剃须刀型号: X5003额定电压: 3.6V === 额定电压 : 3.6V === 1.6W 充电电压/电流:5V ===/ 生产日期: 请见产品本体 IPX7 产地:中国广东珠海 珠海经济特区飞利浦家庭电器有限公司 珠海市金湾区三灶镇定湾二路365号 全国顾客服务热线: 4008 800 008 本产品根据国标 GB4706.1-2005,

不包含电源适配器。使用者必须使用符合 GB4706.1-2005标准的5V === 、≥1A、 IPX4电源适配器,以确保电气安全。

PHILIPS

产品:飞利浦电动剃须刀 型号: X5005 型号: X5005 额定电压: 3.6V === 额定输入功率: 1.6W 充电电压/电流: 5V ===/1A 生产日期: 请见产品本体 IPX7 产地:中国广东珠海

珠海经济特区飞利浦家庭电器有限公司 三州镇定湾 全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005 GB4706.9-2008制造

不包含电源适配器。使用者必须使用符合GB4706.1-2005标准的5V === 、≥1A、IPX4电源适配器,以确保电气安全。

PHILIPS

产品: 飞利浦电动剃须刀型号: X5009额定电压: 3.6V===额定输入功率: 1.6W 充电电压 1.6W 生产日期: 请见产品本体产地: 中国广东珠海 IPX7

珠海经济特区飞利浦家庭电器有限公司 珠海市金湾区三灶镇定湾二路365号 全国顾客服务热线: 4008 800 008 本产品根据国标 GB4706.1-2005,

GB4706.9-2008制造

不包含电源适配器。使用者必须使用符合 IPX4电源话配器,以确保电气安全。