PHILIPS

Wireless Speaker TAS2000



User manual

Register your product and get support at: www.philips.com/support

Contents

1	Important Safety Care for your product	2 2 2 3 3 3
2	Your wireless speaker What's in the box Overview of the speaker	3 3 3
3	Get started Charge the built-in battery Turn on/off	4 4 4
4	Play from Bluetooth-enabled devices Connect the speaker to your Bluetooth device Bluetooth indicator Control playback Adjust volume level Control phone call	5 5 5 5 5
5	Auracast operation Broadcast Receiver TWS	6 6 6
6	Other features Adjust lighting Listen to an external devices	7 7 7
7	Philips Entertainment App App download Pair your Bluetooth speaker Sound Control Light Effect Source Control General Sottings	8 8 8 9 9

9	Troubleshooting	11
_ 10) Notice	12

1 Important

Safety

Important safety instructions

- Make sure that the power supply voltage corresponds to the voltage on the back or the underside of the unit
- The speaker shall not be exposed to dripping or splashing.
- Do not place any source of danger on the speaker (e.g. liquid filled objects, lit candles).
- Make sure that there is enough free space around the speaker for ventilation.
- Please use the speaker safely in an environment with temperature between 0 °C and 40 °C.
- Only use attachments and accessories specified by the manufacturer.
- Do not expose the product to liquids without removing cable connection.
 Do not expose the product to water while charging. It may result in permanent damage to the speaker or power source. Chemicals, salt or "foreign particles" in your pool or the ocean can damage the waterproof seals or harm the connector surface overtime if not rinsed off after use.
 After a liquid spill or rinse, do not charge your speaker until it's completely dry and clean. Charging when wet might damage your speaker.

Battery safety precautions

- Danger of explosion if a battery is incorrectly replaced. Replace only with the same or equivalent type.
- A battery (battery pack or battery installed) shall not be exposed to excessive heat such as sunshine, fire or the like

- A battery in extreme high or low temperatures during use, storage or transportation, and low air pressure at high altitude can pose safety hazards.
- Do not replace a battery with an incorrect type that can defeat a safeguard (for example, some lithium battery types).
- Disposing a battery into fire or a hot oven, mechanically crushing or cutting a battery can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding, or an extremely low air pressure environment may result in an explosion or leakage of flammable liquid or gas.

Care for your product

- Use only microfiber cloth to clean the product.
- Please note that your device contains built-in lithium batteries. The charging capacity of lithium batteries will decrease over time due to their self-discharge characteristics. To ensure the longevity of your device's battery, we recommend charging the built-in lithium battery to around 50% every 6 months when the device is not in use.

Warning

- Never remove the casing of this speaker.
- Never lubricate any part of this speaker.
- Place this speaker on a flat, hard and stable surface.
- Never place this speaker on other electrical equipment.
- Only use this speaker indoors. Keep this speaker away from water, moisture and liquid-filled objects.
- Keep this speaker away from direct sunlight, naked flames or heat.
- Risk of explosion if a battery is replaced by an incorrect type.

2 Your wireless speaker

 
Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/support.

 
What's in the box


Check and identify the contents of your package:

- · Speaker (attached lanyard)
- USB cable
- · Quick start guide / safety sheet / warranty sheet

Overview of the speaker





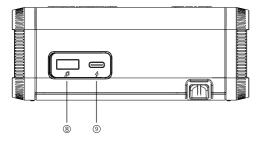

- ① (b) Turn the speaker on or off
- (2) ***** Press and hold to enter pairing

mode or to disconnect a connected Bluetooth device

- (3) ▶|| Play or pause the audio playback / Answer or reject a call
- (4) Adjust the volume up
- (5) Adjust the volume down
- (6) (A) - Press to enter / trigger rescan
 - Auracast™ receiver mode - Press twice to enter/exit "TWS"
 - mode - Press and hold 3 seconds to activate / deactivate Auracast™ broadcast mode
- (7)Adjust the light mode
- ® **1**= Connect external audio devices
- **USB-C** charging port

3 Get started

Always follow the instructions in this chapter in sequence.

Charge the built-in battery


The speaker is powered by a built-in rechargeable battery.




Note

Fully charge the built-in battery before using.

Connect the USB-C socket on the speaker to an outlet (5V=2A) by using the provided USB cable.

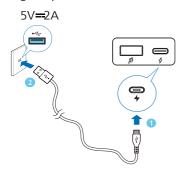

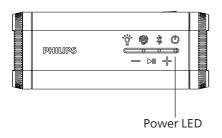

- → When the speaker is being charged, the Power LED turns red.
- When the speaker is fully charged, the Power LED indicator goes off.
- → When battery level is less than 20%, you will hear voice prompt once every 60 seconds.
- → When battery level is less than 2%, the speaker will power off.



Caution

- Risk of speaker damage! Make sure the power supply voltage corresponds to the voltage printed on the back or the underside of the speaker.
- Risk of electric shock! When unplug the USB cable, always pull the plug from the socket. Never pull the cable.
- Use only a USB cable specified by the manufacturer or sold with this speaker.

Turn on/off

Press **(**) to turn the speaker on.

→ You will hear the prompt sound.

To turn the speaker off, press **()** again. → You will hear the prompt sound.



Note

 The speaker will turn off automatically if there is no audio signal from Bluetooth for 15 minutes.

4 Play from Bluetooth devices

Connect the speaker to your Bluetooth device

With this speaker, you can enjoy audio from your Bluetooth device.




Note

- Make sure that the Bluetooth function is enabled on your device.
- The maximum distance for pairing the speaker and your Bluetooth device is 30 meters (99 feet).
- Keep away from any other electronic device that may cause interference.
- 1.Press 1 to turn the speaker on. It will enter Bluetooth pairing mode automatically with blue light blinking slow. You can also press and hold 3 to enter Bluetooth pairing mode.
- Enable Bluetooth and select
 "Philips S2000" in the Bluetooth list on
 your device for pairing.
- 3. Play audio on your Bluetooth device to start streaming music.

	_		_	
	4			icator
ĸ	пет	nntn	Ina	ICATOR
	I U C L		HILL	ica coi

LED indication	Bluetooth status
Blink blue quickly	Ready for pairing
Blink blue slowly	Reconnecting the last connected device
Solid blue	Connected

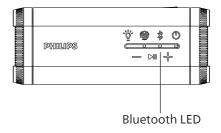

Control playback

During music playback



Press to pause or resume play
Press twice to play the next track
Press three times to play the previous track



Press to decrease/increase one level of volume

Press and hold to continuously decrease/increase the volume


Control phone call

Press to answer or end a call Press and hold to reject a call

─/+ Adjust the volume

5 Auracast™

Use **Auracast™** to pair with another S2000 speaker for stereo (TWS), receive broadcasts from others, or launch your own broadcast to other compatible speakers.

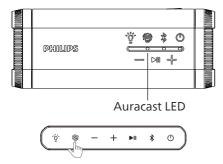

Auracast™ Broadcaster

The default Auracast™ broadcast setting on product is **Public** (unencrypted broadcast). You can select **Personal** (encrypted broadcast) and set a password under **Philips**Entertainment App => General Settings=> Auracast™ Broadcaster.

- 1.To start a broadcast, press and hold the **②** for 3 seconds or in the **Entertainment App** select **Setup PartyLink mode** in **General Settings**. The Auracast™ LED on product turns **purple (Public)** / **amber (Personal)**, and you will hear a prompt sound.
- 2. To stop the broadcast, press and hold the for 3 seconds again or select **Unlink** in the **App**. The Auracast™ LED turns off, and you will hear a prompt sound.

Auracast™ Receiver

1. To search for a broadcast, press the @ or go to the Entertainment App to switch to Auracast™ Receiver under Source control. The Auracast™ LED turns cyan, and you will hear a prompt sound.

The set will automatically search for nearby Auracast™ broadcasts and connect to the unencrypted broadcast with the strongest signal.

2. To exit a broadcast, press and hold

for 3 seconds or switch to another source in the App.

Pairing for stereo mode

Two identical wireless speakers (Philips S2000) can pair with each other for stereo sound.

- 1. To start, the speaker connected to your Bluetooth device will be used as the primary speaker, double press the ② on both speakers, you will hear prompt sound and the Auracast LED blinks white when pairing and turns pink when connected.
- In stereo mode, all operations are synchronized between both speakers.
 You can control playback, adjust the volume, and change the light mode from either speaker.
- To exit, double-press the
 on either speaker.

6 Other features

Adjust lighting

Press the \dot{Q} on the speaker or via $\dot{\mathbf{x}}$ on the app to control the light effect.





Listen to an external device

- Insert a USB thumb drive into the USB-A port.
 The music on the thumb drive will be played automatically.
- Or use a USB-A to A cable(not included) to connect the product with your laptop/devices, select the Philips S2000 USB on your device for

7 Philips Entertainment App

Our handy companion app lets you select a source, control playback and Bass+, switch between different light modes, check battery life, and more. Plus, an in-app PartyLink mode makes it simple to connect to other speakers via Auracast™ for even bigger sound.

App download

Scan the QR code and press "Download" button, or search "Philips Entertainment" in the Apple App Store or Google Play to download the app.



 


philips.to/entapp

Pair the App with your Bluetooth speaker









- 1 Open the Philips Entertainment App on your mobile device, press 'Add device +' to discover Philips S2000. Ensure that Bluetooth is enabled on your mobile.
- When you connect the App to your speaker for the first time, you will be prompted to pair the app with your speaker. Press the on your speaker to confirm the App connection.

Once your speaker is connected with Entertainment APP, you may enjoy further features and set your preference easily.

Sound Control








→ Source Control

Press icon on the App to select
Bluetooth / Auracast receiver / USB


₩ Relaxation / Concentration / Masking

☐ Generative / Ambient / Nature

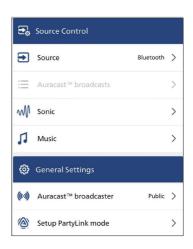


S General Settings

With the (i) you may notice there has new firmware for upgrade.

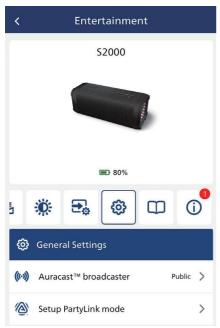

Auracast™ broadcasts

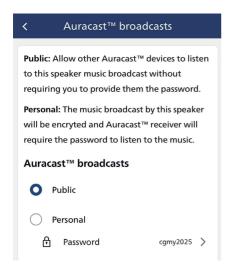



Setup PartyLink mode

To purchase more \$2000 or other Philips' speaker (support Auracast™) to enjoy the PartyLink, follow the steps in the APP you can easily pair up altogether..



8 Product information



Note

• Product information is subject to change without prior notice.

General information			
USB-C Charge in	5V 2A		
Built-in Lithium battery	2500 mAh		
Dimensions (W x H x D)	181x71x71mm		
Weight (main unit)	477g		
Operation Ambient	0°C~40°C		

Speaker Output power (RMS) 10W (THD 1%) Frequency response 90HZ~20KHZ Signal to noise ratio >82dB Impedance 4Ω Maximum input power 10W Full range driver L48*W48mm

Bluetooth			
Bluetooth version	5.4		
Frequency range	2402 - 2480 MHz		
Maximum transmition power	≤10dBm		
Compatible Bluetooth profiles	Supports A2DP/ AVRCP/HFP		
Bluetooth range	open area BT up to 30m TWS up to 10m		

9 Troubleshooting



Warning

· Never remove the casing of the speaker.

To keep the warranty valid, never try to repair the speaker yourself. If you encounter problems when using this speaker, check the following points before requesting service. If the problem remains unsolved, go to the Philips website (www.philips.com/support). When you contact philips, ensure that the speaker is nearby and the model number and serial number are available.

General

No power

- Make sure the speaker is fully charged.
- Make sure the USB socket of the speaker is properly connected.
- As a power-saving feature, the speaker turns off automatically 15 minutes after no audio signal is received.

No sound

- · Adjust the volume on this speaker.
- Adjust the volume on the connected device.
- Make sure that your Bluetooth device is within the operational range.

No response from the speaker

· Restart the speaker.

Bluetooth

The audio quality is poor after connection with a Bluetooth-enabled device

 The Bluetooth reception is poor.
 Move the device closer to this speaker or remove any obstacle between them.

Fail to find [Philips S2000] on your Bluetooth device for pairing

 Press and hold \$\frac{1}{8}\$ for 3 seconds to enter Bluetooth pairing mode, and then try again.

Cannot connect with your Bluetooth device

- The Bluetooth function of your device is not enabled. Refer to the user manual of your device to find out how to enable the function.
- · This speaker is not in pairing mode.
- This speaker is already connected to another Bluetooth-enabled device.
 Disconnect and try again.

10 Notice

Any changes or modifications made to this device that are not expressly approved by MMD Hong Kong Holding Limited may void the user's authority to operate the equipment.

Compliance



Hereby, TP Vision Europe B.V. declares that this product is in compliance with the essential requirements and other relevant provisions of RED Directive 2014/53/EU and UK Radio Equipment Regulations SI 2017 No 1206. You can find the Declaration of Conformity on www.philips.com/support.

Care of the environment

Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



 
This symbol on a product means that the product is covered by European Directive 2012/19/EU.



This symbol means that the product contains batteries covered by European Regulation (EU) 2023/1542 which cannot be disposed of with normal household waste.

Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.

Removing the integrated batteries.



For illustration purposes only

 To avoid risk of fire, the product is supplied only by external power source which output shall comply with PS1 (with output capacity less than 15W).



 The power delivered by the charger must be between min.
 Watts required by the radio equipment, and max. 15 Watts in order toachieve the maximum charging speed.

FCC and **IC** statement

FCC information

The device complies with the FCC rules, Part 15. Operation is subject to the following two conditions:

①This device may not cause harmful interference, and.

②This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to

(4) Consult the dealer or an experienced radio/TV technician for help.

IC-Canada: CAN ICES-(B)/NMB-(B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference.
- 2. This device must accept any interference, including interference that may cause undesired operation of the device.

Avis d'Industrie Canada: CAN ICES-(B)/NMB-(B)

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1. L'appareil ne doit pas produire de brouillage;
- 2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Radiation Exposure Statement: The product comply with the Canada portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. Déclaration d'exposition aux radiations: Le produit est conforme aux limites d'exposition pour les appareils portables RF pour les Etats-Unis et le Canada établies pour un environnement non contrtlé.

Trademark notice



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MMD Hong Kong Holding Limited is under license. Other trademarks and trade names are those of their respective owners.

AURACAST...

The Auracast™ word mark and logos are trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MMD HongKong Holding Limited is under license. Other trademarks and trade names are those of their respective owners.



The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.



Specifications are subject to change without notice.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product. CE CK

TAS2000_00_UM_V1.0