# **PHILIPS**

# Party Speaker

2000 Series

TAX2208



# **User manual**

Register your product and get support at: www.philips.com/support

# **Contents**

_		
1	Important Safety	<b>2</b> 2
2	Your party speaker	
2	What's in the box	<b>3</b>
	Overview of the main unit	3
3	Get started	4
	Power on	4
	Charge the built-in battery	4
	Basic playback	5
4	Change light effect	6
	Turn the party light on or off	6
5	Play audio through Bluetooth	7
	Connect a device	7
	Connect a device automatically	7
	Connect a device manually	7
	Disconnect a device	7
6	TWS pairing	8
	TWS: Paring for stereo sound	8
	Pair two TAX2208 speakers via TWS	8
	TWS playback control	8
7	Play audio through audio in	8
	Listen to an external device	8
	Play from an Mp3 player	8
8	Play audio through USB	9
	Update firmware via USB	9
	Play audio through USB	9
9	Sing through microphone	10
	Adjust microphone volume	10
	Adjust echo	10
10	Product information	10
	Specifications	10
	Maintenance	11

11	Troubleshooting	11
	No sound	11
	About Bluetooth device	11
 12	Notice	12
	Care of the environment	12
	Trademark notice	12

# 1 Important

## Safety

### Important safety instructions

- Make sure that the power supply voltage corresponds to the voltage on the back or the underside of the unit.
- The speaker shall not be exposed to dripping or splashing.
- Do not place any source of danger on the speaker (e.g. liquid filled objects, lit candles).
- Make sure that there is enough free space around the speaker for ventilation.
- Please use the speaker safely in an environment with temperature between 0°C and 45°C.
- Only use attachments and accessories specified by the manufacturer.

#### Battery safety precautions

- Danger of explosion or fire if a battery is incorrectly replaced. Replace only with the same or equivalent type.
- A battery (battery pack or battery installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- A battery in extreme high or low temperatures during use, storage or transportation, and low air pressure at high altitude can pose safety hazards.
- Do not replace a battery with an incorrect type that can defeat a safeguard (for example, some lithium battery types).
- Disposing a battery into fire or a hot oven, mechanically crushing or cutting a battery can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding, or an extremely low air pressure environment may result in an explosion or leakage of fiammable liquid or gas.



### Warning

Never remove the casing of this speaker. Never lubricate any part of this speaker. Place this speaker on a fiat, hard and stable surface.

Never place this speaker on other electrical equipment.

Only use this speaker indoors. Keep this speaker away from water, moisture and liquid-filled objects.

Keep this speaker away from direct sunlight, naked fiames or heat.

Risk of explosion or fire if a battery is replaced by an incorrect type.

 To avoid risk of fire, the equipment is supplied only by external power source which output shall comply with PS1 (with output capacity less than 15W).

# 2 Your party speaker


Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/support.

## What's in the box

Check and identify the contents of your package:

- Main unit
- Type-C charging cable
- Quick start guide
- Safev sheet
- · Warranty card


# Overview of the main unit Top panel:

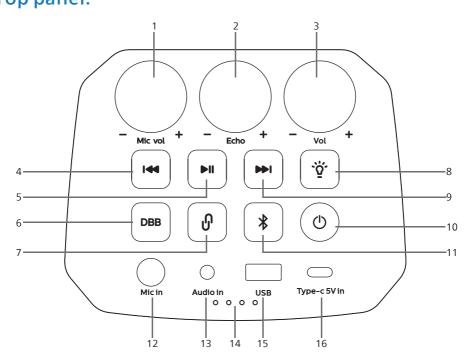

- 1 Mic vol
- 2 Echo
- 3 Vol
- 4 Previous track
- 5 Play/Pause
- 6 Dynamic Bass Boost (DBB)
- 7 TWS pair button
- 8 Light mode switch

- 9 Next track
- 10 Standby (white indicator)
- 11 Bluetooth (white indicator)
- 12 Micin
- 13 Audioin
- 14 Battery level indicator
- 15 USB
- 16 Type-c 5V in

# Overview of the main unit Rear panel:

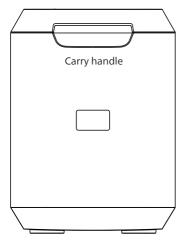

# 3 Get started



### **Caution**

 Use of controls or adjustments or performance of procedures other than herein may result in hazardous laser exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the back of the apparatus. Write the numbers here:

Model No.	
Serial No.	

### Power on

Press ()

→ Press and hold to switch on/off the party speaker.



### Note

 The party speaker will always enter Bluetooth pairing mode every time you turn it on.


## Charge the built-in battery

 Plug the USB cord to charge the built-in battery. The battery indicators blink in dierent manners to indicate the charging status.



#### Note

• The four indicators on the unit will go out after the battery is fully charged.

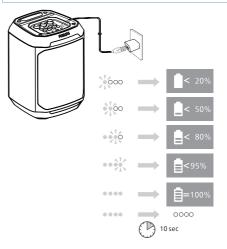


- The speaker is designed with a smart battery check feature for your convenience.
- Short press O button to show the current battery level on the LED indicators of the unit in power on mode while the unit is not being charged.
- 4 LED white light up=approx. 100% full



#### Note

 When the battery level is low, all the battery indicators will blink simultaneously and a promt tone is heard.

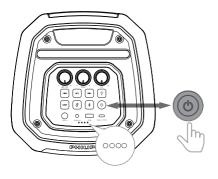



# **Basic playback**



- Press and hold to switch on/off the unit.
- Press to check battery level in power on status.



 Press to turn the Dynamic Bass Boost on or off.



Press to enter True Wireless
Stereo (TWS) pairing mode.
It works only when you have two identical TAX2208 speakers.



Press to enter the Bluetooth mode.
Press and hold to disconnect
Bluetooth connection.



 Press repeatedly to switch light mode of speaker light and switch light to OFF.



• Press to skip to the next track.



Press to return to the previous track.



• Press to pause a playback; press it again to resume the playback.



• Turn to adjust microphone volume.



• Turn to adjust microphone echo.



Turn to adjust main unit volume.



· Microphone input.



 Audio input from an external device, for example, an MP3 player (3.5mm socket).



• USB port

USB

030



• Type-c 5V in


Type-c 5V in


○ ○ ○ ○ • Battery status indicators (LED)

# 4 Change light effect

# Turn the party light on or off

1. In power on mode, press "Q" button repeatedly to switch among different light modes of speaker light or switch the speaker light OFF.

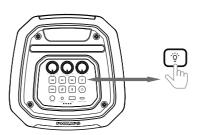

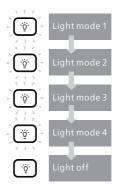

# 5 Play audio through Bluetooth

The product can stream music from your Bluetooth device to the system through Bluetooth

### Connect a device



### Note

- Before pairing a device with this product, read its user manual for Bluetooth compatibility.
- The product can memorize a maximum of eight paired devices. The ninth paired device will replace the first one.
- Any obstacle between this product and a Bluetooth device can reduce the operational range. Keep away from any other electronic device that may cause interference.
- The operational range between this product and a Bluetooth device is approximately 10 meters (30 feet).

# Connect a device automatically

- 1 Press and hold button to switch on the party speaker. The unit automatically enters Bluetooth pairing mode, and white backlight of button and blue speaker light blink to remind you to connect with a Bluetooth device.
- 2 On your Bluetooth device, enable Bluetooth and search for Bluetooth devices that can be paired.
- 3 Select [Philips TAX2208] displayed on your device for pairing. After successful connection, the white backlight of the \$ button keeps solid.

# Connect a device manually

1 When the party speaker is in Audio in source, short press ≯button to switch to Bluetooth source and enter pairing mode. White backlight of ≯ button and blue speaker light blink to remind you to connect with a Bluetooth device.

- 2 On your Bluetooth device, enable Bluetooth and search for Bluetooth devices that can be paired.
- 3 Select [Philips TAX2208] displayed on your device for pairing. After successful connection, the white backlight of the \$ button keeps solid.

### Disconnect a device

- 1 Press and hold \$\frac{1}{8}\$ button on the party speaker to disconnect from the current device.
- 2 White backlight of <sup>\*</sup>8 button and blue speaker light blink to remind you to connect with a Bluetooth device.



### Note

- Before connecting another Bluetooth device, disconnect the current device firstly.
- When the Bluetooth device is beyond the valid Bluetooth distance, the unit will disconnect automatically from the device.
- To disconnect from the current device and clear out the Bluetooth pairing information, press and hold \$ button on the unit until the button's backlight fast blinks three times and a prompt tone is heard.

# 6 TWS pairing

## TWS: Paring for stereo sound

Two speakers can pair with each other for stereo sound.



### Note

• TWS works only when there are two identical party speakers (Philips TAX2208).

# Pair two TAX2208 speakers via TWS

- 1 Select one speaker as the master speaker and connect it to the Bluetooth device
- 2 Long press the f button on the master speaker until a prompt tone is heard.
- 3 Then long press the **1** button on the slave speaker until a prompt tone is heard.
- 4 TWS is connected and the backlight of the button lights up on both speakers.

To exit TWS, long press the **⊕** button on either of the speakers until the prompt tone is heard and the  $\mathbf{\Omega}$  backlight is off.

## TWS playback control

When TWS is connected, the synchronization of control from the master speaker to the slave speaker is as below, vice versa:

Control on master speaker	Synchronize to slave speaker
Party speaker volume	Yes
Play/Pause	Yes
Previous track	Yes
Next track	Yes
Light mode	Yes
DBB	Yes
Mic volume	No
Echo	No
Power on/off	No

# 7 Play audio through Audio in

## Listen to an external device

With this product, you can listen to an external audio device such as an MP3 player.

## Play from an MP3 player

- 1 Press and hold button to switch on the party speaker and then you will hear a prompt tone.
- 2 Connect an audio input cable (not supplied) with a 3.5mm connector on both ends to:
  - The Audio in jack on the product.
  - The headphone jack on the MP3 player.
- 3 The blue backlight \$\mathbf{x}\$ button will go off and the party speaker will be automatically switched to Audio in source.
- 4 Play audio on the MP3 player (refer to its user manual).





• You need to re-insert the audio input cable into the Audio in jack if you want to switch back to Audio in from the other sources.

# 8 Play audio through USB

USB playback is enabled on the product purchased after May 2025. For customers with older versions, please update firmware via USB on your device in order to enable the function.

# **Update firmware via USB**




### **Note**

- Please refer to the print of the USB port on your speaker. If it's "USB service", please follow the steps below to update the firmware. If it's "USB", you may play audio directly through a USB device.
- 1 Check if there is the latest firmware version on www.philips.com/support. Search for your model and click on "Software and drivers"



- 2 Download the zip file and decompress it.
- 3 Copy the " \*.upd " upgrade file to a USB disk.
- 4 Insert the USB stick to the USB port on the speaker in POWER OFF state.

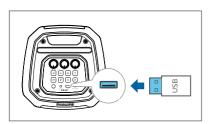

- 5 Press and hold the 🖒 button until you hear a prompt sound.
- 6 Now the upgrading is completed. Remove the USB stick, and then press and hold ① to turn on the speaker. You can enjoy music playback directly from a USB storage device now.

# Play audio through USB


Enjoy audio on a USB storage device.



#### Vote

- Make sure that the USB device contains playable audio contents in supported format. Supported format: MP3
- The unit supports max 128G USB.
- Support a USB port: 5V === 2A.

Insert the USB device.

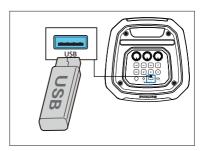

→ The unit will switch to the USB mode and play automatically.

Button	Action
Press ►II	Start, pause or resume play.
Press and hold	Skip to the next track.

# 9 Sing through microphone

# Adjust microphone volume

Plug an external wired microphone (not supplied) into the 6.3mm mic input port and adjust the microphone volume by turning the Mic vol knob. Now, enjoy the karaoke singing!

## Adjust echo

Tune the echo effect to you desired level via the Echo knob on the top panel.

# 10 Product information

## **Specifications**

### **Amplifier**

Output power	30W Max.
Frequency response	60Hz-15KHz
Signal to noise ratio	≥70 dBA

### Speaker

Speaker impedance	3 ohm
Sensitivity	91 dB±3dB/W/M

### **USB**

USB direct version	2.0 Full Speed
Charging support	5V, 2A

### **Bluetooth**

Bluetooth version	V5.2
Bluetooth frequency band	2.402 GHz∼2. 480 GHz ISM Band
Bluetooth range	10m (free space)

### **Battery**

Battery capacity	Built-in rechargable
battery capacity	3.7V 3000mAh

### General information

Eco standby fewer	≤ 0.5W
consumption	~ 0.5 * *

### **Dimensions**

Main unit (W x H x D)	250x342x250mm
-----------------------	---------------

### Weight

Main unit 2	2.82kg

### **Maintenance**

Clean the cabinet

 Use a soft cloth slightly moistened with a mild detergent solution.
Do not use a solution containing alcohol, spirits, ammonia or abrasives.

# 11 Troubleshooting



### **Caution**

· Never remove the casing of this unit.

To keep the Warranty valid, never try to repair the system yourself.

If you encounter problems when using this unit, check the following points before requesting service. If the problem remains unsolved, go to the Philips website (www.philips.com/support).

When you contact Philips, ensure that your unit is nearby and the model number and serial number are available.

### No sound

Adjust the volume.

## **About Bluetooth device**

# The audio quality is poor after connection with a Bluetooth-enabled device

 The Bluetooth reception is poor. Move the device closer to this product or remove any obstacle between them.

#### Cannot connect with the device

- The Bluetooth function of the device is not enabled. Refer to the user manual of the device for how to enable the function.
- This product is already connected with another Bluetooth-enabled device.
  Disconnect that device and then try again.

# The paired device connects and disconnects constantly

- The Bluetooth reception is poor. Move the device closer to this product or remove any obstacle between them.
- For some devices, Bluetooth connection may be deactivated automatically as a power-saving feature. This does not indicate any malfunction of this product.

# 12 Notice

Any changes or modifications made to this device that are not expressly approved by MMD Hong Kong Holding Limited may void the user's authority to operate the equipment.

This product complies with the radio interference requirements of the European community.

Hereby, TP Vision Europe B.V. declares that the product is in compliance with the essential requirements and other relevant provisions of RED Directive 2014/53/EU and UK Radio Equipment Regulations SI 2017 No 1206. You can find the Declaration of Conformity on www.philips.com/support.

### Care of the environment

Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components which can be recycled and reused.



This symbol on a product means that theproduct is covered by European Directive 2012/19/EU.



This symbol means that the product contains batteries covered by European Regulation (EU) 2023/1542 which cannot be disposed of with normal household waste. Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.

#### **Environmental information**

All unnecessary packaging has been omitted. Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of

packaging materials, exhausted batteries and old equipment.



The symbol indicates DC voltage.



#### Note

 Please note that your device contains built-in lithium batteries. The charging capacity of lithium batteries will decrease over time due to their self-discharge characteristics.
To ensure the longevity of your device's battery, we recommend charging the built-in lithium battery to around 50% every 6 months when the device is not in use.

### Removing the integrated batteries

Make sure the product is disconnected from power before removing the integrated battery.



For illustration purposes only

## **Trademark notice**



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MMD Hong Kong Holding Limited is under license. Other trademarks and trade names are those of their respective owners.



Specifications are subject to change without notice. Please visit www.Philips.com/support for the latest updates and documents. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited. or one of its affiliates, and MMD Hong Kong Holding Limited. is the warrantor in relation to this product.

