PHILIPS

Micro Music System TAM4505M2



User manual

Register your product and get support at: www.philips.com/support

Contents

6 Listen to the radio

Listen to DAB+ radio Listen to FM radio

1	Important Safety Notice Declaration of conformity Trademarks	2 2 3 3 4	7	Adjust sound Select a preset sound effect Adjust volume level Mute sound	17 17 17 17
2	Your Micro Music System What's in the box Overview of the main unit Overview of the remote control	4 4 6 7	8	Other features Set the alarm timer Set the sleep timer Listen to an external device Factory reset	17 17 18 18 18
3	Get started Connect speakers Connect the radio antenna Connect power Prepare the remote control Power on Set the clock	9 9 9 9 10 10	9	Philips Entertainment App App download Choose your sound Select source Clock setting Select Auracast broadcast Remote control User guide	19 20 20 23 25 26 26
4	Play from disc	11		Firmware upgrade	27
	Play from USB Control play Skip tracks Program tracks Play from Bluetooth enabled devices Play from Auracast	11 11 12 12 12 13	10	Product information Specifications USB playability information Supported MP3 disc formats	28 28 28 28
			11	Troubleshooting	30
5	Auracast operation Auracast receiver Auracast broadcast Disconnect Auracast broadcast	13 13 14 14			

15 15 16

1 Important

Safety

Read and understand all instructions before you use this micro music system. If damage is caused by failure to follow the instructions, the warranty does not apply.



This 'bolt of lightning' indicates uninsulated material within the device may cause an electrical shock. For the safety of everyone in your household, please do not remove the covering. The 'exclamation mark' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems. WARNING: To reduce the risk of fire or electric shock, the device should not be exposed to rain or moisture and objects flled with liquids, such as vases, should not be placed on the device. CAUTION: To prevent electric shock. fully insert the plug. (For regions with polarized plugs: To prevent electric shock, match wide blade to wide slot.)



Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never look into the laser beam inside this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.
- Make sure that there is enough free space around the product for ventilation.
- Only use attachments/accessories specifed by the manufacturer.
- Battery usage CAUTION -to prevent battery leakage which may result in bodily injury, property damage, or damage to the product:
 - Install the battery correctly, + and - as marked on the product.
 - The battery (packed or installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
 - Remove the battery when the product is not used for a long time.
- The product shall not exposed to dripping or splashing.
- Do no place any source of danger on the product (e.g. liquid filled objects. lit candles).
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Please use the product safely in an environment with temperature between 0°C and 45°C.

Notice

Any changes or modifications made to this device that are not expressly approved by MMD Hong Kong Holding Limited may void the user's authority to operate the equipment.

Compliance

Hereby, TP Vision Europe B.V. declares that this product is in compliance with the essential requirements and other relevant provisions of RED Directive 2014/53/ EU and UK Radio Equipment Regulations SI 2017 No 1206. You can find the Declaration of Conformity on www.philips.com/support.

Care of the environment

Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/FU



This symbol means that the product contains batteries covered by European Regulation (EU) 2023/1542 which cannot be disposed of with normal household waste.

Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health

Removing the disposable batteries To remove the disposable batteries, see battery installation section.

Environmental information

All unnecessary packaging has been omitted.

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Care for your product

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove the discs from the disc compartment if you are not using the product for an extended period of time.
- Only use microfiber cloth to clean the product.

This apparatus includes this label:





Note

 The type plate is located on the back of the product.

 
Trademarks

AURACAST.

The Auracast™ word mark and logos are trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MMD Hong Kong Holding Limited is under license. Other trademarks and trade names are those of their respective owners.

Bluetooth°

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MMD Hong Kong Holding Limited is under license.




The making of unauthorized copies of copy-protected material, including computer programs, flies, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

2 Your Micro Music System

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/support.

What's in the box


Check and identify the contents of your package:

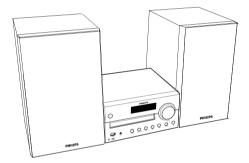

- Main unit
- Speaker boxes (x2)




 
- FM antenna
- Remote control (with one AAA battery)
- Power cord (Power cord quantity and plug type vary by regions)



- Quick start guide / Warranty card / Safety sheet
- Images, illustrations and drawings shown on this user manual are for reference only, actual product may vary in appearance.

Overview of the main unit

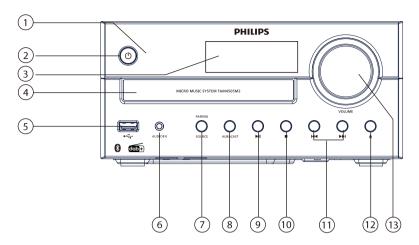

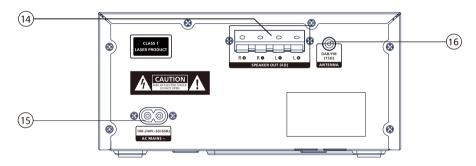

1 LED indicator

Function status (see below table):

LED	Status
Solid Red	Standby
Blink Cyan (slow)	Auracast receiver scanning
Soild Cyan	Auracast receiver connected
Blink Cyan (very slow)	Auracast receiver idle
Soild Amber	Encrypted Auracast broadcast
Blink Amber two times (slow)	Deactivated encrypted Auracast broadcast
Soild Purple	Unencrypted Auracast broadcast
Blink Purple two times (slow)	Deactivated unencrypted Auracast broadcast

② む

Switch this product on or to standby.

3 Display panel

Show current status.

4 Disc compartment

- (5)
 - Connect USB storage devices.

(6) AUDIO IN

Connect external audio devices.

(7) SOURCE/PAIRING

- Press to select a source: DISC, BT, AURACAST, DAB, FM, USB, AUDIO IN.
- In Bluetooth mode, press and hold for more than 2 seconds to disconnect the currently connected device and enter pairing mode.

(8) AURACAST

- Short press: Enter Auracast receiving mode.
- Long press: Enter Auracast broadcast mode.
- Double click: Enter Auracast broadcast mode.

(9) ►II

Start or pause play.

10

- Stop play.
- Erase a program.

(1) |

- Skip to previous/next track.
- Search within a track/disc.
- Tune to a radio station.
- · Adjust time.
- In Auracast mode, switch to the previous/next unencrypted broadcast.
- Press and hold to fast forward or backward.
- $\stackrel{\text{(12)}}{\blacktriangle}$ Open or close the disc
 - compartment.


13 VOLUME knob

Adjust volume.

(14) SPEAKER OUT socket

- · Connect with the speakers.
- 15) AC MAINS ~
- 16 FM/DAB+ antenna
 - Improve FM/DAB+ reception.

Overview of the remote control

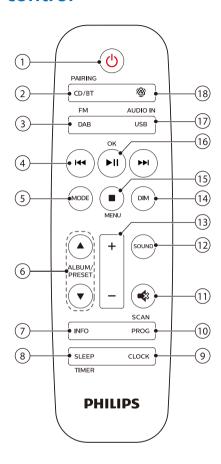

(1) _{(j}

• Switch this product on or to standby.

2 CD/BT PAIRING

- Select CD source.
- Select Bluetooth source.
- In Bluetooth mode, press and hold for more than 2 seconds to or disconnect the current connected device.

3 DAB/FM

Select FM or DAB+ source.

(4) |**44**/**>>**|

- Skip to the previous/next track.
- Search within a track/disc.
- Tune to a radio station.
- Adjust time.
- In Auracast mode, switch to the previous/next unencrypted broadcast.
- Press and hold to fast forward or backward.

(5) MODE

- Select shuffle mode to play tracks randomly.
- Select repeat mode to play a track or all tracks repeatedly.
- · Select Stereo and Mono sound.

6 ALBUM/PRESET ▲ / ▼

- Select a preset radio station.
- Skip to previous/next album.

(7) INFO

Display playback information, or radio service information.

(8) SLEEP/TIMER

- Set sleep timer.
- Set alarm timer.

(9) CLOCK

- Set the clock.
- View clock information.
- In standby, press and hold to toggle clock display on or off.

10 PROG/SCAN

- Program tracks.
- Program radio stations.
- Auto store radio stations.

(11)

Mute or restore volume.

(12) SOUND

Select a preset sound effect.

(13) +/- (volume)

Adjust volume.

(14) **DIM**

· Adjust display brightness.

(15) **■/MENU**

- Stop play or erase a program.
- Enter or exit DAB+ menu.

(16) ►II/OK

- Press to start, pause, or resume play.
- Confirm or select a DAB+ item.

17 USB/AUDIO IN

- Select USB source.
- Select AUDIO IN source.

(18) 🙈

- In Auracast receiver mode, press to rescan Auracast broadcast channel.
- Press to switch to Auracast receiver mode.
- Press and hold for more than 3 seconds to activate / deactivate Auracast broadcast mode.

3 Get started



Caution

 Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

Connect speakers




lote

- Insert the stripped portion of each speaker wire into the socket completely.
- For better sound quality, use the supplied speakers only.
- Connecting one speaker, find the sockets on the back of the main unit marked "R".
- Insert the copper wire into the socket marked "+", and the silver wire into the socket marked "-".
- 3 Connecting another speaker, find the sockets on the main unit marked "L".
- **4** Repeat step 2 to insert the left speaker wire.


To insert each speaker wire:

- 1 Hold down the socket flap.
- 2 Insert the speaker wire fully.
- **3** Release the socket flap.

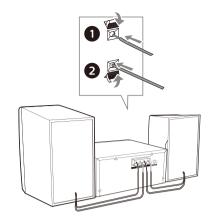

Connect the radio antenna

 Connect the supplied radio antenna to this product before listening to radio.



Connect power



Caution

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Risk of electric shock! Before you plug the AC power cord, make sure that the plug is fixed securely. when you unplug the AC power cord, always pull the plug, never pull the cord
- Before you connect the AC power cord, make sure that you have completed all the other connections



Connect the power cord to the wall socket.

Prepare the remote control



aution

- Risk of product damage! When the remote control is not used for long periods, remove the batteries.
- Batteries contain chemical substances, so they should be disposed of properly.

To insert the remote control battery:

- 1 Open the battery compartment.
- 2 Insert the supplied AAA battery with correct polarities (+/-) as indicated.
- **3** Close the battery compartment.







Power on

Press ()

The product switches to the last selected source.

Switch to standby mode

Press \circ again to switch the product to standby with no clock display, or to standby with clock display.

- → The red standby indicator lights up.
- In standby, you may press and hold CLOCK to toggle clock display on or off.



Note

- The product switches to standby mode after 15 minutes of inactivity.
- To achieve the effcient energy saving performance, unplug any external electronic device from the USB port when the device is not in use.

Set the clock

- 1 In power on mode, press and hold CLOCK for more than 2 seconds to enter the clock setting mode.
 - → [24H] or [12H] is displayed.
- Press I≪/▶►I to select 24H or 12H hour format, and then press CLOCK.
 - → The hour digits begin to blink.
- 3 Press ► to set the hour, and then press CLOCK.
 - → The minute digits begin to blink.
- 4 Press I◀◀/▶▶I to set the minute, and then press CLOCK.
 - → The clock is set.

To cancel time setting without saving

Press ■ or no button pressed for 30 seconds.



Tip

- To view clock in power on mode, press CLOCK briefly.
- In standby, you may press and hold CLOCK to toggle clock display on or off.
- If clock display is turned on in standby, power consumption increases.

4 Play

Play from disc

- Press CD to select CD source, or press source button on main unit to switch to DISC source.
- Press ≜ to open the disc compartment.
- Insert a disc with the label side up.
- Press ≜ to close the disc compartment.
 - → Play starts automatically. If not, press ►II.




Play from USB



Note

- Make sure that the USB device contains playable audio content.
- 1 Insert a USB device into the socket.
- Press AUDIO IN/USB repeatedly to select the USB source, or press source button on main unit to switch to USB source.
- 3 Play starts automatically. If not, press ►■.

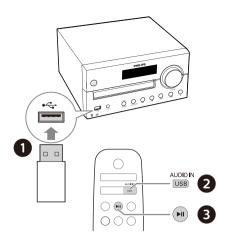

Control play

►II	Start, pause, or resume play.		
	Stop play.		
▲ /▼	Select an album or a folder.		
 44 / ▶▶	Press to skip to the previous or next track. Press and hold to search backward/forward within a track.		
MODE	Play a track or all tracks repeatedly. Play tracks randomly.		
+/-	Increase or decrease the volume.		
₹ 3	Mute or unmute sound.		
SOUND	Select a preset sound equalizer.		
DIM	Adjust display brightness.		
INFO	Show playback information.		

Skip tracks

For CD:

Press I◀◀ / ▶▶I to select tracks.

For MP3 disc and USB:

- 1 Press ▲ / ▼ to select an album or a folder.
- Press |◄◄ / ▶►| to select a track or a file.

Program tracks

This function allows you to program 20 tracks in the desired sequence.

- 1 In stop mode, press **PROG/SCAN** to activate the program mode.
 - → [P01] is displayed.
- 2 For MP3 tracks, press ▲ / ▼ to select an album.
- 3 Press I◄
 / ▶►I to select a track, and then press PROG/SCAN to confirm.
- **4** Repeat steps 2 to 3 to program more tracks.
- 5 Press ►II to play the programmed tracks.

To erase the program


Press twice.

Play from Bluetooth enabled devices



Note

- Compatibility with all Bluetooth devices is not guaranteed.
- Any obstacle between the unit and the device can reduce the operational range.
- The effective operation range between this unit and your Bluetooth enabled device is approximately 30 meters.
- The unit can memorize up to 8 previously connected Bluetooth devices.

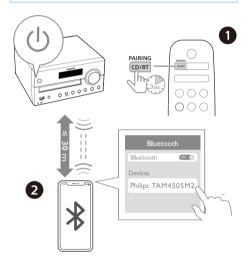

- 1 Press CD/BT to select the Bluetooth source, or press source button on main unit to switch to BT source.
 - → [BT] (Bluetooth) is displayed.
- On your device that supports
 Advanced Audio Distribution Profile
 (A2DP), enable Bluetooth and
 search for Bluetooth devices that
 can be paired (refer to the user
 manual of the device).

- 3 Select 'Philips TAM4505M2'on your Bluetooth enabled device.
 - If you fail to find 'Philips TAM4505M2'or cannot pair with this product, press and hold PAIRING on the product or remote control for more than 2 seconds to enter pairing mode
 - After successful pairing and connection, you will hear the prompt sound from the unit.
- 4 Play audio on the connected device.
 - Audio streams from your Bluetooth enabled device to this product.

To disconnect the Bluetooth-enabled device:

- Deactivate Bluetooth on your device.
- Press and hold PAIRING on the product or remote control for 2 seconds to enter pairing mode.
- Press and hold PAIRING on the remote control for 8 seconds to clear memorized devices

5 Auracast operation

You can broadcast your music to this product or any other Auracast-compatible products.

Auracast receiver

- 1 Press ® to select the Auracast source, or press SOURCE button on main unit to switch to Auracast source.
 - [AURACAST RCV] is displayed.
 - · The cyan indicator blinks.
- If you enter Auracast source for the first time or if the station list is empty, the product performs a full scan automatically.
 - [Scanning] is displayed.
 - The micro system will automatically search for nearby Auracast broadcasts and connect to the unencrypted broadcast with the strongest signal.
 - If Auracast broadcast is not found within 20 seconds, it will enter idle mode and the cyan light will blink slowly.



- 3 On your mobile device or dongle that supports Auracast, follow the instruction to enable Auracast broadcast.
- **4** After successful connection, the cyan indicator turns solid.
- **5** Auracast source name is displayed.
- 6 Select and play audio from your Auracast enabled mobile device or dongle to this product.
- 7 Follow the Auracast connection on any additional Auracast-compatible products you want to include.

To disconnect Auracast, you can:

- Switch the product to another source.
- Deactivate Auracast broadcast on your mobile device or dongle.

Manually scan Auracast broadcast

In Auracast receiver mode, press **a** to rescan Auracast broadcast channel.

Select Auracast broadcast

Press I◀ / ▶ I to select an Auracast broadcast.



Note

 Only unencrypted broadcast is selected and encrypted broadcast is skipped.

Auracast broadcast



Note

- Auracast receiver and Auracast broadcast cannot be turned on simultaneously. If you try to turn on Auracast broadcast in Auracast receiver mode, you will not be able to switch successfully. Vice versa.
- 2 On Philips Entertainment App, enter General Settings, select Public (unencrypted broadcast) or Personal (encrypted broadcast) from Auracast broadcaster.
 - When unencrypted broadcast is selected, LED turns solid purple.
 - When encrypted broadcast is selected, LED turns solid amber.
- 3 You can broadcast to any number of Auracast enabled products, follow the instruction to enable Auracast connection.
- 4 If Auracast broadcast channel is encrypted, Auracast receiver products are required to enter the password in order to listen to it.
 - The LED indicator of product will turn cyan when Auracast receive enabled.
- 5 Press the **SOURCE** button to switch between DISC/Bluetooth/DAB/FM/ USB/Audio in to play different audio sources.

Disconnect Auracast broadcast

- Press and hold the button for 3 seconds. Exit Auracast broadcast from your micro system.
 - → LED blinks purple or amber 3 times.

6 Listen to the radio

With this product, you can listen to DAB + radio and FM radio.



Note

- Position the FM antenna as far as possible from TV, or other radiation source.
- For optimal reception, fully extend and adjust the position of the FM antenna.

Listen to DAB+ radio

Digital Audio Broadcasting+ (DAB+) is a way of broadcasting radio digitally through a network of transmitters. It provides you with more choice, better sound quality and more information.

Store DAB+ radio stations automatically



Vote

- New stations and services are added in DAB+ broadcast from time to time. To make new DAB+ stations and services available, perform scan regularly.
- Press DAB/FM repeatedly to select DAB+ source.
 - If you enter DAB+ source for the first time or if the station list is empty, the radio performs a full scan automatically.
 - → [Scanning] is displayed.
 - The radio scans and stores all the DAB+radio stations automatically, and ther broadcasts the first available station.

- Press and hold PROG/SCAN for more than 2 seconds.
 - → The product scans and stores all DAB+ radio stations automatically.
 - → After scan, the first available station is broadcast.

Select a DAB+ radio station

After DAB+ radio stations are scanned and stored, press |◄◄ / ▶▶| to select a DAB+ station.

Store DAB+ radio stations manually

- 1 Press I ✓ / ►►I to select a DAB+ radio station.
- Press PROG/SCAN to activate program mode.
 - → **[P01]** is displayed.
- 3 Press ▲/▼ to allocate a number from 1-10 to this radio station, and then press PROG/SCAN to confirm.
- **4** Repeat steps 1-3 to program more stations.

To select a preset DAB+ radio station: In DAB+ mode, press ▲ / ▼.

Use DAB+ menu

- 1 In DAB+ mode, press ■/MENU to access DAB+ menu.
- Press | ◀ / ▶ ▶ | to toggle the menu options.
 - [SCAN]: Scan and store all available DAB+ radio stations.
 - [MANUAL]: Tune to a DAB+ station manually.
 - [DRC]: Compress the dynamic range of a radio signal, so that the volume of quiet sounds is increased, and the volume of loud sounds is reduced.

- [PRUNE]: Remove invalid stations from the station list.
- [SYSTEM]: Adjust system settings.
- To select an option, press ►II/OK.If sub-option is available, repeat steps 2-3.

Display DAB+ information

While listening to DAB+ radio, press **INFO** repeatedly to display various information (if available), such as frequency, signal strength, time, etc.

Listen to FM radio

Tune to an FM radio station

- 1 Press **DAB/FM** repeatedly to select FM source.
- 2 Press and hold I◀ / ▶▶I for more than two seconds
 - → The radio tunes to a station with strong reception automatically.
- 3 Repeat step 2 to tune to more stations

To tune to a weak station:

Press ► / ► repeatedly until you find optimal reception.

Store FM radio stations automatically



Note

- You can store a maximum of 20 FM radio stations.
- 1 Press DAB/FM repeatedly to select FM source.
- Press and hold PROG/SCAN for more than two seconds.

- All available stations are programmed in the order of waveband reception strength.
- → The first programmed radio station is broadcast automatically.

Store FM radio stations manually

- **1** Tune to an FM radio station.
- Press PROG/SCAN to activate program mode.
 - → [P01] is displayed.
- 3 Press ▲/▼ to allocate a number from 1-10 to this radio station, and then press PROG/SCAN to confirm.
- **4** Repeat steps 1-3 to program more stations.



Note

• To overwrite a programmed station, store another station in its place.

Select a preset FM radio station

In FM mode, press \triangle / ∇ to select a preset number.

 While listening to FM radio, you may press MODE to toggle stereo and mono sound.

Display RDS information

RDS (Radio Data System) is a service that allows FM stations to show additional information.

- **1** Tune to an FM radio station.
- Press INFO repeatedly to display various RDS information (if available), such as station name, program type, time, etc.

7 Adjust sound

The following operations are applicable to all supported media.

Select a preset sound effect

Press SOUND repeatedly to select a preset sound effect.

Adjust volume level

- On the remote control, press
 VOLUME +/- repeatedly.
- On the main unit, rotate the volume knob.

Mute sound

Press sound.

8 Other features

Set the alarm timer

This product can be used as an alarm clock. You can select the disc, radio, or .mp3 files on a UiSB storage device as alarm source.



Note

- Alarm timer is not available in AUDIO IN mode.
- If CD/USB source is selected, but no disc is placed or no UsB device is connected, the radio source is selected automatically.
- **1** Make sure that you have set the clock.
- In standby mode, press and hold SLEEP/TIMER for more than2 seconds.
 - → The hour digits blink.
- 3 Press | ◄ / ▶ | repeatedly to set the hour, and then press SLEEP/TIMER to confirm.
 - → The minute digits blink.
- 4 Press I◀ / ►►I to set the minute, and then press SLEEP/TIMER to confirm.
 - → The last selected alarm source blinks.
- Fress I◀ / ►►I to select an alarm source (disc, USB, FM or DAB+ radio), and then press SLEEP/TIMER to confirm.
 - → XX blinks (XX indicates the volume level of alarm).
- 6 Press I◀ / ▶►I to set the alarm volume, and then press SLEEP/TIMER to confirm

Activate/deactivate alarm timer

In standby mode, press **SLEEP/TIMER** repeatedly to activate or deactivate timer.

- → If timer is activated, TIMER is displayed.
- In standby, you may press and hold CLOCK to toggle clock display on or off.

Set the sleep timer

This music system can switch to standby automatically after a set period of time.

- When the music system is turned on, press SLEEP/TIMER repeatedly to select a set period of time (in minutes)
 - When sleep timer is activated, SLEEP is displayed.


To deactivate sleep timer

- Press SLEEP/TIMER repeatedly until [OFF] (sleep off) is displayed.
 - When sleep timer is deactivated, SLEEP disappears.

Listen to an external device

You can listen to an external device through this unit with an MP3 link cable.

- 1 Connect an MP3 link cable (not supplied) between:
 - AUDIO IN jack (3.5 mm) on the product,
 - and the headphone jack on an external device.
- Press AUDIO IN/USB repeatedly to select AUDIO IN source.
- 3 Start to play the device (see the device user manual).

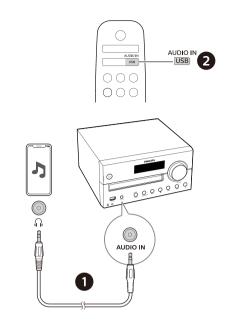

Factory reset

Reset device to default setting.

When the device is power on, press and hold ►II buttons for 5 seconds in AUDIO IN source at VOLUME 2.

The device is restore to factory defaults and enters standby mode.

9 Philips Entertainment App

App download

Scan the QR code and press "Download" button, or search "Philips Entertainment" in the Apple App Store or Google Play to download the App.





 
philips.to/entapp

The Philips Entertainment App puts you in charge of the music you are listening to. You can use your smart device to easily choose the sound style you want, switch between sources, and more.

Pair the App with your micro system









- 1 Launch the Philips Entertainment App on your mobile device.
- 2 Make sure your mobile device is enabled the Bluetooth setting.
- 3 If you connect the Philips Entertainment App with your micro system for the first time, you are asked to pair the App with your micro system.
- 4 Press Play/Pause key on your micro system to enable the App to discover and control it.

Choose your Sound

You can choose the ideal sound for your music.

Select Equalizer (EQ) Effect

Press icon on the App to select predefined sound modes to suit your music: BALANCED/WARM/BRIGHT/POWERFUL/CLEAR/CUSTOM.








Select Source

Press icon on the App to select CD/BLUETOOTH/AURACAST/DAB/FM/USB/AUDIO IN.







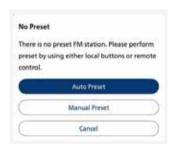

Receive unencrypted Auracast broadcast

1 Select Auracast[™] receiver source.



2 Press [Auracast™ broadcasts] to enter Auracast™ broadcast list.



- When an **unencrypted** playback source from mobile phone or dongle is selected, the micro system will search and connect to it.
 - → Make sure to activate AuracastTM broadcast on your mobile phone or dongle.



Receive encrypted Auracast broadcast

1 Select Auracast[™] receiver source.



2 Press [Auracast™ broadcasts] to enter Auracast™ broadcast list.



- 3 When an **encrypted** playback source from mobile phone or dongle is selected, you will be asked to input a password. Entering the same password that you input when setting up Auracast™ broadcast from your mobile phone or dongle.
 - → Make sure to activate AuracastTM broadcast on your mobile phone or dongle.



Select a preset radio statio

1 Select to enter [FM] source.



2 Press to select FM preset station.





When there is no preset station stored in the micro system, the App will remind to perform auto scanning or manual preset.



Clock Setting

Press icon on the App to enter clock setting.





- [24-Hr Time]: Set 12 or 24-hour time mode.
 - → 24Hr Time is set by default.
- [Sync Clock]: When Sync clock is enable, the App will synchronize the mobile clock to micro system upon their connection.
 - → Turn off [Sync Clock] so that users can customize the time for their micro systems.
- [Clock]: option to swipe and select the time on the clock page.

Set Alarm Timer





- [Timer]: Press to enter the alarm timer setting. Set the time to wake up the micro system.
- Select [Enable timer]: The micro system will automatically turn on and play after reaching the set time.

- 3 Select [Wake-up source]: CD/FM/DAB/USB.
- 4 Select [Wake-up volume]: volume level 0 to 32.
- 5 Press [Save] to store the wake-up timer setting.
- 6 The micro system will turn on at the set time.



Note

 When clock is not set, alarm timer cannot be set.

Set Sleep Timer





- Press [Sleep Timer] to enter sleep timer setting.
- Select 15/30/60/90/120 min.
- 3 Press [OK] to store the sleep timer setting.
- **4** The micro system will turn off after the set time.

Select Auracast broadcast

1 Press @ icon on the App to enter General Settings list.




2 Select Public or Personal broadcasts.




3 Set a password when **Personal** (encrypted broadcast) is selected.



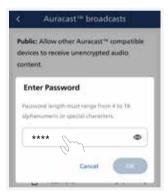

 4 Press and hold @ button on the device then it will enter Auracast scanning mode.



Remote control

Press icon to enter and use your mobile device via Philips Entertainment App as a remote control to operate the micro system.





User guide









For more information about using this product, press icon on the App you can find [User Manual] and [Quick Start Guide].


Firmware Upgrade

To get the best features and support, update your product with the latest firmware version.

The firmware for MCU can be upgraded to the latest version via Philips Entertainment App.

Please go to **Firmware Update** and press **Download & Update**. If the upgrade is released, the **Download & Upgrade** icon can be pressed to proceed automatically.

Once this product is connected to Philips Entertainment App, it can receive over-the-air firmware update. Always upgrade with the latest firmware version to improve the performance of this product.

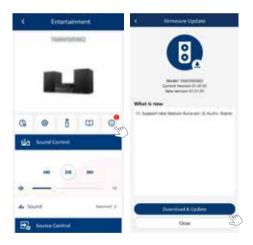

10 Product information



Note

• Product information is subject to change without prior notice.

Specifcations

- Rated output power: Total 80W (RMS)
- Acoustic frequency response: 66Hz-20KHz
- Speaker driver:
 2 x 4"woofer 4Ω;
 2 x 0.75" tweeter 4Ω;
- Bass enhancement: 2 x bass port
- Support disc type: CD-DA, CD-R, CD-RW, MP3-CD (8/12 cm)
- Bluetooth version: V5.4
- Bluetooth supported profiles: A2DP V1.3, AVRCP V1.6
- Bluetooth frequency band / Output power: 2.402GHz~2.480GHz ISM Band / ≤ 9dBm
- USB playback:
 - Type A, USB Direct 2.0,5V/1A, MSC fle format, FAT 16/32
 - Support USB up to 128G
- Tuner frequency range:
 FM 87.5-108MHz
 DAB 174-240MHz (Band III)
- Preset stations: 20 (FM) +20 (DAB+)
- AUDIO IN input level: 500mV +100mV RMS
- Power: 100-240V~, 50/60 Hz(AC Input)
- Operation power consumption: 20 W
- Standby power consumption: < 0.5W (clock display off)

- Dimensions (W x H x D): 220 x105 x 231 mm (Main unit); 148 x 240 x203 mm (Speaker box)
- Weight: 1.5 kg (Main unit); 2 x 1.9 kg (Speaker box)

USB playability information

Extension	Codec	Sample Rate	Bitrate	
	MPEG 1 Layer 1	32~48 kHz	32~320 kbps	
.mp3	MPEG 1 Layer 2	32~48 kHz	32~320 kbps	
	MPEG 1 Layer 3	32~48 kHz	32~320 kbps	
.wav	WAV	8~48 kHz	Up to 1536 kbps	
.wma	WMA	8~48 kHz	48~192 kbps	
.flac	FLAC	Up to 48 kHz/16 bit		

Compatible USB devices:

- USB flash memory (USB2.0 or USB1.1)
- USB flash players (USB2.0 or USB1.1)
- memory cards (requires an additional card reader to work with this unit)

Supported USB formats:

- USB or memory fle format: FAT12, FAT16, FAT32 (sector size: 512 bytes)
- MP3 bit rate (data rate): 32-320
 Kbps and variable bit rate
- WMA bit rate (data rate): 48~192 kbps
- WAV bit rate (data rate): Up to 1536 kbps
- Directory nesting up to a maximum of 8 levels
- Number of albums/ folders: maximum 99
- Number of tracks/titles: maximum 999
- File name in Unicode UTF8 (maximum length: 32 bytes)

Unsupported USB formats:

- Empty album: An empty album is an album that does not include MP3/WMA/WAV graphics and will not be displayed.
- Unsupported file formats will be skipped. For example, Word files (. doc) or MP3 files with the extension dif will be ignored and will not be played.

Supported MP3 disc formats

- IS09660, Joliet
- Maximum title number: 128 (depending on file name length)
- Maximum album number: 99
- Supported sampling frequencies:
 32 kHz, 44.1 kHz, 48 kHz
- Supported Bit-rates: 32~320(kbps), variable bit rates

11 Troubleshooting

A

Warning

· Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www.philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

No power

- Make sure that the AC power cord of the device is connected properly.
- Make sure that there is power at the AC outlet.
- As a power-saving feature, the system switches off automatically 15 minutes after track play reaches the end and no control is operated.

No sound or poor sound

- · Adjust the volume.
- Check that the speakers are connected correctly.
- Check if the stripped speaker wires are clamped.

No response from the unit

- Disconnect and reconnect the AC power plug, then turn on the unit again.
- As a power-saving feature, the system switches off automatically 15 minutes after track play reaches the end and no control is operated.

Remote control does not work

- Before you press any function button, frst select the correct source with the remote control instead of the main unit.
- Reduce the distance between the remote control and the unit.
- Insert the batteries with polarities (+/- signs) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the unit.

No disc detected

- Insert a disc.
- Check if the disc is inserted upside down.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc.
- Use a finalized CD or correct format disc.

Cannot display some files in USB device

- The number of folders or files in the USB device has exceeded a certain limit. This phenomenon is not a malfunction.
- The formats of these files are not supported.

USB device not supported

 The USB device is incompatible with the unit. Try another one.

Poor radio reception

- Increase the distance between the unit and your TV or other radiation sources.
- Fully extend the radio antenna.
- Connect an outdoor radio antenna.
 You may purchase a replacement antenna cable with a L-shape plug on one end, as shown below.
 - Connect the L-shape plug to this product, and fit the plug on the other end into your wall socket.



Music playback is unavailable on this unit even after successful Bluetooth connection.

 The device cannot be used to play music through this unit wirelessly.

The audio quality is poor after connection with a Bluetooth-enabled device.

 The Bluetooth reception is poor. Move the device closer to this unit or remove any obstacle between them.

Bluetooth cannot be connected with this unit.

- The device does not support the profiles required for this unit.
- The Bluetooth function of the device is not enabled. Refer to the user manual of the device to find out how to enable the function.
- This unit is not in pairing mode.
- This unit is already connected with another Bluetooth-enabled device.
 Disconnect that device and then try again.

The paired mobile device connects and disconnects constantly.

- The Bluetooth reception is poor.
 Move the device closer to this unit or remove any obstacle between them.
- Some mobile phones may connect and disconnect constantly when you make or end calls. This does not indicate any malfunction of this unit.

 For some devices, the Bluetooth connection may be deactivated automatically as a power-saving feature. This does not indicate any malfunction of this unit.

Timer does not work

- Set the clock correctly.
- · Switch on the timer.

Clock/timer setting erased

- Power has been interrupted or the power cord has been disconnected.
- Reset the clock/timer.

How to keep clock display on or off in standby?

 In standby, press and hold CLOCK to toggle clock display on or off.



Specifications are subject to change without notice.
2025 © Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.

