 
 
 




PHILIPS

Micro Music System
TAM4205M2



  
www.philips.com/welcome

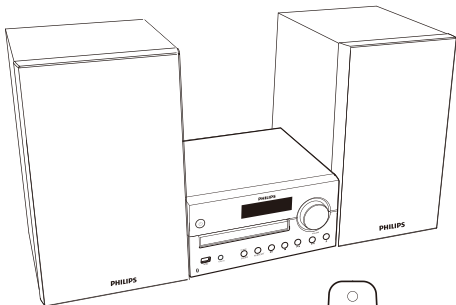

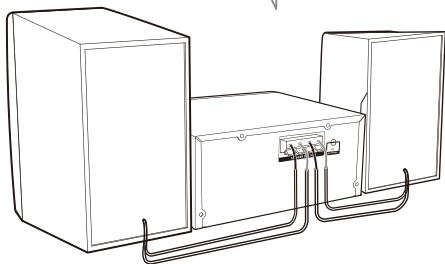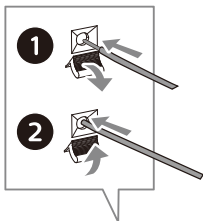





1

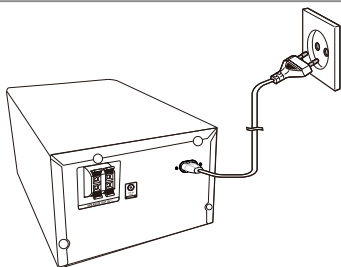 


2

 

3

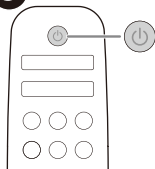 

 

- 1
- 2
- 3
- 4
- 5
- 6

PHILIPS

244

244 / 124

 
 
00:00

 
12:00

12:00




DISC

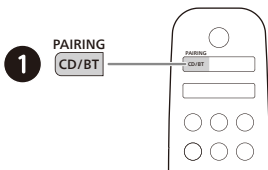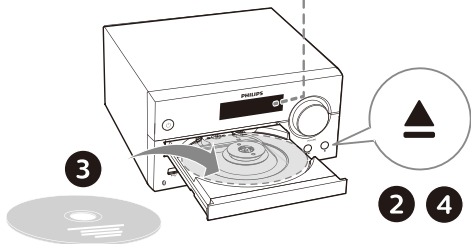


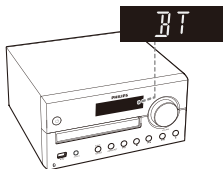


PAIRING
CD/BT

 

1

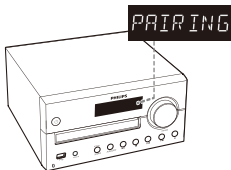 




PAIRING
CD/BT

 


2

    3

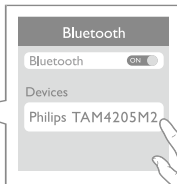

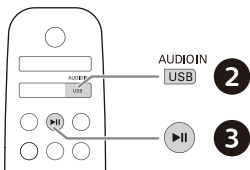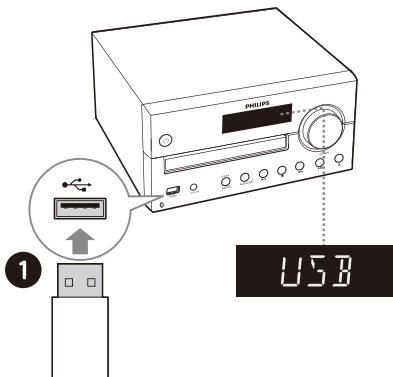

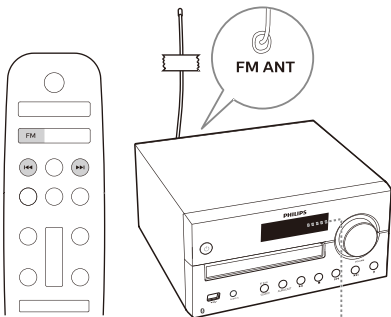

1

FM

1






2 A |◀◀/▶▶|

2 B |◀◀/▶▶|




FM

     87.50

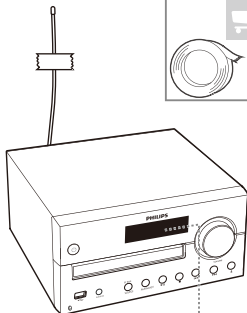




1

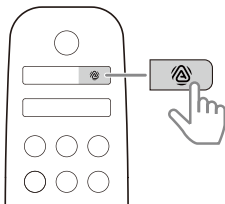 


2

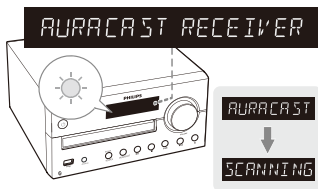 




3

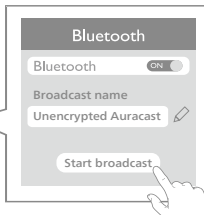 


3

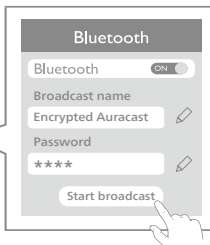 




4

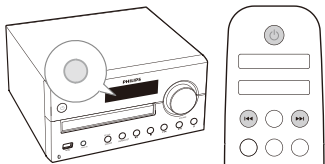 

5

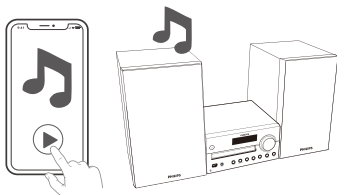 



1


FM

BT

USB

CD

 AUDIO IN

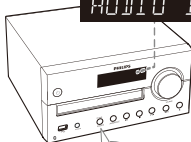


SOURCE

2

A

AURACAST BROADCASTER

 Purple
Amber

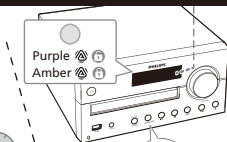

AURACAST





3

AURACAST RECEIVER

B



AURACAST



SCANNING

AURACAST RECEIVER

C



AURACAST



SCANNING

 


4

A



B

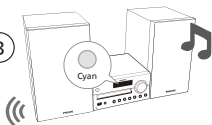


C





 A




B



 C






AUDIO IN

USB

2





 
1

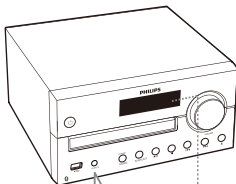


AUDIO IN

    AUDIO IN



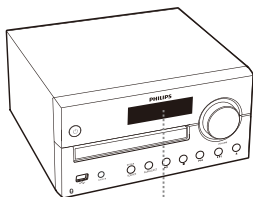



5 | ⏮⏮ / ⏭⏭ |

6 SLEEP
TIMER

7 | ⏮⏮ / ⏭⏭ |

8 SLEEP
TIMER

9 | ⏮⏮ / ⏭⏭ |

00 30
TIMER




DISC
TIMER

FM
TIMER

VOL 12
TIMER

VOL 00
TIMER

   zzZ

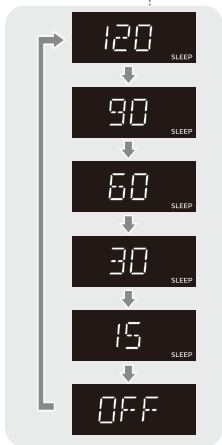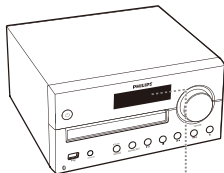




Philips Entertainment






Download on the
App Store





 GET IT ON
Google Play

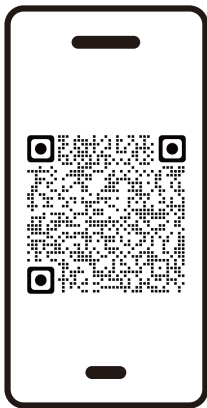

philips.to/entapp

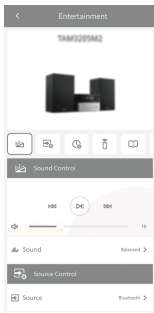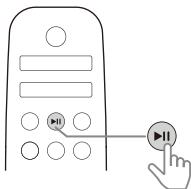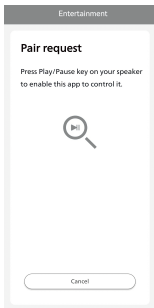   

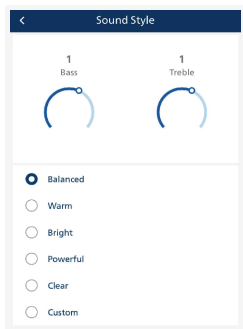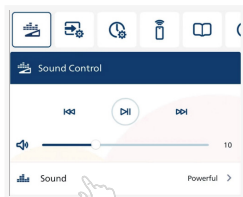  



Source Control



Source

Bluetooth >



Auracast™ broadcasts >



Preset stations >

Source



CD



Bluetooth



Auracast™ receiver



FM



USB



Audio In

Cancel

OK

No Preset

There is no preset FM station. Please perform preset by using either local buttons or remote control.

Auto Preset

Manual Preset

Cancel



88.1MHz



88.1MHz



88.1MHz



88.1MHz



88.1MHz



88.1MHz



88.1MHz



Source

CD >



Auracast™ broadcasts



CD/MP3 programming



Playback mode

Repeat All >



Source

CD >



Auracast™ broadcasts



CD/MP3 programming



Playback mode

Repeat All >



CD/MP3 programming

Album

Track

T0011

A001

T0001

T0002

Add to List

Preview List

Save to device

Cancel

Playback mode

☐ Off

☐ Repeat One

☒ Repeat All

☐ Shuffle

Cancel

OK



Source

- ☐ CD
- ☐ Bluetooth
- ☒ Auracast™ receiver
- ☐ FM
- ☐ USB
- ☐ Audio In

Cancel

OK



Source Control



Source

Auracast™ receiver >



Auracast™ broadcasts >



Preset stations >



Music >



LE Audio compatible



Auracast™ broadcasts

- ☒ Unencrypted Auracast
- ☐ Encrypted Auracast



Auracast™ broadcasts



Unencrypted Auracast



Encrypted Auracast



Enter Password





Cancel

OK



Clock Setting

 24-Hr Time ☒

 Sync Clock ☐

 Clock >

 Timer Off >

 Sleep Timer Off >

Clock

03 04
04 05
05 06
06 07
07 08

Cancel

OK

Timer

05 02
06 03
07 04
08 05
09 06

Enable timer ☒

Wake-up source CD >

Wake-up volume 15 >

Save

 
Cancel

 
 
Sleep Timer

- ☐ Off
- ☐ 15 min
- ☒ 30 min
- ☐ 60 min
- ☐ 90 min
- ☐ 120 min

Cancel

OK

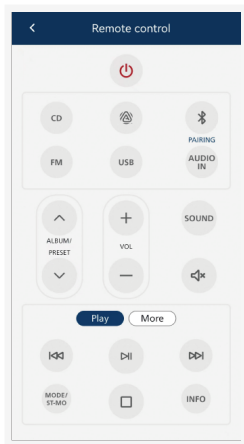

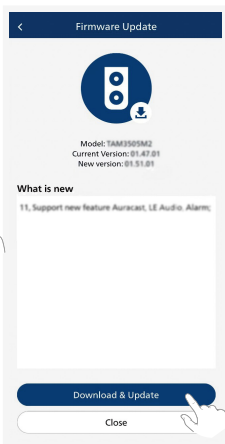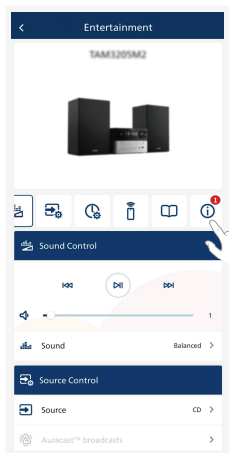



www.philips.com/support



2024 © MMD Hong Kong Holding Limited. All rights reserved. Specifications are subject to change without notice.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.