




PHILIPS

NORELCO

BT5775, BT5785,
BT7670

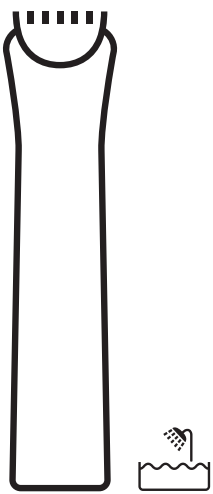

3000.135.0848.1 (1/1/05/2024)
All rights reserved.
©2024 Philips North America LLC.
Trademarks of Koninklijke Philips N.V.
Philips and Philips shield are registered
North America LLC.
Norelco is a registered trademark of Philips
Laboratories, Inc.
This symbol on the product's nameplate
means it is listed by Underwriters'
Laboratories, Inc.
Manufactured for: Philips Personal Health
a division of Philips North America LLC
P.O. Box 10313, Stamford, CT 06904, USA

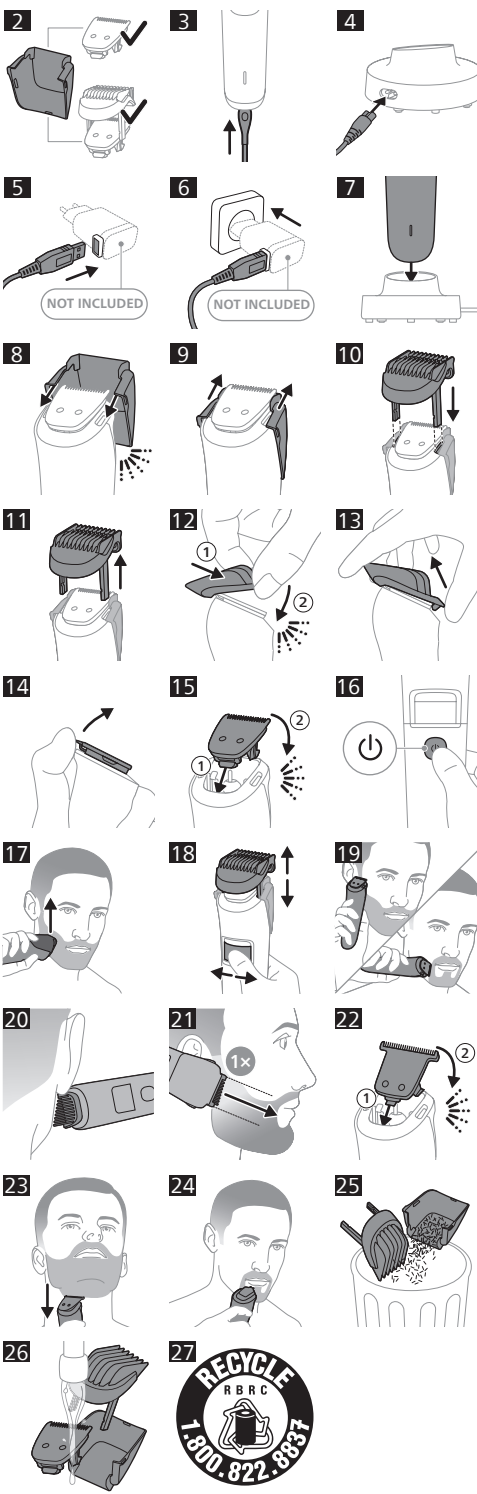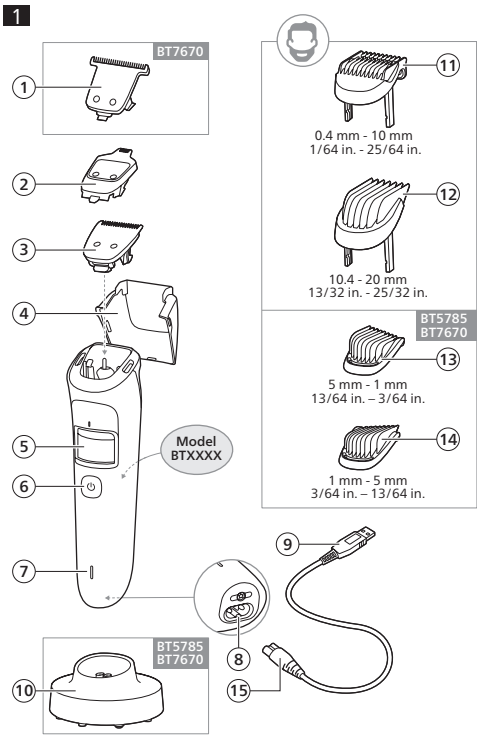

English

IMPORTANT SAFETY INSTRUCTIONS

When using an electric product, basic precautions should always be followed, including the following:

Read all instructions before using this product.

DANGER

To reduce the risk of electric shock:

- To charge the product, only use a USB power source on a certified product with output rating 5 V, ≥ 1 A. For safe charging in a moist environment (e.g. in a bathroom), only use an IPX4 (splash-proof) power source. A suitable power source (e.g. Philips HQ87) is available via www.philips.com/support. If you need support finding the correct USB power source, contact Philips support at 1-800-243-3050. Using a

non-certified USB power source may cause hazards or serious injuries.

Keep the USB cable, the USB power source and the charging stand (if provided) dry.



Do not reach for a corded product that has fallen into water. Unplug immediately from the power outlet.

Do not place or store the product where it can fall or be pulled into a tub or sink. Do not place or drop the product into water or other liquid.

This product does not work while it is connected to the power outlet. Except when charging, always unplug this product from the power outlet.

Remove USB power source from power outlet and product before cleaning the product with water.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.
- Use this product only for its intended household use as described in this manual. Misuse can lead to hazards or serious injuries. Do not use attachments not recommended by Philips North America LLC.
- Never operate this product if it has a damaged USB power source, if it is not working properly, after it has been dropped or damaged, or after the product or the USB power source has been dropped into water. For assistance call 1-800-243-3050.

Keep the USB cable and the USB power source away from heated surfaces.

Never drop or insert any object into any opening.

Do not use the USB power source in or near a power outlet that contains an electric air freshener to prevent damage to the USB power source.

Do not use product outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

Always check cutting units and other attachments and accessories before you use the product. Never use the product with a damaged cutting unit, attachment or accessory, as injury may occur.

Always attach the USB cable to the USB power source and the product first, then attach the USB power source to the power outlet. To disconnect, set all controls to 'off' position. Then remove the USB power source from the power outlet.

Plug USB power source directly into power outlet. Do not use an extension cord.

Unplug USB power source before plugging in or unplugging the product.

The batteries used in this product may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100 °C (212 °F) or incinerate.

Only use original Philips accessories or consumables.

Charge, use and store the product at a temperature between 50 °F / 10 °C and 95 °F / 35 °C.

Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures.

If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact Philips.

Do not place products and their batteries in microwave ovens or on induction cookers.

Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries.

If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care.

When you handle batteries, make sure that your hands, the product and the batteries are dry.

To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard them.

SAVE THESE INSTRUCTIONS

General description (Fig. 1)

- 1 Extra-wide cutting element (41 mm) (only with model BT7670)
- 2 Precision trimmer
- 3 Cutting element (32 mm)
- 4 Hair collector
- 5 Hair length setting wheel
- 6 On/off button
- 7 Battery status indicator
- 8 Socket for small plug
- 9 USB cable

Note: The power source is not included. A suitable power source (e.g. Philips HQ87) is available via www.philips.com/support.

- 10 Charging stand (only with models BT5785, BT7670)
 - 11 Adjustable trimming guard 0.4 mm – 10 mm (1/64 in. – 25/64 in.)
 - 12 Adjustable trimming guard 10.4 mm – 20 mm (13/32 in. – 25/32 in.)
 - 13 Fading guard 1 mm – 5 mm (3/64 in. – 13/64 in.) (only with models BT5785, BT7670)
 - 14 Fading guard 5 mm – 1 mm (13/64 in. – 3/64 in.) (only with models BT5785, BT7670)
 - 15 Small plug
- Not shown: storage pouch, brush

Introduction

Congratulations on your purchase and welcome to Philips Norelco!
To fully benefit from the support that Philips Norelco offers, register your product at: www.norelco.com/register.

You can find the model number on the back of your product.

The full model number (e.g. BT1234/56) is located on the bottom of the packaging, your receipt or order confirmation.

IMPORTANT TO KNOW



- This product is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the product can therefore only be used without cord.
- This product is intended for trimming facial hair to the desired length. Do not use the product to trim body or scalp hair.
- You can use the hair collector to catch hair while trimming. Use the hair collector with the regular cutting element (32 mm) alone or with an adjustable guard attached (Fig. 2).
- Charge the product fully before you use it for the first time.
- Switch off the product before removing or attaching attachments and before cleaning.
- Clean the product after each use (see 'Cleaning').

This product has no other user-serviceable parts. For assistance call 1-800-243-3050.

Charging

- Charging or using the product at temperatures below 50 °F / 10 °C or higher than 95 °F / 35 °C adversely affects the lifespan of the battery.
- If the product is subjected to a major change in temperature, pressure or humidity, let the product acclimatize for 30 minutes before use.

Battery status indicator

Battery status	Indicator mode
Almost empty	Flashing orange light
Charging	Flashing white light
Fully charged	Solid white light

Note: Approx. 60 seconds after the battery is fully charged, the battery status indicator switches off automatically.

Charge the product before first use and when the battery status indicator shows that the battery is almost empty. When the product has charged for 60 minutes, it has a cordless operating time of up to 100 minutes (models BT5775, BT5785) or 120 minutes (model BT7670).

Warning: Keep the USB cable, the USB power source and the charging stand (if provided) dry.



Charging with an USB power source

- 1 Make sure that the product is switched off.
- 2 Insert the small plug of the USB cable into the socket in the bottom of the product (Fig. 3).
- 3 Insert the USB plug into the USB power source (not included) (Fig. 5).
- 4 Insert the USB power source into the power outlet (Fig. 6).
- 5 After charging, remove the USB power source from the power outlet and pull the small plug out of the product.

Charging with the charging stand (BT5785, BT7670)

- 1 Make sure that the product is switched off.
- 2 Insert the small plug into the charging stand (Fig. 4).
- 3 Insert the USB plug into the USB power source (not included) (Fig. 5).
- 4 Insert the USB power source into the power outlet (Fig. 6).
- 5 Put the product in the charging stand (Fig. 7).
- 6 After charging, take the product out from the charging stand, remove the power source from the power outlet, pull the USB plug out of the power source and then pull the small plug out of the charging stand.

Quick charge

After approx. 5 minutes of charging, the product contains enough power for one trimming session.

Using the product

Always check the product and all accessories before you use it. Do not use the product or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

Because of hygiene, only one person should use the product.

Changing attachments

Attaching and detaching the hair collector

If you use the hair collector together with an adjustable trimming guard, first attach the hair collector and then the trimming guard. To detach, first remove the trimming guard and then the hair collector.

- 1 To attach the hair collector, align the top wings of the hair collector with the top of the handle and press the hair collector down until both sides click into place (Fig. 8).
- 2 To detach the hair collector, place your hand around the hair collector to prevent it from falling. Then use your thumb to unhook one of the wings of the hair collector and remove the hair collector from the handle (Fig. 9).

Hold the product over a bin when detaching the hair collector to avoid spilling the hairs.

Attaching and detaching the adjustable trimming guards

- 1 To attach an adjustable trimming guard onto the product, slide the guard legs straight into the guiding grooves of the product until the guard clicks into place (Fig. 10).

- 2 To detach an adjustable trimming guard from the product, hold the guard on both sides and gently pull it upwards off the product (Fig. 11).

Attaching and detaching the fading guards

- 1 To attach a fading guard onto the cutting element, slide the front part of the guard onto the teeth and press the plastic notch at the back of the guard downwards until it clicks into place (Fig. 12).
- 2 To detach a fading guard from the cutting element, carefully push the back part of the guard off the product and then slide it off the cutting element (Fig. 13).

Detaching and attaching cutting elements

- 1 To detach a cutting element, place your thumb below the teeth of the cutting element and gently push upwards until the cutting element comes off the handle (Fig. 14).
- 2 To attach a cutting element, insert the plastic notch at the back of the cutting element into the guiding slot in the handle. Then gently press the teeth of the cutting element downwards until the cutting element clicks into place (Fig. 15).

Switching the product on and off

Press the on/off button once to switch the product on or off (Fig. 16).

Trimming tips

- When trimming for the first time, start by using the guard with the maximum trimming length setting to familiarize yourself with the product.
- Since hairs do not all grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards, or across). Practice is best for optimum results.

When using the hair collector, hold the product upwards to prevent caught hair from spilling.

- Always make smooth and gentle movements and make sure that the surface of the guard always stays in contact with your skin.
- When too many hairs have accumulated on the product, remove the hairs before and/or during use, for best trimming results (see 'Cleaning').

Using the hair collector

Using the hair collector is optional. Use the hair collector to catch hair during trimming for easier cleaning afterwards.

The hair collector is designed to catch some, but not all the cut hairs. It is normal for some hairs to fall down during trimming.

You can use the hair collector with the following attachments:

Attachment	Used with hair collector
Cutting element (32 mm)	yes
Adjustable trimming guards	yes
Extra-wide cutting element (41 mm)	no
Fading guards	no
Precision trimmer	no

Trimming without guard

Use the product without any guard and with or without the hair collector to trim your beard close to the skin, to a length of approx. 1/32 in. or 0.5 mm.

- 1 Attach the hair collector to the product (optional).
- 2 Switch on the product (Fig. 16).
- 3 Place the flat side of the cutting element against your skin and make strokes against the direction of hair growth (Fig. 17).
- 4 Switch off and clean the product after each use (see 'Cleaning').

Trimming with adjustable trimming guards

Use the adjustable trimming guard attached to the cutting element and with or without the hair collector to trim your beard and mustache in your preferred style.

Your product comes with two adjustable trimming guards. You can choose from settings ranging from 0.4 mm to 10 mm (1/64 in. – 25/64 in.) and from 10.4 mm to 20 mm (13/32 in. – 25/32 in.).

- 1 Attach the hair collector to the product (optional).

- 2 Attach the adjustable trimming guard to the product (see 'Changing attachments').
- 3 Turn the hair length setting wheel to select the desired hair length setting (Fig. 18). The settings on the wheel correspond to the remaining hair length after trimming. The selected hair length setting is shown in the center of the wheel.
- 4 Switch on the product (Fig. 16).
- 5 To trim in the most effective way, move the guard against the direction of hair growth. Make sure that the surface of the guard always stays in contact with the skin.
- 6 Switch off and clean the product after each use (see 'Cleaning').

Edging without the hair collector

Use the product without any guard and without the hair collector to trim edges and single hairs.

- 1 Detach any guard from the product (see 'Changing attachments').
- 2 Detach the hair collector from the product (see 'Changing attachments').
- 3 Switch on the product (Fig. 16).
- 4 Hold the cutting element perpendicular to the skin. Make well-controlled movements to remove unwanted hairs. Touch the hair lightly with the trimmer (Fig. 19).
- 5 Switch off and clean the product after each use (see 'Cleaning').

Fading hair guards (BT5785, BT7670)

Use the cutting element with a fading guard but without the hair collector to create a faded beard line.

The product comes with 2 fading guards. Each guard can be used to trim one side of your face.

- 1 Attach one of the fading guards to the product (see 'Changing attachments').
- 2 Place the trimmer on your face close to the ear so that the short teeth of the guard are higher and the long teeth are lower (Fig. 20).
- 3 Switch on the product (Fig. 16).
- 4 Move the trimmer once in a straight line from the ear to the corner of your mouth to achieve a faded beard style (Fig. 21).
- 5 Attach the other fading guard to trim the other side of your face into a faded beard style.
- 6 Gently shake the hairs off the product in between strokes to prevent hairs from collecting between the cutting element and the guard.
- 7 Switch off and clean the product after each use (see 'Cleaning').

Using the extra-wide cutting element for contouring (BT7670)

Use the extra-wide cutting element (41 mm) without the hair collector to edge and contour your beard line.

- 1 Detach the cutting element from the product (see 'Changing attachments').
- 2 Attach the extra-wide cutting element to the product (Fig. 22).
- 3 Place the extra-wide cutting element at the edge of your beard, with the blade perpendicular to the skin.
- 4 Switch on the product (Fig. 16).
- 5 Make slow upward or downward strokes to cut unwanted hairs (Fig. 23).
- 6 Switch off and clean the product after each use (see 'Cleaning').

Precision trimmer

Use the precision trimmer without the hair collector to create fine lines and contours around your facial style close to the skin, to a length of 1/32 in. (0.5 mm).

- 1 Detach the cutting element from the product (see 'Changing attachments').
- 2 Attach the precision trimmer to the product (see 'Changing attachments').
- 3 Switch on the product (Fig. 16).
- 4 Hold the precision trimmer perpendicular to the skin and move the trimmer upwards or downwards with gentle pressure (Fig. 24).
- 5 Switch off and clean the product after each use (see 'Cleaning').

Cleaning

Switch off the product before removing or attaching attachments and before cleaning.

Only use cold or lukewarm water to clean the product.

Never use scouring pads, abrasive cleaning agents or aggressive liquids such as gasoline or acetone to clean the product.

Never dry the cutting element with a towel or tissue, as they may get caught in the teeth and cause damage.

- 1 Make sure that the product is switched off and removed from the charging stand or power outlet.
- 2 First detach any guard and then remove the hair collector, if attached to the product (see 'Changing attachments'). Make sure you hold the product over a bin or sink for easier clean-up.
- 3 Empty the hair collector into a bin (Fig. 25). Use the cleaning brush to remove all the hairs from the hair collector and from the guard.
- 4 Clean the whole handle under the tap or wipe it clean with a dry or moist cloth.
- 5 Detach the cutting element from the product and clean it with a brush.
- 6 Rinse all the attachments under the tap (Fig. 26).
- 7 Carefully shake off excess water and let all parts air-dry completely.

Storage

Do not place or store the product where it can fall or be pulled into a tub or sink, water or other liquid.

- Make sure that the product is switched off and that the USB power source has been removed from the power outlet and from the product.
- Do not wrap the USB cable around the product when storing.
- Store the product, the USB power source and all the accessories in the pouch supplied. Place the pouch in a safe, dry location, where it will not be crushed, banged, or subject to damage.
- Make sure that the product and the accessories are dry before you store them in the pouch.

Assistance

For assistance, visit our website: www.philips.com/support or call toll free 1-800-243-3050.

Disposal

- This product contains a rechargeable lithium-ion battery which must be disposed of properly.
- Contact your local town or city officials for battery disposal information. You can also call 1-800-822-8837 or visit: www.call2recycle.org for battery drop-off locations (Fig. 27).
- For assistance, visit our website www.philips.com/support or call 1-800-243-3050 toll free.
- Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. For recycling information, please contact your local waste management facilities or visit: www.recycle.philips.com.

Full Five-Year Warranty

Philips North America LLC warrants this new product (except blade and guards) against defects in materials or workmanship for a period of five years from the date of purchase, and agrees to repair or replace any defective product without charge.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage or batteries.*

NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

In order to obtain warranty service, simply go to www.philips.com/support. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty.

NOTE: No other warranty, written or oral, is authorized by Philips North America LLC.

This warranty gives you specific legal rights, and you may also have other rights which

