



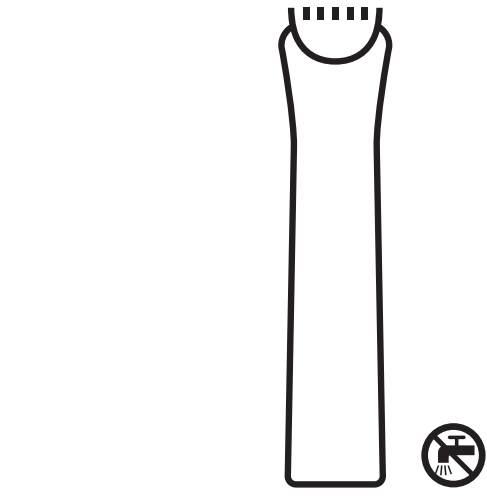

Manufactured for: Philips Personal Health
a division of Philips North America LLC
P.O. Box 10313, Stamford, CT 06904, USA
This symbol on the product's
nameplate means it is listed by
Underwriters' Laboratories, Inc.
Philips North America LLC.
PHILIPS and Philips shield are registered
trademarks of Koninklijke Philips N.V.
© 2024 Philips North America LLC.
All rights reserved.
3000.125.5321.1 (26/09/2024)

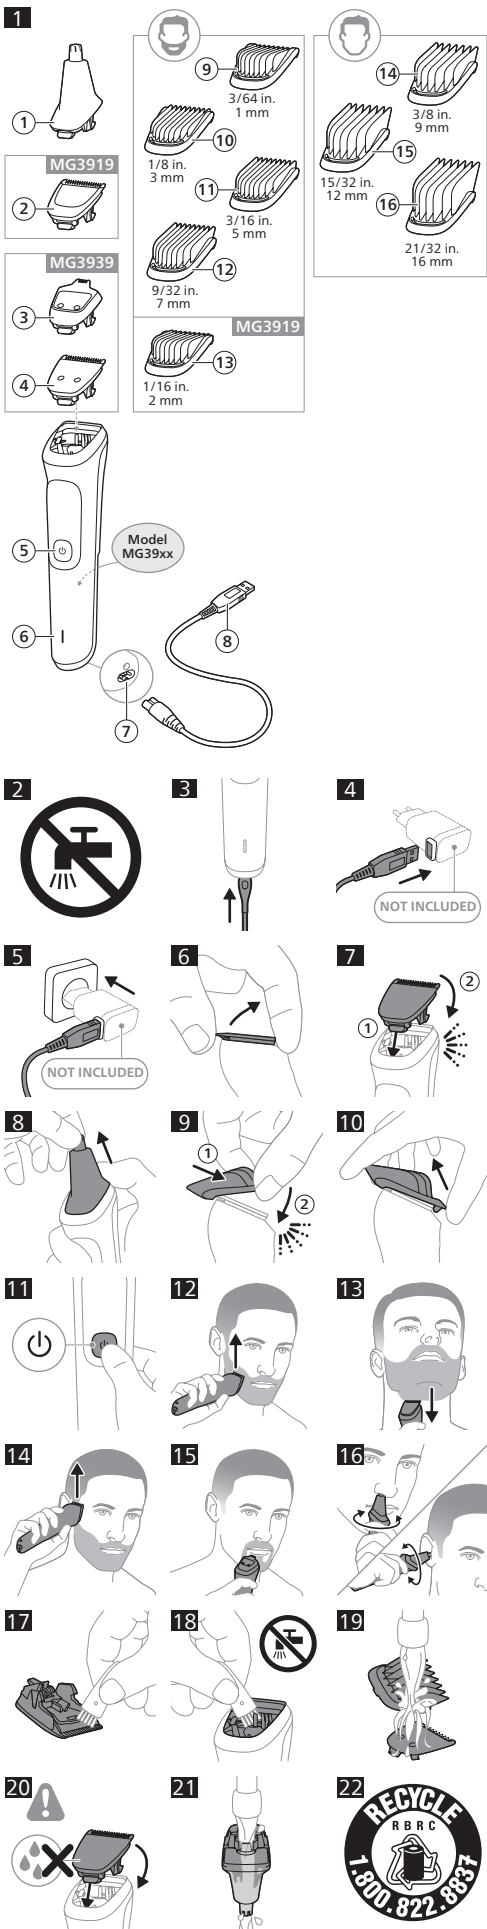

English

IMPORTANT SAFETY INSTRUCTIONS

When using an electric product, basic precautions should always be followed, including the following:

Read all instructions before using this product.

DANGER

To reduce the risk of electric shock:

- To charge the product, only use a USB power source on a certified product with output rating 5 V, ≥ 1 A. A suitable power source (e.g. Philips HQ87) is available via www.philips.com/support. If you need support finding the correct USB power source, contact Philips support at 1-800-243-3050. Using a non-certified USB power source may cause hazards or serious injuries.
- Keep the product, the USB cable and the USB power source dry (Fig. 2).
- Use product only in dry condition. Do not use while bathing or in a shower.
- Do not reach for a corded product that has fallen into water. Unplug immediately from the power outlet.
- Do not place or store the product where it can fall or be pulled into a tub or sink. Do not place or drop the product into water or other liquid.
- This product does not work while it is connected to the power outlet. Except when charging, always unplug this product from the power outlet.
- Remove USB power source from power outlet and product before cleaning.
- Guards and cutting units can be rinsed under the tap if detached from the product.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.
- Use this product only for its intended household use as described in this manual. Misuse can lead to hazards or serious injuries. Do not use attachments not recommended by Philips North America LLC.
- Never operate this product if it has a damaged USB power source, if it is not working properly, after it has been dropped or damaged, or after the product or the USB power source has been dropped into water. For assistance call 1-800-243-3050.
- Keep the USB cable and the USB power source away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use the USB power source in or near a power outlet that contains an electric air freshener to prevent damage to the USB power source.
- Do not use product outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always check cutting units and other attachments and accessories before you use the product. Never use the product with a damaged cutting unit, attachment or accessory, as injury may occur.
- Always attach the USB cable to the USB power source and the product first, then attach the USB power source to the power outlet. To disconnect, set all controls to 'off' position. Then remove the USB power source from the power outlet.
- Plug USB power source directly into power outlet. Do not use an extension cord.
- Unplug USB power source before plugging in or unplugging the product.

- Only use original Philips accessories or consumables.
- Charge, use and store the product at a temperature between 41 °F / 5 °C and 95 °F / 35 °C.
- Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures.
- If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact Philips.
- Do not place products and their batteries in microwave ovens or on induction cookers.
- Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries.
- If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care.
- When you handle batteries, make sure that your hands, the product and the batteries are dry.
- To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard them.

SAVE THESE INSTRUCTIONS

Introduction

Congratulations on your purchase and welcome to Philips Norelco!

To fully benefit from the support that Philips Norelco offers, register your product at: www.norelco.com/register.

You can find the model number on the back of your product.

The full model number (e.g. MG1234/56) is located on the bottom of the packaging, your receipt or order confirmation.

IMPORTANT TO KNOW

Never rinse the handle under the tap or immerse it in water. Only the cutting element and the attachments can be rinsed under the tap when detached from the handle.

Getting the handle wet may cause irreversible damage to your product. This will result in the product becoming unusable.

- This product can only be used without cord.
- Switch off the product before removing or attaching attachments and before cleaning.
- Clean the product after each use (see 'Cleaning').

This product has no other user-serviceable parts. For assistance call 1-800-243-3050.

Features (Fig. 1)

- 1 Nose and ear hair trimmer
- 2 Cutting element (MG3919)
- 3 Precision trimmer (MG3939)
- 4 Cutting element (MG3939)
- 5 On/off button
- 6 Battery status indicator
- 7 Socket for small plug
- 8 USB cable

Note: The power source is not included. A suitable power source (e.g. Philips HQ87) is available via www.philips.com/support.

- 9 Stubble guard 1 mm (3/64 in.)
 - 10 Beard guard 3 mm (1/8 in.)
 - 11 Beard guard 5 mm (3/16 in.)
 - 12 Beard guard 7 mm (9/32 in.)
 - 13 Stubble guard 2 mm (5/64 in.) (MG3919)
 - 14 Hair guard 9 mm (3/8 in.)
 - 15 Hair guard 12 mm (15/32 in.)
 - 16 Hair guard 16 mm (21/32 in.)
- Not shown: cleaning brush and pouch

Charging

- Charging or using the product at temperatures below 41 °F / 5 °C or higher than 95 °F / 35 °C adversely affects the lifespan of the battery.
- If the product is subjected to a major change in temperature, pressure or humidity, let the product acclimatize for 30 minutes before use.

Charge the product before first use and when the motor starts working more slowly. It takes 10 hours (MG3919) or 8 hours (MG3939) to fully charge the battery. When the product is fully charged, it has a cordless operating time of up to 60 minutes.

Warning: Keep the USB cable and the USB power source dry (Fig. 2).



- 1 Make sure the product is switched off.
 - 2 Insert the small plug of the USB cable into the socket in the bottom of the product (Fig. 3).
 - 3 Insert the USB plug into the USB power source (not included) (Fig. 4).
 - 4 Insert the USB power source into the power outlet (Fig. 5).
- The battery charge indicator lights up continuously, when the product is connected to the power outlet.
- 5 After charging, pull the small plug out of the product and remove the USB power source from the power outlet.

Using the product

Always check the product and all accessories before you use it. Do not use the product or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

Because of hygiene, only one person should use the product.

- Trimming tips**
- When trimming for the first time, start by using the guard with the maximum trimming length setting to familiarize yourself with the product.
 - Since all hairs do not grow in the same direction, you may want to try different trimming directions (i.e. upwards, downwards, or across). Practice is best for optimum results.
 - Always make smooth and gentle movements and make sure that the surface of the guard always stays in contact with your skin.
 - For best results, use the product on clean, dry hair, as wet hair tends to stick to the body.
 - When too many hairs have accumulated on the product, remove the hairs before and/or during use, for best trimming results (see 'Cleaning').

Changing attachments

Detaching and attaching cutting elements

- 1 To detach a cutting element, place your thumb below the teeth of the cutting element and gently push upwards until the cutting element comes off the handle (Fig. 6).
- 2 To attach a cutting element, insert the plastic notch at the back of the cutting element into the guiding slot in the handle. Then gently press the teeth of the cutting element downwards until the cutting element clicks into place (Fig. 7).

Detaching the nose and ear hair trimmer

- 1 Place your finger on the recess at the back of the attachment and push the attachment off the handle (Fig. 8). Use your other hand to prevent the attachment from dropping on the floor.

Attaching and detaching guards

- 1 To attach any type of guard onto the cutting element, slide the front part of the guard onto the teeth and press the plastic notch at the back of the guard downwards until it clicks into place (Fig. 9).

- 2 To detach any type of guard from the cutting element, carefully push its back part off the product and then slide it off the cutting element (Fig. 10).

Switching the product on and off

- 1 Press the on/off button once to switch the product on or off (Fig. 11).

Attachments for use on beard

Always comb your beard or moustache with a fine comb before you start trimming.

Trimming without guard

- Use the cutting element without any guard to trim hair close to the skin (to a length of ca. 1/32 in. or 0.5 mm) or to create clean lines around your beard, neck and sideburns.
- 2 To trim hair close to the skin, place the flat side of the cutting element against your skin and make strokes against the direction of hair growth (Fig. 12).
 - 3 For contouring, hold the cutting element perpendicular to the skin and move it upwards or downwards with gentle pressure (Fig. 13).
 - 4 Switch off and clean the product after each use (see 'Cleaning').

Beard guards

Use a stubble or beard guard attached to the cutting element to trim your beard and moustache evenly (see 'Attaching and detaching guards'). The numbers on the guards relate to the number of millimeters of hair length that will remain after trimming.

- 1 Attach a stubble or beard guard to the cutting element (see 'Changing attachments').
- 2 To trim in the most effective way, move the guard against the direction of hair growth. Make sure that the surface of the guard always stays in contact with the skin.
- 3 Switch off and clean the product after each use (see 'Cleaning').

Attachments for use on head

Always comb your hair before you start trimming.

For best results, use the product on clean, dry hair.

- Hair guards**
- Use a hair guard attached to the cutting element to evenly trim the hairs on your head (see 'Attaching and detaching guards'). The numbers on the guards relate to the number of millimeters of hair length that will remain after trimming.
- 1 Attach a hair guard to the cutting element.
 - 2 Move the product slowly over the crown from different directions to achieve an even result (Fig. 14). Always move the product against the direction of hair growth. Press lightly. Make sure that the surface of the guard always stays in contact with the skin.
 - 3 Make overlapping passes over the head to ensure that all hair that should be cut has been cut.
 - 4 Gently shake the hairs off the product in between strokes to prevent hairs from collecting between the cutting element and the guard.
 - 5 Switch off and clean the product after each use (see 'Cleaning').

Precision attachments for use on face

Precision trimmer (MG3939 only)

Use the precision trimmer to create fine lines and contours around your facial style close to the skin, to a length of 1/32 in. (0.5 mm).

- 1 Hold the precision trimming head perpendicular to the skin and move the trimming head upwards or downwards with gentle pressure (Fig. 15).
- 2 Switch off and clean the product after each use (see 'Cleaning').

Nose and ear hair trimmer

Use the nose and ear hair trimmer to trim your nose and/or ear hair.

- Make sure nasal passages are clean. Make sure outer ear channels are clean and free from wax.
- Do not insert the cutting element too deep into your nostrils or ear channels (max. 3/16 in. or 5 mm).
- When trimming both nose and ear hair, make firm, rotary movements to ensure that the cutting element reaches all the hairs.

- Clean the nose and ear hair trimmer after each use.
- Note: The nose and ear hair trimmer is **not** designed to clean-shave your nostrils or ear channels, but to cut the hairs to a shorter length. Nose and ear hairs have important protective functions and should not be fully removed.

Trimming nose hair

- 1 Gently insert the cutting element into one of the nostrils. Move the tip in and out of the nostril in a firm, rotary motion to cut the hairs to a shorter length (Fig. 16).

- Trimming ear hair**
- 2 Slowly move the cutting element along the outer ear to trim hairs that stick out beyond the rim.
 - 3 Gently insert the cutting element into the outer ear channel. Move the tip in and out of the outer ear channel in a firm, rotary motion to cut the hairs to a shorter length (Fig. 16).

Switch off and clean the product after each use (see 'Cleaning').

Cleaning

Never rinse the handle under the tap or immerse it in water. Only the cutting element and the attachments can be rinsed under the tap when detached from the handle.

Switch off the product before removing or attaching attachments and before cleaning.

Only use cold or lukewarm water to clean the cutting element and the attachments.

Never use scouring pads, abrasive cleaning agents or aggressive liquids such as gasoline or acetone to clean the product.

Never dry the cutting element with a towel, brush or tissue, as this may damage the teeth.

- 1 Make sure that the product is switched off and that the USB power source has been removed from the power outlet and from the product.
 - 2 Wipe the handle with a dry cloth.
- Cleaning with brush**
- 1 Detach any guard from the product and clean it with the cleaning brush.
 - 2 Detach the cutting element from the product. Clean the teeth and the inside of the cutting element with the cleaning brush (Fig. 17).
 - 3 Clean the inside of the hair chamber with the cleaning brush (Fig. 18).

Keep the handle away from water. Make sure that no water reaches the inside of the hair chamber.

Cleaning attachments under the tap

- 1 Detach any guard and the cutting element from the product and rinse them under the tap (Fig. 19).
- 2 Carefully shake off excess water and let the parts air-dry completely before reattaching them to the product (Fig. 20).

Cleaning the nose and ear hair trimmer

Clean the nose and ear hair trimmer immediately after use and when a lot of hair or dirt has accumulated on the cutting element.

- 1 Detach the nose and ear hair trimmer from the product.
- 2 Rinse the nose and ear hair trimmer head under running tap water (Fig. 21).
- 3 For a thorough clean, immerse the nose and ear hair trimmer head in a bowl with warm water for a few minutes to soak and soften the debris. Then rinse the nose and ear trimmer head under running tap water to remove stubborn debris.
- 4 Carefully shake off excess water and let all parts air-dry completely before reattaching them to the product.

Storage

Do not place or store the product where it can fall or be pulled into a tub or sink, water or other liquid.

- Make sure that the product is switched off and that the USB power source has been removed from the power outlet and from the product.
- Do not wrap the USB cable around the product when storing.
- Store the product, the USB power source and all the accessories in the pouch supplied. Place the pouch in a safe, dry location, where it will not be crushed, banged, or subject to damage.
- Make sure that the product and the accessories are dry before you store them in the pouch.

Assistance

For assistance, visit our website: www.philips.com/support or call toll free 1-800-243-3050.

Disposal

- This product contains a rechargeable NiMH battery which must be disposed of properly.
- Contact your local town or city officials for battery disposal information. You can also call 1-800-822-8837 or visit: www.call2recycle.org for battery drop-off locations (Fig. 22).
- For assistance, visit our website: www.philips.com/support or call 1-800-243-3050 toll free.
- Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. For recycling information, please contact your local waste management facilities or visit: www.recycle.philips.com.

Full Two-Year Warranty

Philips North America LLC warrants this new product against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge. **IMPORTANT:** This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage.*

Cutting units and guards are not covered by the terms of this warranty because they are subject to wear and tear.

NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

In order to obtain warranty service, simply go to www.philips.com/support. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty.

NOTE: No other warranty, written or oral, is authorized by Philips North America LLC. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

*Read enclosed instructions carefully.

45-DAY MONEY-BACK GUARANTEE

If you are not fully satisfied with your product send the product back and we'll refund you the full purchase price.

The product must be shipped prepaid by insured mail, insurance prepaid, have the original sales receipt, indicating purchase price and date of purchase. We cannot be responsible for lost mail. The product must be postmarked no later than 45 days after the date of purchase. Philips reserves the right to verify the purchase price of the product and limit refunds not to exceed suggested retail price.

To obtain the money-back guarantee service, please go to www.PhilipsMoneyBack.com and follow the simple 3-step process.

Delivery of refund check will occur 6–8 weeks after receipt of returned product.

