

PHILIPS

Television

Quick Start Guide

 
 
 
 
 
 
 
 
 
7600 Series

7314-98K41U-25042161













The actual accessories may differ from the illustrations, which are for reference purposes only.




Tool needed for assembly

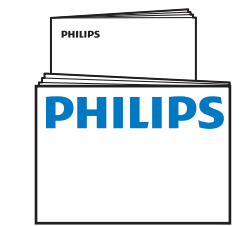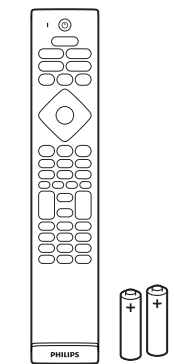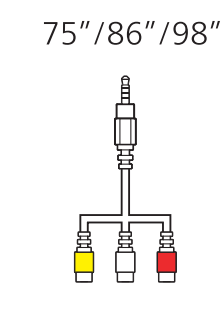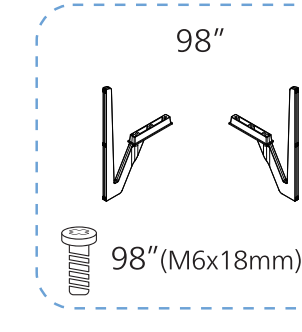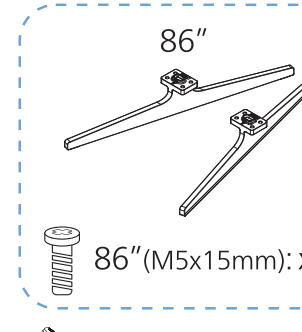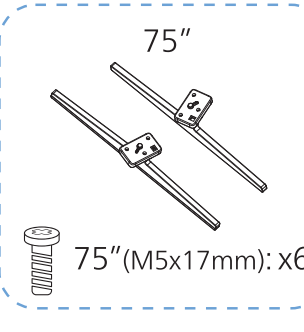
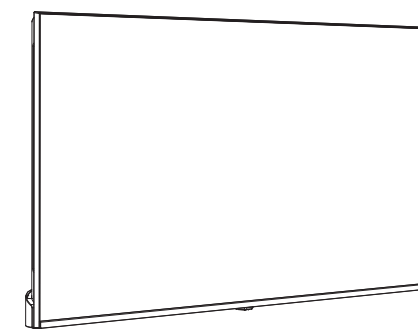
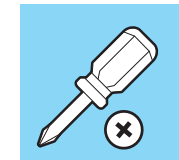


M: Machine screw

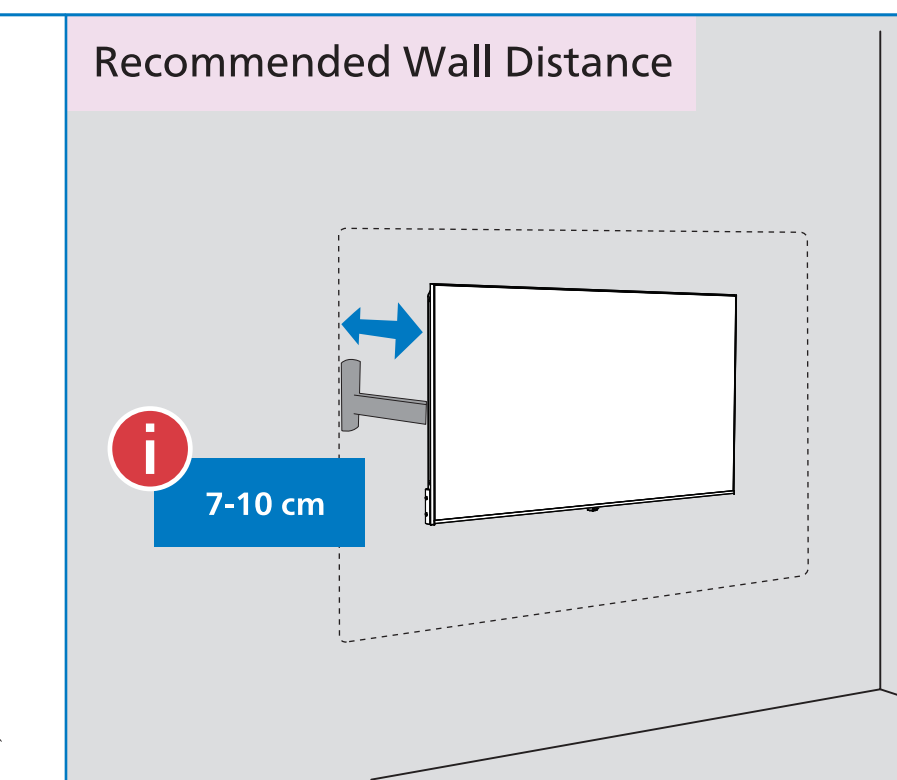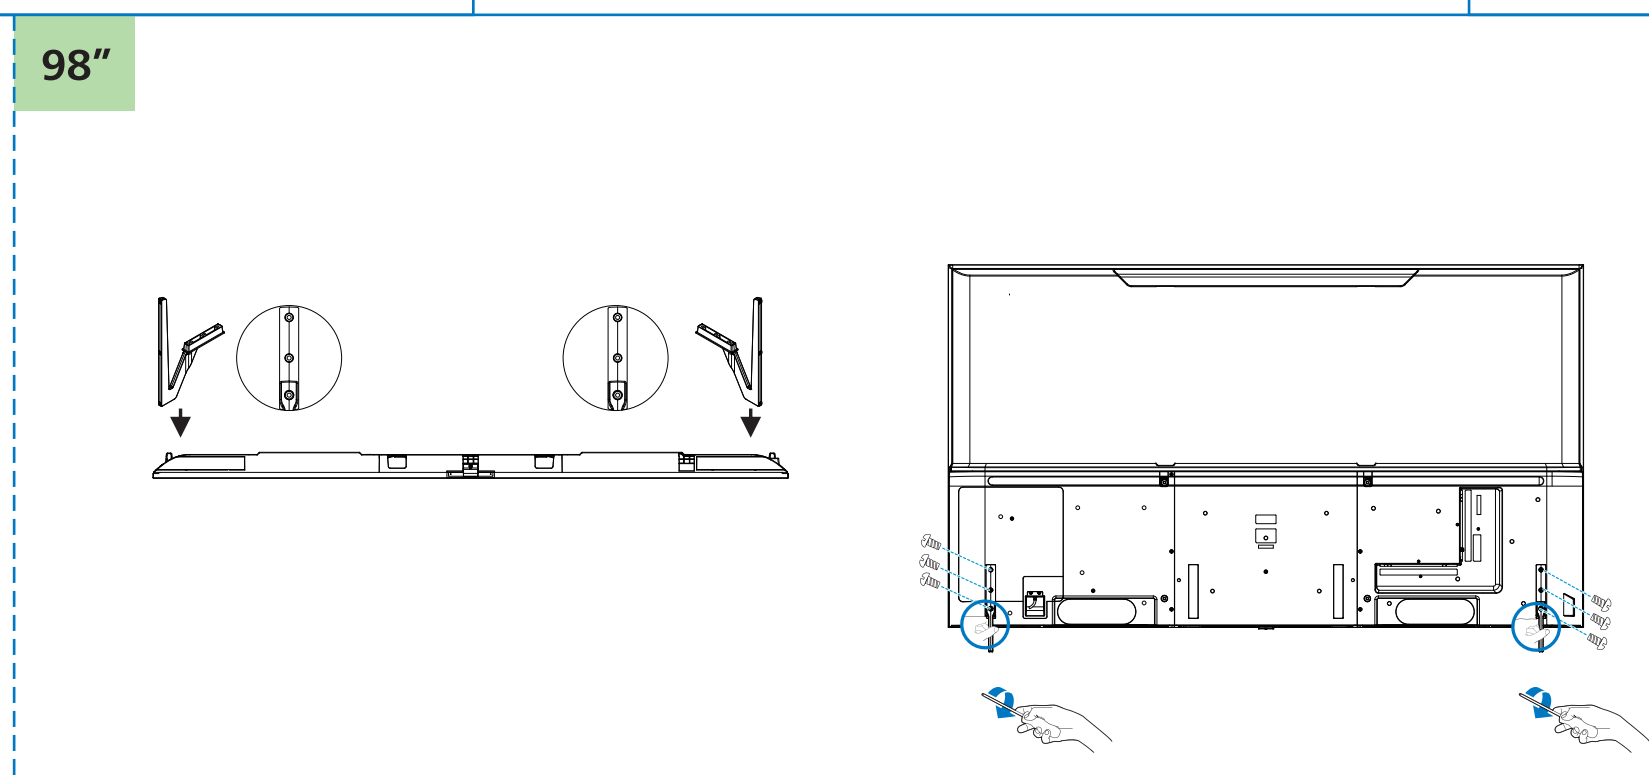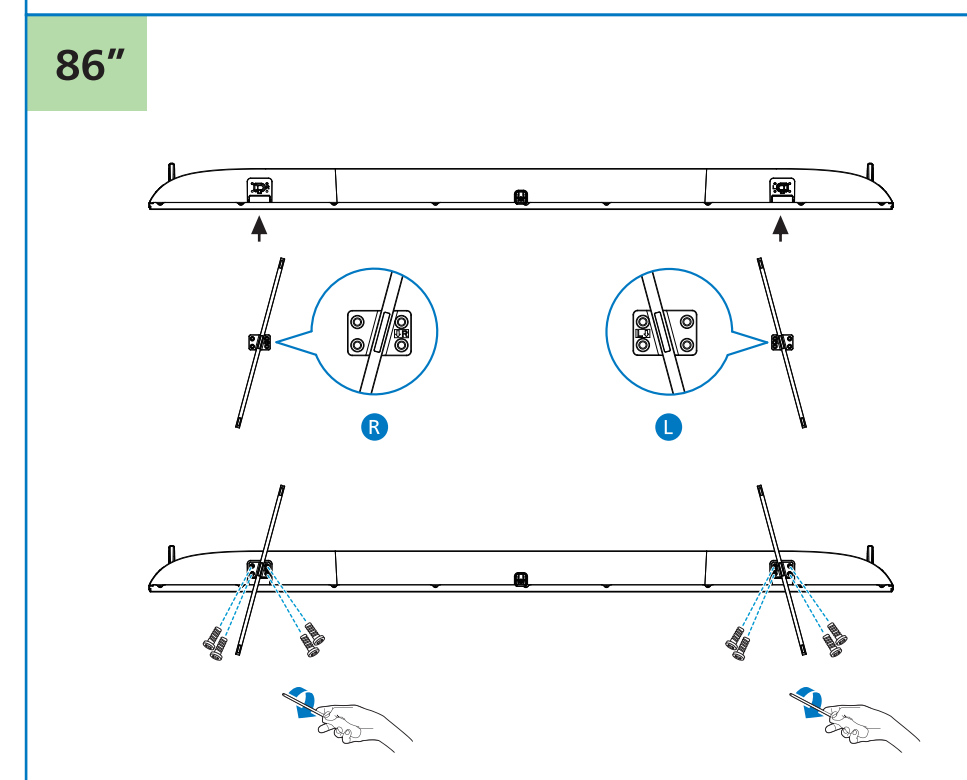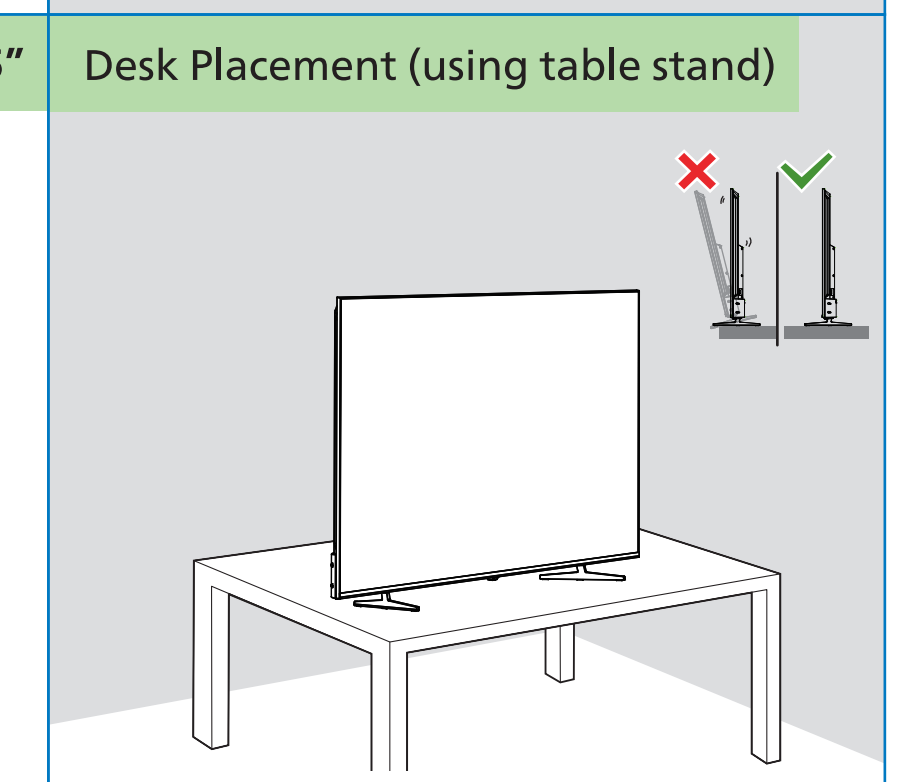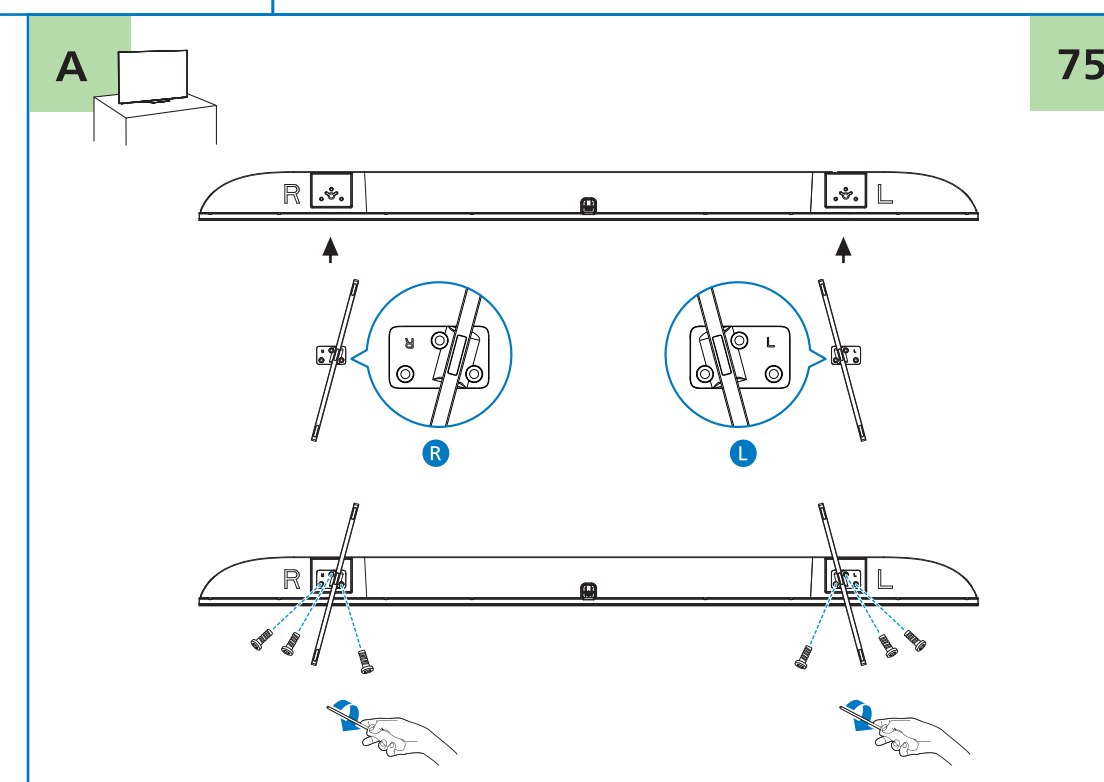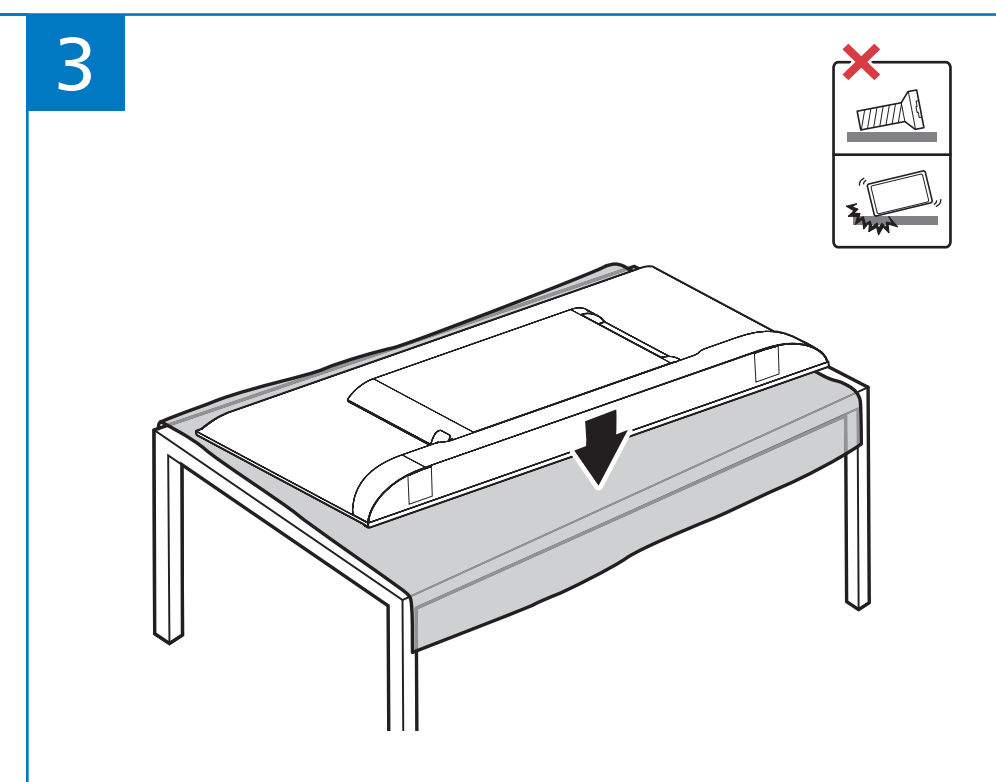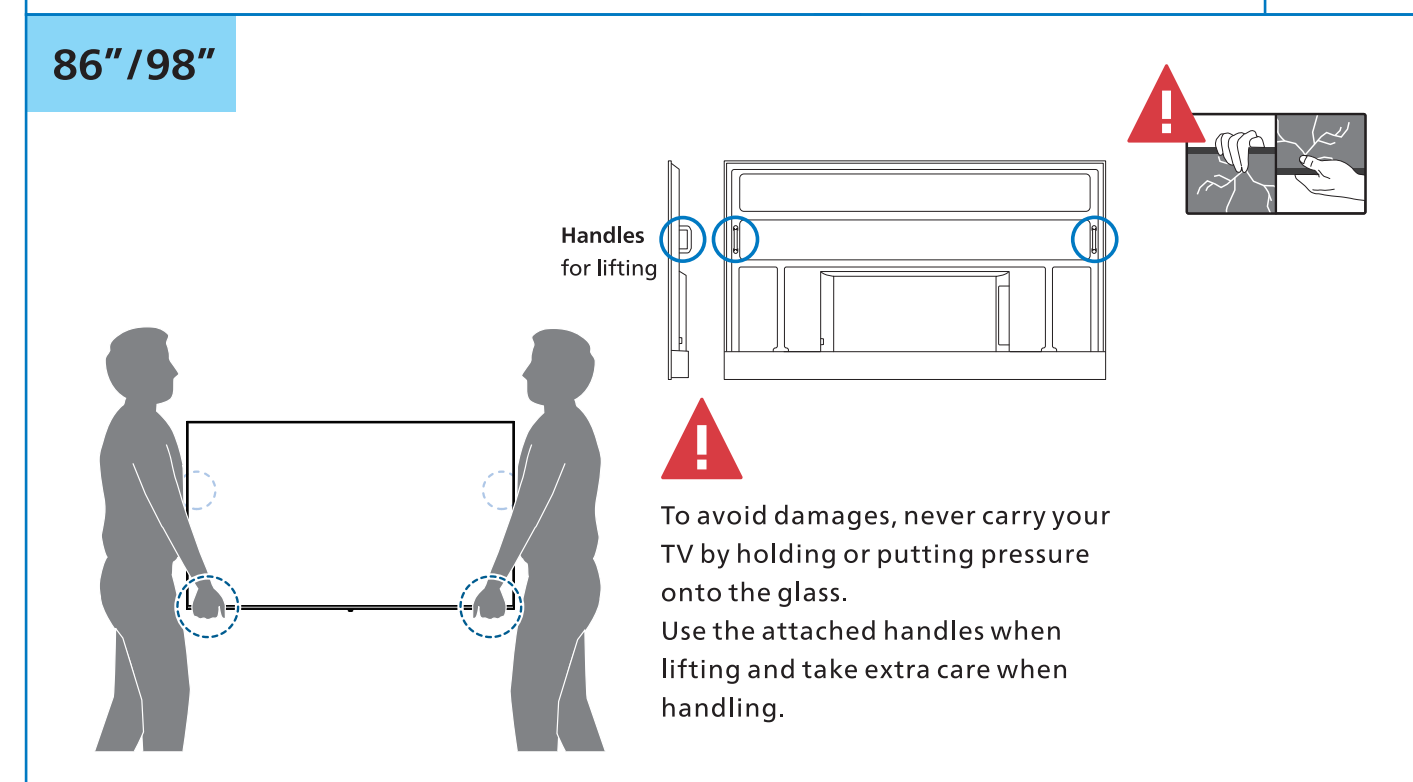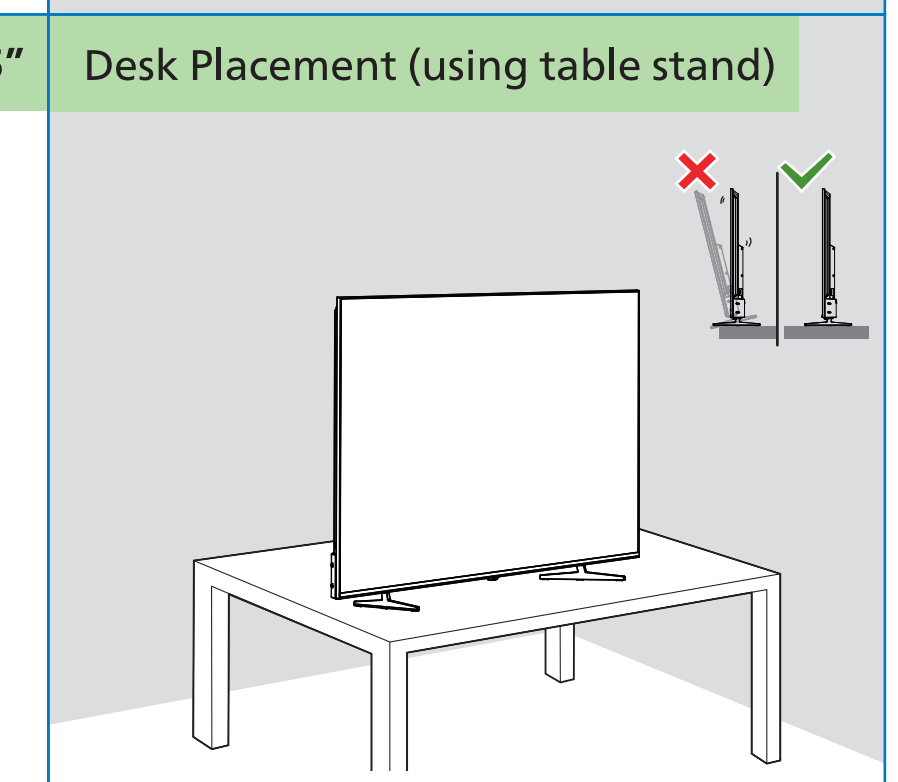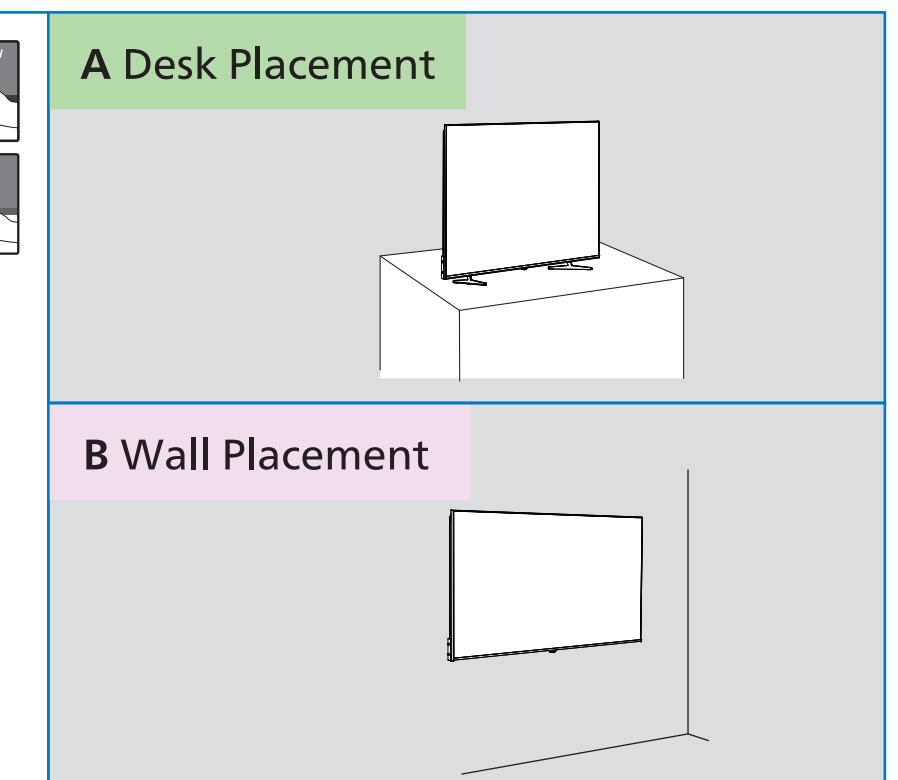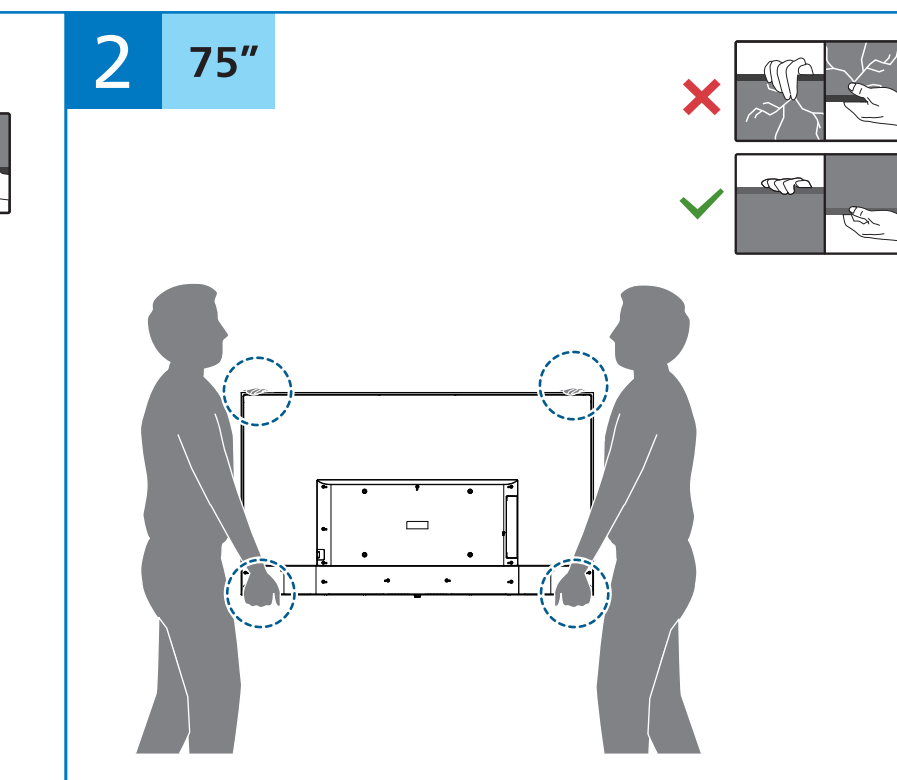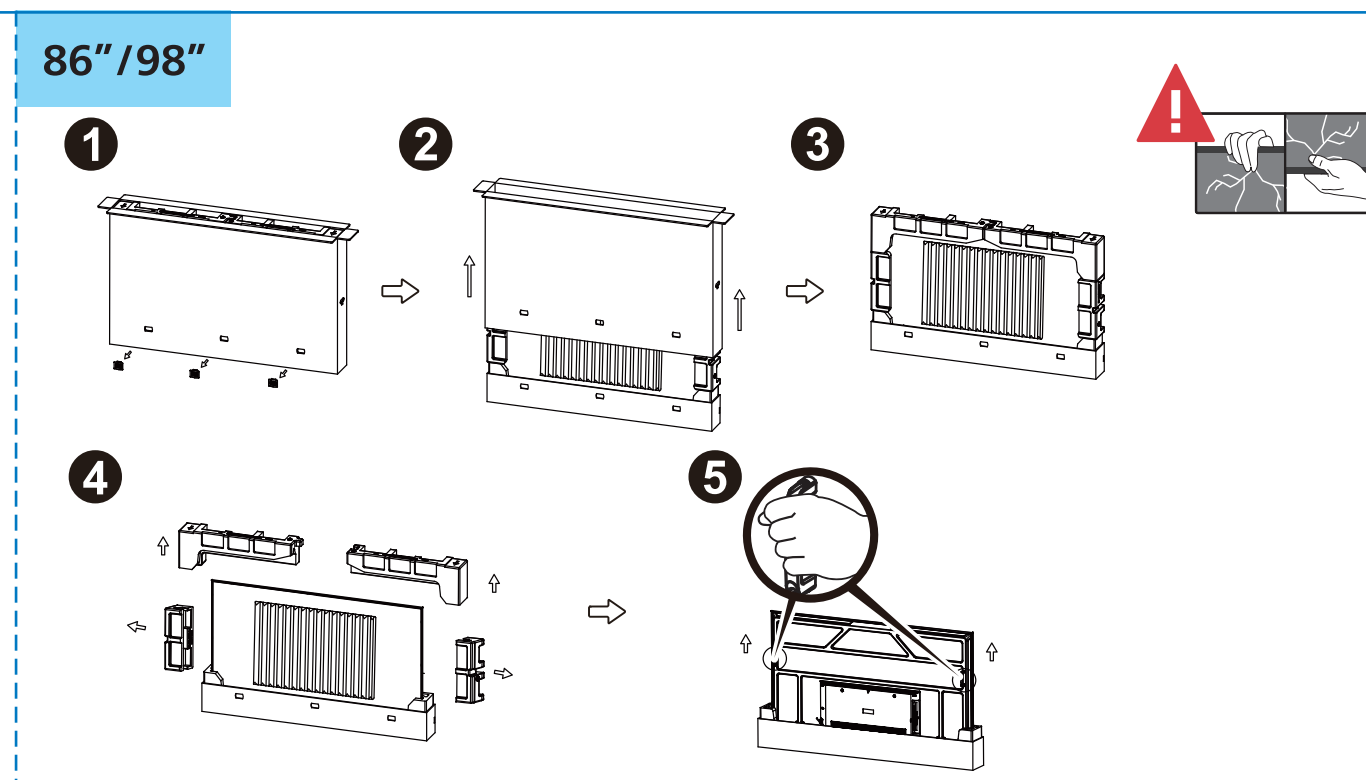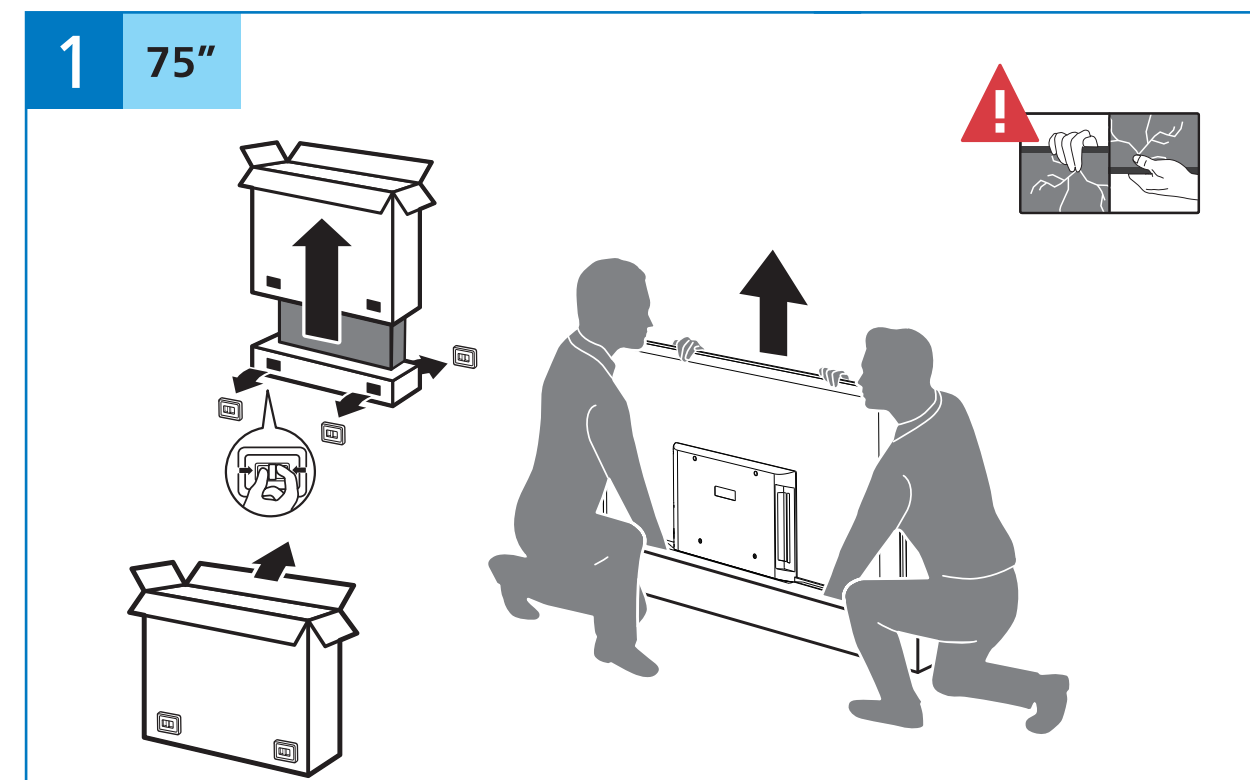            

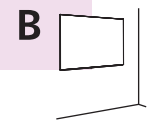 

Diagonal (inch/cm)	X (mm)	Y (mm)	Screw Size	Screw Length (mm)
75"/189	500	300	Up: M8 Down: M8	22~29 22~29
86"/217	500	300	Up: M8 Down: M8	22~29 22~29
98"/249	700	400	Up: M8 Down: M8	10.5~22.5 10.5~22.5

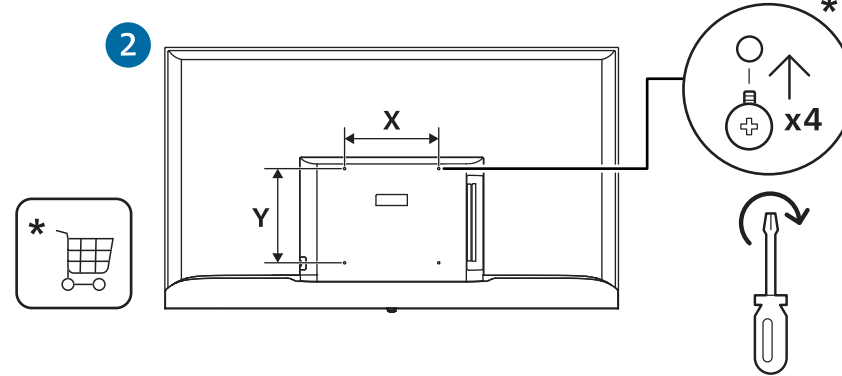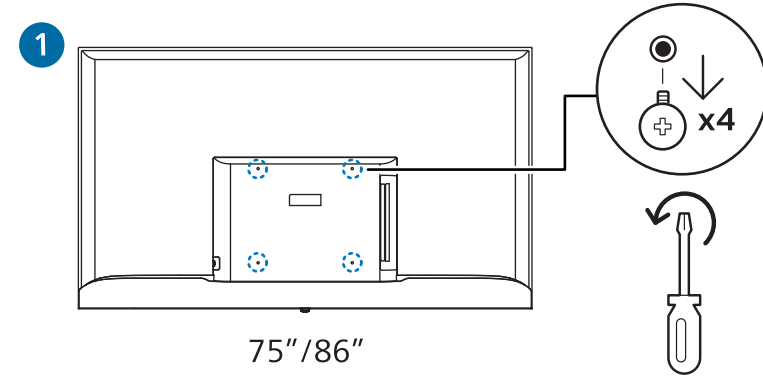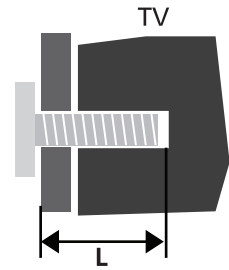   


1

2

3



 To install batteries, slide the battery door up.

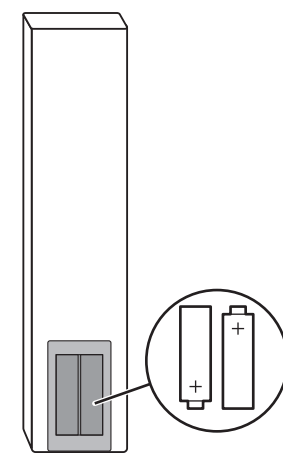

Use 2x AAA 1.5V (included)



Click
Slide battery door back in place.



 
 
 
 
 
English Read the safety instructions.
Bahasa Malaysia Baca arahan Keselamatan.
Bahasa Indonesia Baca petunjuk keselamatan.

Deutsch Lesen Sie die Sicherheitshinweise.
Français Lisez les consignes de sécurité.
Português Leia as instruções de segurança.

ภาษาไทย โปรดอ่านคำแนะนำด้านความปลอดภัย
Tiếng Việt Hãy đọc chỉ dẫn an toàn.
简体中文 请阅读安全说明。

العربية قراءة تعليمات السلامة.

75"/86"/98"

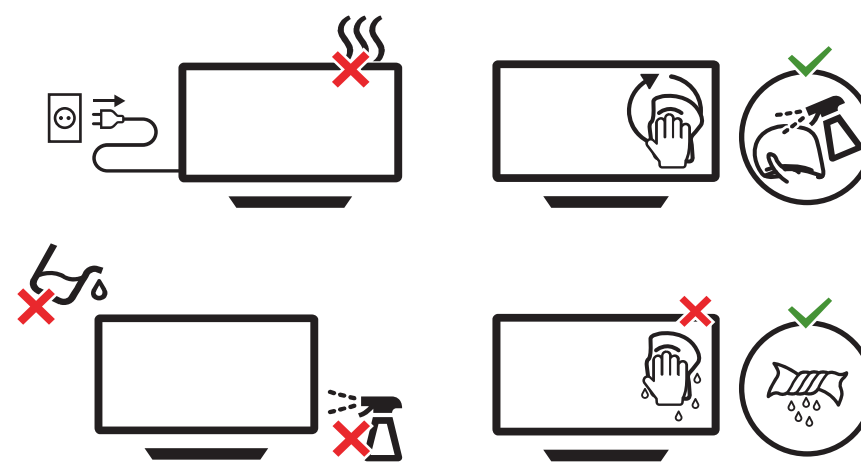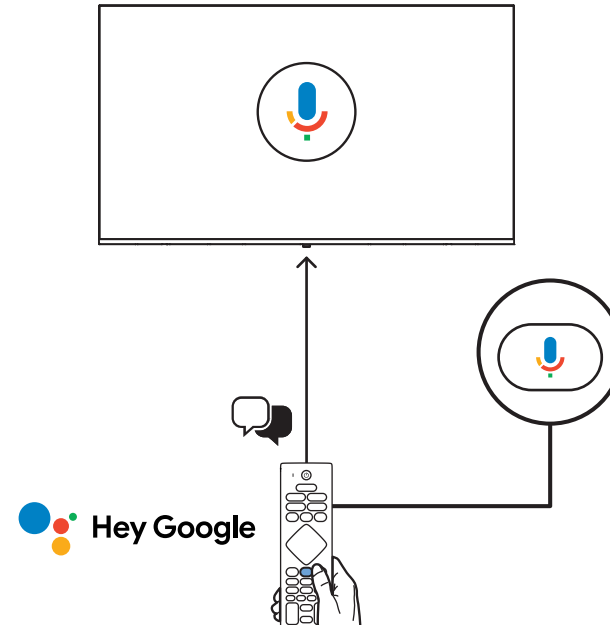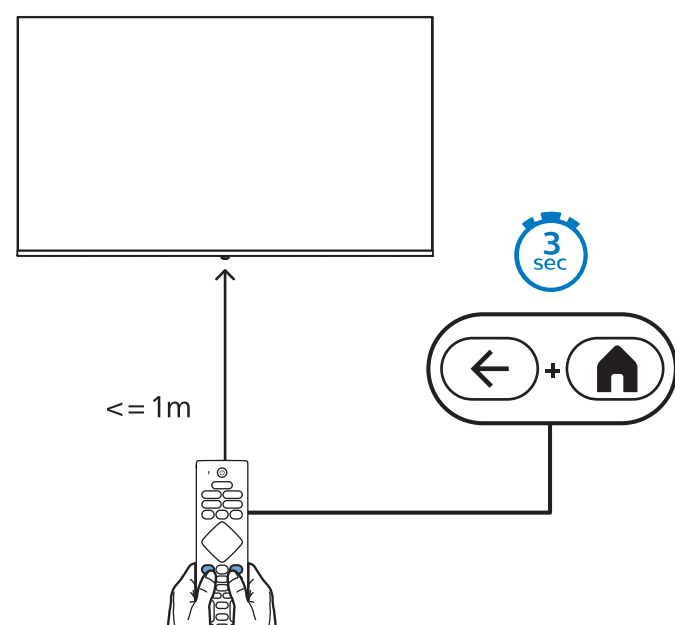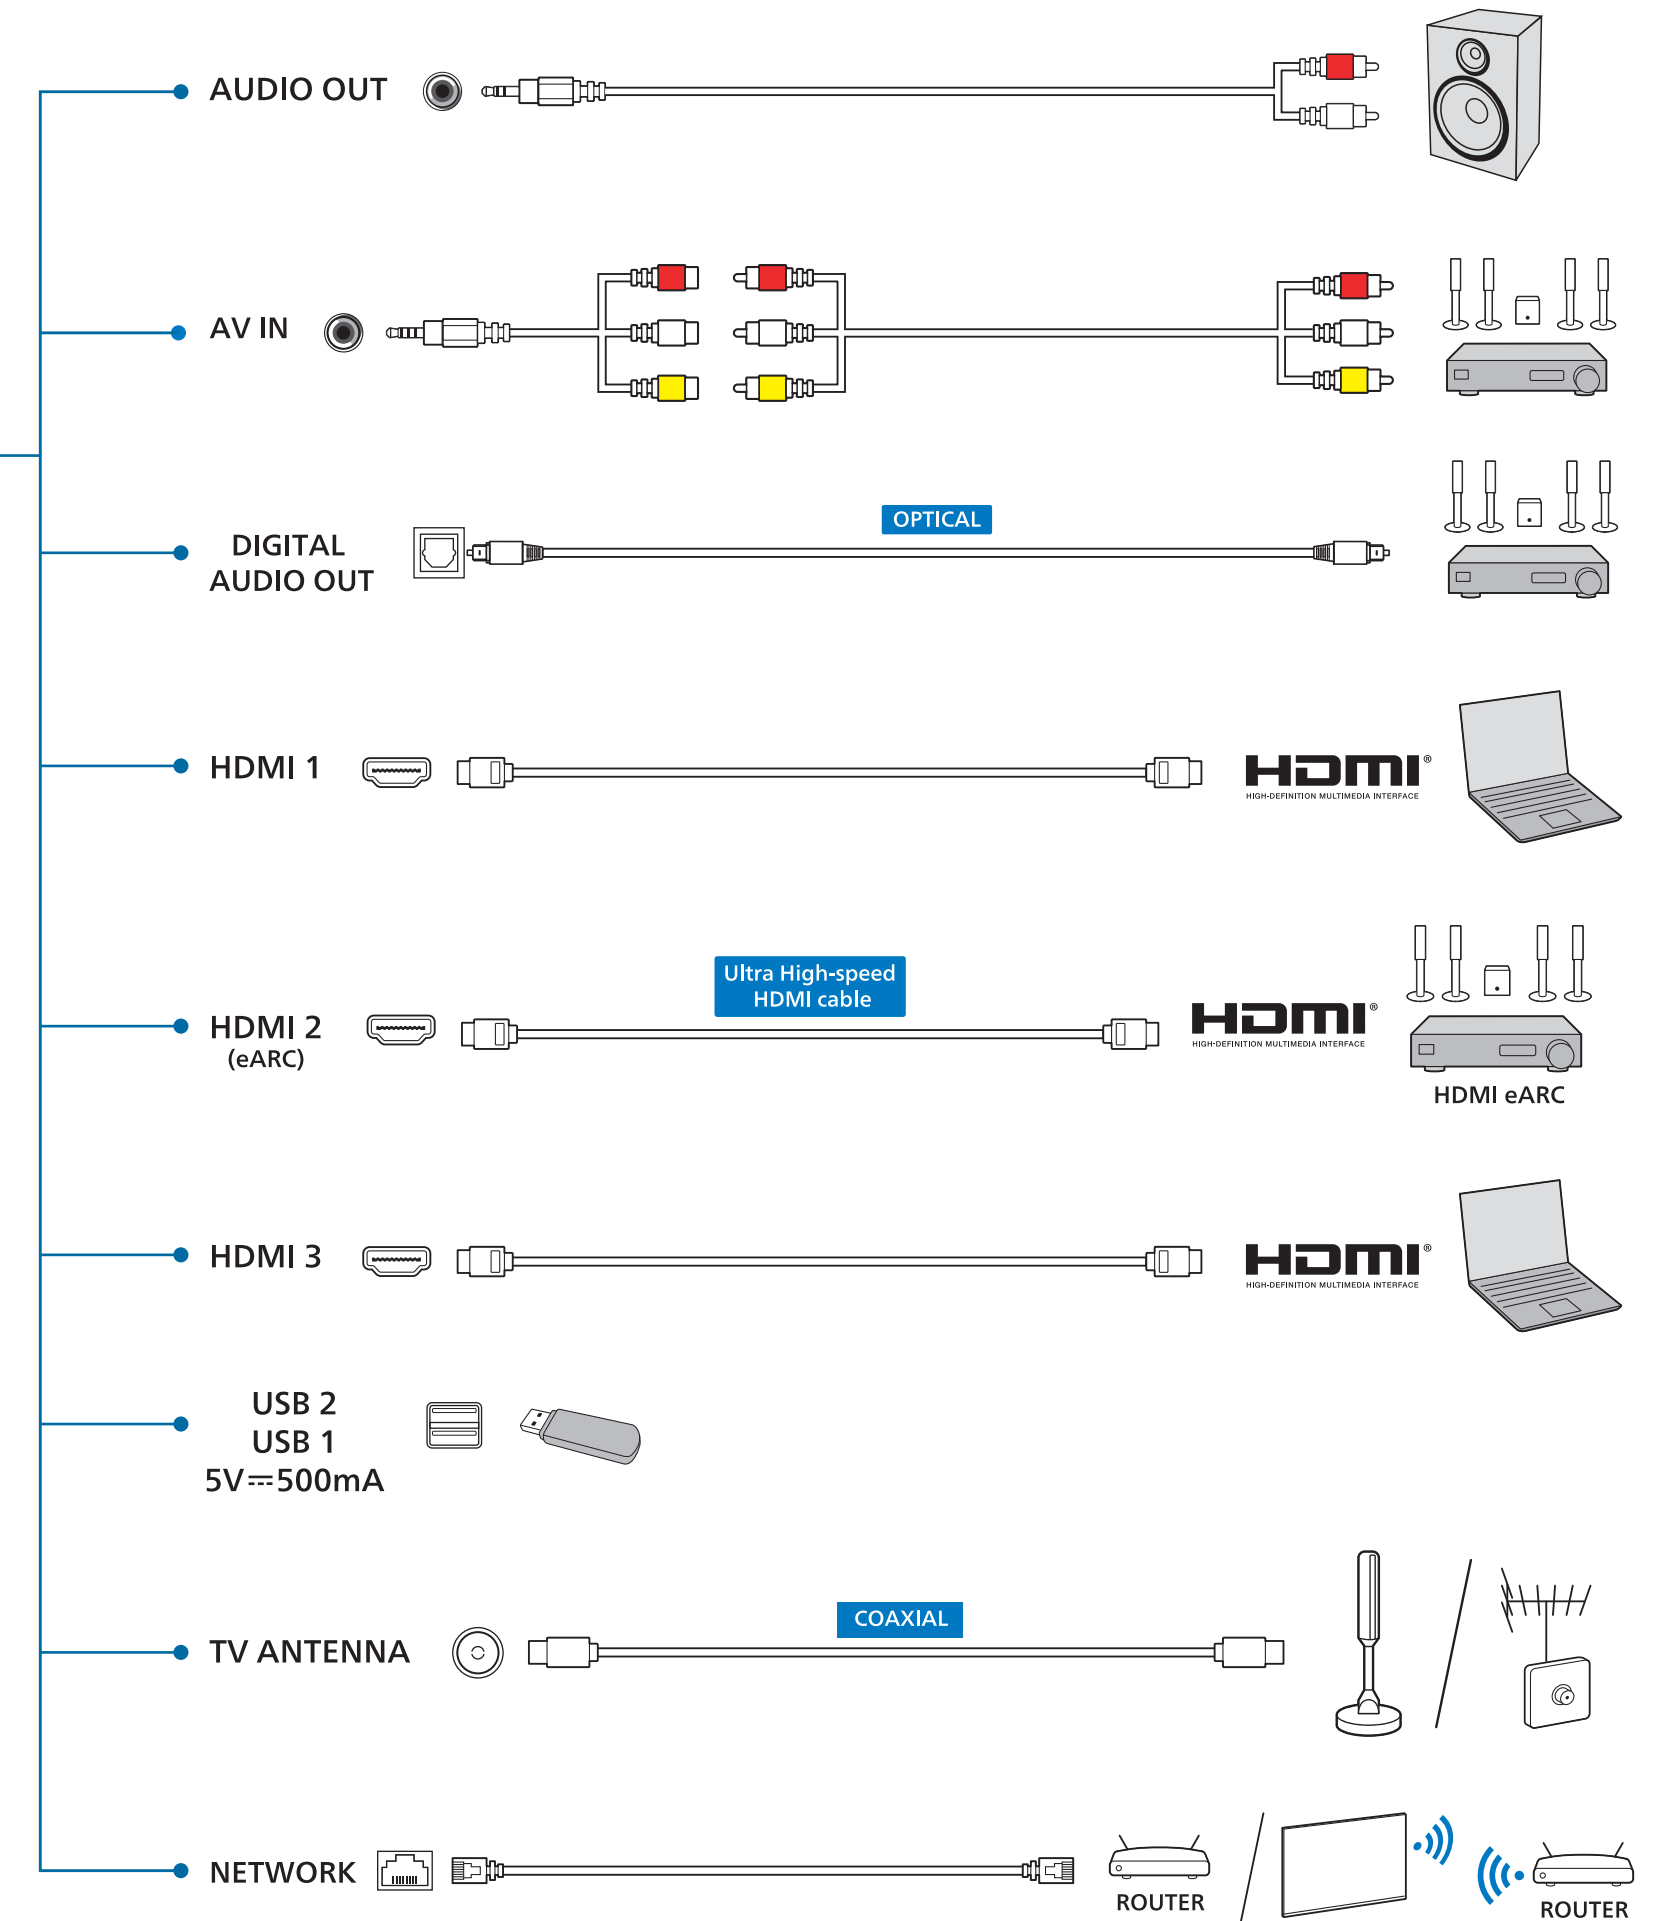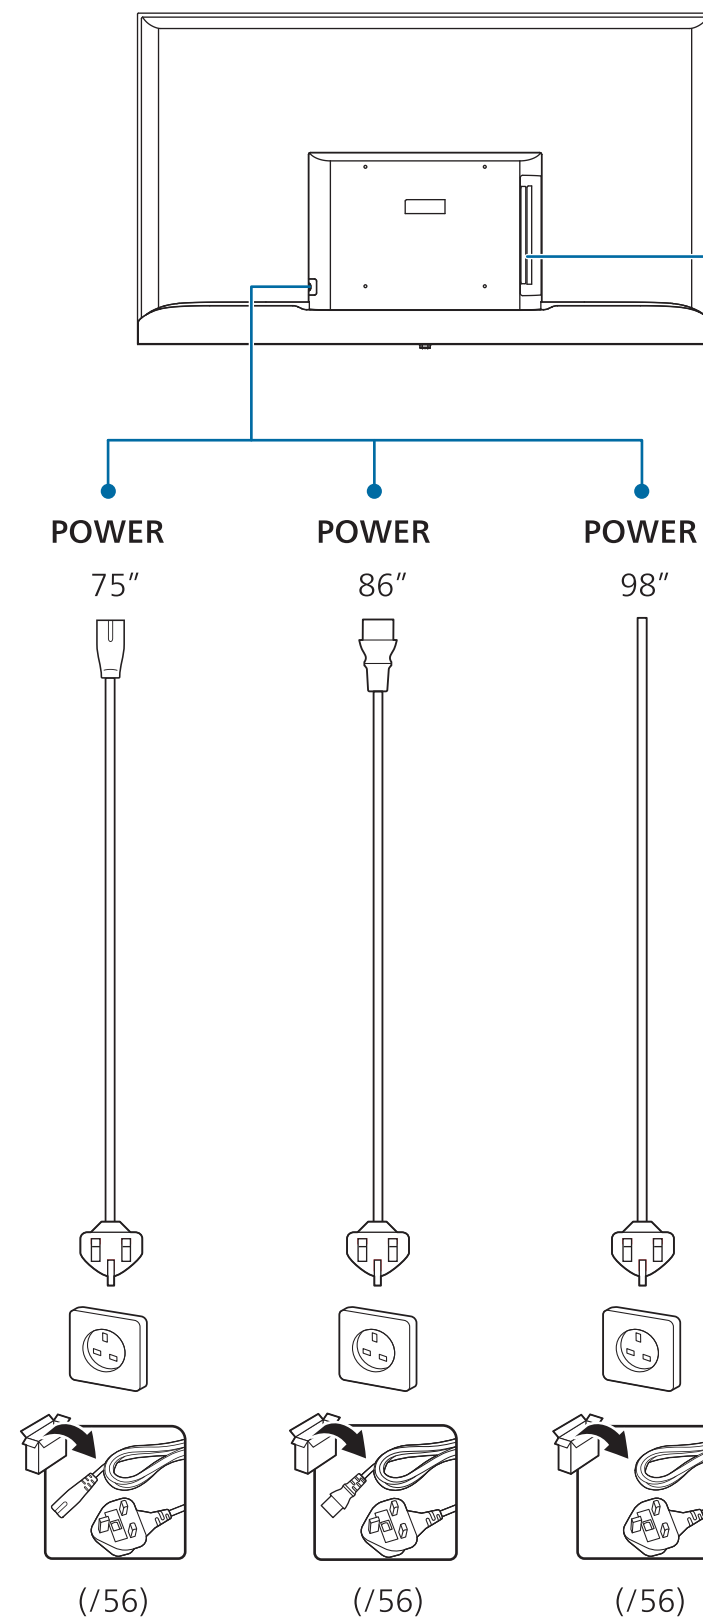

All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of TP Vision Europe B.V., and TP Vision Europe B.V. is the warrantor in relation to this product. 2025 © TP Vision Europe B.V. All rights reserved. www.philips.com/welcome