

PHILIPS

 Google TV

User manual

Register your product and get support at
www.philips.com/support

Call us:
1-833-978-3323

To obtain assistance, contact Philips customer care center;
In the U.S., Canada, Puerto Rico, or the U.S. Virgin Islands

Contents

1	Notice	4
	Important safety instructions	5
2	Getting started	9
	What's included	9
	Installing TV	10
	Unpacking and Installing the stands	10
	Wall mount	11
	Control Panel & Terminal	11
	Control panel	11
	Terminals	12
	Connect devices	13
	Watch TV	13
	Game console/BD/DVD player	13
	Home theater speaker	14
	PC screen	15
	Internet router	15
	Headphone	15
3	Completing the first time setup	16
	Remote	16
	Installing the Batteries	16
	Buttons	17
	Talk to Google Assistant	17
	Privacy protection built-in	17
	Initial set-up	18
	Plug in and turn on TV	18
	Follow the on-screen instructions	18
	Get started with setup	18
	Basic TV mode	21
	Use basic TV on a Google TV device	21
	Switch from basic TV to Google TV	21
4	Using the On-Screen Menu	22
	Home menu	22
	Dashboard	22
	Channels & Inputs	23
	Display & Sound	23
	Picture	23
	Screen	25
	Sound	25
	Audio output	26
	Network & Internet	26
	Accounts & Profiles	27
	Google Account	27
	Privacy	28
	Apps	29
	Recently Opened Apps	29
	See all apps	29
	Manage updates	29
	App permissions	29
	Special app access	29
	Security	29
	Security & Restrictions	29
	System	30
	About	30
	System Update	30
	Device name	30
	Reset	30
	Status	30
	Legal Information	30
	Model	30
	Android TV OS Version	30
	Android Security Patch level	30
	Kernel Version	30
	Android TV OS Build	30
	Netflix ESN	30
	Software Version	30
	Date & Time	30
	Language	30
	Keyboard	30
	Storage	31
	Ambient Screensaver	31
	Power and Energy	31
	Cast	31
	System Sounds	31
	Shop Mode	31
	Restart	31
	Accessibility	31
	Talkback	31
	Text to speech	32
	Use Accessibility shortcut	32
	Turn on Switch Access	32
	Turn on closed captions	32
	Turn on high contrast text	32
	Remotes & Accessories	33
	Pair a Bluetooth device	33
	Reconnect a paired device	33
	Fix programs with connecting Bluetooth devices	33
	Troubleshoot connection issues	33
	Help & Feedback	34
	Send feedback	34
	Help	34

5 Enhance your Google TV	35	Use Phone as remote/Watchlist	43
Home menu	35	Use your phone as your Google TV remote	43
Add Google account	35	Set up your virtual remote	43
Sign in or add an account	35	Fix problems with the Google TV virtual remote	43
Remove or manage accounts	35	Ambient mode (Digital Photo Frame)	43
Remove your account if you can't use your TV screen	35	Change the screen saver	43
Installing apps	36	Choose your screen saver	43
Search for an app	36	Choose which photos show	43
Browse for apps	36	Customise settings	44
Remove apps	36	Show weather & time on your screen saver	44
Personalized recommendation	36	Cast to Google TV	44
Add your streaming services	36	Cast to Google TV	44
Tell us what you like to watch	36	Cast from a device to your TV	44
Manage your watchlist	37	Fix problems with casting	44
Mark what you've watched	37	Connect your TV and device to the same Wi-Fi network	44
Rate movies and shows	37	Update your TV	44
Hide recommendations	37	Google Assistant	45
Turn on Apps only mode	37	Do more with Google Assistant on Google TV	45
Exit Apps only mode	37	Talk to Google Assistant	45
Watch your movies & shows in Apps only mode	37	What you can ask Google Assistant	45
What happens when Apps only mode is on	37	USB camera for Google Meet	46
Basic TV mode	38	How to connect USB camera	46
Switch from basic TV to Google TV	38	6 Troubleshooting tips	47
What you can do in basic TV	38	Basic issues	47
What you can't do in basic TV	38	Network connections	47
Live TV/EPG	38	Connect Remote control	47
Program Guide	38	Video	48
Live TV from broadcasting	38	Audio	49
Choose your favorite channels	38	Cable/Satellite TV	50
Program guide	39	External devices	50
Live TV from streaming providers	39	Connect Bluetooth	52
Pluto TV	39	7 Information	53
YouTube TV	39	Glossary	53
Sling TV	39	Maintenance	53
Philo	39	Specifications	54
Live TV Settings/TV MENU -- Channels	39	Warranty	55
Live TV Settings/TV MENU -- TV Options	40	License	56
Live TV Settings/TV MENU -- Record	40		
Kids profile (parental control)	41		
Add a kids profile	41		
Switch to a kids profile	41		
Set up a profile lock	41		
Allow or block content or apps	41		
Allow or block content in your library based on rating	41		
Set a daily screen time limit	41		
Set a daily bedtime	41		
Add bonus time	42		
Report inaccurate content ratings	42		
Hide library content	42		
Unhide library content	42		
Parental Controls	42		

Register online at www.philips.com/welcome today
to get the most benefits from your purchase.

Registering your model with Philips makes you eligible for all of the valuable benefits listed below, so don't miss out.

Register online at www.philips.com/support to ensure:

*Product safety notification

By registering your product, you'll receive notification – directly from the manufacturer – in the rare case of a product recall or safety defect.

*Additional benefits

Registering your product guarantees that you'll receive all of the privileges to which you're entitled, including special money-saving offers.

Know these **safety** symbols



The caution marking is located on the rear or bottom of the cabinet.

The symbol for CLASS II or double insulated electrical apparatus. This apparatus has been designed in such a way that it does not require a safety connection to electrical earth.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

PHILIPS

For fastest support visit us online for chat and self service
solutions at www.philips.com/support

CHILD SAFETY: PROPER TELEVISION PLACEMENT MATTERS

THE CONSUMER ELECTRONICS INDUSTRY CARES

- Manufacturers, retailers and the rest of the consumer electronics industry are committed to making home entertainment safe and enjoyable.
- As you enjoy your television, please note that all televisions – new and old – must be supported on proper stands or installed according to the manufacturer's recommendations. Televisions that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests, carts, etc., may fall over, resulting in injury.

TUNE IN TO SAFETY

- ALWAYS follow the manufacturer's recommendations for the safe installation of your television.
- ALWAYS read and follow all instructions for proper use of your television.
- NEVER allow children to climb on or play on the television or the furniture on which the television is placed.
- NEVER place the television on furniture that can easily be used as steps, such as a chest of drawers.
- ALWAYS install the television where it cannot be pushed, pulled over or knocked down.
- ALWAYS route cords and cables connected to the television so that they cannot be tripped over, pulled or grabbed.

WALL OR CEILING MOUNT YOUR TELEVISION

- ALWAYS contact your retailer about professional installation if you have any doubts about your ability to safely mount your television.
- ALWAYS use a mount that has been recommended by the television manufacturer and has a safety certification by an independent laboratory (such as UL, CSA, ETL).
- ALWAYS follow all instructions supplied by the television and mount manufacturers.
- ALWAYS make sure that the wall or ceiling where you are mounting the television is appropriate. Some mounts are not designed to be mounted to walls and ceilings with steel studs or cinder block construction. If you are unsure, contact a professional installer.
- Televisions can be heavy. A minimum of two people is required for a wall or ceiling mount installation.

MOVING AN OLDER TELEVISION TO A NEW PLACE IN YOUR HOME

- Many new television buyers move their older televisions into a secondary room after the purchase of a flat-panel television. Special care should be made in the placement of older televisions.
- ALWAYS place your older television on furniture that is sturdy and appropriate for its size and weight.
- NEVER place your older television on a dresser where children may be tempted to use the drawers to climb.
- ALWAYS make sure your older television does not hang over the edge of your furniture.

Important safety instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.




14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Note to the CATV system installer:

This reminder is provided to call the CATV system installer's attention to Article 820 of the NEC, ANSI/NFPA 70 and Section 54 of the CEC, Part I that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Example of antenna grounding as per NEC – National Electric Code

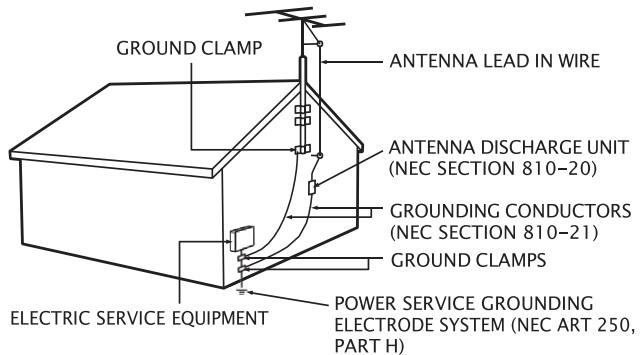

If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the NEC, ANSI/NFPA 70 and Section 54 of CEC, Part I provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead in wire to an antenna-discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

The Philips trademarks are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured and is sold under the responsibility of Skyworth USA Corporation, and Skyworth USA Corporation is the warrantor in relation to this product.

Skyworth USA Corporation reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

The material in this Owner's manual is believed adequate for the intended use of the system. If the product or its individual modules or procedures are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. **Skyworth USA Corporation** warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied.

Skyworth USA Corporation cannot be held responsible neither for any errors in the content of this document nor for any problems as a result of the content in this document. Errors reported to **Skyworth USA Corporation** will be adapted and published on the **Skyworth USA Corporation** support website as soon as possible.

Pixel characteristics

This LCD product has a high number of color pixels. Although it has effective pixels of 99.999 % or more, black dots or bright points of light (red, green or blue) may appear constantly on the screen. This is a structural property of the display (within common industry standards) and is not a malfunction.

Warranty

No components are user serviceable. Do not open or remove covers to the inside of the product. Repairs may only be done by service centers and official repair shops. Failure to do so shall void any warranty, stated or implied.

Any operation expressly prohibited in this manual, any adjustments or assembly procedures not recommended or authorized in this manual shall void the warranty.

Federal communications commission notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

Supplier's Declaration of Conformity

Trade name : PHILIPS

Responsible party : Skyworth USA Corporation

Model : 100PQL7556/F7

Address : 10833 Valley View Street, Suite 415,
Cypress, CA 90630, United States

Telephone number : 1 833 978 3323

* This is not the mailing address for Open Source Software or Customer service.

Modifications

This apparatus may generate or use radio frequency energy. Changes or modifications to this apparatus may cause harmful interference.

Any modifications to the apparatus must be approved by **Electrónica de Consumo Skyworth S. de R.L. de C.V.**

The user could lose the authority to operate this apparatus if an unauthorized change or modification is made.

Cables

Connections to this device must be made with shielded cables with metallic RFI/EMI connector hoods to maintain compliance with FCC Rules and regulations.

The following FCC/IC RSS applies to the wireless LAN adapter included in this product.

FCC caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

FCC/IC RF Exposure Compliance

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules.

This equipment should be installed and operated keeping the radiator at least 20 cm or more away from your body.

This device complies with Part 15 of FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

5150-5250 MHz band is restricted to indoor operations only.


High-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

Compliance with FCC requirement 15.407(c) and IC requirement RSS-210A9.4.4

Data transmission is always initiated by software, which is passed down through the MAC, through the digital and analog baseband, and finally to the RF chip. Several special packets are initiated by the MAC. These are the only ways the digital baseband portion will turn on the RF transmitter, which it then turns off at the end of the packet. Therefore, the transmitter will be on only while one of the aforementioned packets is being transmitted. In other words, this device automatically discontinue transmission in case of either absence of information to transmit or operational failure.

Positioning the TV

- Large screen TVs are heavy. **2 or more** people are required to carry and handle a large screen TV.
- Make sure to hold the upper and bottom frames of the unit firmly as illustrated.
- Install the unit in a horizontal and stable position.
- Do not install the unit in direct sunlight or in a place subject to dust or strong vibration.
- Depending on the environment, the temperature of this unit may increase slightly. This is not a malfunction.
- When installing this unit in a temperate environment, avoid a place with rapid temperature changes.
 - Operating temperature: 41 °F (5 °C) to 104 °F (40 °C)
- This unit should not be used in a tropical environment as it has not been evaluated under such conditions.
- No objects should be placed directly on or under this unit, especially lighted candles or other flaming objects.
- Depending on your external devices, noise or disturbance of the picture and/or sound may be generated if the unit is placed too close to them. In this case, please ensure enough space between the external devices and the unit.
- Do not insert the AC power cord into the power socket outlet before all the connections are made.
- Ensure that you always have easy access to the AC power cord and outlet to disconnect the TV from the AC outlet.
- Before you move the TV, disconnect attached cables to prevent damage to connectors, especially the TV tuner.
- Be sure to unplug the AC power plug from the AC outlet before moving or carrying the unit.
- When moving the TV and then setting it down, please be careful not to pinch the AC power cord under the unit.
- Do not place this unit in an area where it may be exposed to water, oil, or grease such as: near a bathtub, basin, kitchen sink, washing tub, swimming pool, kitchen exhaust fan, etc., or in a damp basement.

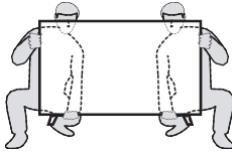

Regulatory notices

WARNING: To prevent injury, this apparatus must be securely attached to the furniture/wall in accordance with the instructions. Tipping, shaking, or rocking the unit may cause injury/death.

Stability Hazard

A television set may fall, causing serious personal injury or death.
Never place a television set in an unstable location. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- **ALWAYS** use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
- **ALWAYS** use furniture that can safely support the television set.
- **ALWAYS** ensure the television set is not overhanging the edge of the supporting furniture.
- **ALWAYS** educate children about the dangers of climbing on furniture to reach the television set or its controls.
- **ALWAYS** route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- **NEVER** place a television set in an unstable location.
- **NEVER** place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- **NEVER** place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- **NEVER** place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.


If the existing television set is going to be retained and relocated, the same considerations as above should be applied.

Do not place the unit on the furniture that is capable of being tilted by a child and an adult leaning, pulling, standing, or climbing on it. A falling unit can cause serious injury or even death.

In order to avoid interruption of ventilation, this unit should not be placed in built-in equipment such as a book cabinet, rack, etc., and the vents of this unit should not be covered with anything such as a tablecloth, curtain, newspaper, etc. Make sure that there is enough ventilation space (4 inches/10 cm or more) around this unit.

Press **Ø** (POWER) to turn the unit on and go into standby mode. To completely turn off the unit, you must unplug the AC power plug from the AC power outlet.

Disconnect the AC power plug to shut the unit off when trouble is found or not in use. The AC plug shall remain readily available.

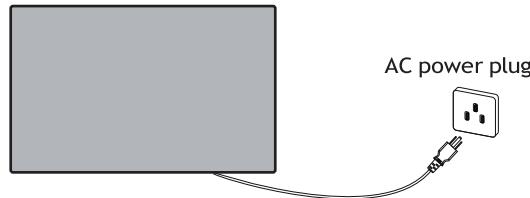

Never use a gas duster or a compressed air duster on this TV. The gas trapped inside of this unit may cause ignition and explosion.

Environmental care



The packaging of this product is intended to be recycled. Contact your local authorities for information about how to recycle the packaging.

For product recycling information, please visit - www.recycle.philips.com

End of life directives

Philips pays a lot of attention to produce environmental-friendly products in green focal areas. Your new TV contains materials which can be recycled and reused. At the end of its life, specialized companies can dismantle the discarded TV to concentrate the reusable materials and to minimize the amount of materials to be disposed of. Please ensure you dispose of your old TV according to local regulations.

WARNING:


- replacement of a battery with an incorrect type may defeat a safeguard;
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, may result in an explosion;
- leaving a battery in an extremely high temperature surrounding environment, such as sunshine, fire, or hot surface may result in an explosion or the leakage of flammable liquid or gas;
- a battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.

CAUTION

Risk of fire or explosion if the battery is replaced by an incorrect type!

Preparing to move/ship the unit

Please pack the unit properly by following the diagram.

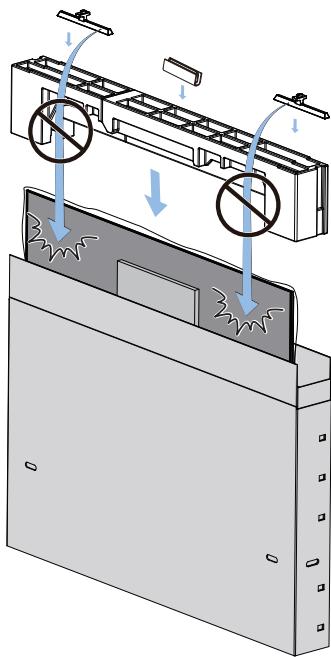

CAUTION : Please save the front cardboard* to use when moving or shipping the TV.

CAUTION : To avoid damage to the screen, do not pack the stand on the same side as the TV screen, refer to the illustration above.

* Cardboard is included in select models only.

Copyright

All other registered and unregistered trademarks are the property of their respective owners.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012-2024 Dolby Laboratories. All rights reserved.

Google, Google Home, Google Cast, Google Meet and other marks are trademarks of Google LLC.

Use of key features of this TV requires consent to Google Terms of Service and Privacy Policy.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Features and specifications are subject to change without notice.

Network services, content, and the operating systems and software of this Product may be subject to individual terms and conditions and changed, interrupted, or discontinued at any time and may require fees, registration and credit card information.

The American Academy of Pediatrics discourages television viewing for children younger than two years of age.

Some features may require an always-on broadband internet connection, firmware update and/or a minimum bandwidth. Internet services vary by location.

2 Getting started

What's included

Quick start guide



Safety instruction/
Limited warranty



 
Caution sheet



AC Power Cord




Remote and Batteries
(AAA, 1.5 V x 2)



Stands and Screws



M5 x 0.591" (15 mm)

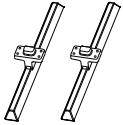

Note(s)

- If you lose the screws, please purchase the above-mentioned Phillips head screws at your local store.
- If you need to replace these accessories, please refer to the part name or No. with the illustrations and call our toll free customer support line found on the cover of this user manual.


When using a universal remote to operate this unit.

- Make sure the component code on your universal remote is set to our brand. Refer to the instruction book accompanying your remote for more details.
- We do not guarantee 100 % interoperability with all universal remote.


Installing TV

Unpacking and Installing the stands


1. Cut the packing belts.

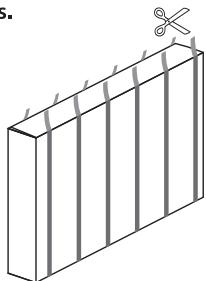


2. Open the packaging boxes of TV set and its stands.

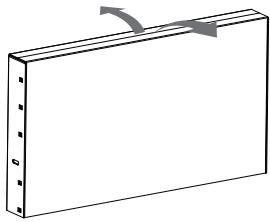


3. Remove accessories (Stand legs and accessories bag). Remove top packing foams inside TV box (2 pcs).

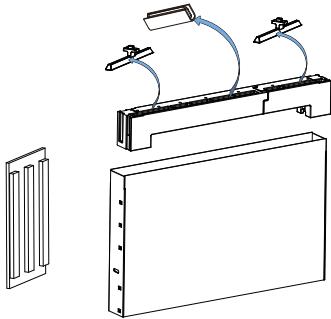


4. Remove the protective carton and lay it flat on the ground. Be careful, your TV will be exposed and supported by bottom tray only.

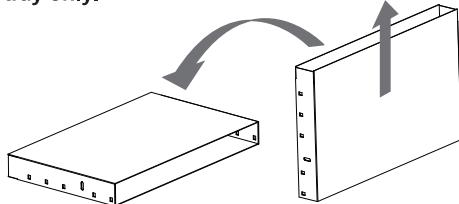


5. Put foams into the slipbox.

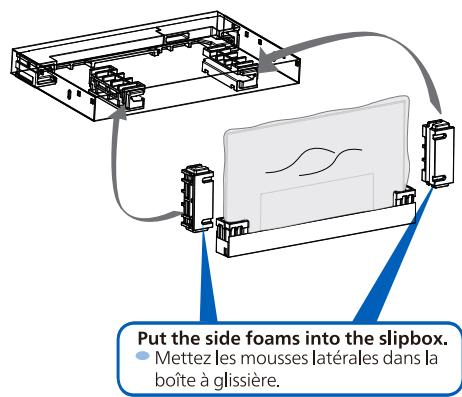

6. Carefully lay the TV set, with the screen side down, on the outer slipbox.

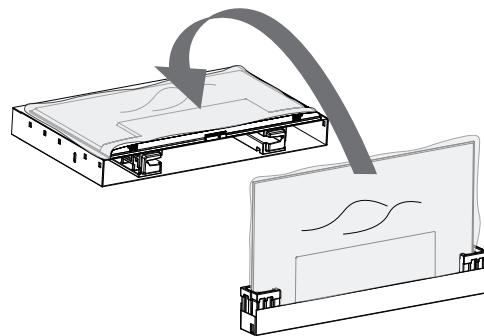


8. Prior to attaching each stand, make sure to peel off the protective film where each stand goes in so it will not get stuck between the unit and the stand. Fasten the stand to the unit with 4 stand screws each (included).

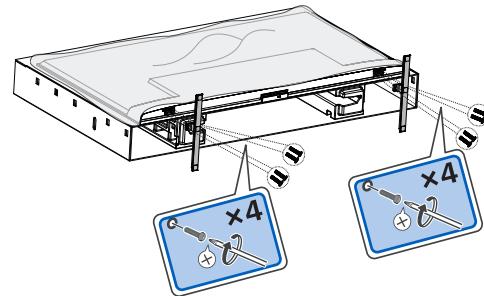


Note(s)

- A wide open space is recommended for assembly.
- A Phillips-head screwdriver is required to fasten the stands to the TV set.
- When attaching the stand, ensure that all screws are tightly fastened. If the stand is not properly attached, it could cause the unit to fall, resulting in injuries as well as damage to the unit.
- To remove the stand from this unit, unscrew the Phillips head screws by reversing the procedure. Be careful not to drop the stand when you remove it.

9. Carefully lift the TV set as shown in the illustration and place it onto a stable, level surface.

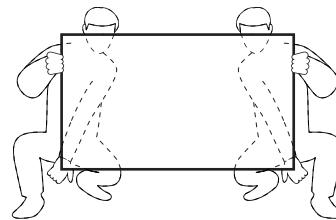

Wall mount

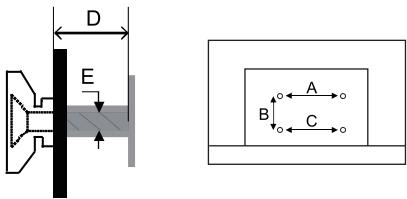

Model Size:		100"	
		Top	Down
Screw	Diameter(mm) "E"	M8	M8
	Depth(mm) "D"	Max	18
		Min	15
Quantity		2	2
A*B*C		800*400*800	

Your TV meets the VESA standard for wall mounting. Consult with your local dealer for a wall mount bracket which is compatible with your TV model.

- The net weight of your TV set without stands is:
<102.51lbs/46.50kg>
- For detailed information on installing the wall mount, refer to the wall mount instruction book.
- Electrónica de Consumo Skyworth S. de R.L. de C.V is not responsible for any damage to the product or injury to yourself or others if you elect to install the TV wall mount bracket or mount the TV onto the bracket.
- The wall mount bracket must be installed by experts.
- Electrónica de Consumo Skyworth S. de R.L. de C.V is not liable for these types of accidents or injuries noted below.
- If installed onto a ceiling or slanted wall, the TV and wall mount bracket may fall which could result in a severe injury.
- Do not use screws that are longer or shorter than their specified length. If screws too long are used this may cause mechanical or electrical damage inside the TV set. If screws too short are used this may cause the TV set to fall.
- Do not fasten the screws by excessive force. This may damage the product or cause the product to fall, leading to an injury.
- For safety reasons use 2 people to mount the TV onto a wall mounting bracket.
- Do not mount the TV onto the wall mounting bracket while your TV is plugged in or turned on. It may result in an electrical shock injury.


When installing the unit on the wall, allow this much space.

Top : 11.8" (30 cm)
Left and right side : 5.9" (15 cm)
Bottom : 3.9" (10 cm)

Control Panel & Terminal

Control panel

TV Control Button

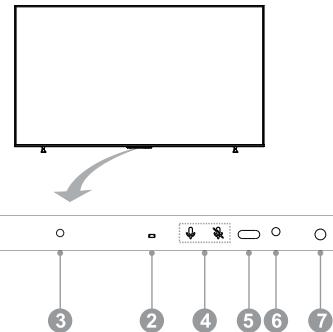

1. TV Control Button (Located under this icon)

* In standby mode:

Press TV control button to turn on the TV.

* In working status:

Short press TV control button to call out the following menu of soft keyboard. Inside it, short press TV control button to move the cursor and select the desired item, then long press TV control button to enter or execute the selected item.



Note:

1) Only when the Bluetooth remote control has a buzzer on its back and has been paired with the TV successfully, the item "Find my remote" can be found on the menu of soft keyboard.

2) "Channel -/+" may not be shown in the menu of soft keyboard on specific interfaces like the home screen, etc.

2. Far Field Microphones

Microphones of far field voice function. It is best to keep yourself within 3 meters away from the far field microphones while using the far field voice function.

3. Power Indicator

Indicate the status of the TV power.

4. Switch of Far Field Microphones (Located under these icons)

Turn on or turn off the microphones of far field voice function.

5. Remote Sensor

Receive the signal transmitted by the remote control.

6. Light Sensor (May not be available)

Detect the ambient light in your room to adjust the TV brightness automatically.


7. Far Field Indicator

Indicate the status of far field microphones and far field voice function.

Terminals

Note(s)

- This TV has USB ports which are designated for connecting peripheral devices, such as a keyboard or mouse. While you may find that a particular keyboard or mouse works to some extent, we cannot guarantee full functionality. You will not damage the TV in any way by trying various keyboards or mouse, but the performance of that device may be limited.

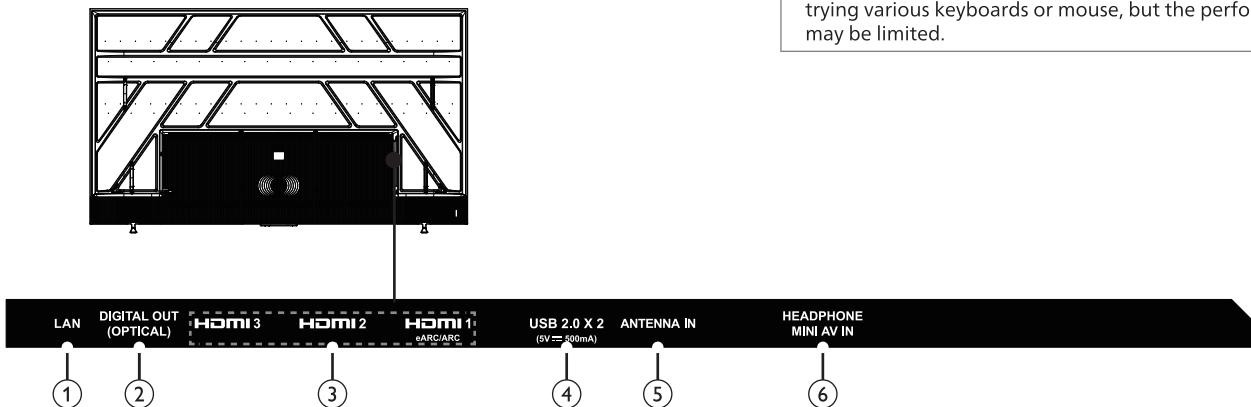

① **Ethernet port**

For internet connection using an Ethernet cable with an RJ-45 connector.

② **Digital audio output (Optical) jack**

Digital audio (SPDIF) output to home theaters and other digital audio systems.

③ **HDMI input jack(s)**

Digital audio and video input from high definition digital devices such as DVD/Blu-ray Disc™ players, Soundbar/cable/satellite set-top boxes, PC's, etc.

- HDMI-DVI/Analog audio (L/R) jacks signal
- Composite video/Analog audio (L/R) jacks signal
- PC connection/Analog audio (L/R) jacks signal with stereo mini 3.5 mm plug audio cable on PC

* For HDMI 1 only: In addition to normal HDMI functionality, it outputs TV audio to an HDMI-eARC/ARC compliant device, such as a soundbar and home theater system.

④ **USB terminal**

Data input from USB memory stick only.

⑤ **43ohm Cable/Antenna connection**

Signal input from an antenna or Cable/Satellite set-top boxes.

⑥ **TOP: Headphone audio output jack**

Headphone 3.5 mm stereo jack for personal listening.

DOWN: Composite input jack

Connect composite analog video and audio signal.


Connect devices

Watch TV


Please choose your type.

Be sure your antenna or another device is connected properly before plugging in the AC power cord.


A. Directly TV to Antenna through RF cable

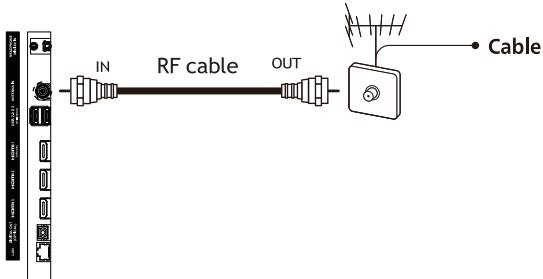

B. Satellite set-top box through RF cable

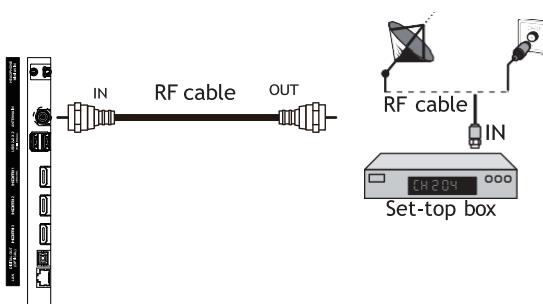

C. Satellite set-top box through HDMI

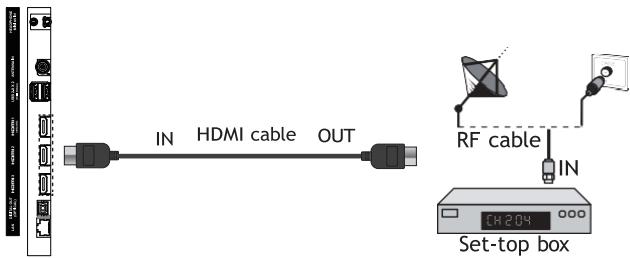

* You must use UltraHD 4K HDMI cable for 4K video.

Note(s)

- If you have any question about the DTV's antenna, visit www.antennaweb.org for further information.
- Depending on your antenna system, you may need different types of combiners (mixers) or separators (splitters) for HDTV signal. The minimum RF bandpass on these devices is 2,000 MHz or 2 GHz.
- For your safety and to avoid damage to this unit, please unplug the RF coaxial cable from the antenna input jack before moving the unit.
- If you did use an antenna to receive analog TV, it should also work for DTV reception. Outdoor or attic antennas will be more effective than a set-top box or inside antenna.
- To turn on your reception source easily between antenna and cable, install an antenna selector.
- If you are not receiving a signal from your cable service, contact the cable provider.

Game console/BD/DVD player

Please choose your type.


Below cables are not included with the TV and need to be purchased separately:

- Please purchase the necessary cables at your local store.

Before you connect the AC power cord:

Be sure other devices are connected properly before plugging in the AC power cord.

HDMI - Highest quality

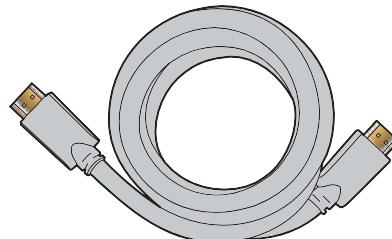


Supports high-definition digital signals and gives highest picture and sound quality. Video and audio signals are combined in one cable. You must use HDMI for full high-definition video and to enable HDMI control (HDMI CEC).

Note(s)

- Philips HDMI supports HDCP (High-bandwidth Digital Contents Protection). HDCP is a form of digital rights management that protects high-definition content in Blu-ray Disc™ or DVDs.
- The HDMI1(eARC/ARC) connector on the TV features HDMI-eARC/ARC functionality. This allows output of TV audio to an HDMI-eARC/ARC compliant device.

A. HDMI — HDMI (High quality)

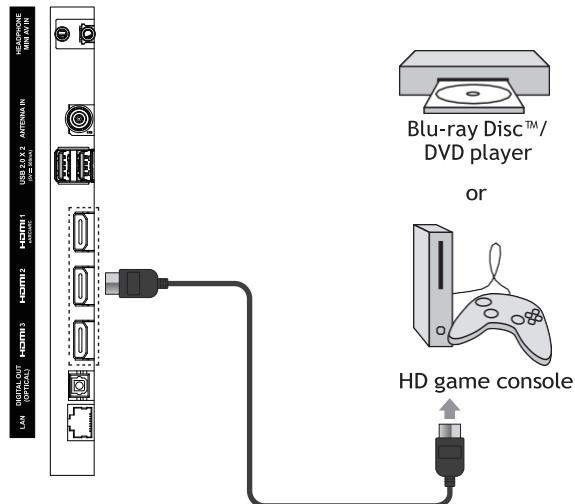


* You must use UltraHD 4K HDMI cable for 4K video.

Home theater speaker

Please choose your type.


A. Digital audio output cable

You can enjoy multi-channel audio like 5.1ch digital broadcasting sound.

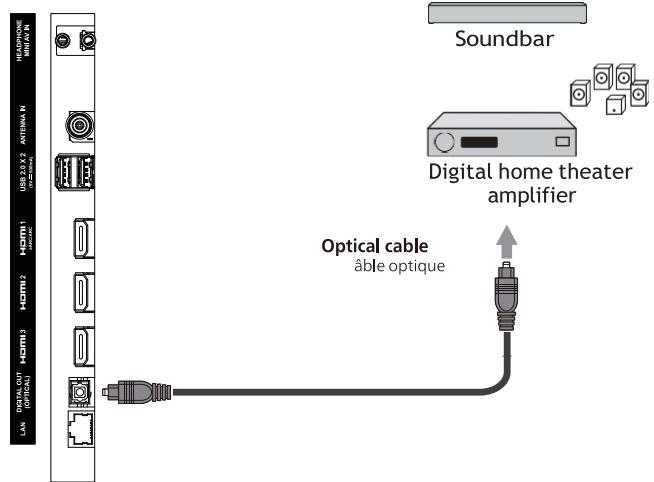

B. HDMI- eARC / ARC cable (Audio Return to Channel)

HDMI-eARC/ARC allows you to use HDMI control to output TV audio directly to a connected audio device, without the need for an additional digital audio cable.

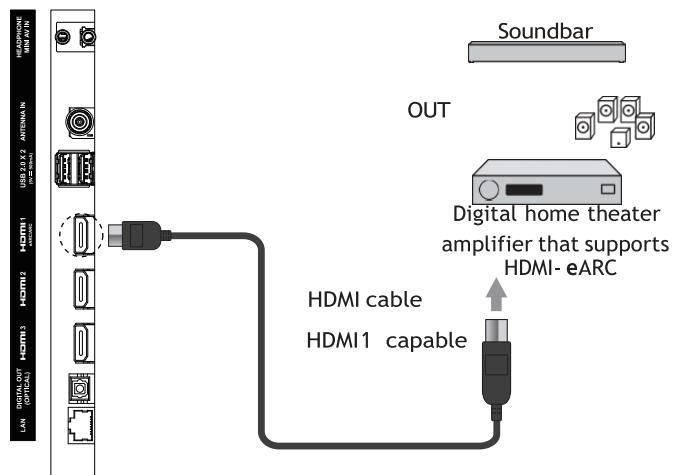


Note(s)

- The HDMI 1 connector is HDMI Audio Return Channel (eARC / ARC) compliant. Use it to output digital audio to an HDMI home theater system.
- Be sure that the device is HDMI CEC and eARC/ARC compliant and that the TV is connected to the device using an HDMI cable attached to HDMI-eARC/ARC connectors.
- The HDMI-eARC/ARC connector on the TV features eARC/ARC functionality. This allows output of TV audio to an HDMI-eARC/ARC compliant device.


B. AV cable (standard quality)

Composite analog connection

Composite analog connection offers standard picture quality for AV devices connected to the unit.

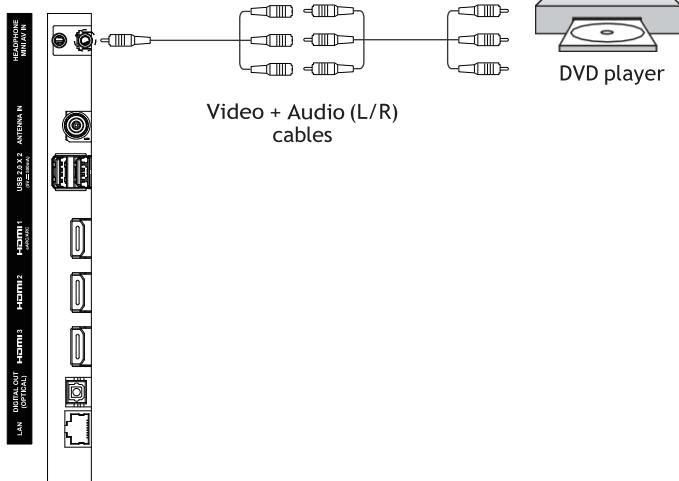

AV Converting Cable

 


For composite analog connection, AV converting cable (provided with your TV set) should be used between MINI AV IN port and normal AV cable.

PC screen

Please choose your type.

A. HDMI cable

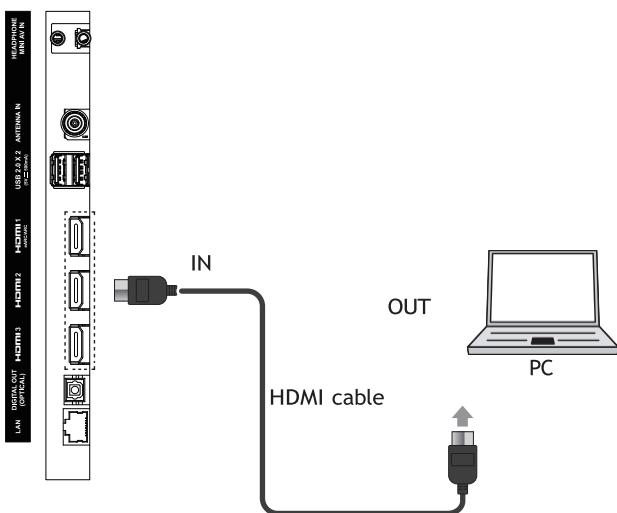

Format	Resolution	Refresh rate
VGA	640 x 480	60 Hz
SVGA	800 x 600	
XGA	1,024 x 768	
WXGA	1,280 x 768	
	1,360 x 768	
FHD	1,920 x 1,080	24/30/60 Hz 120/144hz(HDMI2/3)
UHD	3,840 x 2,160	
	4,096 x 2,160	

Other formats or non-standard signals will not be displayed correctly.


* When connecting with HDMI-DVI, the operation is maximum 2160p@30 Hz.

Note(s)

- Please purchase a HDMI-DVI conversion cable that has a ferrite core.
- The following operations may reduce noise.
 - Attach a ferrite core to the AC power cord of your PC.
 - Unplug the AC power cord and use the built-in battery of your portable/laptop PC.
- Some HDMI cables and devices may not be compatible with the TV due to different HDMI specifications.
- Use an HDMI cable with the HDMI logo (a certified HDMI cable). High speed HDMI cable is recommended for the better compatibility.
- The unit accepts 480p, 720p, 1080p, and 2160p video signals only when using the HDMI connection and HDMI-DVI connection. When connecting with HDMI-DVI, the operation is maximum 2160p@30 Hz.
- HDMI-DVI connection requires separate audio connections as well and the audio signals are output as analog (L/R) audio.
- DVI does not display 480i image which is not in compliance with CTA-861-G.
- Overscaling, also referred to as overscanning, is when a computer's display renders outside of the viewable area of a monitor or TV screen. It's like having the outer edges of a photo partially covered by a picture frame due to the picture being too large.

Internet router

Connecting the TV to the internet using an Ethernet cable

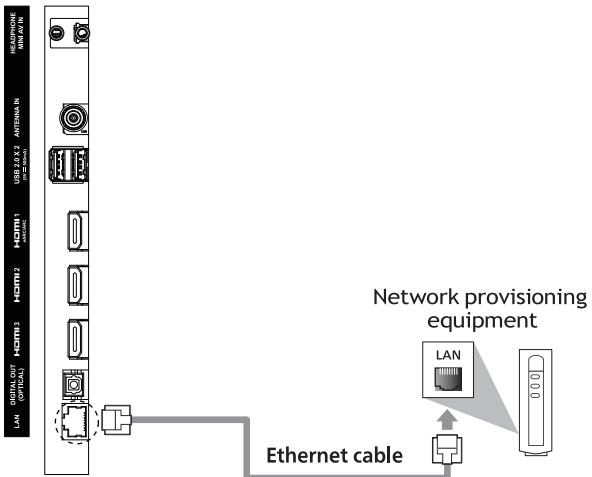


Note(s)

- Please purchase shielded Ethernet cables at your local store and use them when you connect to network equipment.
- After connecting an Ethernet cable, set up necessary network settings. [Network & Internet](#) → p.27
- Do not insert any cable other than an Ethernet cable to the Ethernet port to avoid damaging the unit.
- If your telecommunications equipment (modem, etc.) does not have broadband router functions, connect a broadband router.
- If your telecommunications equipment (modem, etc.) has broadband router functions but there is no vacant port, then add a hub.
- For a broadband router, use a router which supports 10BASE-T/100BASE-TX.
- Do not connect your PC directly to the Ethernet port of this unit.

Headphone




When the headphone is plugged into the HEADPHONE port, Sound of TV speakers will be muted.

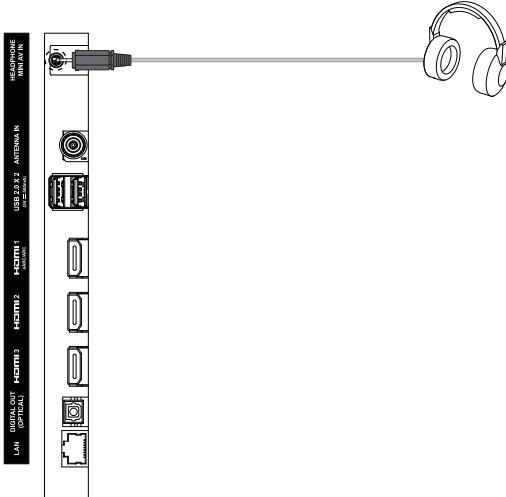

3 Completing the first time setup

Remote

Installing the Batteries

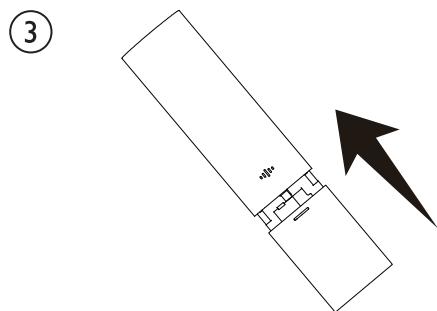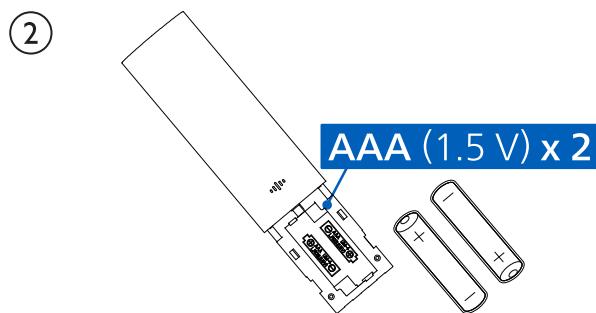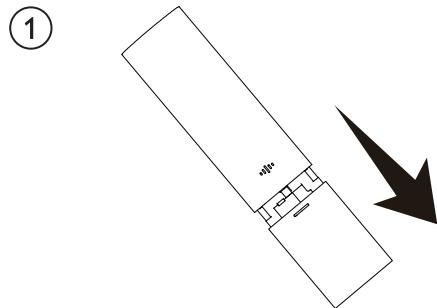

- 1 Open the battery cover by sliding down.
- 2 Insert 2 AAA (1.5 V) batteries matching the polarity indicated inside battery compartment of the remote.
- 3 Slide the cover back into position.

Note(s)

- Remove the batteries if not using the remote for an extended period of time.

Advanced Settings

For more detailed sound settings, go to Advanced Settings, where you find settings for Dialogue Enhancer, Video Description, and so on.

- (DAC-4): Dialogue Enhancer: Select the effect of dialogue enhancer.
- Video Description: Help the visually-impaired viewers understand and enjoy the TV program.
- Video Description Mixing Level: Select the mixing level of the Video Description function.
- Balance: Adjust the sound balance between left and right speakers.
- Sound Reset: Reset all sound settings to the factory default values.

Buttons

Bluetooth Remote

This TV comes with a Bluetooth remote control to operate your TV from anywhere in your room and have access to Google Assistant to do more on your TV with your voice.



1. POWER (Power):

- In working status:
Short press POWER button to turn the TV to fastboot mode.
Long press POWER button to turn the TV to standby mode.
- In fastboot mode, which is less energy saving, press POWER button to turn on the TV in a short time.
- In standby mode, which is more energy saving, press POWER button to turn on the TV in a standard time.

2. GOOGLE ASSISTANT (Microphone):

- Start using the near field voice function.
- Short press MIC button to wake up the voice assistant.
- Long press MIC button to start receiving your voice command.
After your speaking, release MIC button to run voice function.

3. ACCOUNT (User):

Sign in with your Google account to get the entertainment you love.

4. DASHBOARD (Settings):

Access the dashboard of your Google TV.

5. NAVIGATION BUTTONS (UP/DOWN/LEFT/RIGHT):

Navigate the menu to select the content you need, or

- Press UP/DOWN button to change channels.

6. OK: Confirm, enter or execute the selected item, or access the channel list.

7. BACK (Back):

Return to upper-level content, or exit the current screen or operation.

8. GUIDE (Guide):

Access Live TV or access the Electronic Program Guide.

9. HOME (Home):

Access the home screen.

10. APPS: Show all applications.

11. VOLUME UP/DOWN (Volume Up/Down):

Adjust the sound volume.

12. SOURCE (Source):

Access the source menu.

13. MUTE (Mute):

Mute or restore the TV sound.

14. DAILY KEY (Daily Key):

- Short press to start the shortcut function, or setup it for the first time.
- Long press to setup the shortcut function.

15. APPLICATION BUTTONS

Access specific applications quickly and directly.

16. MEDIA: Access the media player.

17. FAV: Show the lists of favorite programs.

Talk to Google Assistant

On your Google TV remote, press and hold the Google Assistant button and ask a question or say a command. To help Google Assistant understand your request, speak into the microphone on your remote.



To do even more with your Assistant, download the Google Assistant app on your phone.

Privacy protection built-in

The Google Assistant is designed with your privacy in mind. You can delete any voice-command history by pressing Google Assistant button and simply saying "Delete what I just said".

For more details on privacy, please visit: <https://safety.google/intl/en-US>

Initial set-up

Plug in and turn on TV

Connect the AC power cord to the AC outlet. Press the  (POWER) on your remote.

Make sure that AC power cord must be plugged to AC outlet after all the necessary connectiones are made.

Follow the on-screen instructions

After you get your Google TV device, you'll need to set it up.

What you need

- The Google Home app on your phone (recommended)
- A Wi-Fi internet connection (needed to connect your TV to the Internet)
- A Google Account (needed to access entertainment across thousands of streaming channels)
- * To turn on TalkBack during setup, press  (DASHBOARD) > Accessibility > TalkBack > Enable > OK.

Get started with setup

Follow this step by step process to help you complete your Google TV. Settings in initial setup may vary depending on the region, model or Google service availability.


1 Pair your Bluetooth remote control with the TV set.




Note(s)

On any interface, you can press  (GOOGLE ASSISTANT) to quickly pair the Bluetooth remote control with your TV set.


2 Select the menu language.

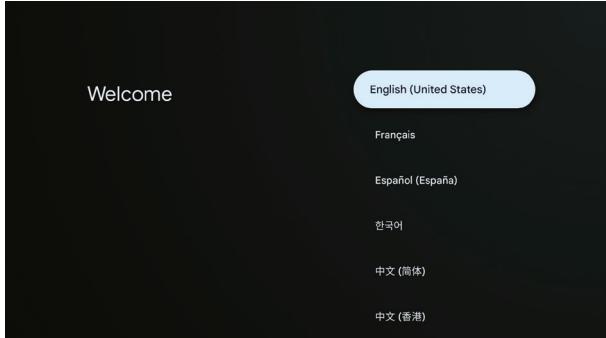

3 Select your region or country.

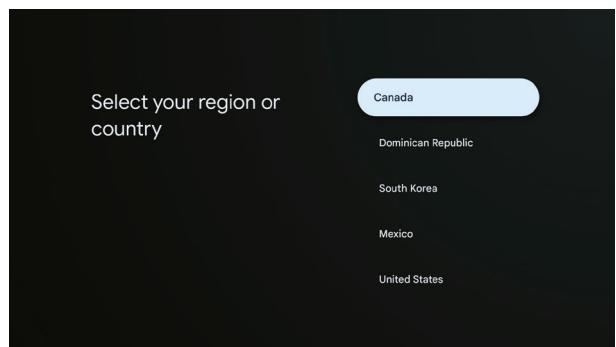


4 Select "Setup Google TV" or "Setup Basic TV".

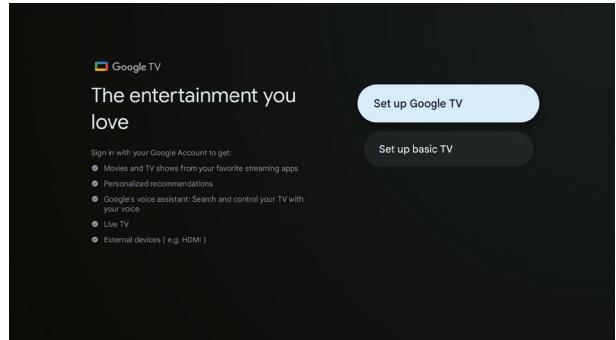

5 Setup your Google TV.

Finish setup with the Home app

- ① On your phone, open Google Home .
- ② At the top left, tap Add + > Set up device > Set up new devices in your home.
- ③ Choose or add a home.
- ④ Tap Scan code and allow the app to use your phone's camera.
- ⑤ Scan the QR code on your TV screen.

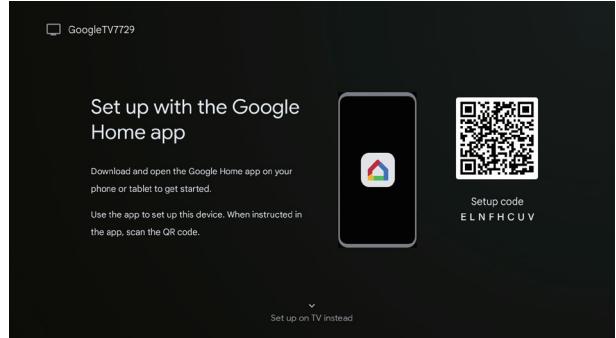

Note(s)

It may take a few minutes for your phone and TV to connect.

- ⑥ Follow the instructions in the Home app and on your TV screen.


Fix problems with set up

You might need to set up your Google TV with your remote if:


- ① You get stuck when you set up with the Home app
- ② You can't update the Home app
- ③ Your device doesn't appear in the Home app

Finish setup with your remote


Press **DOWN** navigation button to highlight “Setup on TV instead”, then press **OK** button to start setup with your remote. It may take longer time and require typing with the remote.

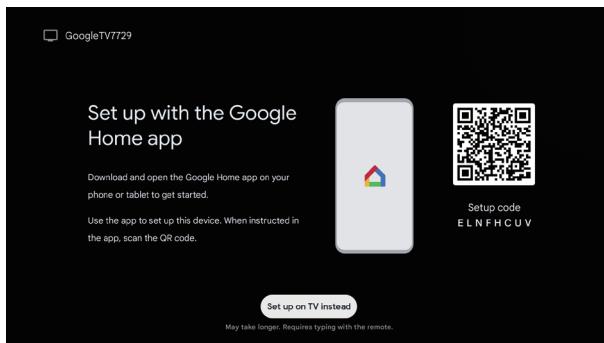



6 Connect your TV to a WiFi network.

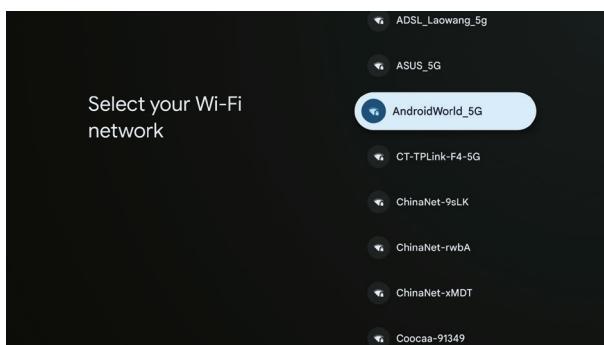


7 Enter your Google account and password.

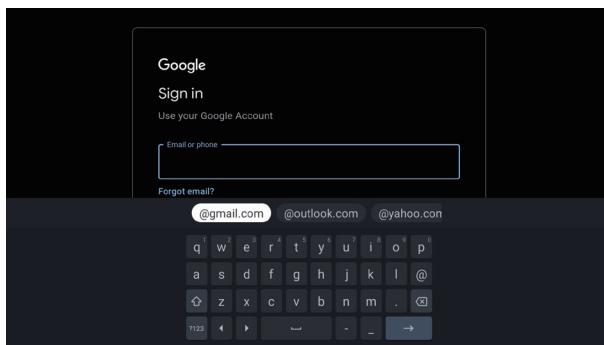


8 Read to accept the Google terms of service and privacy policy.

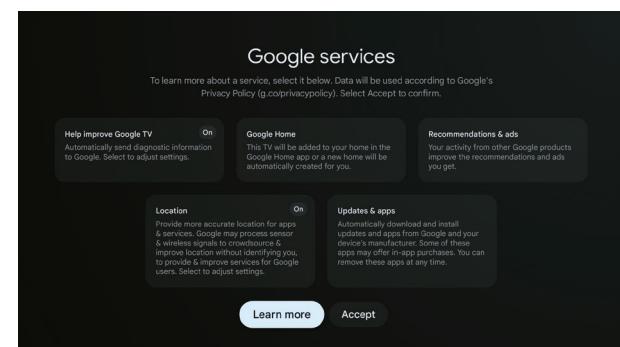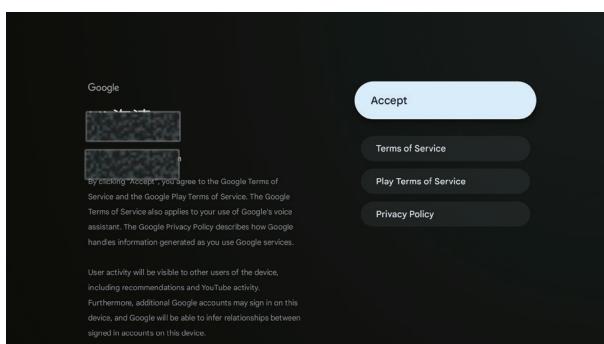


9 Select whether or not to allow Google Assistant to search across all your TV apps.

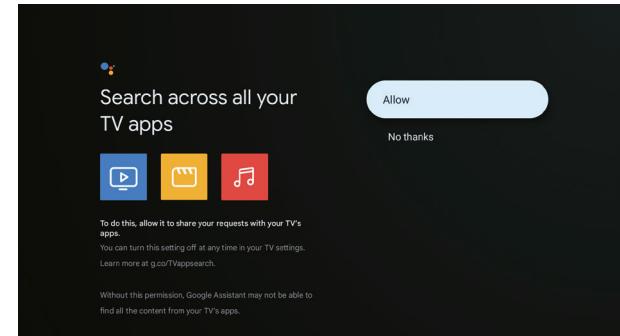


10 Select a home.

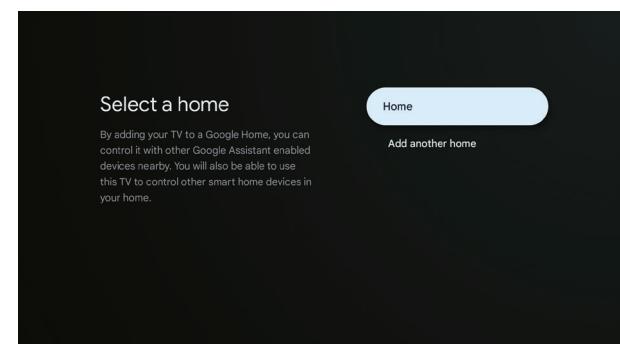

11 Select a room.

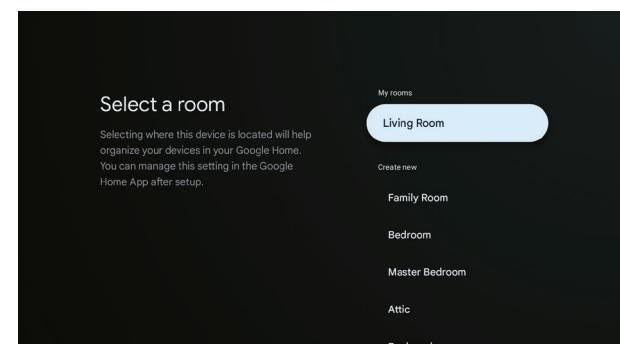


12 Select your services/apps.

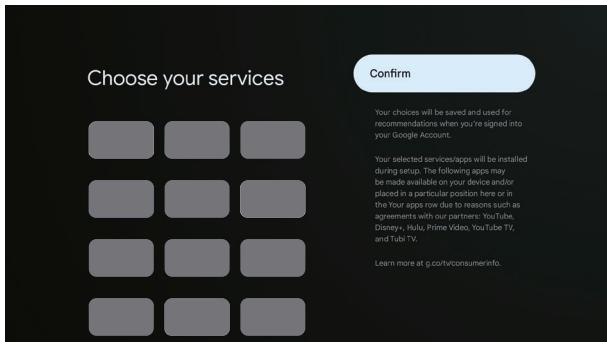


15 Select the TV mode.


Home is recommended for normal home use. Shop is used for store demonstration, which will consume more energy than Home.

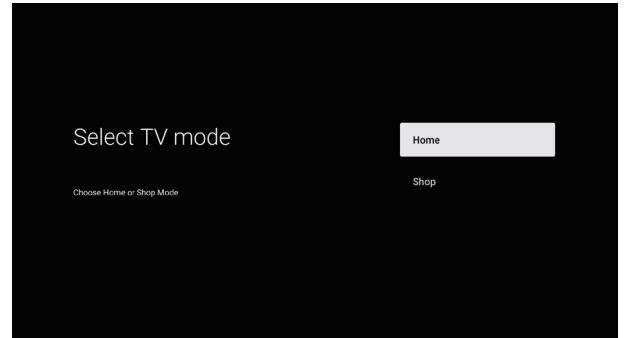


13 Read to accept End User License Agreement.

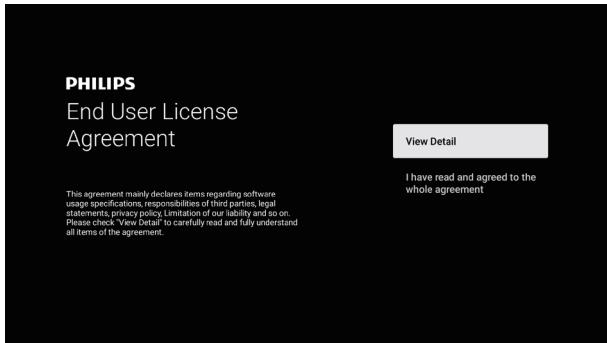


16 Select the tuner mode

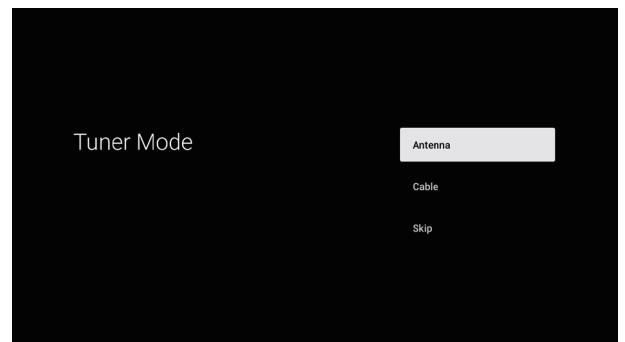


14 Select the timezone.

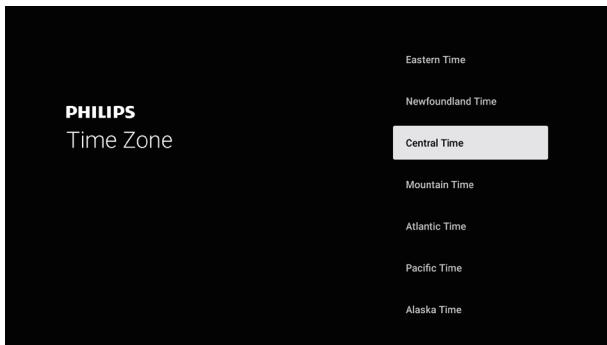


17 Start channel scan.

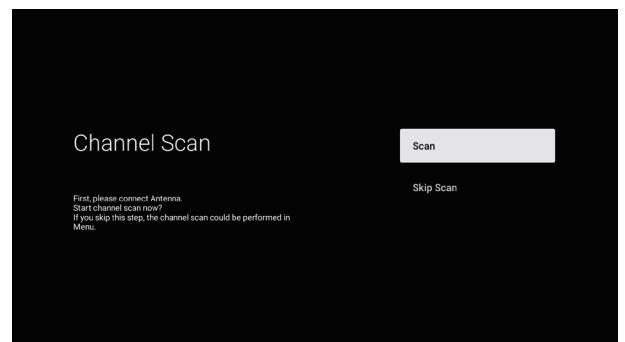

18 Install your apps.

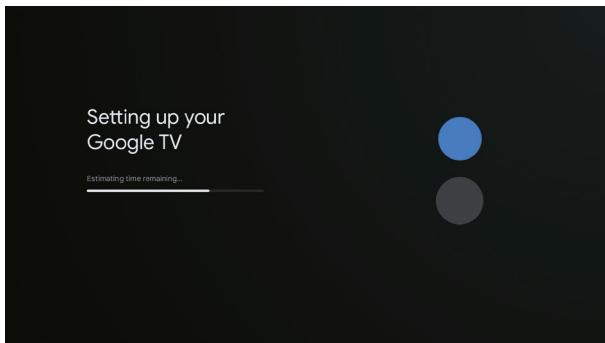

19 Setup optional features and then go to Google TV.

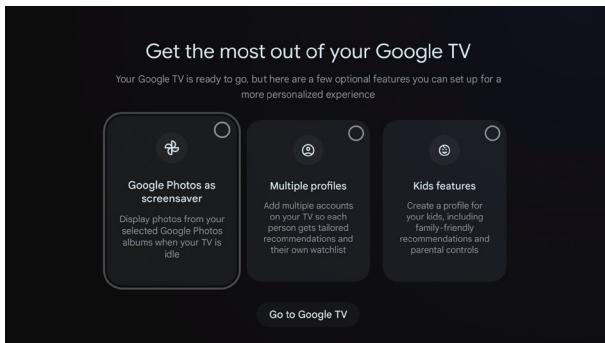

Basic TV mode

Use basic TV on a Google TV device

Important: You can only use basic TV on TVs that come with Google TV built in.

If you choose basic TV when you set up your Google TV device, you can:

- Finish setup faster
- Use your device without a Google Account
- Use your device without an internet connection
 - Without an internet connection, your device won't get important security updates.
- * Some features aren't available in basic TV.

Switch from basic TV to Google TV

① From the home screen, scroll to the Google TV banner.

② Select Set up Google TV.



③ Follow the on-screen instructions to set up with the Home app or your remote.

Note(s)

If you already set up Google TV, you can't switch to basic TV. To start setup again, you can factory reset your device. Refer to Restart P.31

What you CAN do in basic TV	What you CAN'T do in basic TV
<ul style="list-style-type: none"> • Watch TV through your cable service, satellite, TV tuner, or antenna with the TV app • Play media from other inputs plugged into the TV • Use a limited set of apps that come pre-installed on your device 	<ul style="list-style-type: none"> • Use services and features that require you to sign in to your Google Account • Access your Play Library • Install apps
	<ul style="list-style-type: none"> • Use the Assistant to search for content
	<ul style="list-style-type: none"> • Cast content from another device

Basic TV - Home screen

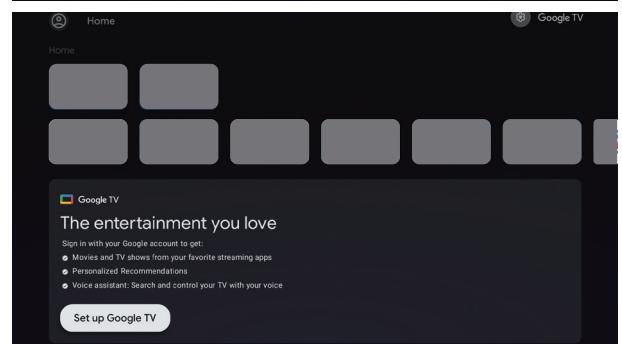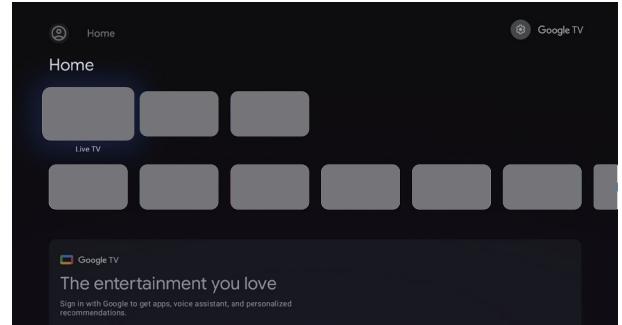

4 Using the On-Screen Menu

Home menu

Google TV is TV personalized for you. Easily browse content from across your favorite apps and services, with specially curated recommendations based on your interests.

What you find on the Google TV home screen depends on where you live and the language you choose for your device.

- If you use a Google TV device in a country other than the one where you purchased it, your experience may vary.
- In some regions or territories, your experience may vary.

If you choose English, French, or Spanish as your language, you'll find these tabs:

1 Account

Switch to another account, add a new account or manage accounts.

2 For you

Google TV home screen aggregates the best content from user's services.

3 Live tab (U.S. only)

See what's live on TV across different service providers in one menu. To watch live TV, download an app from your TV service provider (if available). This service is available only in the U.S.

Movies and Shows (Outside U.S.)

Discover new movies and shows with suggestions based on what you have watched and what interests you.

4 Apps tab

Access your installed apps library or find new ones based on what you use or download.

5 Library tab


Find movies and TV shows you've added in your Watchlist or rented through the Google TV store or YouTube.

6 Search

Search movies, shows, apps, and more.

7 Dashboard

Google TV dashboard provides a single location for users to access settings, notifications, and kids mode.

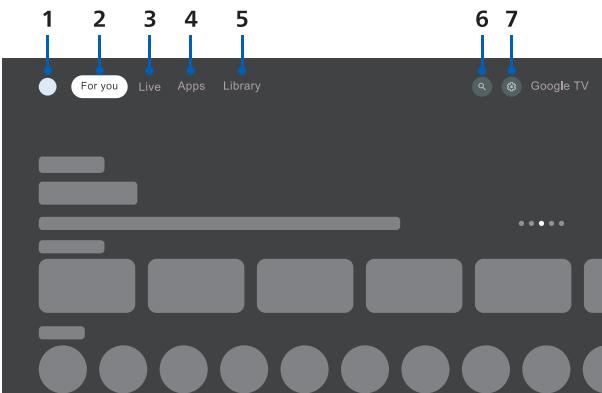

If you choose a different language or other countries, you'll find these tabs:


- Home
- Apps
- Library

Dashboard


The Google TV dashboard provides a single location for users to access, settings, notifications, picture settings, and more.

To open the dashboard menu, press (DASHBOARD) button on your remote.


- 1 Press (HOME) button to display the home screen.

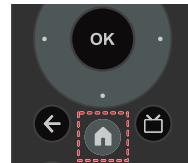

- 2 From the Google TV home screen, at the top right, go to the icon of All settings, or press (DASHBOARD) button.

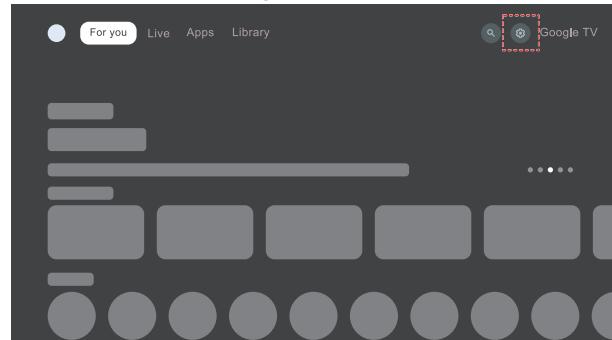

- 3 Use to select the desired menu and an item, then press OK.

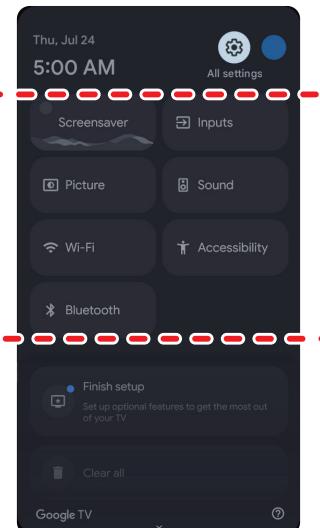

• Screensaver

Screensaver will start.

• Inputs

-> Select and change access to the attached devices such as Blu-ray player, gaming consoles, or cable box.

• Picture p.23

• Sound p.25

• Wi-Fi p.26

• Accessibility p.31

• Bluetooth p.33


• Notification

-> Message regarding important device updates

Channels & Inputs

To set Channels and Inputs,


- 1 Press **⚙️ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Go to Channels & Inputs

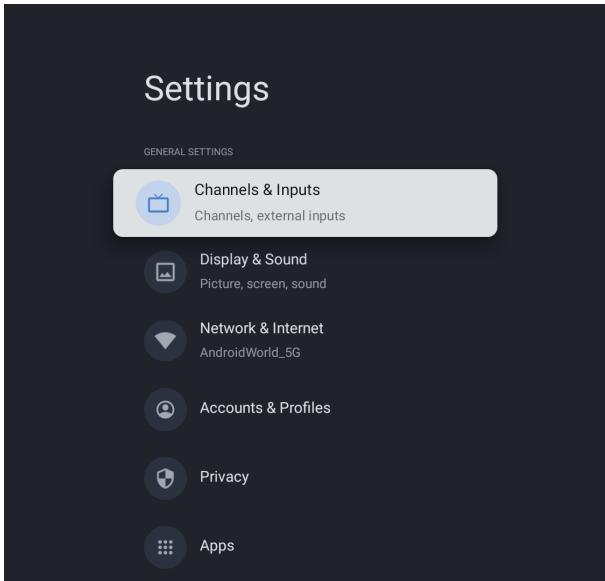

Display & Sound

To set Picture and Sound,

- 1 Press **⚙️ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Go to Display & Sound

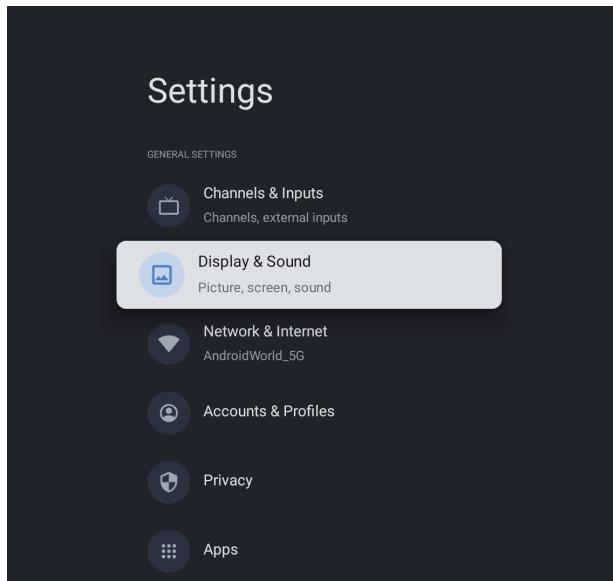

Add channels

To add for the first time or additional channels, please follow the steps below:

- 1 Go to **Settings > Channels & Inputs > Channels**.
- 2 Select the channel installation mode **Antenna/Cable**.
- 3 Select **Channel Scan** to start searching for available TV channels.

External Inputs

Manage the connected external devices.

HDMI CEC Settings (HDMI LINK)

Consumer Electronic Control (CEC) - This allows you to operate the linked functions between our brand devices with CEC feature and this unit. We do not guarantee 100% interoperability with other brands of CEC compliant devices.

- HDMI control
- Device auto power off
- TV auto power on


HDMI EDID Version

If there are issues with picture/color and/or sound when connecting an external device using the HDMI port, please try switching the HDMI EDID Version.

HDMI Link Device List

Show the list of connected HDMI Link devices.

Picture

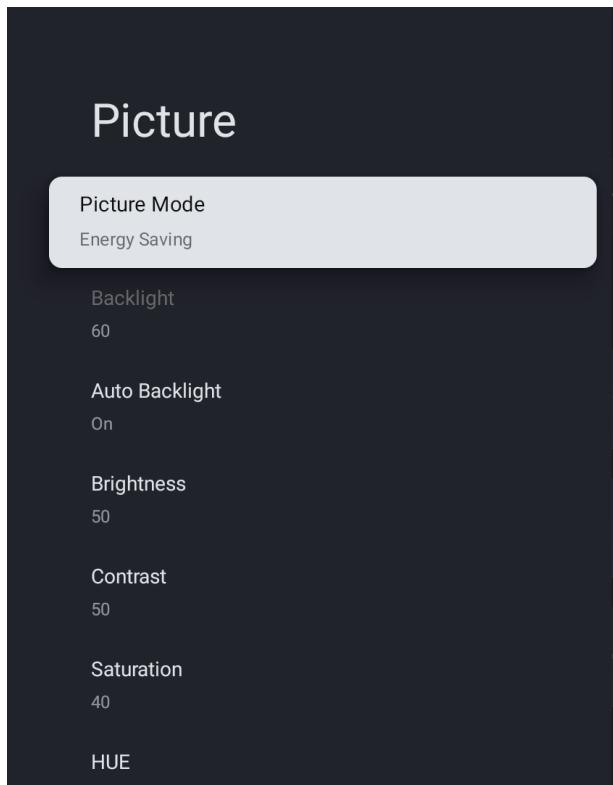

Picture Mode

User	The customized settings you prefer.
Standard	For normal home TV viewing.
Sport	Optimize the picture for a good sports viewing experience.
Vivid	Make the color more vibrant.
Movie	Deep picture settings for a cinematic experience.
Game	Optimized for PCs and game consoles.
Energy Saving	Settings for low power consumption.

BackLight

Adjust the backlight of the TV screen.

Auto BackLight (May not be available)

Adjust the backlight of the TV screen automatically depending on the input source.

Brightness

Adjust the lightness of the picture.

Contrast

Adjust the differences between dark and light areas of the picture.

Saturation

Adjust the color richness of the picture.

HUE

Adjust the color tint of the picture.

Sharpness

Adjust the edge of the picture.

Advanced Settings

For more detailed picture settings, go to Advanced Settings, where you find settings for Color Temperature, Noise Reduction, and etc.

- **Color Temperature:** Adjust the overall color tone of the picture.
- **Dolby Vision Notification:** Notify users when the content being played supports Dolby Vision.
- **DNR (Digital Noise Reduction):** Remove noise and distortion from the video signal, making the picture clearer and more refined.
- **MPEG NR (MPEG Noise Reduction):** Eliminate block noise around object outlines and mosquito noise in the background of MPEG-compressed video signal.
- **Max Vivid:** Intensify colors, boost contrast, sharpen edges and enhance details for a more vibrant viewing experiences.
- **Adaptive Luma Control:** Adjust brightness based on video contents to optimize picture quality.
- **Local Contrast Control:** Adjust brightness in different screen areas to boost contrast and details.
- **Filmmaker Mode:** Disable post-processing to display contents as filmmakers intended, maintaining original aspect ratio, color and frame rate.
- **Flesh Tone:** Enable more natural and accurate display of human skin colors on the screen.
- **DI Film Mode:** Adapt settings for cinema-like picture quality.
- **Blue Stretch:** Adjust blue tones on the screen.
- **Gamma:** Adjust brightness and contrast balance for a better picture quality.
- **Game Mode:** Reduce input lag for a better gaming experience.
- **PC Mode:** Reduce processing lag for a PC-like display.
- **De-Contour:** Reduce banding in gradients to enhance picture quality.
- **AISR (AI-based Super Resolution):** Use AI algorithms to upscale low resolution video contents, enhancing details, sharpness and overall visual quality to provide a better viewing experience.
- **MEMC (Motion Estimation and Motion Compensation):** Estimate motion and insert frames to reduce a blur and judder, making motion scenes smoother.
- **HDMI RGB Range:** Set color scale for HDMI video signals, enabling accurate color output and device matching.
- **Eye Protection Mode:** Reduce blue light to ease eye strain.
- **Color Space:** Determine the range of colors the TV can display.
- **Color Tuner:** Adjust TV's color parameters for a preferred color display.
- **11 point white balance Correction:** Fine-tune white balance at 11 spectrum points for color accuracy.


Reset to Default

Reset all picture settings to the factory default values.

Screen

Select the aspect ratio: Automatic / Full Screen / Super Zoom / Unscaled / 4:3 / Movie expand 14:9 / Movie expand 16:9

Sound

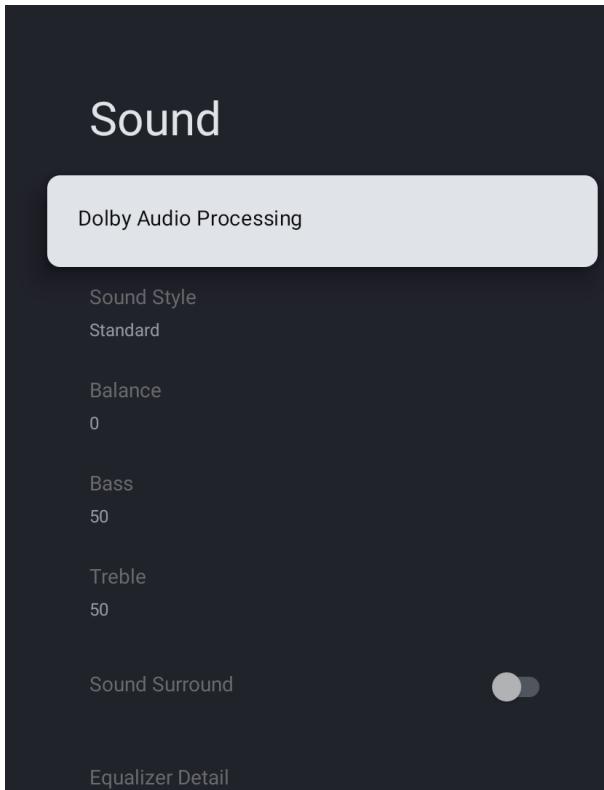

Dolby Audio Processing

Enhance sound with clear dialogue, surround effects and reduced noise.

Sound Style

The following sound settings can be configured. Depending on the format of the broadcasting, some sound settings are not available.

User	The customized settings you prefer.
Standard	For normal home TV viewing.
Vivid	Boost sound effect for a more vibrant audio experience.
Sports	Optimize the sound for a better sports viewing experience.
Movie	Powerful sound settings for a cinematic experience.
Music	Optimized for music playback.
News	Set the anchor's voice at a comfortable volume.

Balance

Adjust the sound balance between left and right speakers.

Bass

Adjust the low frequency of TV sound.

Treble

Adjust the high frequency of TV sound.

Surround Sound

Turn on or turn off the surround sound system.

Equalizer Detail

Adjust the detailed parameters of sound equalizer.

TV Speakers

Turn on or turn off the TV speakers.

eARC

Turn on or turn off the eARC function of HDMI1 port.

Auto Volume Control

Turn on to adjust the sound volume depending on the input signal.

Downmix Mode

Convert multi-channel audio to fewer channels for basic speakers.

Dialogue Enhancer

Enhance dialogue clarity by isolating and boosting voice frequencies, reducing background noise.

Reset to Default

Reset all sound settings to the factory default values.

 
Audio output

Digital Audio Output


- Auto
- Bypass
- PCM
- Dolby Audio - Dolby Digital Plus
- Dolby Audio - Dolby Digital

Digital Audio Delay

The on-screen picture and the sound from an amplifier via the digital audio (SPDIF) output jack are synchronized by delaying the output from the connection.



Network & Internet

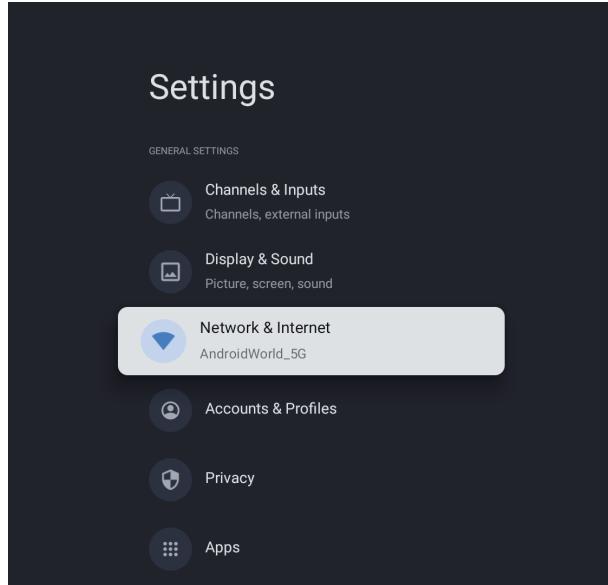

Setup network connection settings in order to use apps or network upgrade functions.

To set Network & Internet,

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Go to Network & Internet

Wi-Fi setting

- 1 Confirm that Wi-Fi is turned on and you're connected to the correct network.
- 2 If not, locate the network you'd like to connect to and select it to connect. Enter the password if required.
- 3 Open one of your apps.
- 4 Play your video, music, or game again.



If you still have issues, turn the Wi-Fi option off and on again.

Add new network

Enter name of the new WiFi network

Data Saver

Turn on to automatically adjust video quality to use less mobile data. Data saver will monitor and limit your network traffic.

Data usage and alerts

- Show the amount of mobile data that is used today.
- Monitor data usage by triggering pop-up warnings / notifications at set data consumption intervals like every 100MB, 500MB or 1GB.

Scanning always available

Let Google's location service and other apps scan for networks even when Wi-Fi is off.


Ethernet

- Show the connection status.
- Adjust Proxy settings.
- Adjust IP settings.

Wake Configs

- Wake up the TV set by wireless network connection.
- Wake up the TV set by wired network connection.
- Wake up the TV set by Google Cast operation.

Accounts & Profiles

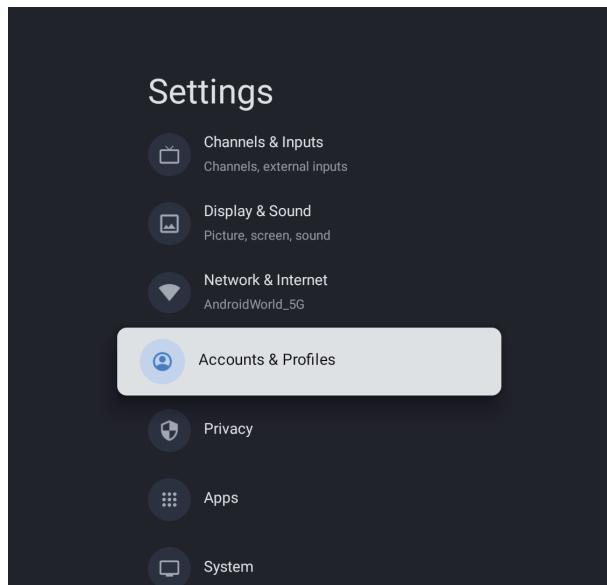

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Go to Accounts & Profiles

You can manage to add or remove your Google account and kids profile account.

Google Account

Google TV profiles let everyone in your home enjoy their own personalized space with their Google Account. With a personalized profile, you'll get TV show and movie recommendations just for you, easy access to your personal watchlist and help from your Google Assistant.

Add Google account ➔ p.35


Kids Accounts

Kids profile (parental control) ➔ p.41

Other Accounts

You can use other accounts within Google apps like YouTube, but you won't see recommendations for those accounts on the Google TV home screen. Privacy settings, such as location, that are applicable to the use of the device can be adjusted under Settings > Privacy.

Google Account

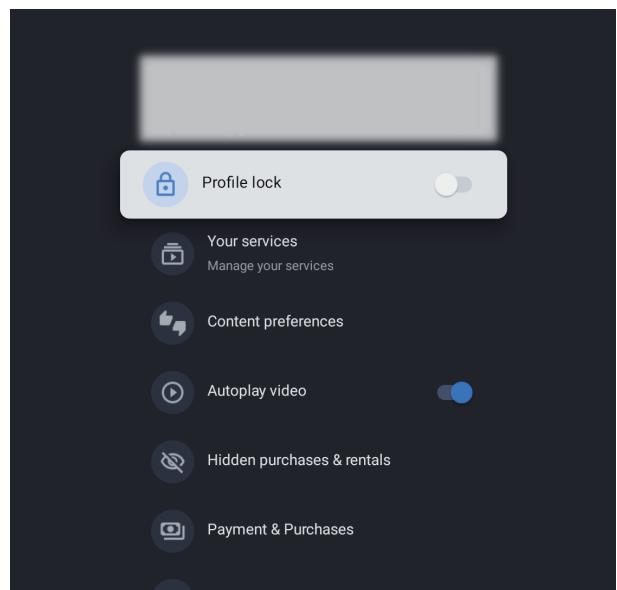

To get recommendations that are more relevant to you, there are a few things you can do.


Important: These options aren't available for all shows and movies on every streaming service.

- 1 Rate movies and shows.
- 2 To exit, on your remote, press **⌂ (HOME)** or **⬅ (BACK)**.

Autoplay video

Automatically play video trailers for shows and movies.

Privacy

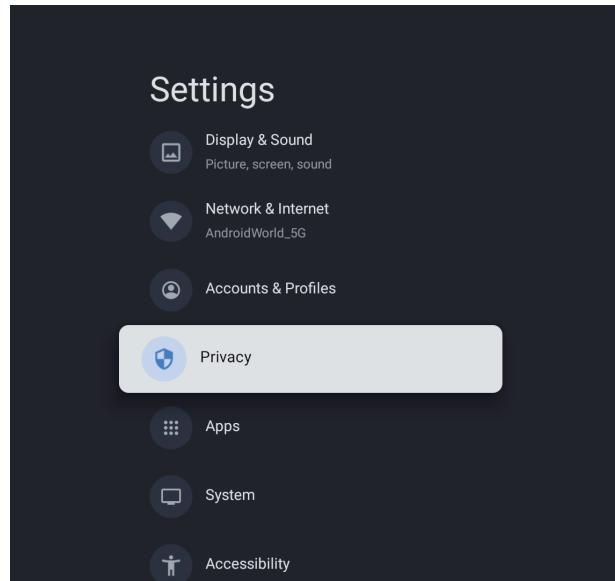

- 1 Press **⚙️ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Go to Privacy

This section is privacy settings of your TV, Google account and applications.

Location

- Google may collect location data periodically and use this data in an anonymous way to improve location accuracy and location-based services.
- Let Google's location service and other apps scan for networks even when Wi-Fi is off.
- Show and manage apps that recently request to use TV's location service.

Usage & diagnostics

- Automatically send diagnostic information to Google, like crash reports and usage data from your device, apps, and Google Cast. You can adjust these permissions at any time from device settings.

Hidden purchases & rentals

Hide a specific movie or show in your library. Press and hold the title then select Hide.

Payment & Purchases

Manage your account and purchases through the Play Store app on your mobile device, or by following these links in a Web browser.

- Payment methods <g.co/ManageWallet>
- Order history <g.co/Play/Orders>
- Subscriptions <g.co/Play/Subscriptions>

Google Assistant

Personal results: Some Google Assistant devices, like speakers, Smart Displays, Smart Clocks, TVs, and the Pixel Stand, can be shared with multiple people. For any shared device, you can turn on personal results to allow the Google Assistant to read or show results specific to you. For example, the Google Assistant may show:

- Results from your Gmail, Google Calendar, and Google Photos
- Recommendations for recipes based on your activity across other Google products
- YouTube Music personal playlists, liked songs, uploads, or library content

Important: The personal results setting doesn't control certain Assistant features provided by third parties like Spotify or Pandora.

On the Pixel Stand, some apps require you to unlock your phone even if you have personal results turned on.

SafeSearch filter: Whether you use Google Search at work, with children, or for yourself, SafeSearch can help you filter explicit content from your results. Explicit results include sexually explicit content like pornography, violence, and gore.

Google Home

Provide a quick and easy access to smart home devices with Google Home. To use this feature, please add your TV and compatible devices to the Google Home app.

Apps only mode

Want to remove content recommendations on your home screen to simplify your Google TV experience? Turn on "Apps Only Mode" to display only your favorite installed apps.

Remove

Removing this account will delete all the related data from your device including associated kids accounts.

Ads

- Manage your ads settings, such as resetting your advertising ID.

Google Assistant ➔ p. 45

Payment & Purchases

- Manage your account and purchases through the Play Store app on your mobile device, or by following these links in a Web browser:
 - Payment methods g.co/ManageWallet
 - Order history g.co/Play/Orders
 - Subscriptions g.co/Play/Subscriptions

Manage Updates

- Turn on or turn off Auto-update apps.
- Check and update all available updates.

App Permissions

Allow or deny apps to use basic functions.


Special app access

Allow or deny apps to use special functions.

Security & Restrictions

Select whether or not to install unknown apps from sources other than Google Play store.

Apps

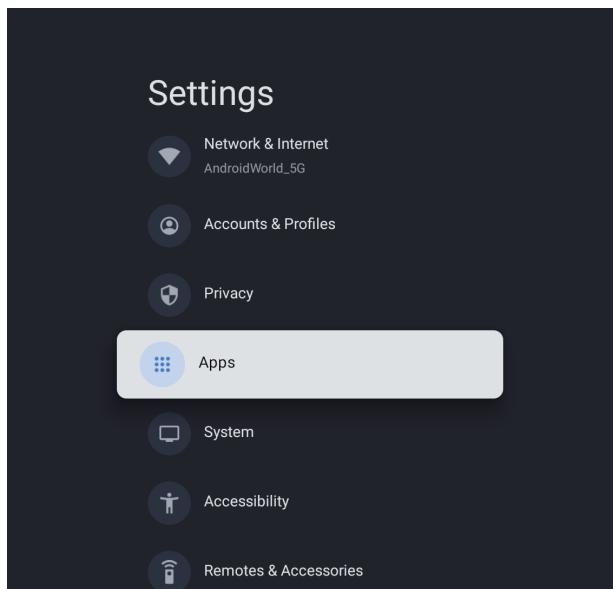

1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.

2 Go to Apps

This section is apps settings, such as checking details and permissions.

Recently Opened Apps

Check and manage the recently-opened apps.

See all apps

Check and manage all installed apps or system apps.

Manage updates

- Turn on or turn off auto-update apps.
- Check and update all available updates.

App Permissions

Allow or deny apps to use basic functions.


Special app access

Allow or deny apps to use special functions.

Security & Restrictions

Select whether or not to install unknown apps from sources other than Google Play store.

System

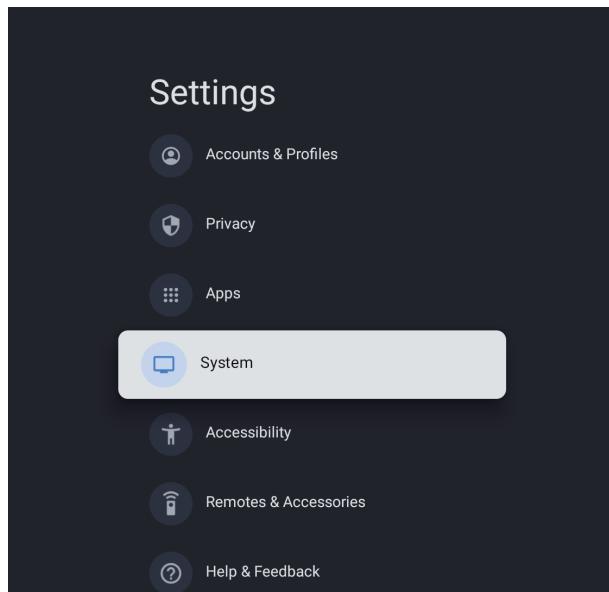

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Go to System

This section is system settings, such as setting language, date & time.

About

You can check system update and TV registration information.

System update

Check for available system update.

Device name

Naming your television will help you identify it and distinguish it from other devices for casting. Example: "Living Room TV"

Reset

This will restore your device to default settings and erase all data, accounts, files, and downloaded apps.

Status

Network, serial numbers and other information

Legal information

Confirm legal information.

Model

Confirm Model

Android TV OS version

Smart TV operating system number

Android security patch level

Confirm Android security patch level

Kernel version

Confirm Kernel version

Android TV OS Build

Show the OS build information.

Netflix ESN

Confirm Netflix ESN

Software Version

Check the software version of the TV set.

Date & Time

Automatic date & time

Use network-provided time or off

If it is set to off, please manually set the date and time.

Set date

Set time

Set time zone

Select your time zone

Use 24-hour format

Set the time to display in a 12 or 24-hour format

Language

You can set the language for the on-screen display.

Keyboard

Perform the keyboard setting.

Storage

Internal shared storage

Free up storage

Ambient Screensaver

Adjust detailed settings to show ambient screensaver as you need.

Power & Energy

- Setup energy mode to save the power consumption.
- Setup the timers turn on or turn off the TV set automatically.

Cast

Select how often you allow others control your casting media. Show a notification on all Android devices connected to your Wi-Fi and let them control media casting to this device.

System sounds

Turn on or turn off the system sounds.

Shop Mode

This is for store use only. Recommend to set off when use at home. Or the advertisement would appear when you watch TV.


Restart

It just makes the TV turn off and again on. Your all settings will be kept. If you want to delete all settings of the TV, please do factory reset.

Settings > System > About > Reset > Factory reset

* This will restore your device to default settings and erase all data, accounts, files, and downloaded apps.

Accessibility

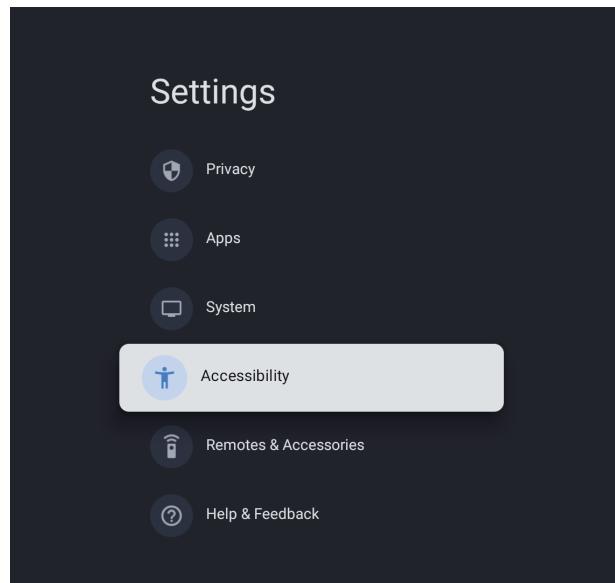

You can use a screen reader, closed captions, Switch Access, and more to make your Google TV device more accessible.

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Use **▲ ▼** to select **Accessibility**, then press **OK**.
- 3 Adjust the following items.

TalkBack

TalkBack is the Google screen reader included on Android devices. TalkBack gives you spoken feedback so that you can use your device without looking at the screen.

Change screen reader settings

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select Accessibility.
- 3 Select Talkback > Configuration.
- 4 Change settings for speech volume, verbosity (such as keyboard echo and usage hints), and so on.

Use a screen reader

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select Accessibility.
- 3 Select Talkback > Enable > OK.

Text to speech

Text to speech output settings.

Use accessibility shortcut

Accessibility shortcuts are a quick way to turn on accessibility features. To use accessibility shortcuts, you first need to turn them on.

To turn on accessibility shortcuts:

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select Accessibility.
- 3 Select Accessibility shortcut > Enable accessibility shortcut.
- 4 By default, the shortcut turns on TalkBack. To change what's included in the shortcut, choose Shortcut service.
- 5 Choose an option and select **OK**.

To use the shortcut:

On your remote, press and hold the back arrow and down buttons at the same time for 3 seconds.

Turn on Switch Access

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select Accessibility.
- 3 Select Switch Access > Enable > **OK**.

How Switch Access works

Switch Access scans the items on your screen, highlighting each item in turn, until you make a selection.

To use Switch Access, you'll first need one or more switches.

There are several kinds of switches:

- Use an external switch: A switch is a device that sends a keystroke signal to your Android device. Several companies sell these devices, such as AbleNet, Enabling Devices, RJ Cooper, and Tecla. These devices connect to your Android device via USB or Bluetooth. (Neither Google nor Philips nor Funai endorse these companies or their products.)
- Use an external keyboard: You can configure a standard USB or Bluetooth keyboard to work as a switch device by assigning one or more of its keys to actions.
- Use buttons on your Android device: Built-in buttons on your Android device, such as the volume up and volume down buttons, can also be assigned to actions. This option is intended for developers.


Turn on closed captions

Your caption preferences might not apply to certain apps.

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select Accessibility > Captions.
- 3 Turn on Display to show captions. Then choose your options.

Display	Off	Closed caption is not displayed.
	On	Closed caption is always displayed.


You can choose the size, font, color, background, and other characteristics of the caption text.

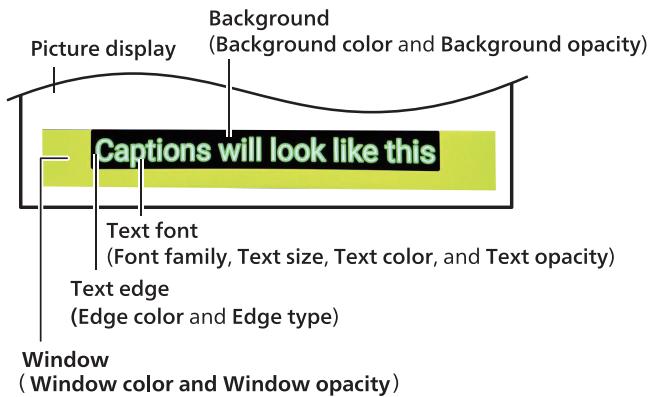

Turn on high contrast text

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select Accessibility.
- 3 Turn on High contrast text (Experimental).

Remotes & Accessories

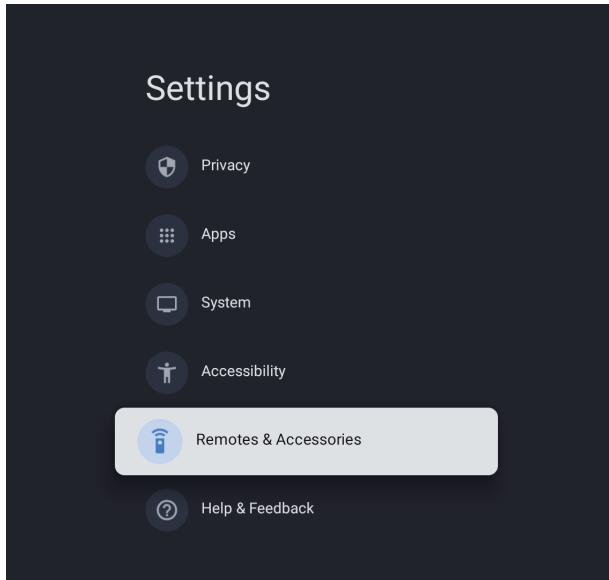

Fix problems with connecting Bluetooth devices

If your Bluetooth device won't connect, it could be an issue with the Bluetooth device or your TV.

Troubleshoot connection issues

- 1 Turn off your Bluetooth device and then turn it back on. After your device is reset, try to pair it again.
- 2 If you have multiple devices paired with your TV, disconnect the ones you're not using.
- 3 Unplug your TV for 10 seconds and then plug it back in. When your TV is on, try to pair it again.
- 4 Check if your Bluetooth device connects to other devices, such as a phone or tablet.
 - A. If your device connects to other devices: Reset your Google TV device to factory settings.
 - B. If your device doesn't connect to other devices: Check that your Bluetooth device has up-to-date software or get help from the device's manufacturer.

You can connect several Bluetooth devices, like headphones or game controllers, to your Google TV. You can only connect one audio device at a time.

Pair a Bluetooth device

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select **Remote & Accessories > Pair accessory**.
- 3 Make sure your device is in pairing mode or is visible to other devices.
- 4 Identify the device you want to pair from the list and select it.
- 5 On the Bluetooth pairing request screen, select **Pair**.


Note(s)

Accessories that have been paired with your device appear in the Remote & Accessories section of Settings. You can also rename or forget devices.

Reconnect a paired device

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select **Remote & Accessories**.
- 3 Under "ACCESSORIES" choose your device.
- 4 Select **Connect**.

Help & Feedback

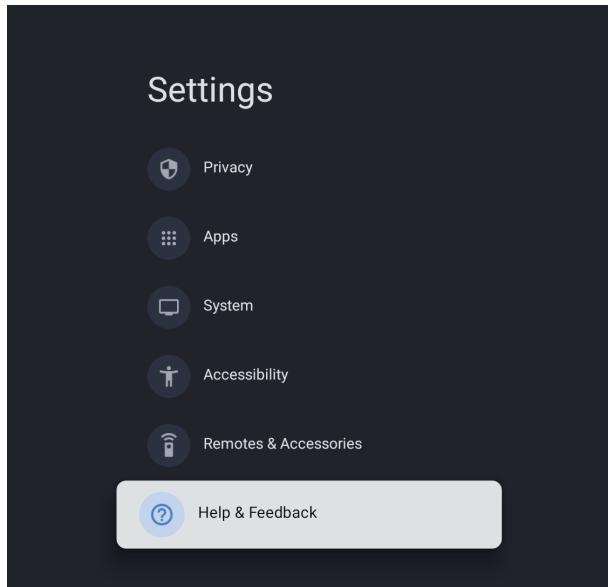

Send feedback

Leave product feedback or share your ideas

Help

Philips support app assisting you with trouble shooting.

Visit Google TV Help at g.co/tv/help.

5 Enhance your Google TV

Home menu

Google TV is TV personalized for you. Easily browse content from across your favorite apps and services, with specially curated recommendations based on your interests.

What you find on the Google TV home screen depends on where you live and the language you choose for your device.

- If you use a Google TV device in a country other than the one where you purchased it, your experience may vary.
- In some regions or territories, your experience may vary.

If you choose English, French, or Spanish as your language, you'll find these tabs:

1 Account

Switch to another account, add a new account or manage accounts.

2 For you

Google TV home screen aggregates the best content from user's services.

3 Live tab (U.S. only)

See what's live on TV across different service providers in one menu. To watch live TV, download an app from your TV service provider (if available). This service is available only in the U.S.

Movies and Shows (Outside U.S.)

Discover new movies and shows with suggestions based on what you have watched and what interests you.

4 Apps tab

Access your installed apps library or find new ones based on what you use or download.

5 Library tab


Find movies and TV shows you've added in your Watchlist or rented through the Google TV store or YouTube.

6 Search

Search movies, shows, apps, and more.

7 Dashboard

Google TV dashboard provides a single location for users to access settings, notifications, and kids mode.

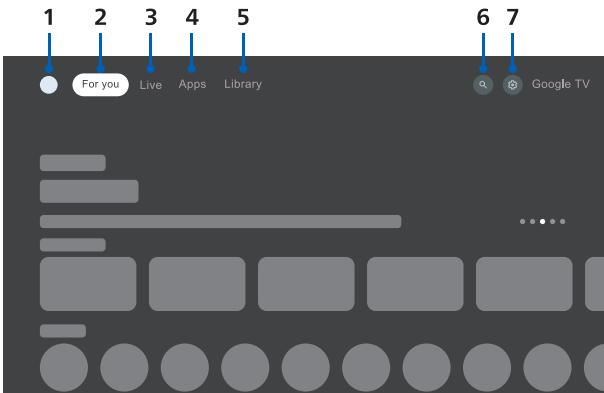

If you choose a different language or other countries, you'll find these tabs:

- Home
- Apps
- Library

Add Google account

You can add more than one account on your Google TV so you can sign in to services with multiple accounts. Your media and activity sync across devices that your Google Account is signed in to.


Sign in or add an account

Important: If you use an enterprise account, like one for work or school, some services might not work. For more information, contact your organization's administrator.

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Go to Accounts & Profiles and select Add an account.
- 3 Sign in to the Google Account you want to add.

Note(s)

You can use other accounts on Google TV apps like YouTube, but recommendations on the Google TV home screen are based on the primary account's activity.

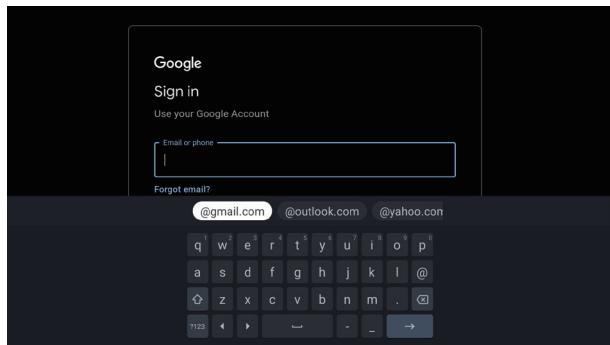

Remove or manage accounts

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Go to Accounts & Profiles and select the profile you want to remove.
- 3 Select Remove > Remove account.

Remove your account if you can't use your TV screen

- 1 On a phone or computer, go to your device in your Google Account.
- 2 Make sure you're signed in to the same account as on your Google TV device.
- 3 Choose the Google TV device you want to remove your account from.
- 4 Select Sign out.

Installing apps

You can install apps on your Google TV for your streaming services and other entertainment providers.

Search for an app

- 1 Press and hold the  Assistant button on your remote or select  Search on the home screen.
- 2 Say or type the name of the app you want to install.
- 3 If the app is available, a page will appear with the app.
- 4 Select Install.

Browse for apps

- 1 From the Google TV home screen, at the top, scroll to Apps.
- 2 To browse for apps, move up or down to find different categories. When you find a category you're interested in, move to the right to find items. You can also select a category from the "App categories" section.
 - To find apps you already use, scroll down to "Apps from my other devices."
- 3 Select the app or game you want.
- 4 To install the app or complete your purchase, follow the on-screen instructions.

Note(s)

- If you have trouble with your purchase, try a different payment method, like a credit card or PayPal.

Remove apps

- 1 From the Google TV home screen, scroll to Apps.
- 2 Scroll down to the "Your apps" section and find the app you want to uninstall.
- 3 Hold the "OK" button on your remote until a menu appears.
- 4 Select View details > Uninstall.

Personalized recommendation


To get recommendations that are more relevant to you, there are a few things that you can do.

Important: These options aren't available for all shows and movies on every streaming service.

Add your streaming services

Important: When you add streaming services on Google TV, you'll get more recommendations from those services. We recommend that you only select services that you subscribe to.

- 1 Press  (DASHBOARD) button to open the Google TV dashboard menu, then select "All settings" and press OK button to enter it.
- 2 Select Accounts & Profiles.
- 3 Select your account > Your services.
- 4 To add your services, scroll right and turn on each service.
- 5 To save the selection and exit the screen, scroll left.

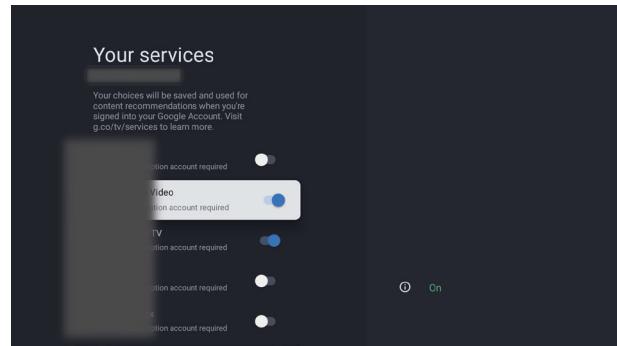

Tell us what you like to watch

- 1 Press  (DASHBOARD) button to open the Google TV dashboard menu, then select "All settings" and press OK button to enter it.
- 2 Select Accounts & Profiles.
- 3 Select your account > Content preferences.
- 4 Rate movies and shows.
- 5 To exit, on your remote, press  (HOME) or  (BACK).

Manage your watchlist

Important: Google uses the shows and movies on your watchlist to learn what you like to watch. You'll get recommendations for content that's similar to the titles on your watchlist.

- 1 Search or browse for the title that you want to add to your watchlist.
- 2 Open the title's details page.
- 3 Select + Add to Watchlist.

Note(s)

- When you add something to your watchlist, it's on the watchlist of all your devices logged in to the same account.

Mark what you've watched

- 1 Search or browse for a movie or show that you've seen before.
- 2 Open the title's details page.
- 3 Select Watched it?

For example, if you saw a movie in cinemas, you can mark 'Watched it'. Then, Google will recommend other movies and shows based on what you watched.

Rate movies and shows

- 1 On your Google TV, search or browse for a movie or show.
- 2 Open the title's details page.
- 3 Scroll right and choose 'Like'  or 'Dislike' .

Hide recommendations

If you want to hide personalized recommendations on Google TV, you can turn on Apps only mode. For example, when you have guests, you can use Apps only mode to hide your personalized recommendations.

Turn on Apps only mode

- 1 Press  (DASHBOARD) button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select Accounts & Profiles.
- 3 Select the primary Google TV account.
- 4 Select Apps only mode > (on/off toggle) > Turn on.
- 5 To browse in Apps only mode, on your remote, select  (HOME).

Exit Apps only mode

- 1 Press  (DASHBOARD) button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select Accounts & Profiles.
- 3 Select the primary Google TV account.
- 4 Turn off Apps only mode.

Watch your movies & shows in Apps only mode

You won't find your Library on your TV's home screen, but you can find it in the YouTube app: 

- 1 On your TV, open the YouTube app.
- 2 Go to Library > Purchases.

Note(s)

You can also cast content from your phone to your TV.

What happens when Apps only mode is on

In Apps only mode, you don't get personalized recommendations on your home screen. You'll find a list of installed apps that you can open to find something to watch. You'll also find sponsored content and teasers for popular movies and shows.

If Web & App Activity is on, Google TV will continue to improve recommendations for you, even while Apps only mode is on. In addition, apps can still show you their personalized recommendations based on your history. This includes YouTube, YouTube TV, and other Google apps.

Some features aren't available in Apps only mode. For example:

- You can't use Search or the Google Assistant.
- You can't "like" or "dislike" content, add videos to your Watchlist, or mark videos as watched.

Note(s)

Privacy settings such as location don't change. To change privacy settings, on your Google TV, go to **Settings > Privacy**.


Basic TV mode

You can only use basic TV on TVs that come with Google TV built in.

If you choose basic TV when you set up your Google TV device, you can:

- Finish setup faster
- Use your device without a Google Account
- Use your device without an internet connection
- Without an internet connection, your device won't get important security updates.

* Some features aren't available in basic TV.

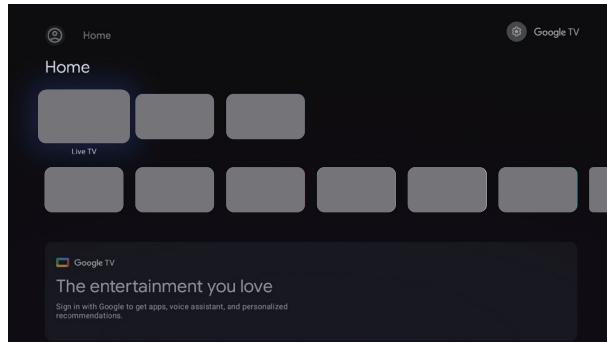

Basic mode

Switch from basic TV to Google TV

- 1 From the home screen, scroll to the Google TV banner.
- 2 Select Set up Google TV.
- 3 Follow the on-screen instructions to set up with the Home app or your remote.

Note(s)

- If you already set up Google TV, you can't switch to basic TV. To start setup again, you can factory reset your device.

What you can do in basic TV

- Watch TV through your cable service, satellite, TV tuner, or antenna with the TV app
- Play media from other inputs plugged into the TV
- Use a limited set of apps that come pre-installed on your device

What you can't do in basic TV

- Use services and features that require you to sign in to your Google Account
- Access your Play Library
- Install apps
- Use the Assistant to search for content
- Cast content from another device

Live TV/EPG

You can watch not only the broadcasting programs through integrated TV tuner but also from internet based service providers like Pluto TV, YouTube TV, Sling TV, Philo.

The Favorite channels help reduce the option set based on your interest, leading to more rapid decision making. You can add your own favorite channels and show them on Program Guide section of Live TV tab.

To set up TV channels, go to Add channels ➔ p.23

Program Guide


To view the latest TV program schedule, press GUIDE on your remote.

Live TV from broadcasting

On the Google TV home screen, select Live TV in your apps.

Note(s)

- Live TV broadcasting is only compatible with antenna. To watch your TV from cable set-top box, press (SOURCE) button to choose external device.

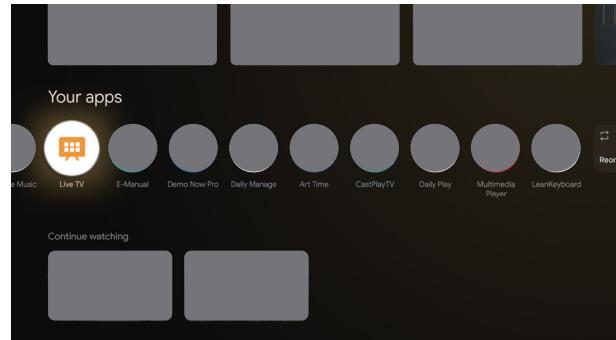

Choose your favorite channels

In Live TV, you can select the desired channel and add it into a favourite list.

- 1 Long press **DAILY KEY** () to enter the interface of shortcut function settings.
- 2 Setup **DAILY KEY** () to perform the function of Virtual Keyboard by selecting **Single Function > System Functions > Virtual Keyboard**.
- 3 Press **HOME** () button to access the home screen, then select **Live TV** in Your apps.
- 4 Press **UP/DOWN NAVIGATION** button to select the desired channel, then press **OK** button to access the channel list.
- 5 Press **DAILY KEY** () to open the Virtual Keyboard, then click **BLUE** () icon to enter the interface of **Favourites List Selection**.
- 6 Press **BACK** () button to exit the Virtual Keyboard, then press **UP/DOWN NAVIGATION** and **OK** button to select the desired favourite list, into which you want to add the current, or from which you want to remove the current channel.
- 7 The favourite list with added channels will be displayed by pressing **FAV** button on the remote control.


Program guide

To view the latest TV program schedule, press **GUIDE** on your remote.

Program guide may contain 3rd party streaming program such as YouTube TV, Pluto TV.

Live TV from streaming providers

To watch Live TV, download an app from your TV service provider if one is available. If you are in the United States, Live TV can also appear in the Live tab of home screen after you add a service provider and complete the necessary steps.

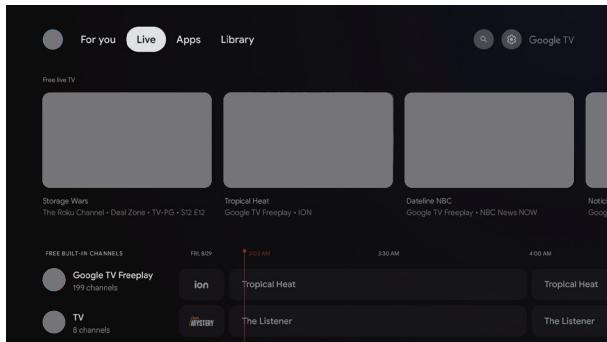

Pluto TV

Live TV channels are available at no charge from Pluto TV. You can browse Pluto TV channels in the Live tab, your recommendations, and search results. To watch Pluto TV channels, you must install the Pluto TV app.

YouTube TV

On your Google TV, make sure the primary account is the same one you use for your YouTube TV subscription. If they're not the same, you can:

- Change the primary account on Google TV.
- Change your YouTube TV subscription to use your primary account.
- Use Google Families to link the 2 accounts.

Note(s)

- If you select YouTube TV as one of your streaming services, you may get YouTube TV recommendations in Google TV.

Sling TV

- 1 Download the Sling TV app.
- 2 Link Sling TV to your Google Account.

Philo


- 1 Download the Philo app.
- 2 Add Philo to your list of services.

Live TV Settings / TV MENU

In Live TV, press **SOURCE (** **)** button to access the source menu. Select **TV MENU** in the shortcuts list. Then press **OK** button to access the **Live TV Settings**.


Live TV Settings / TV MENU

--- Channels

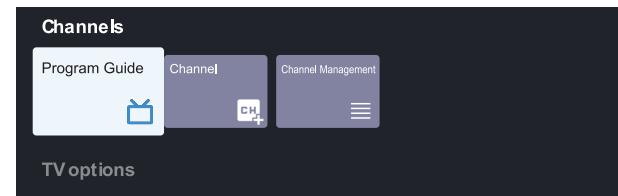

Program Guide

Access the Electronic Program Guide to check the detailed information of upcoming DTV channel programs.

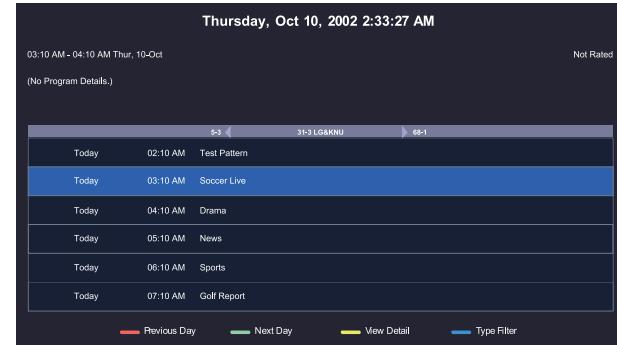

Long press **DAILY KEY (** **)** to enter the interface of shortcut function settings. Setup **DAILY KEY (** **)** to perform the function of Virtual Keyboard by selecting **Single Function > System Functions > Virtual Keyboard**.

In Electronic Program Guide, press **DAILY KEY (** **)** to open the virtual keyboard, where you can select color buttons for the following functions.

- Press **RED** button to check program information of previous day.
- Press **GREEN** button to check program information of next day.
- Press **YELLOW** button to check detailed information of the current program.
- Press **BLUE** button to select the desired program type.

Channel


Search for available TV channels automatically.

Channel Management

Choose channels for your program guide.

Live TV Settings / TV MENU

--- TV Options

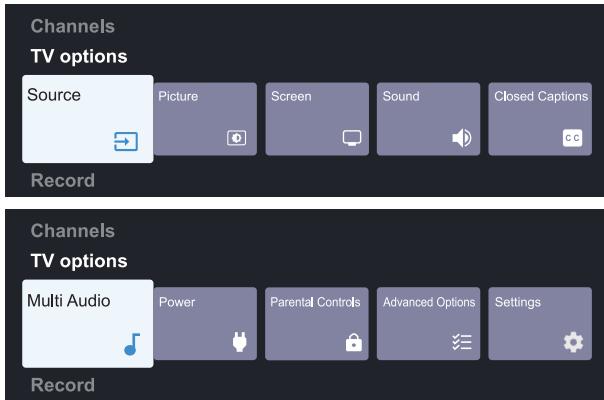

Source

Open the list of input sources.

Picture

Access picture menu settings.

Screen

Select the aspect ratio.

Sound

Access sound menu settings.

Closed Captions

- Turn on or turn off caption display.
- Select the mode of caption services.
- Select the advanced mode of caption service.
- Setup the size, font family, color and opacity of caption text.
- Setup the type and color of caption edge.
- Setup the color and opacity of caption background.

Multi Audio

Select the audio language.

Power

Setup the timer to turn off the TV or the picture only automatically.

Parental Controls

Setup the parental control system to restrict unauthorized access to certain input sources, channels or programs.

Parental Controls → p.42

Advanced Options

- Setup accessibility functions to help the visually-impaired or hearing-impaired viewers understand and enjoy the program.
- Turn on or turn off the function of blue mute.
- Select the time interval in minutes within which there is no signal, the TV will be turned off automatically.
- Check the open source licenses.

Settings


Access Google TV general settings.

Note(s)

- Caption service that you can switch differs depending on the broadcast description.
- Closed captioning service may not be controlled by this unit's menu options if you are watching television through an external cable or satellite set-top box. In which case you will need to use the menu options on the external set-top box to control closed captioning.
- The captions do not always use correct spelling and grammar.
- Not all TV programs and product commercials include closed caption information. Refer to your area TV program listings for the TV channels and times of closed caption shows. The captioned programs are usually noted in the TV listings with service marks such as CC.
- Not all captioning services are used by a TV channel during the transmission of a closed caption program.
- Closed caption will NOT be displayed when you are using an HDMI or a component connection.
- To show the closed caption on your TV screen, broadcast signal must contain the closed caption data.
- Not all TV programs and commercials have the closed caption or all types of the closed caption.
- Caption's and text may not exactly match the TV voice.
- Changing channels may delay the closed caption for a few seconds.
- Adjusting or muting the volume may delay the closed caption for a few seconds.
- Abbreviations, symbols, and other grammatical shortcuts may be used in order to keep pace with the on-screen action. This is not a malfunction.
- The caption or text characters will not be displayed while the Main menu or functions display is shown.
- If a black box appears on the TV screen, this means that the closed caption is set to the text mode. To clear the box, select CC-1, CC-2, CC-3, or CC-4.
- If the unit receives poor quality television signals, the captions may contain errors or there might be no captions at all. Some possible causes of poor quality signals are:
 - Automobile ignition noise
 - Electric motor noise
 - Weak signal reception
 - Multiplex signal reception (ghosts or screen flutter)
 - Data dropout and pixelation (for DTV only)
- The unit retains the closed caption setting if the power fails.
- When the unit receives special effects playback signal (e.g. search, slow and still) from a VCR's video output channel (ch3 or ch4), the unit may not display the correct caption or text.
- The EUT setting that satisfies § 79.102 (e) is as follows:
 - Font: Mono-font
 - Character size: Large

Live TV Settings / TV MENU

--- Record

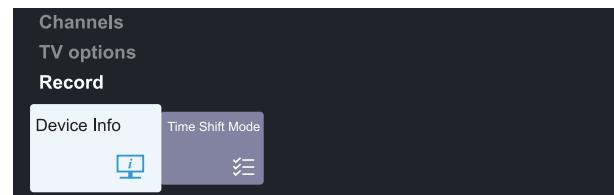

Device Info

Show the detailed information of connected USB storage device. Setup for the best usage of Time Shift function.

Time Shift Mode

Enable or disable the Time Shift function. After enabled, when your viewing is interrupted by something urgent, you can start TimeShift to pause and record the current DTV program temporarily by clicking PAUSE (II) in the Virtual Keyboard. When you come back, you can start playing the program from where you leave by clicking PLAY (▶) in the Virtual Keyboard.


Kids profile (parental control)

Set up a kids profile on Google TV to choose which apps your kids can use, and to set up bedtime reminders and screen time limits.

* Kids profiles may not be available in some regions or on some devices.

Add a kids profile

- 1 Press **⚙️ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Under "Accounts & Profiles" select Add a kid > Get started.
- 3 Under "Welcome parents" select Get started.
- 4 Select an option:
 - If your child has a Google Account or kids profile in your family group: Select the child you want to set up.
 - If you haven't set up a child in your family group: Select Add a kid and follow the on-screen instructions.
- 5 Choose the apps you want to include in the kid's home screen.
- 6 To set up parental controls, follow the on-screen instructions.

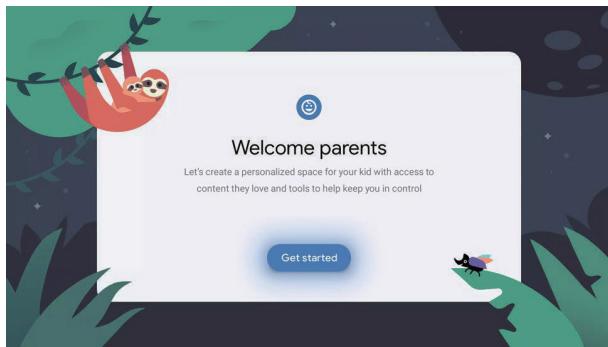

Switch to a kids profile

- 1 Press **⚙️ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select the kid's profile.

Set up a profile lock

Important: With a profile lock, you have to enter the adult's Google Account PIN or password to exit a kids profile. This is the same PIN or password that you use for Google Pay and other Google services.

- 1 Press **⚙️ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Go to Accounts & Profiles and select your kid's profile.
- 3 Select Profile lock and enter your Google Account PIN or password.
- 4 To turn on "Profile lock".

Allow or block content or apps

Allow or hide apps

- 1 Press **⚙️ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Go to Accounts & Profiles and select your kid's profile.
- 3 Select Manage apps.
 - To allow apps: Next to the app, check the blue box. Apps are installed automatically.
 - To hide apps: Next to the app, uncheck the blue box.

Allow or block content in your library based on rating

Important: This only works for content purchased from Google and shared with your kid. This setting doesn't apply in apps.

- 1 Press **⚙️ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Go to Accounts & Profiles and select your kid's profile.
- 3 Select Family Library.
- 4 Set the maximum allowed rating for Movies and TV.

Set a daily screen time limit

- 1 Press **⚙️ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Go to Accounts & Profiles and select your kid's profile.
- 3 Select Screen time and then Daily limit.
- 4 Select the days you'd like to schedule a daily limit.
- 5 Choose how many hours your kid can watch TV each day.
 - You can set limits in intervals of 15 minutes, up to 8 hours.

Set a daily bedtime

- 1 Press **⚙️ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 To select the kid's profile, go to Accounts & Profiles.
- 3 Select Screen time and then Bedtime.
- 4 Select the days you'd like to schedule a bedtime.
- 5 Select when your kid's TV time should start and end.
 - Times are available in intervals of 30 minutes.

Add bonus time

When the daily watch time for your kid ends, you can add bonus time:

- 1 From the timeout screen, select More time and enter your Google Account PIN or password.
- 2 Select how much bonus time to add.
 - You can add bonus time in intervals of 15 minutes, up to 8 hours.
- 3 To confirm the bonus time, enter your Google Account PIN or password.

Report inaccurate content ratings

- 1 From your child's profile, highlight the content with the inaccurate rating.
- 2 On your remote, hold the select button.
- 3 Select Report inaccurate rating.

Hide library content

- 1 From your child's profile, highlight the content you want to hide.
- 2 On your remote, hold the select button.
- 3 Select Hide.

Unhide library content

- 1 Press  (DASHBOARD) button to open the Google TV dashboard menu, then select "All settings" and press OK button to enter it.
- 2 Select Accounts & Profiles and then your kid's profile.
- 3 Select Hidden movies & TV shows.
- 4 Find and select the content you want to unhide.
- 5 Select Show to unhide the content.

Parental Controls

You can restrict your children from watching certain programs or channels using TV parental control system.

1. Long press **DAILY KEY (■)** to enter the interface of shortcut function settings.
2. Setup **DAILY KEY (■)** to perform the function of TV Menu by selecting **Single Function > System Functions > TV Menu**.
3. Press **HOME (⌂)** button to access the home screen, then select **Live TV** in Your apps.
4. Press **DAILY KEY (■)** to open the TV Menu, then select **Parental Controls** in TV options.
5. Enter your PIN using the Virtual Keyboard, which can be opened by selecting **SOURCE (□)** button > **Shortcuts > Virtual Keyboard**.
6. Press **BACK (◀)** button to exit the Virtual Keyboard.
7. Select **Channel Blocked** to restrict unauthorized access to specific channels.
8. Select **Program Restrictions** to restrict unauthorized access to specific programs based on age ratings or content ratings.
9. (May not be available) Select **Channel Schedule Block** to restrict unauthorized access to specific channel schedules.
10. Select **Inputs Block** to restrict unauthorized access to specific input sources.
11. Select **Change PIN** to change the password of the parental control system.

Parental Controls

Channels Blocked

None

Program Restrictions

Channel Schedule Block

Inputs Blocked

Change PIN

Note(s)

When you enter the parental control system for the first time, you will be asked to setup your Google PIN. Your Google PIN will be needed every time when you enter the parental control system. If you forget your Google PIN, you can reset it by performing the factory reset by selecting  (DASHBOARD) button > All settings > System > About > Reset > Factory reset.

Use Phone as remote/Watchlist

Use your phone as your Google TV remote

You can use the Google TV app on your Android phone as the remote to navigate your Google TV.

The Google TV app is only available on Android phones in select countries.

With the virtual remote, you can:

- Navigate the TV screen
- Control media
- Turn the TV on or off
- Activate the Google Assistant
- Change the volume
- Enter text to perform searches or enter login information

Set up your virtual remote

- 1 On your Android phone, open the Google TV app 
- 2 Near the bottom right, tap Remote
- 3 At the top, tap Scanning for devices.
- 4 Choose your device.
- 5 To complete pairing, follow the instructions on your phone and TV.
- 6 After pairing, you can use your phone or your remote.

Fix problems with the Google TV virtual remote

Check your Wi-Fi connection

To use your phone as a remote, your phone and TV must be on the same Wi-Fi network.

To check or change the connection on your TV:

- 1 Press **⚙️ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select Network & Internet.
- 3 Confirm that Wi-Fi is turned on and you're connected to the correct network.
 - If necessary, select the network you want to connect to.
 - If necessary, enter the password.

To check or change the connection on your phone:

- 1 On your phone, open the Settings app.
- 2 To find your network or choose a different network, tap Network & internet > Wi-Fi.

Ambient mode (Digital Photo Frame)

Change the screen saver

Google TV lets you set your TV to scroll through Google Photos when you're not watching anything.

You must be signed in to your Google account in order to set up and configure Ambient Mode.


With the ambient-mode cards, you can configure it to display information like sports scores, weather, and news based on your profile. The feature also provides on-screen shortcuts to let you launch photos or start playing music and podcasts with one click.

Choose your screen saver

- 1 Press **⚙️ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select System > Ambient Screensaver.
- 3 Choose what you want to show:
 - Google Photos: Choose photos or albums saved in your Google Photos account.
 - Art gallery: Choose featured photos, fine art, and more.
 - Custom AI Art: Use generative AI to create your own images.

Choose which photos show

- 1 On your phone, open Google Home 
- 2 Select your TV.
- 3 On your Google TV, select **⚙️ (DASHBOARD)** button > All settings > System > Ambient Screensaver > Google Photos.

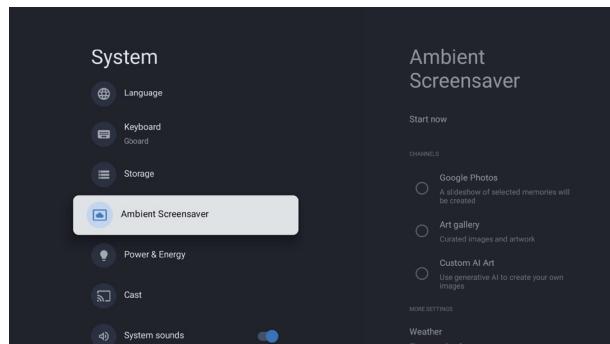

- 4 Select the photos or albums you want to show on your TV.

Customise settings

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select System > Ambient Screensaver.
- 3 Under "MORE SETTINGS", choose:
 - Personal photo data: Show or hide the owner's name and album name.
 - Portrait Google Photos: Choose if photos can show in portrait orientation.
 - Personal photo curation: Choose which albums are included.
 - Slideshow speed: Choose how long a photo stays on the screen.

Show weather & time on your screen saver

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select System > Ambient Screensaver.
- 3 Under "More settings", choose:
 - Weather: Choose °C, °F, or Both.
 - Time: Choose to show or hide the time.

Cast to Google TV

Cast to Google TV

You can cast content from phones, tablets, or laptops to your Google TV.

Cast from a device to your TV

Important: You can only cast from the latest version of a Google Cast-enabled app or a Chrome browser on a device connected to the same Wi-Fi network as your Google TV.

- 1 Connect your device to the same Wi-Fi network as your Google TV.
- 2 Open the app that has the content you want to cast.
- 3 In the app, find and select Cast .
- 4 On your device, select the name of your TV.
- 5 When Cast  changes color, you're successfully connected.

To stop casting, on your device, select Cast  > Disconnect.

Fix problems with casting

If you can't cast on your Google TV, try the solutions below.

Make sure casting is enabled on your TV

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select Apps > See all apps.
- 3 Find the app "Google Cast".
If you can't find it, select Show system apps or check in the "Disabled apps" section.
- 4 Check that the app is enabled. If it's not, select Enable to turn it back on.
- 5 To reboot your device, select Settings > System > Restart.

Connect your TV and device to the same Wi-Fi network

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Under Network & Internet, find the name of the Wi-Fi network your TV is connected to. Make sure it's the same as the network on the device you want to cast from.

Update your TV

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select System > About > System update.
If an update is available, follow the on-screen instructions to install it.
You need to connect to internet to update your TV.

Google Assistant

Do more with Google Assistant on Google TV

You can ask questions and complete tasks on your Google TV with Google Assistant. Google Assistant comes installed on your Google TV device. You can turn it on when you first set up your device, or you can turn it on later.

Google Assistant is not available in certain countries and languages.

Talk to Google Assistant

Simply press and hold the Google Assistant button  on your remote as you ask a question or say a command to watch movies, open apps, set timer, check weather and more - using just your voice. To help Google Assistant understand your request, speak into the microphone on your remote.

What you can ask Google Assistant

Watch videos

- ① Movies and TV shows: "Play The Mandalorian on Disney+."
- ② Video clips: "Play cat videos on YouTube."
- ③ Apps: "Open YouTube."
- ④ Search: "Search for sitcoms." "Find sci-fi movies."
- ⑤ Info: "Tell me about Game of Thrones."

Control media

- ① Playback: "Pause." "Stop." "Resume."
- ② Volume: "Louder." "Softer."

Control your smart home

- ① Lights: "Dim the living room lights."
- ② Thermostats: "Set the heat to 70." "Lower the temperature 2 degrees."

Plan your day

- ① Alarms: "Set an alarm for 7 AM."
- ② Reservations: "Make a reservation for 2 at [restaurant] on Friday."

Ask Google

- ① Game updates: "Who won the Warriors game?"
- ② Calculations: "What's 20% of 80?"
- ③ Dictionary: "What does "gregarious" mean?"
- ④ Translations: "How do I say "Nice to meet you" in French?"
- ⑤ Finance: "How's the S&P 500 doing?"
- ⑥ Unit conversions: "How many kilometers in a mile?"
- ⑦ Search: "Search for summer vacation ideas."
- ⑧ Image search: "Find pictures of kittens."
- ⑨ Web answer: "How do you remove wine stains from a rug?"

Have fun

- ① Get to know your Assistant: "Do you dream?" "What's your favorite color?"
- ② Games: "Let's play a game." "Give me a trivia question."
- ③ Entertainment: "Tell me a joke." "Tell me something interesting."



Note(s)

- For more ideas, ask Google Assistant, "What can you do?"

USB camera for Google Meet

Google Meet is an app that provides simple, high-quality video calls right from your TV. To start calling with Google Meet, below items are required:

- 1 10 Mbps or faster internet access for 1080p video call.¹
- 2 Google account²
- 3 External USB camera with a built-in mic which supports Android 11.0 and later.

For more details on how to get started, please visit

<https://support.google.com/meet>


Google Meet is not pre-installed.



How to connect USB camera

Connect a USB camera with a built-in mic directly into your Google TV before launching Google Meet.

Below is an example of how to connect and place USB camera. After you launch Google Meet, follow onscreen instructions to setup and configure settings of Google Meet including access to camera and mic.

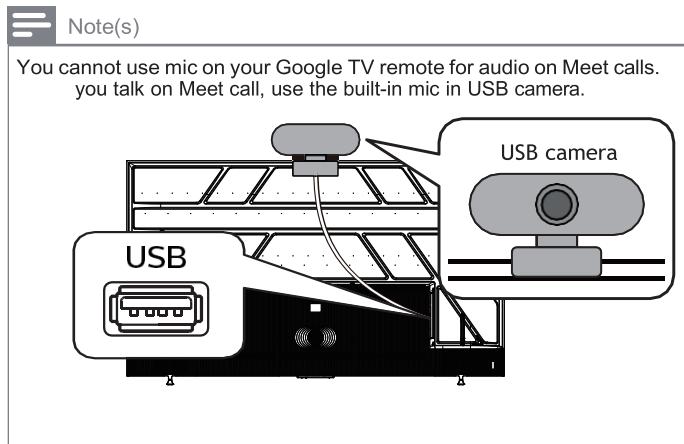

Google Meet	<p>USB camera does not work.</p> <ul style="list-style-type: none"> • Check if USB camera supports Android 11.0 or later. (May be listed on USB camera packaging or manufacturer's website) • Check if USB camera is connected to the TV. • Turn off the TV and disconnect/reconnect USB camera. Turn the TV back on and reopen the Meet app. • If issues remain, please visit the Meet support page and check the Troubleshoot section. (https://support.google.com/meet)
	<p>Other party cannot hear anything. (My microphone does not work)</p> <ul style="list-style-type: none"> • Check if USB camera has a built-in mic and supports Android 11.0 or later. (May be listed on USB camera packaging or manufacturer's website) • Check if your microphone is muted. (Please unmute if so) • Check if USB camera is connected to the TV. • Turn off the TV and disconnect/reconnect USB camera. Turn the TV back on and reopen the Meet app. • If issues remain, please visit the Meet support page and check the Troubleshoot section. (https://support.google.com/meet)
	<p>I cannot hear other party. (Speaker does not work)</p> <ul style="list-style-type: none"> • Check if the volume of the TV is muted or very low. (Please unmute or turn the volume up if so) • Check if USB camera is connected to the TV. • Turn off the TV and disconnect/reconnect USB camera. Turn the TV back on and reopen the Meet app. • If issues remain, please visit the Meet support page and check the Troubleshoot section. (https://support.google.com/meet)

6 Troubleshooting tips

If you can't play videos on your Google TV or have other problems with your Google TV device, try the steps below.

Basic issues

Step 1. Check your Wi-Fi connection

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select **Network & Internet**.
- 3 Confirm that Wi-Fi is turned on and you're connected to the correct network.
- 4 If not, locate the network you'd like to connect to and select it to connect. Enter the password if required.
- 5 Open one of your apps.
- 6 Play your video, music, or game again.

Note(s)

If you still have issues, turn the Wi-Fi option off and on again. If that doesn't work, go to the next step.

Step 2. Check for system updates

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select **System > About > System update > Check for update**
- 3 Install any available updates, then play your video, music, or game again. If that doesn't work, go to the next step.

Step 3. Restart your device

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select **System > Restart**.
- 3 Once the system restarts, play your video, music, or game again. If it still doesn't work, go to the next step.

Step 4. Check which account you're signed in to

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Under **Accounts & Profiles**, check which account is signed in to Google TV.
- 3 Make sure it's the same account you used for your service.

Step 5. Clear app data

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select **Apps > See all apps**
- 3 Find and select the app > **Clear data > OK**
- 4 Play your video, music, or game again. If that doesn't work, go to the next step.

Step 6. Reset the device to factory settings

Important: A factory reset erases all your data from your device. We recommend that you try to troubleshoot with other steps first.

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select **System > About > Reset**.

Network connections

Check your Wi-Fi connection

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select **Network & Internet**.
- 3 Confirm that **Wi-Fi** is turned on and you're connected to the correct network.
- 4 If not, locate the network you'd like to connect to and select it to connect. Enter the password if required.
- 5 Open one of your apps.
- 6 Play your video, music, or game again.

Note(s)

If you still have issues, turn the Wi-Fi option off and on again.


Connect Remote control

Fix issues with your remote


Important: You might need to remove and reinsert the batteries on your remote.

On any interface of your Google TV, press **⌚ (GOOGLE ASSISTANT)** button to quickly pair the Bluetooth remote control with the TV set.

< Pairing >

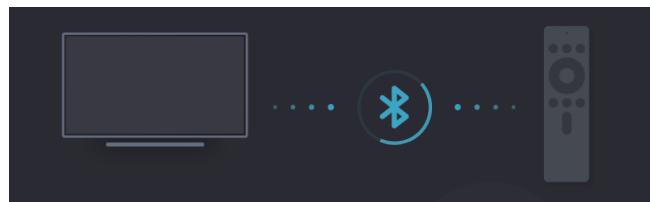

< Paired >

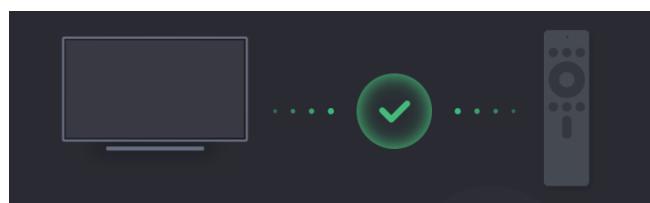

LED states on voice remote

The voice remote has an LED light next to **⊕ (POWER)** button. It tells you about the status of your remote.

- Unlit---No press on any button.
- Lit in red---Press any button in infrared mode.
- Lit in green---Press any button in Bluetooth mode.
- Blink in green---Be in Bluetooth pairing mode.

Pair a Bluetooth device

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select Remote & Accessories > Pair accessory
- 3 Make sure your device is in pairing mode or is visible to other devices.
- 4 Identify the device you want to pair from the list and select it.
- 5 On the Bluetooth pairing request screen, select Pair.

Note(s)

Accessories that have been paired with your device appear in the Remote & Accessories section of Settings. You can also rename or forget devices.

Reconnect a paired device

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select Remote & Accessories
- 3 Under "ACCESSORIES" choose your device.
- 4 Select Connect.

Video

Streaming movie often stops or starts buffering during playback.

- Contact your internet service provider to troubleshoot your internet connection for speed and line quality.
- Consistent line quality and speed are very important for internet video playback.

Slow Data Connection or buffering.

- Check the settings between your router and ISP modem or gateway (if applicable).
- Connect to a stable wireless connection from home wireless or wired network, check your wifi connection quality in settings.

Note(s)

The use of mobile hot spots or public wireless connections is not recommended.

Power is on but screen image is off.

- Check if the connection for your source device is properly secured.
- Check if the correct input is selected by pressing **➡ (SOURCE)** on your remote.
- Verify that your HDMI mode, for the input selected matches the resolution output of your source device.
- Change source input until you have picture and sound.

Television has sound with no picture or abnormal picture.

- Change the resolution output of your source device.
- Check if the **Sound Only** function is turned on in **Sound** menu under **Channels & Inputs**. If so, you can press any button to exit **Sound Only** mode.

Why are captions not displayed entirely? Or why are captions delayed behind the dialog?

Closed captions that are delayed a few seconds behind the actual dialog are common for live broadcasts.

Most captioning production companies can display a dialog to maximum of 220 words per minute.

If a dialog exceeds that rate, selective editing is used to insure that the closed captions remain up-to date with the current TV screen dialog.

Ghosts, lines, or streaks in picture.

Electrical interference from nearby appliances may affect picture quality.

View other TV channels. The problem might be limited to the broadcasting station or weak signal strength.

Picture poor, sound intermittent, or no sound

View other TV channels. The problem might be limited to the broadcasting station or weak signal strength.

How do I adjust the picture settings on my Television

For wired connection (HDMI)/Antenna cable/composites

- 1 Go Setting/Dashboard and select Picture
- 2 select Picture Mode and choose what you want

Why not seeing a picture or not seeing a correct resolution when connected with HDMI

- Check the antenna/cable connection.
- Connect the 4K (50p/60p)* playable device.
- Use a Premium High Speed HDMI™ Cable(s) that supports 18 Gbps.
- Select HDMI EDID Version by selecting Settings > Channels & Inputs > Inputs > HDMI EDID Version > Compatibility/Standard/Auto/Enhance.

The screen suddenly changes to a video you do not recognize while watching TV.

In this case, the TV might be in demo mode. Try exiting demo mode.

Choose "Shop/Retail" mode in initial setup by selecting **⚙ (DASHBOARD)** button > All settings > System > About > Reset.

Distorted picture./The screen flickers.

- Check the antenna/cable connection.
- Keep the antenna/cable away from other connecting cables.
- When installing an optional device, leave some space between the device and the TV.
- Make sure that the antenna is connected using a high quality 75-ohm coaxial cable.

High resolution HDR pictures are not displayed.

The following are required to watch high resolution HDR pictures such as 4K.

- Connect the 4K playable device.
- Use a Premium High Speed HDMI™ Cable(s) that supports 18 Gbps.
- Set "HDMI EDID Version". Select Settings > Channels & Inputs > Inputs > HDMI EDID Version, then choose the correct version.
- Check whether the connected device has the latest settings or firmware.

Audio

Television has no sound.

- Please check to be sure the device is connected to the HDMI-1 eARC/ARC input on the TV.
- Check if the power is on.
- Check whether all the cables to the unit are connected to the correct output jack on your separate device like Blu-ray Disc™/DVD recorder
- Unplug the AC power cord and wait for about 1 minute, then plug the AC power cord and turn on the unit again.
- Check whether the connection of the antenna or cable/satellite set-top box is connected correctly.
- Make sure that the sound is not muted. Press **◀ MUTE** so that the volume bar and current volume level will appear on the TV screen.
- Make sure that the volume is NOT, set to 0 or **◀ MUTE**. If so, use **+/ VOL** to adjust to the desired volume.
- Make sure that the headphone is NOT connected to the headphone audio output jack.
- If there are issues with picture/color and/or sound when connecting an external device using the HDMI port, please try switching the HDMI EDID Version. (Refer to below)
- If headphones or Bluetooth audio devices are connected, sound is not output from the TV speakers or audio system connected via eARC/ARC. Remove the headphones or disconnect the Bluetooth audio device.

Picture poor, sound intermittent, or no sound

View other TV channels. The problem might be limited to the broadcasting station or weak signal strength.

Use Headphone/Bluetooth devices and audio system/TV speakers at the same time.

To output sound from both the headphones/Bluetooth audio device and TV speakers

The TV cannot output sound from both the headphones or Bluetooth audio device and the TV speakers at the same time.


To output sound from both an audio system connected via ARC and TV speakers

Sound can be output from both an audio system connected to the TV and the TV speakers at the same time by satisfying the following conditions.

- Connecting the TV and audio system using a digital optical cable
- Setting [Digital Audio Output] to [PCM] in Audio Output of Display & Sound under Settings.

How to connect Digital audio Optical


Use a digital audio optical cable to connect the unit to external digital audio devices.

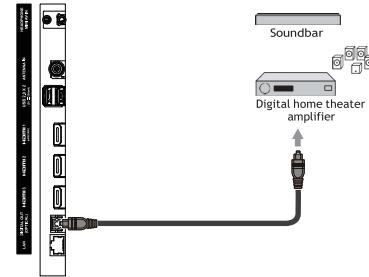

HDMI-eARC/ARC connection (Digital home theater amplifier that supports HDMI-eARC/ARC)

HDMI-eARC/ARC allows you to use HDMI control to output TV audio directly to a connected audio device, without the need for an additional digital audio cable.

HDMI-eARC/ARC is only available on HDMI-1, so connect your device to this HDMI-1 if sound output from the TV through HDMI is needed.

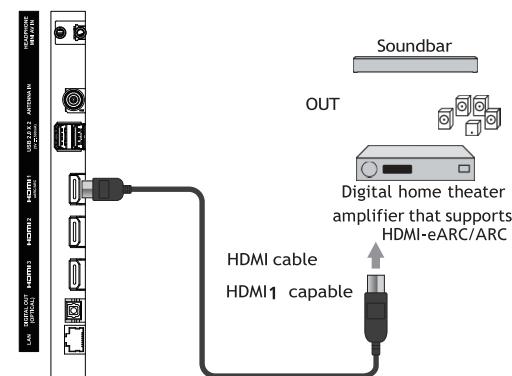

Pair a Bluetooth device

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select Remote & Accessories > Pair accessory
- 3 Make sure your device is in pairing mode or is visible to other devices.
- 4 Identify the device you want to pair from the list and select it.
- 5 On the Bluetooth pairing request screen, select Pair.

Note(s)

Accessories that have been paired with your device appear in the Remote & Accessories section of Settings. You can also rename or forget devices.

Cable/Satellite TV

I can not watch cable/satellite set-top box(STB) programs.

- Check that HDMI cable connection is secure on TV and connected device.
- Unplug and reconnect the cable to force a reconnection.
- If using 15 ft. or longer HDMI cable, try a shorter one.
- Try a different HDMI Input on the TV. Sometimes HDMI settings are set different.
- Verify that the connected device is outputting a resolution supported by your television

640x480 (SD)

1280x720 (HD)

1920x1080 (FHD)


3840x2160 (4K)

- If connected device is outputting 4K with HDR, change the TV HDMI settings to Enhance.
- If connected device is older and does not support 4K or HDR, change the TV HDMI settings to Standard/Compatibility.

External devices

HDMI digital connection (normal connection)


HDMI connection offers the highest picture quality. HDMI (High-Definition Multimedia Interface) transports highdefinition digital video and multi-channel digital audio through a single cable.

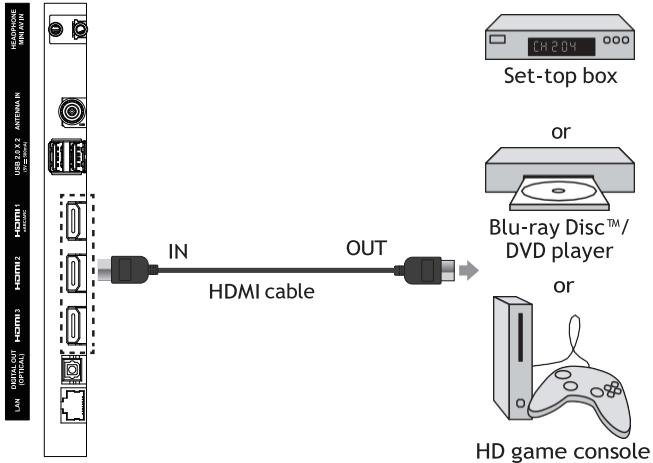

HDMI-eARC/ARC connection (Digital home theater amplifier that supports HDMI-eARC/ARC)


HDMI-eARC/ARC allows you to use HDMI control to output TV audio directly to a connected audio device, without the need for an additional digital audio cable.

HDMI-eARC/ARC is only available on HDMI-1, so connect your device to this HDMI-1 if sound output from the TV through HDMI is needed.

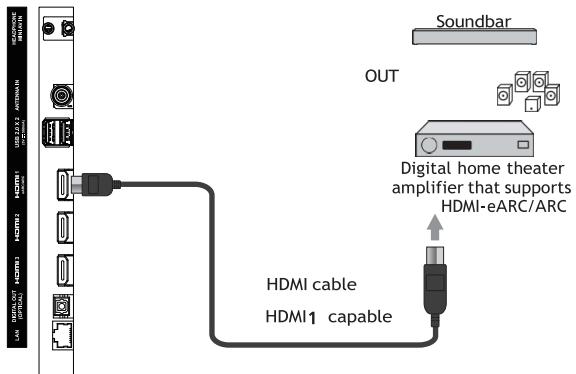


If connecting cable/satellite/IPTV set-top box using an HDMI cable

If the TV is connected to a cable/satellite set-top box via an HDMI cable, make sure you select the correct source by using  (SOURCE) on your remote control.

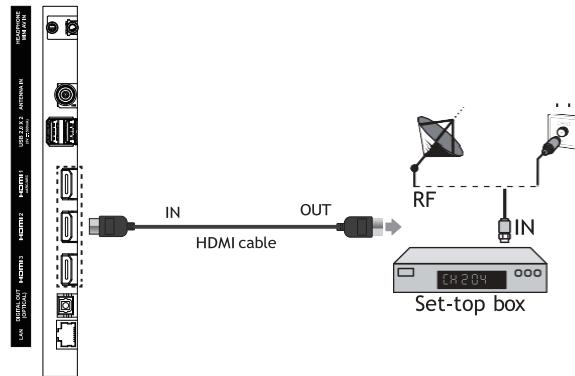


If connecting cable/satellite/IPTV set-top box using an RF cable

If the TV is connected to a cable/satellite set-top box via a coaxial connection, set the TV to channel 3/4 or the channel specified by the service provider.

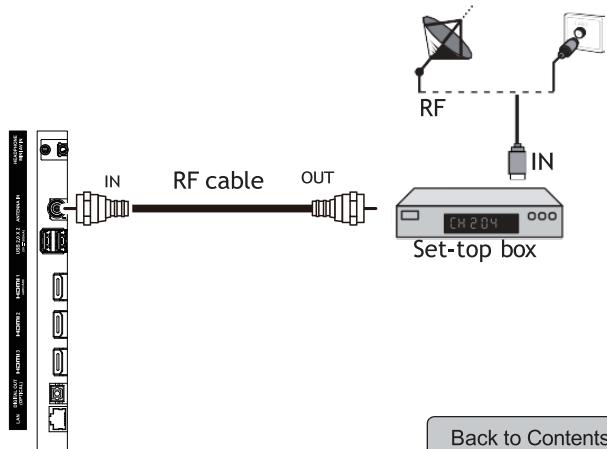

Connecting a cable/satellite/IPTV set-top box, Blu-ray Disc/DVD recorder via composite or antenna port.


Do not place your recorder too close to the screen because some recorders can be susceptible to harmful interference from the TV.

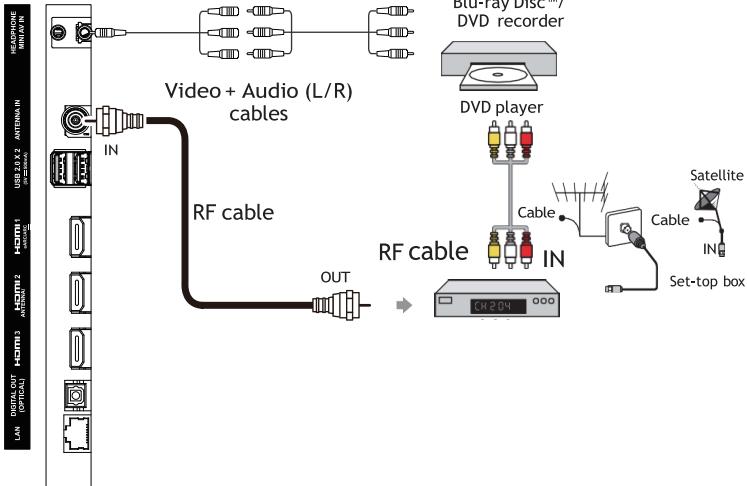

Digital audio output connection


If you connect this unit to an external digital audio device, you can enjoy multi-channel audio like 5.1ch digital broadcasting sound.

Use a digital audio optical cable to connect the unit to external digital audio devices.

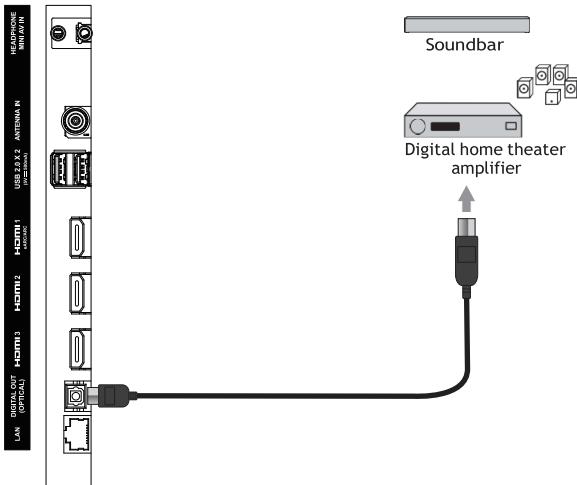


Composite analog video connection

Composite analog video connection offers standard picture quality for video devices connected to the unit.

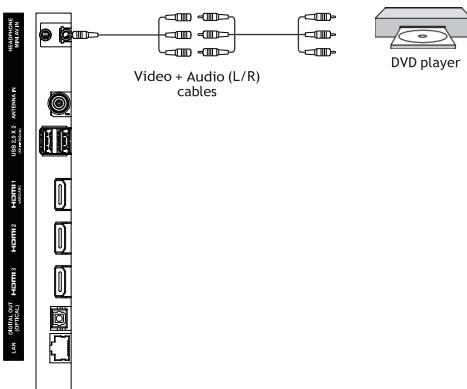

Connecting the TV to the internet using an Ethernet cable

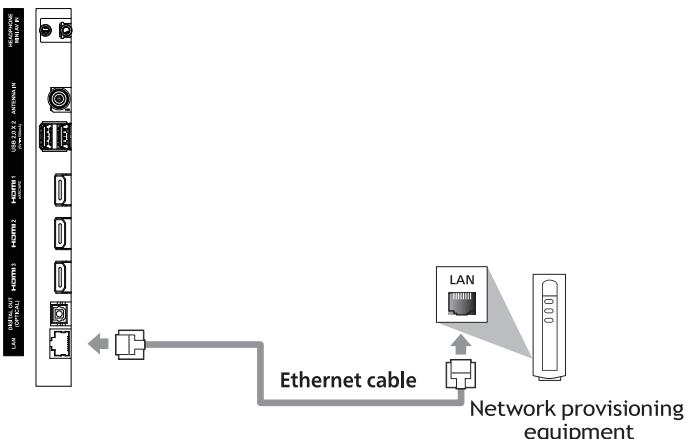

Check your Wi-Fi connection

- 1 Press (DASHBOARD) button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select Network & Internet.
- 3 Confirm that Wi-Fi is turned on and you're connected to the correct network.
- 4 If not, locate the network you'd like to connect to and select it to connect. Enter the password if required.
- 5 Open one of your apps.
- 6 Play your video, music, or game again.

Note(s)

If you still have issues, turn the Wi-Fi option off and on again.

Pair a Bluetooth device

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select Remote & Accessories > Pair accessory
- 3 Make sure your device is in pairing mode or is visible to other devices.
- 4 Identify the device you want to pair from the list and select it.
- 5 On the Bluetooth pairing request screen, select Pair.

Note(s)

Accessories that have been paired with your device appear in the Remote & Accessories section of Settings. You can also rename or forget devices.

Connect Bluetooth

You can connect several Bluetooth devices, like headphones or game controllers, to your Google TV. You can only connect one audio device at a time.

Pair a Bluetooth device

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select Remote & Accessories > Pair accessory
- 3 Make sure your device is in pairing mode or is visible to other devices.
- 4 Identify the device you want to pair from the list and select it.
- 5 On the Bluetooth pairing request screen, select Pair.

Note(s)

Accessories that have been paired with your device appear in the Remote & Accessories section of Settings. You can also rename or forget devices.

Reconnect a paired device

- 1 Press **⚙ (DASHBOARD)** button to open the Google TV dashboard menu, then select "All settings" and press **OK** button to enter it.
- 2 Select Remote & Accessories.
- 3 Under "ACCESSORIES" choose your device.
- 4 Select Connect.

Fix problems with connecting Bluetooth devices

If your Bluetooth device won't connect, it could be an issue with the Bluetooth device or your TV.

Troubleshoot connection issues

- 1 Turn off your Bluetooth device and then turn it back on. After your device is reset, try to pair it again.
- 2 If you have multiple devices paired with your TV, disconnect the ones you're not using.
- 3 Unplug your TV for 10 seconds and then plug it back in. When your TV is on, try to pair it again.
- 4 Check if your Bluetooth device connects to other devices, such as a phone or tablet.
 - a. If your device connects to other devices: Reset your Google TV device to factory settings.
 - b. If your device doesn't connect to other devices: Check that your Bluetooth device has up-to-date software or get help from the device's manufacturer.

7 Information

Glossary

Analog TV (NTSC)

Acronym that stands for National Television Systems Committee and the name of analog broadcasting standards. Off the air analog TV signals are no longer being sent by major broadcasting stations in the U.S.

eARC/ARC (Audio Return Channel) (HDMI 1 only)

HDMI-eARC/ARC allows you to use Philips HDMI control to output TV audio directly to a connected audio device, without the need for an additional digital audio cable. Be sure that the device is HDMI CEC and eARC/ARC compliant, and that the TV is connected to the device using an HDMI cable attached to both HDMI-eARC/ARC connectors.

Aspect ratio

The width of a TV screen relative to its height. Conventional TVs are 4:3 (in other words, the TV screen is almost square); widescreen models are 16:9 (the TV screen is almost twice as wide as its height).

CEC (Consumer Electronics Control)

This allows you to operate the linked functions between our brand devices with CEC feature and this unit. We do not guarantee 100% interoperability with other brands of CEC compliant devices.

Dolby Digital

The system developed by Dolby Laboratories to compress digital sound. It offers stereo sound (2ch) or multi-channel audio.

DTV (ATSC)

Abbreviation that stands for Advanced Television Systems Committee and the name of the digital broadcasting standards.

e-POP

e-POP is showing set features, technical information, etc on this TV set that is displayed on the TV screen mainly used by TV retailers. Previously the information was on a printed sticker that was put on the display.

HDMI (High-Definition Multimedia Interface)

Interface that supports all uncompressed, digital audio/video formats including set-top box, Blu-ray Disc™/DVD recorder or digital television, over a single cable.

HDR10

High Dynamic Range (HDR10) is a new video technology, which lets you experience more detail and captivating colors for an even more engaging television experience. More perceivable shades of blacks, whites, and all other colors.

UHD

4K/UHD means the TV's screen has a minimum resolution of 3,840 pixels wide and 2,160 pixels high, making it the equivalent to two 1080p screens in height and two in length. This resolution was originally known as "Quad HD," and it's used by basically every 4K TV.

PIN code

A stored 4-digit number that allows access to parental control features.

SAP (Secondary Audio Program)

Second-audio channel delivered separately from the Main-audio channel. This audio channel is used as an alternate in bilingual broadcasting.

Maintenance

Cleaning

- Clean the front panel and other exterior surfaces of the unit with a soft microfiber cloth or lens brush. Before cleaning the panel, disconnect the AC power cord.
- Never use a solvent or alcohol. Do not spray insecticide liquid near the unit. Such chemicals may cause damage and discoloration to the exposed surfaces.
- Do not spray any liquids on the screen or other exterior surfaces of this unit. If liquids enter the unit, they could cause shorts, electric shocks, or fire damage.



Servicing

Should your unit become inoperative, do not try to correct the problem yourself. There are no user serviceable parts inside. Call our toll free customer support line found on the cover of this user manual to locate an authorized service center.

Specifications

Model #	100PQL7556/F7	
Picture		
Type	UHD (Ultra HD) (3840 x 2160 pixels 60 Hz)	
Diagonal screen size/Aspect ratio	99.5"/16:9	
Viewing angles	178° (V) by 178° (H)	
Built-in digital/analog tuner	ATSC (digital)/NTSC (analog)	
Sound		
Mono/Stereo	Mono, Stereo	
Equalizer	5 band	
Ease of use		
Screen	Automatic / Full Screen / Super Zoom / Unscaled / 4:3 / Movie expand 14:9 / Movie expand 16:9	
Channel		
Channel coverage	Over-the-Air DTV (ATSC)	VHF: 2~13 UHF: 14~69 (Each channel may have e.g. 2.1~2.9, 3.1~3.9, etc)
	Over-the-Air Analog (NTSC)	VHF: 2~13 UHF: 14~69
CATV (Analog NTSC)	2~13, A~W W+1~W+94 (Analog W+1~W+84), A-5~A-1, 5A	
Tuning system	Channel frequency synthesized tuning system	
Channel access	Channel scan, GUIDE, UP/DOWN	
Connectivity		
Composite input	1(Mini AV IN)	
HDMI input	3 (selectable HDMI modes) PC input Supporting HDMI video signals: 480i/p, 720p, 1080i @60 Hz, 1080p, 2160p @24/30/60 Hz	
	Supporting HDMI HDR signals: HDR10, HLG (Hybrid Log-Gamma)	
	Supporting HDMI digital audio signals: LPCM, AC3	
	Supporting PC-input video signal up to 4096 x 2160	
	USB	
USB	2	
Wireless LAN	Wireless LAN Supporting wireless standards: IEEE 802.11a/b/g/n/ac (2.4 GHz/5 GHz)	
Ethernet port	1	
Digital audio output	1 Supporting Dolby Atmos	
Headphone output	1 1/8" (3.5 mm)	
Bluetooth	Version 5.1	
Power		
Power requirements	120 V~ +/- 10 %, 60 Hz +/- 0.5 %	
Temperature		
Operating temperature	41 °F (5 °C) to 104 °F (40 °C)	

- Specifications are subject to change without prior notice.

Warranty

Limited warranty one (1) year

Warranty coverage:

This warranty obligation is limited to the terms as set forth below.

Who is covered:

This product warranty is issued to the original purchaser or the person receiving the product as a gift against defects in materials and workmanship as based on the date of original purchase ("Warranty Period") from an Authorized Dealer. The original sales receipt showing the product name and the purchase date from an authorized retailer is considered such proof.

What is covered:

This warranty covers new products if a defect in material or workmanship occurs and a valid claim is received within the Warranty Period. At its option, the company will either (1) repair the product at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new, or serviceable used parts and is at least functionally equivalent or most comparable to the original product in current inventory, or (3) refund the original purchase price of the product.

Replacement products or parts provided under this warranty are covered against defects in materials and workmanship from the date of the replacement or repair for ninety (90) days or for the remaining portion of the original product's warranty, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes company property. When a refund is given, your product becomes company property.

Note: Any product sold and identified as refurbished or renewed carries a ninety (90) day limited warranty.

Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay.

What is not covered – Exclusions and limitations:

This Limited Warranty applies only to new company manufactured products that can be identified by the trademark, trade name, or logo affixed to it. This Limited Warranty does not apply to any hardware product or any software, even if packaged or sold with the product, as manufacturers, suppliers, or publishers may provide a separate warranty for their own products packaged with the bundled product.

The company is not liable for any damage to or loss of any programs, data, or other information stored on any media contained within the product, or other additional product or part not covered by this warranty. Recovery or reinstallation of programs, data or other information is not covered under this Limited Warranty.

This warranty does not apply (a) to damage caused by accident, abuse, misuse, neglect, misapplication, or non-supplied product, (b) to damage caused by service performed by anyone other than company approved Authorized Service Location, (c) to a product or a part that has been modified without written company permission, or (d) if any serial number has been removed or defaced, or (e) product, accessories or consumables sold "AS IS" without warranty of any kind by including refurbished product sold "AS IS" by some retailers.

This Limited Warranty does not cover:

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

Skyworth USA Corporation Service, 2950 Toy Road, Groveport, OH 43125, USA

License

Skyworth USA Corporation hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source code packages, on an "AS IS" basis, used in this product for which such offer is requested by the respective licenses. This offer is valid up to three years after the product purchase to anyone in receipt of this information. To obtain source code, please contact Skyworth USA Corporation. You should write to Skyworth USA Corporation Service, 2950 Toy Road, Groveport, OH 43125, USA.

Skyworth USA Corporation disclaims any and all warranties and representations with respect to such software and related source code including quality, reliability, usability, accuracy, and further disclaim all express, implied, statutory, or otherwise, including without limitation, any implied warranties of title, non-infringement, merchantability, or fitness for a particular purpose. Skyworth USA Corporation shall not be liable to make any corrections to the open source software or source code or to provide any support or assistance with respect to it.

Skyworth USA Corporation disclaims any and all liability arising out of or in connection with the use of this software and/or source code.



Skyworth USA Corporation
10833 Valley View Street, Suite 415, Cypress, CA 90630, United States

The Philips trademarks are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured and is sold under the responsibility of Skyworth USA Corporation, and Skyworth USA Corporation is the warrantor in relation to this product.