
 
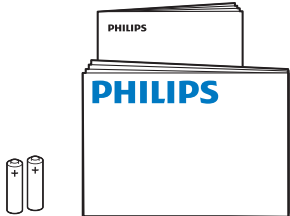

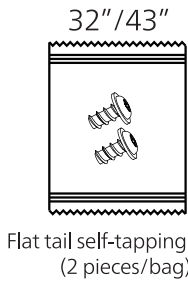


Television
Quick Start Guide
6600 series

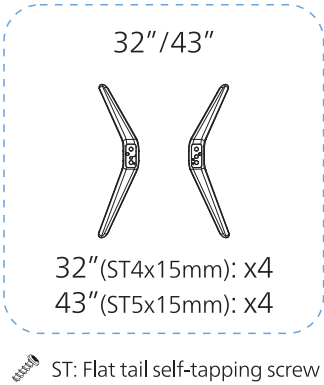

Tool needed
for assembly

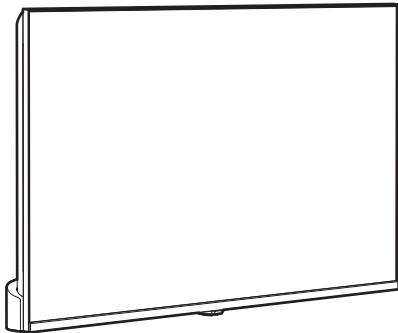

The actual accessories may differ from the illustrations, which are for reference purposes only.

1

2

A

A Desk Placement

B Wall Placement

Desk Placement (using table stand)

B

Diagonal (inch/cm)	X (mm)	Y (mm)	Screw Size	Screw Length (mm)
32" / 80	200	200	UP: M4 Down: ST4	9.5-10.5 9.5-10.5
43" / 108	200	200	UP: M4 Down: ST4	9.5-10.5 9.5-10.5

Recommended Wall Distance

3

Register and Support

www.philips.com/TVsupport
Register your TV, find out more,
download the user manual and
get support



1



 
To install batteries, slide the battery door up.

2



Use 2x AAA LR03 1.5V (included)

3



Slide battery door back in place.

Click



English Read the safety instructions.
Bahasa Malaysia Baca arahan Keselamatan.
Bahasa Indonesia Baca petunjuk keselamatan.


Deutsch Lesen Sie die Sicherheitshinweise.
Français Lisez les consignes de sécurité.
Português Leia as instruções de segurança.

ภาษาไทย โปรดอ่านคำแนะนำด้านความปลอดภัย
Tiếng Việt Hãy đọc chỉ dẫn an toàn.
简体中文 请阅读安全说明。


العربية قراءة تعليمات السلامة.





32"/43"

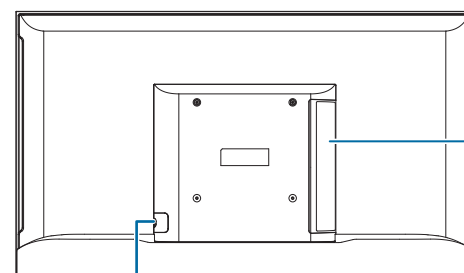

POWER

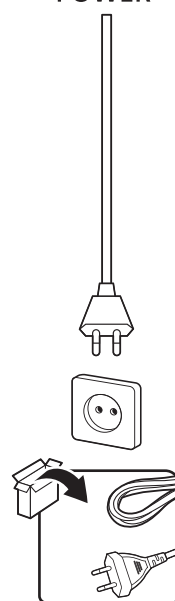

(/67)

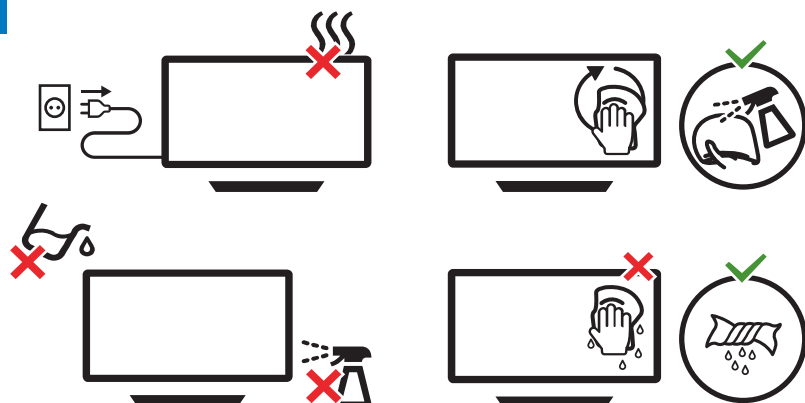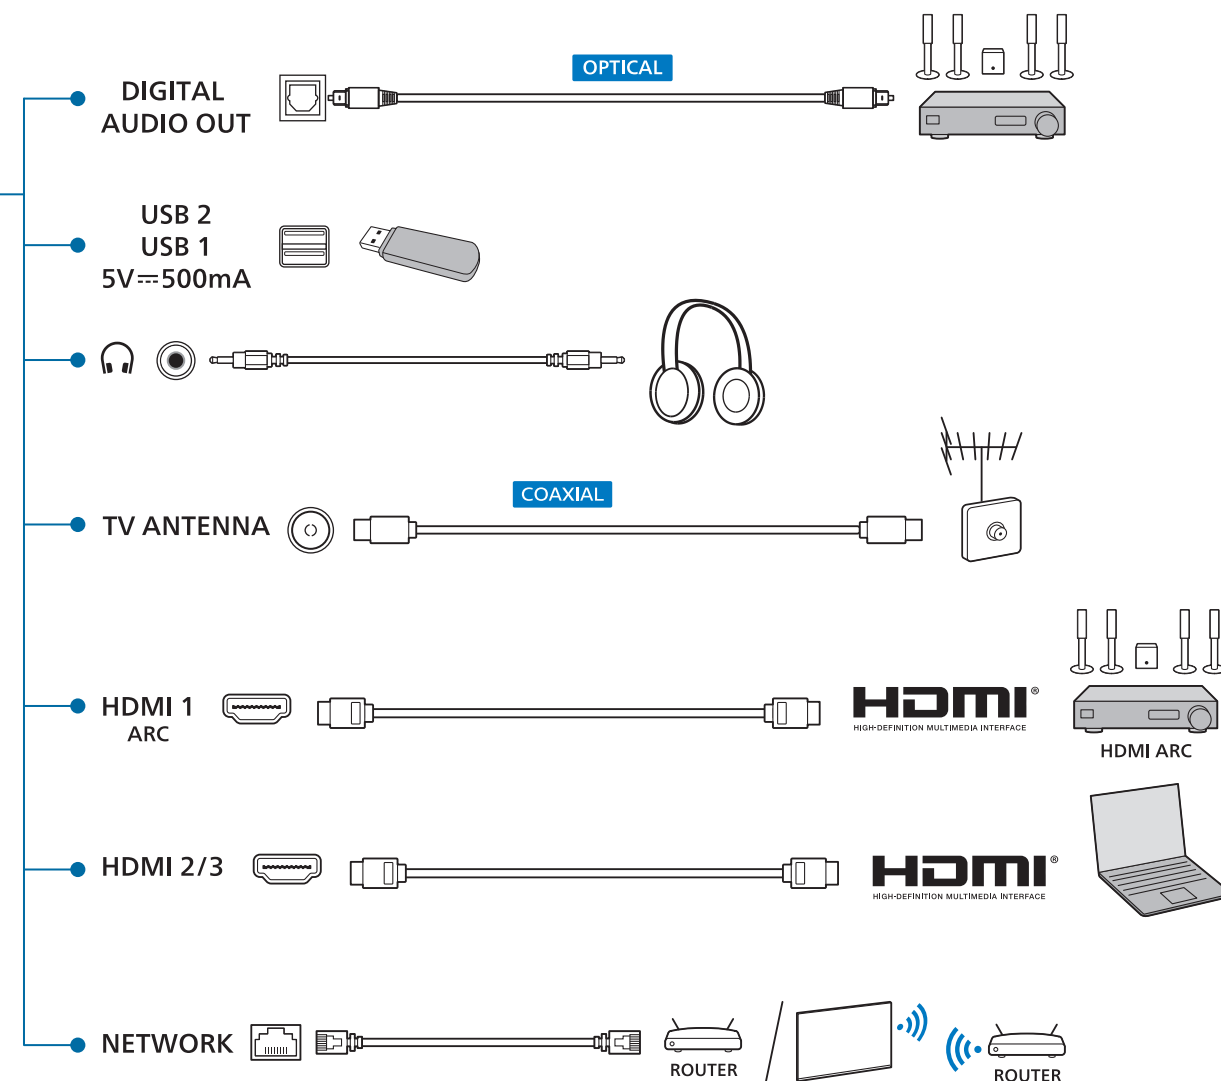

All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of TP Vision Europe B.V., and TP Vision Europe B.V. is the warrantor in relation to this product. 2025 © TP Vision Europe B.V. All rights reserved. www.philips.com/welcome