

PHILIPS


7314-320N15-60106821

The actual accessories may differ from the illustrations, which are for reference purposes only.

Television Quick Start Guide 6700 series




Tool needed for assembly

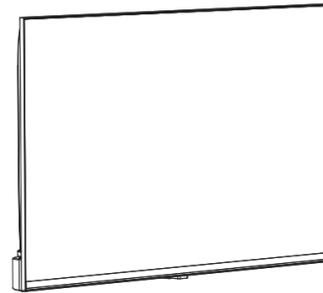


32" / 40" (ST4x12mm): x4
43" (ST5x17mm): x4









ST: Flat tail self-tapping screw

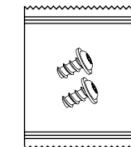

 Flat tail self-tapping screw
(2 pieces/bag)





(/98)

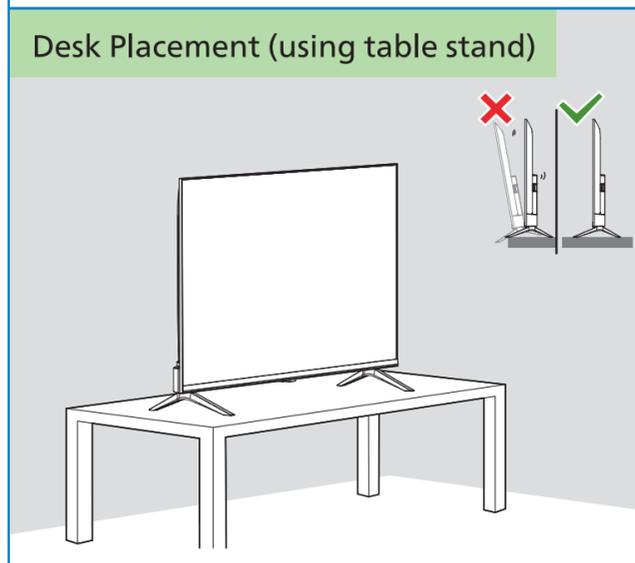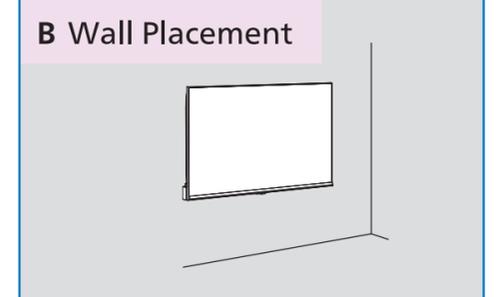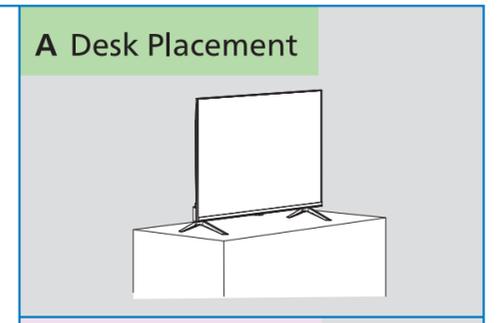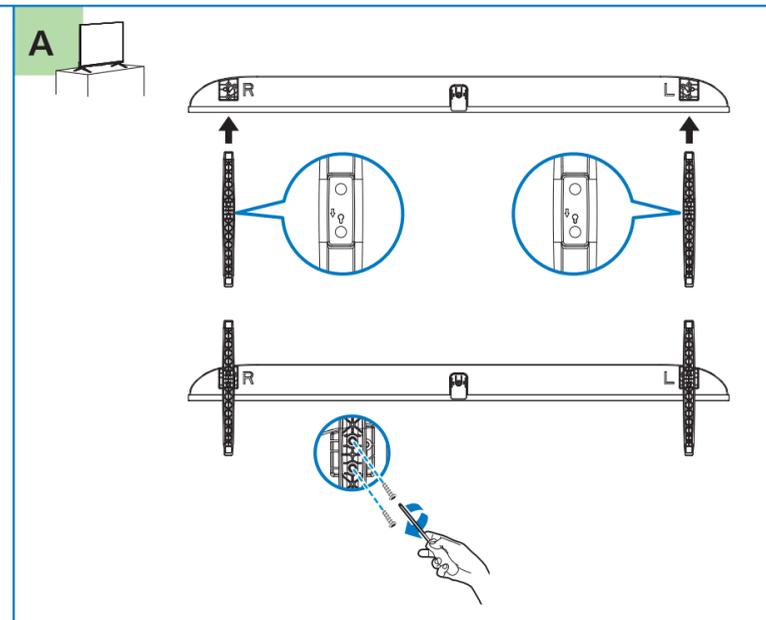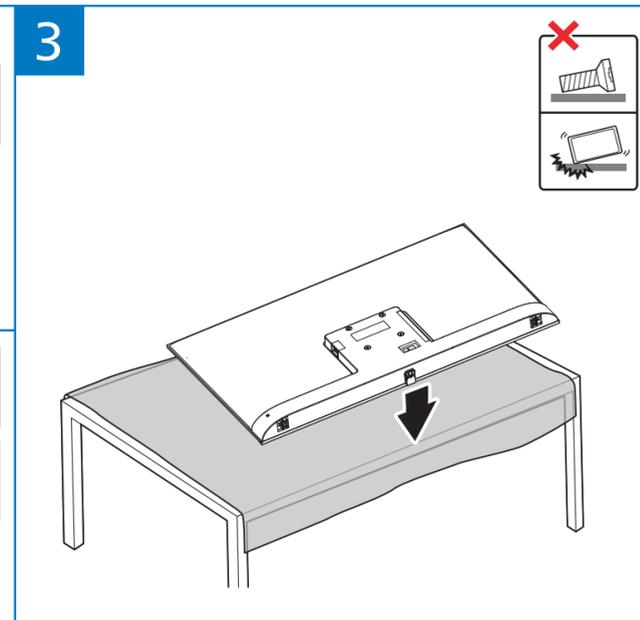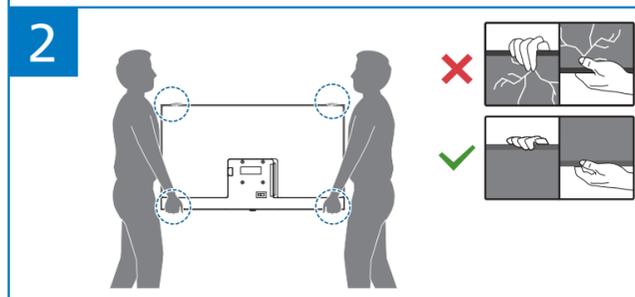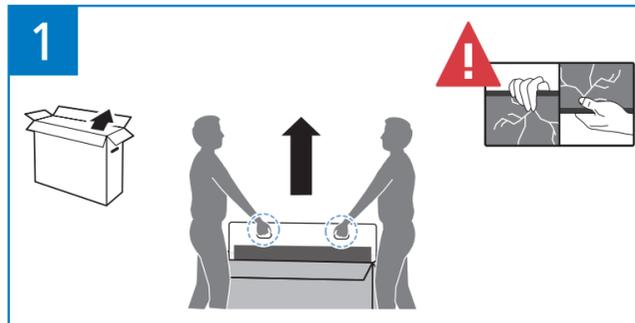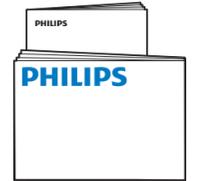

B

Diagonal (inch/cm)	X (mm)	Y (mm)	Screw Size	Screw Length (mm)
32" / 80	100	100	UP: M4 Down: ST4	10 10
40" / 100	100	100	UP: M4 Down: ST4	10 10
43" / 108	100	100	UP: M4 Down: ST4	10 10

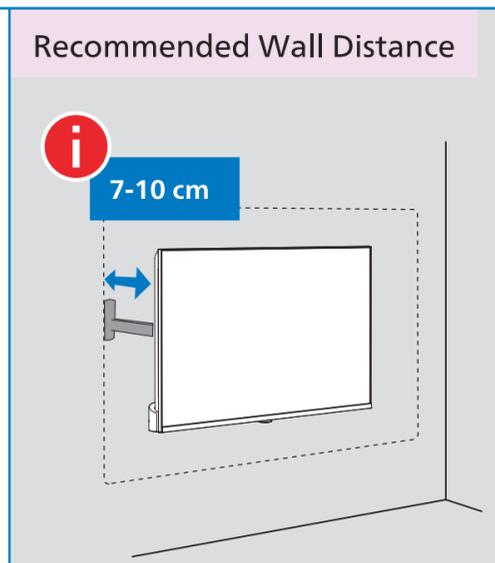

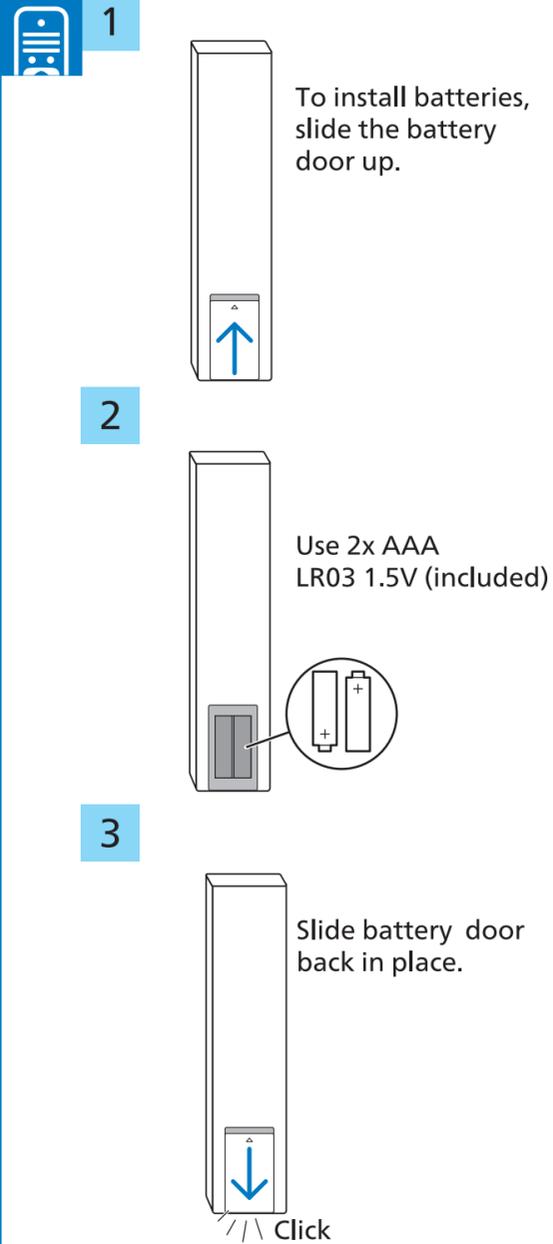




i

English Read the safety instructions.
Bahasa Malaysia Baca arahan Keselamatan.
Bahasa Indonesia Baca petunjuk keselamatan.

Deutsch Lesen Sie die Sicherheitshinweise.
Français Lisez les consignes de sécurité.
Português Leia as instruções de segurança.

ภาษาไทย โปรดอ่านคำแนะนำด้านความปลอดภัย
العربية قراءة تعليمات السلامة.

Tiếng Việt Hãy đọc chỉ dẫn an toàn.
简体中文 请阅读安全说明。

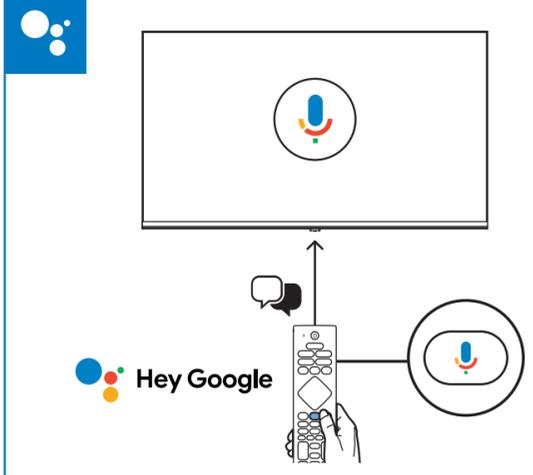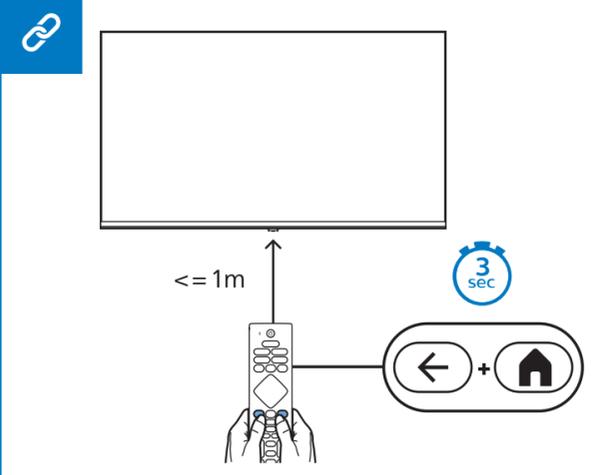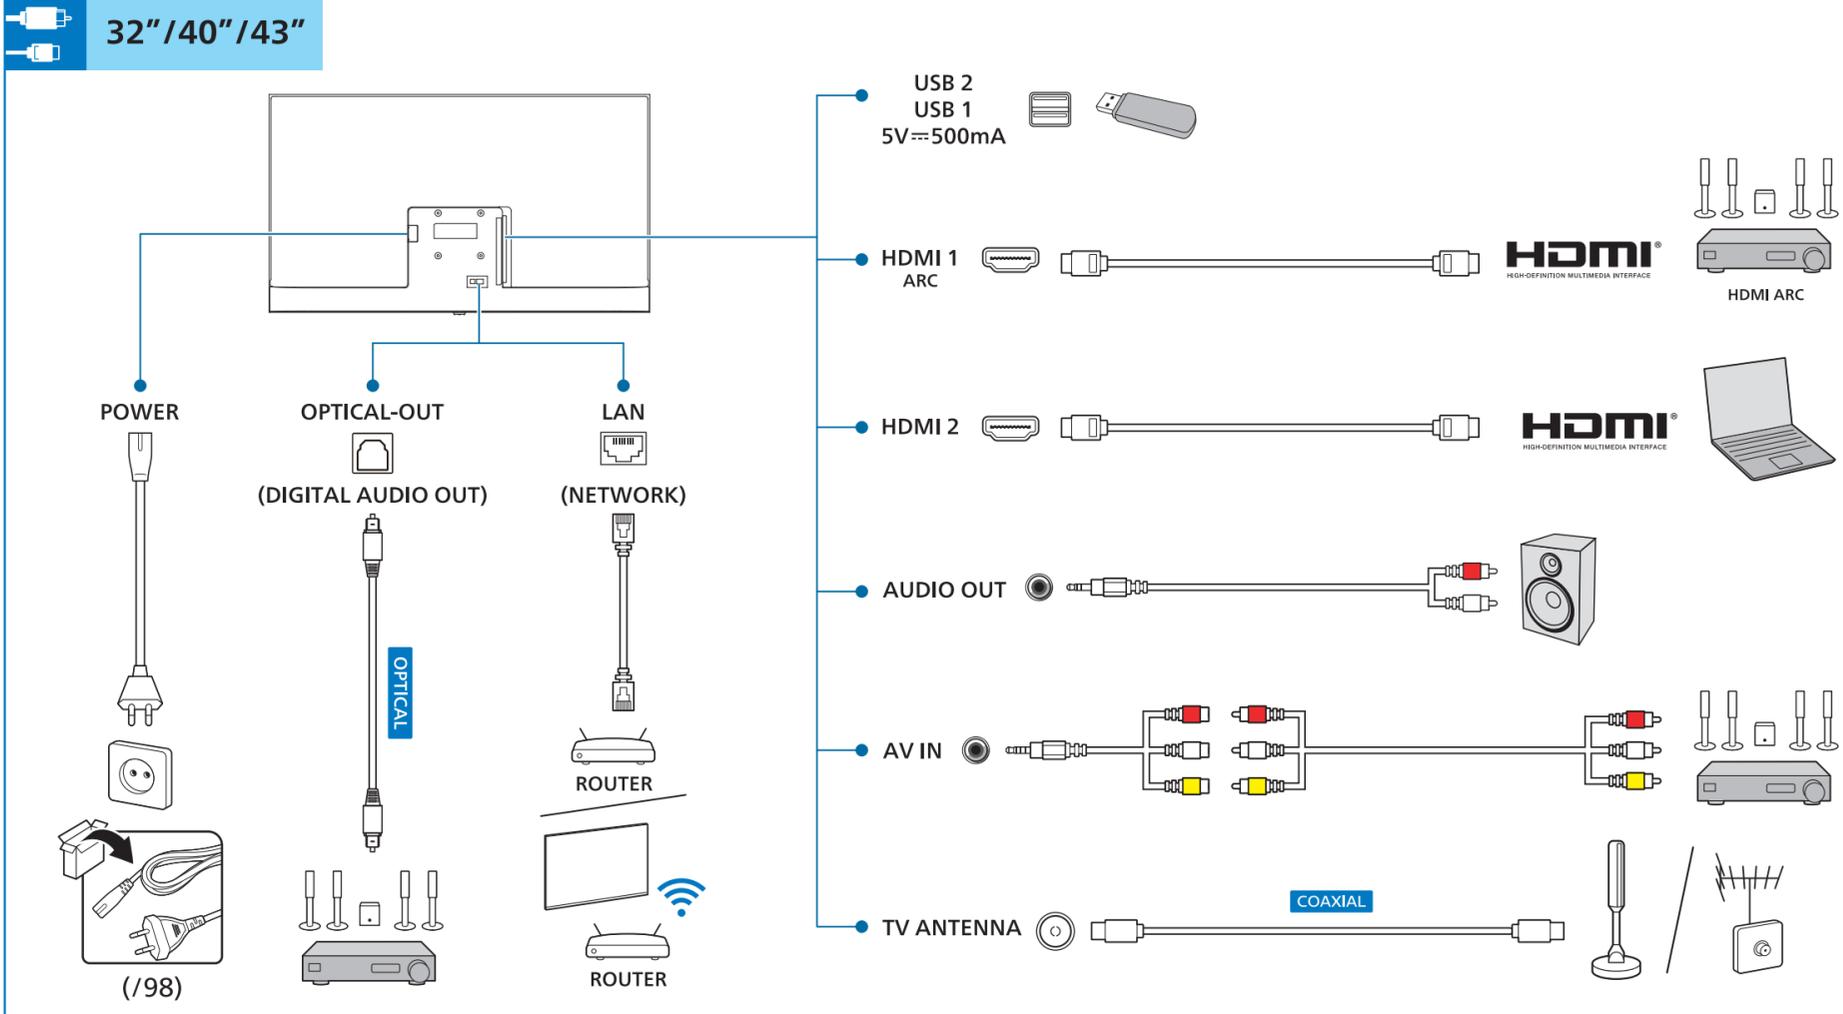

PHILIPS

All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of TP Vision Europe B.V., and TP Vision Europe B.V. is the warrantor in relation to this product. 2026 © TP Vision Europe B.V. All rights reserved. www.philips.com/welcome