


## 廚下式淨水器停用場景和處理指引

### 情況一：如果產品超過2天以上（不超過7天）不使用

1. 請關閉三通球閥

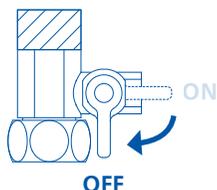


2. 通過即熱龍頭旋鈕選擇常溫並按壓出水

3. 觀察到水量明顯變小至停止出水時，請斷開機器電源。

#### 恢復使用步驟：

再次使用前，請先打開三通球閥，並連接電源，此時產品將執行自動沖洗，沖洗完成後，產品自動啟動製水，首次製水不建議飲用，請選擇常溫水出水並排空水箱，此後進行的第二次製水，方可正常使用；

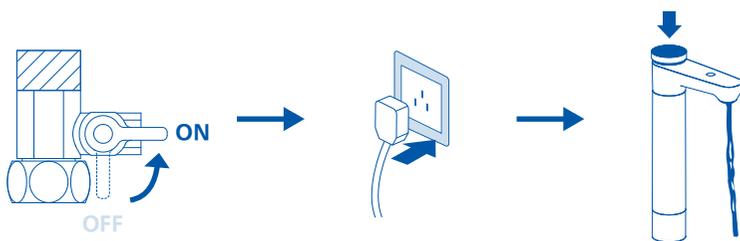

### 情況二：如果產品超過7天以上不使用

首先，請參照上述情況一的步驟1-3進行操作；

而後，取出濾芯並用保鮮膜包好，存放於冰箱保鮮層內（切勿存放於急凍層）。


#### 恢復使用步驟：

再次使用前，請先取出濾芯並移除保鮮膜，按照正確步驟重新安裝濾芯，此後步驟參考情況一恢復使用步驟即可。

## Philips Under-sink Water Purifier: Temporary Non-use Guidelines

### Scenario 1: If the product is not in use for more than 2 days but no longer than 7 days


1. Close the three-way ball valve.

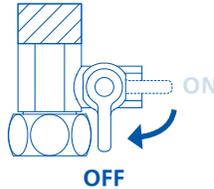

2. Select the ambient temperature setting on the faucet and press to dispense water.
3. Disconnect the power supply of the unit once the water flow visibly diminishes and eventually stops.

#### Before using the product again:

Reopen the three-way ball valve and reconnect the power supply. The unit will then perform an automatic flushing cycle. Upon completion of flushing, the unit will automatically start water filtration. Do not use the water produced from the first filtration cycle. Select the ambient temperature setting, dispense water and fully drain the water tank. The water produced from the second filtration cycle onwards is safe for normal use.

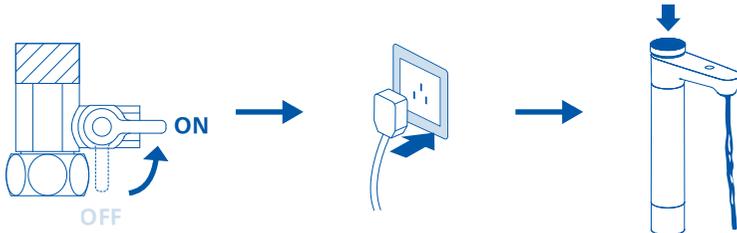

### Scenario 2: If the product is not in use for more than 7 days

First, follow Steps 1–3 as outlined in Scenario 1. Then, remove the filter cartridge, wrap it tightly with cling wrap, and store it in the refrigerator crisper drawer (do not place it in the freezer compartment).

#### Before using the product again:

Take out the filter cartridge and remove the cling wrap. Reinstall the filter cartridge following the correct procedure. Afterwards, follow the Reuse Steps outlined in Scenario 1.