

# PHILIPS

## Soundbar

8000 Series

TAB8750



# User manual

Register your product and get support at  
[www.philips.com/support](http://www.philips.com/support)

# Contents

---

<b>1</b>	<b>Important safety instructions</b>	<b>3</b>	<b>5</b>	<b>Product specifications</b>	<b>19</b>
	Safety	3			
	Care for your product	4			
	Care of the environment	4			
	Declaration of conformity	5			
	Help and support	5			
<hr/>					
<b>2</b>	<b>Your Soundbar</b>	<b>5</b>	<b>6</b>	<b>Troubleshooting</b>	<b>21</b>
	What's in the box	5			
	Soundbar	6			
	Connectors	6			
	Wireless subwoofer	7			
	Wireless surround speakers	7			
	Remote control	8			
	Prepare the Remote Control	9			
	Placement	10			
	Wall mount	10			
<hr/>					
<b>3</b>	<b>Connect</b>	<b>12</b>	<b>7</b>	<b>Trademarks</b>	<b>22</b>
	Dolby Atmos®	12			
	Connect to HDMI socket	12			
	Connect to Optical socket	13			
	Connect to AUX socket	13			
	Connect to power	14			
	Pair up with the subwoofer and Wireless surround speakers	14			
<hr/>					
<b>4</b>	<b>Use your soundbar</b>	<b>15</b>			
	Turn on and off	15			
	Select modes	16			
	Adjust the volume	16			
	Bluetooth® Operation	17			
	Listen to an external device	18			
	Play audio through USB	18			

# 1 Important safety instructions

Read and understand all instructions before you use your product. If damage is caused by failure to follow instructions, the warranty does not apply.

## Safety

### Know these safety symbols

The marking information is located at the bottom or back of product.



This is CLASS II apparatus with double insulation, and no protective earth provided.



AC voltage



Please refer for further information to the user manual. Use only power supplies listed in the user instructions.



**WARNING!**

Warning: Risk of electric shock!



The exclamation mark is intended to alert the user to the presence of important operating instructions.



USB Data porte.



The symbol indicates energy efficiency marking.



The symbol indicates polarity of d.c. power connector.



For indoor use only.

### Risk of electric shock or fire!

- Before you make or change any connections, make sure that all devices are disconnected from the power outlet.
- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilled on or into the product, disconnect it from the power outlet immediately. Contact Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Battery (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.
- Use the product in tropical and/or moderate climates.

### Risk of short circuit or fire!

- For identification and supply ratings, see the type plate at the back or bottom of the product.
- Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

## Risk of injury or damage to this product!

- For wall mounting, this product must be securely attached to the wall in accordance with the installation instructions. Use only the supplied wall mount bracket (if available). Improper wall mounting may result in accident, injury or damage. If you have any query, contact Consumer Care in your country.
- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.
- Parts of this product can be made of glass. Handle with care to avoid injury and damage.

## Risk of overheating!

- Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.

## Battery usage CAUTION

- CAUTION: Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be recycled or disposed of as per state and local guidelines.
- Install all batteries correctly, + and - as marked on the apparatus.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (Carbon-Zinc) or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.

- The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Don't disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a Battery.
- To avoid battery subjected to extremely low air pressure.

## Note

- The rating label is pasted on the bottom or back of the equipment.

## Care for your product

Use only microfiber cloth to clean the product.

## Care of the environment

### Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.



This symbol means that the product contains batteries covered by European Regulation (EU) 2023/1542 which cannot be disposed of with normal household waste.

Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.

### Removing the disposable batteries

To remove the disposable batteries, see battery installation section.

## Declaration of conformity

This product complies with the radio interference requirements of the European community.

Hereby, TP Vision Europe B.V. declares that the product is in compliance with the essential requirements and other relevant provisions of RED Directive 2014/53/EU and UK Radio Equipment Regulations SI 2017 No 1206. You can find the Declaration of Conformity on [www.philips.com/support](http://www.philips.com/support).

## Help and support

For extensive online support, visit [www.philips.com/support](http://www.philips.com/support) to:

- download the user manual and the quick start guide
- watch video tutorials (available only for selected models)
- find answers to frequently answered questions (FAQs)
- email us a question
- chat with our support representative.

Follow the instructions on the website to select your language, and then enter your product model number.

Alternatively, you can contact Consumer Care in your country. Before you contact, note down the model number and serial number of your product. You can find this information on the back or bottom of your product.


## 2 Your Soundbar

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your soundbar at [www.philips.com/support](http://www.philips.com/support).

### What's in the box

Check and identify the items in the package:


- Soundbar x 1
- Wireless subwoofer x 1
- Wireless surround speakers x 2
- Remote control (AAA batteries x 2) x 1
- Wall mount template x 1
- Wall mount kit x 2
- HDMI cable x 1
- Power cables x 2
- Adapters x 2
- Quick start guide/  
Warranty card / Safety sheet x 1

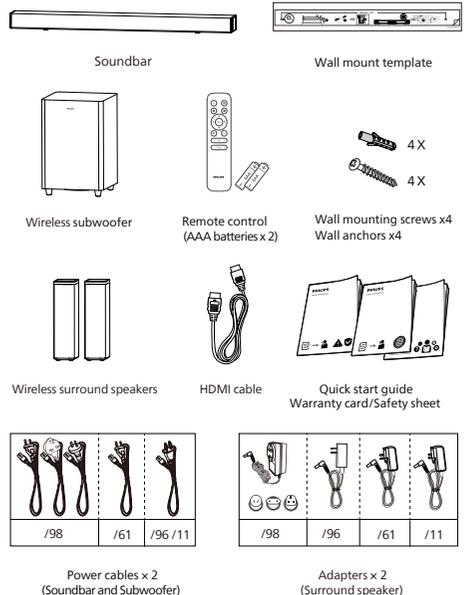

- Power cord quantity and plug type vary by regions.
- Images, illustrations and drawings shown on this User Manual are for reference only, actual product may vary in appearance.
- The included power cable is intended for use only with this product and should not be used with other products.

## Soundbar

This section includes an overview of the soundbar.

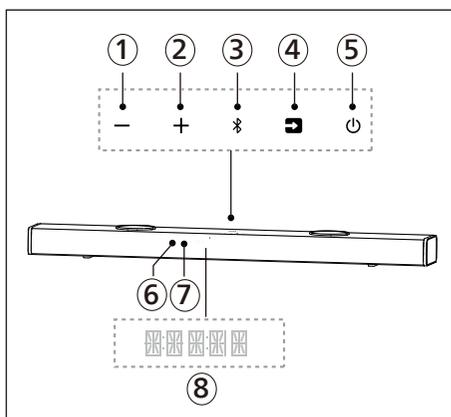


- ① - **(Volume) button**  
Decrease the volume.
- ② + **(Volume) button**  
Increase the volume.
- ③ **Bluetooth button**
  - Press to select the Bluetooth mode.
  - Long press for 3 seconds to enter the Bluetooth pairing mode.
  - Long press for 8 seconds to disconnect all devices and clear the BT connect history list, then enter pairing mode.

- ④ **Source button**  
Select an input source for the soundbar.
- ⑤ **Standby-On**
  - Switch the soundbar On or to Standby.
- ⑥ Remote Control Sensor
- ⑦ Power LED
- ⑧ Display panel

## Connectors

This section includes an overview of the connectors available on your soundbar.

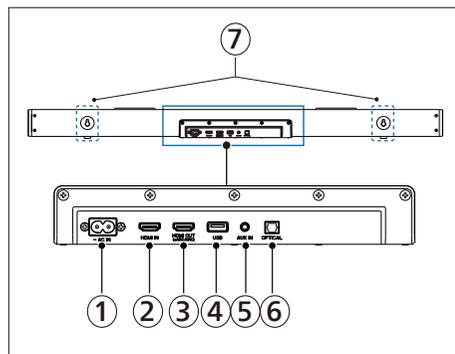


- ① **AC~ Socket**  
Connect to the power supply.
- ② **HDMI IN**  
Connect to an HDMI source device, such as a DVD player, Blu-ray Disc™ player, or gaming console.
- ③ **HDMI OUT (eARC/ARC)**  
Connect to the HDMI input on the TV.
- ④ **USB**
  - Audio input from a USB storage device.
  - Upgrade software of this product.

- ⑤ **AUX IN**  
Audio input from, for example, an MP3 player (3.5mm jack).
- ⑥ **OPTICAL**  
Connect to an optical audio output on the TV or a digital device.
- ⑦ **Wall bracket slot**

## Wireless subwoofer

This section includes an overview of the wireless subwoofer.

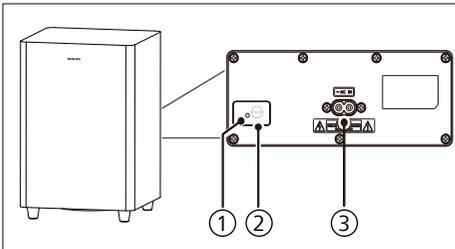


- ① **Subwoofer indicator**  
Determine the status based on the wireless subwoofer indicator.

LED State	Status
Fast blink	Enter pairing state
Constant on	Paired
Slowly blink	Unpaired state
Very slow blink	Standby state

- ② **Pair button**  
Press and hold to enter the pairing mode for the subwoofer, which is used for manual pairing only. (Don't press **Pair** button as bar and subwoofer would be paired automatically after the unit is switched **ON**)
- ③ **AC in ~ socket**  
Connect to the power supply.

## Wireless surround speakers

This section includes an overview of the wireless surround speakers.

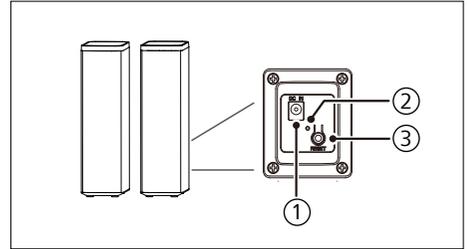


- ① **DC in**  
Connect to the adapter.
- ② **Surround speakers indicator**  
Determine the status based on the wireless surround speakers indicator.

LED State	Status
Fast blink	Enter pairing state
Constant on	Paired
Slowly blink	Unpaired state
Very slow blink	Standby state

- ③ **Pairing method**  
Press and hold the reset button for 3 seconds to enter the pairing mode for the surround speakers. This mode is only used for manual pairing operations. (Don't press **Reset** button as bar and surround speakers would be paired automatically after the unit is switched **ON**)

## Remote control

This section includes an overview of the remote control.

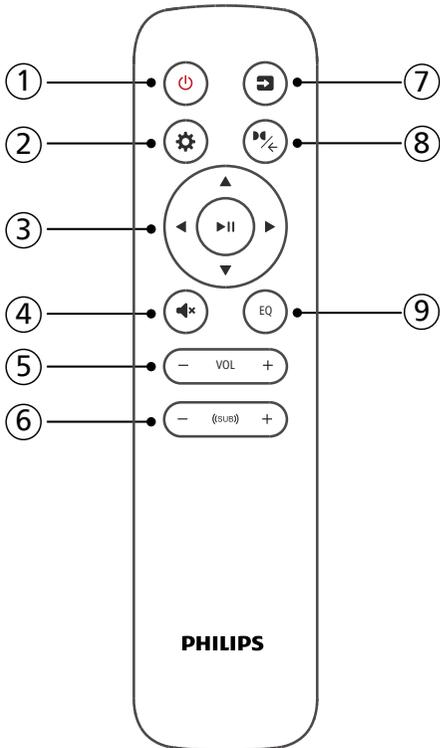

① **⏻** (Standby-On) button  
Switch the soundbar On or to standby.

② **⚙️** (Menu)  
Enter setup menu.

③ **⏮ / ⏭** (Previous / Next)

- Skip to the previous or next track in USB/ BT mode.
- Navigate Left/Right in menu structure.

**▶||** (Play / Pause)

- Start, pause or resume play in USB/BT mode.
- Confirm a selection.

**▲ / ▼** (Up/Down)  
Navigate up/down in menu structure.

④ **🔇**  
Mute or restore volume.

⑤ **VOL +/-** (System's Volume)  
Increase / decrease the system's volume.

⑥ **((SUB)) +/-** (Subwoofer's Volume)  
Increase / decrease the subwoofer's volume.

⑦ **📺** (Source)

- Select an input source for the soundbar.
- Press and hold for 3 seconds to activate the pairing function in Bluetooth mode.
- In Bluetooth mode, Long press for 8 seconds to disconnect all devices and clear the BT connect history list, then enter pairing mode.

⑧ **🔊** (Channel switching/Back)  
In non-menu mode, a short press on the Dolby button can switch between 3.1 channel and 7.1.4 channel. The details are as follows:

- When the detected signal is in formats such as PCM/MP3, a short press on the Dolby button can switch between 3.1 channel and 7.1.4 channel.
- When the detected signal is in formats such as DD ATMOS/DD+/ DD HD/MPCM, a short press on the Dolby button cannot switch.
  - ↳ When the switch cannot be made, the message "DOES NOT ALLOW SWITCH" will scroll.
- Return to previous menu. Exit menu.

⑨ **EQ** (Mode)  
Select from the four EQ modes: Entertainment/Music/Dialogue /Original.

---

## Prepare the Remote Control


- The provided Remote Control allows the unit to be operated from a distance.
- Even if the Remote Control is operated within the effective range 19.7 feet (6m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the Remote Control is operated near other products which generate infrared rays, or if other remote control devices using infra-red rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.

---

### Replace the remote control battery

Slide to remove the battery compartment cover, insert 2 AAA batteries (1.5V) with correct polarity, then slide the battery compartment cover back into position.

- Make sure the (+) and (-) ends of the batteries match the (+) and (-) ends indicated in the battery compartment.

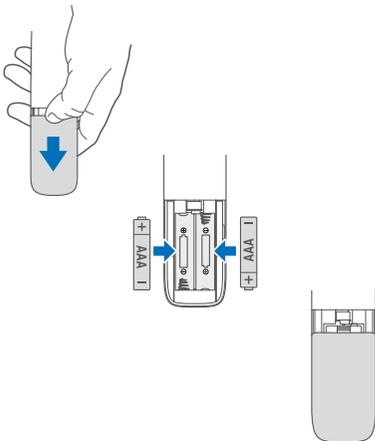

---


### Precautions concerning batteries

- Be sure to insert the batteries with correct positive “ $\oplus$ ” and negative “ $\ominus$ ” polarities.
- Use batteries of the same type. Never use different types of batteries together.
- Either rechargeable or non-rechargeable batteries can be used. Refer to the precautions on their labels.
- Be aware of your fingernails when removing the battery cover and the battery.
- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.
- Do not use any batteries other than those specified
- Do not mix new batteries with old ones.
- Never recharge a battery unless it is confirmed to be a rechargeable type.

## Placement

Place the subwoofer at least 1 meter (3 feet) away from your soundbar, and 10 centimeters away from the wall.

For best results, place your subwoofer as shown below.

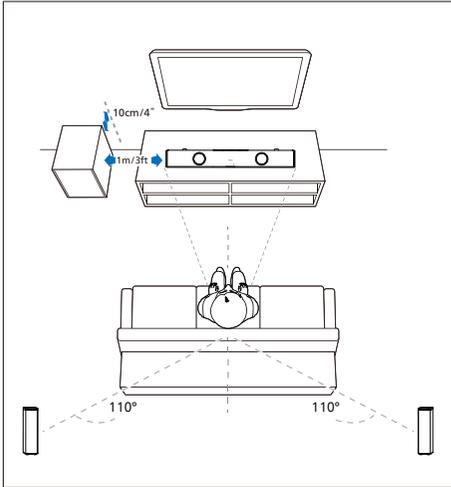


## Wall mount

### Note

- Improper wall mounting may result in accident, injury or damage. If you have any query, contact Consumer Care in your country.
- Before wall mounting, make sure the wall can support the weight of your soundbar.
- Before wall mounting, you need not remove the rubber feet at the bottom of the soundbar, otherwise the rubber feet cannot be fixed back.
- Depending on the type of wall mounting, make sure that you use screws of a suitable length and diameter.
- Please check whether the USB port on the back of the soundbar is connected to a USB device. If it is found that the connected USB device affects the wall-mount, you need to use another USB device of the appropriate size.

### Screw length/diameter of Soundbar

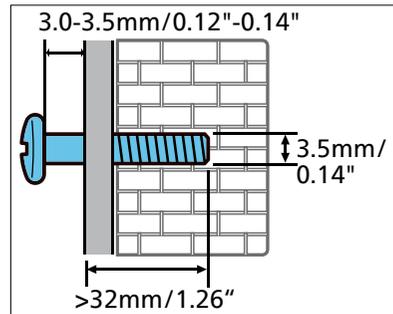


### Suggested wall mounting height

You are recommended to install the TV first before wall mounting the soundbar. With a TV preinstalled, wall mount the soundbar 50mm/2.0" in distance from the bottom of the TV.


### WARNING !

- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- Suggested wall mounting height:  $\leq 1.5$  meters.

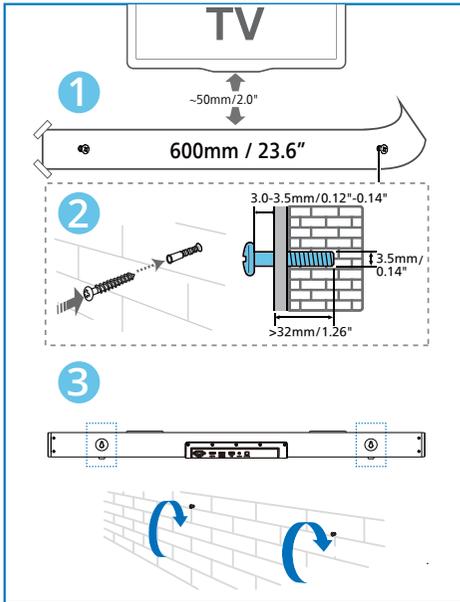


- 1 Drill 2 parallel holes (diameter 3-8mm each ) on the wall.
  - ↳ The distance between the holes are: **600mm**.
  - ↳ You can refer to the size for helping the drilling holes position on the wall.
- 2 Secure the dowels and screws in the holes.
  - ↳ Be sure to leave a **3.0-3.5mm** gap between the wall and the screw's head.
- 3 Hang the soundbar on the fastening screws.

## Screw length/diameter of Surround R/L

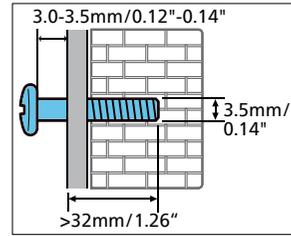

## Suggested wall mounting angle of Surround R/L

The suggested angle of the Surround left and right speakers from your sitting position is 110 degrees (see below).

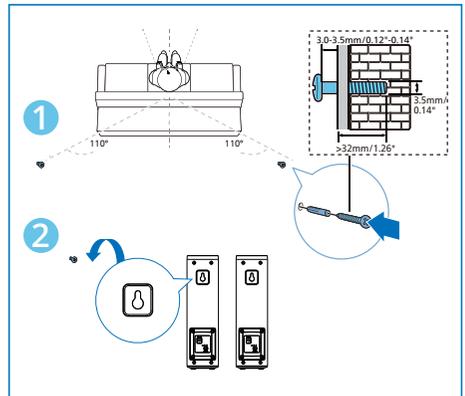

- 1 Drill 2 parallel holes (Ø 3-8mm each according to wall type) on the wall.
  - ↳ Secure the dowels and screws in the holes.
- 2 Hang the Surround R/L on the fastening screws.

# 3 Connect

This section helps you connect your soundbar to a TV and other devices, and then set it up.

For information about the basic connections of your Soundbar and accessories, see the quick start guide.

## Note

- For identification and supply ratings, see the type plate at the back or bottom of the product.
- Before you make or change any connections, make sure that all devices are disconnected from the power outlet.

## Dolby Atmos®

Dolby Atmos gives you immersive listening experience by delivering sound in three dimensional space, and all the richness, clarity, and power of Dolby sound.

For more information, please visit [dolby.com/technologies/dolby-atmos](http://dolby.com/technologies/dolby-atmos)

For using Dolby Atmos®

Dolby Atmos® is available only in HDMI ARC/eARC mode. For the details of the connection, please refer to "HDMI Connection".

- 1 To use Dolby Atmos® in HDMI / HDMI ARC mode, your TV has to support Dolby Atmos®.
- 2 Make sure that "No Encoding" is selected for bitstream in the digital audio output of the connected external device (e.g. Blu-ray DVD player, TV etc.).
- 3 While entering Dolby Atmos / Dolby Digital format, the soundbar will show DOLBY ATMOS / DOLBY AUDIO / DOLBY SURROUND.

## Note


- The full Dolby Atmos experience is only available when the Soundbar is connected to the source via a HDMI 2.0 cable.
- The Soundbar will still function when connected via other methods (such as a Digital Optical cable) but these are unable to support all of the Dolby features. Given this, our recommendation is to connect via HDMI, in order to ensure full Dolby support.

## Connect to HDMI socket

Some 4K HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR display, please refer to the instruction manual of your TV.

### Option 1: HDMI eARC (Enhance Audio Return Channel)

Your soundbar supports HDMI with eARC/ARC (Enhance Audio Return Channel). If your TV is HDMI eARC/ARC compliant, you can hear the TV audio through your soundbar by using a single HDMI cable.

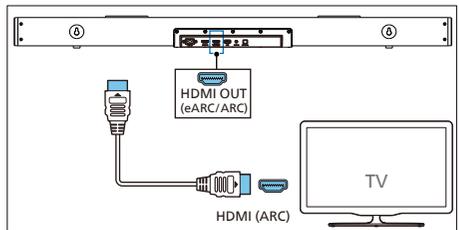

- 1 On your TV, turn on HDMI-CEC operations. For details, see the TV user manual.
  - The HDMI ARC connector on the TV might be labeled differently. For details, see the TV user manual.


- Using a High Speed HDMI cable, connect the HDMI eARC connector on your soundbar to the HDMI eARC connector on the TV.

### Note

- Your TV must support the HDMI-CEC and ARC function. HDMI-CEC and ARC must be set to On.
- The setting method of HDMI-CEC and ARC may differ depending on the TV. For details about ARC function, please refer to your TV owner's manual.
- Make sure to use the HDMI cables can support the ARC function.

## Option 2: Standard HDMI


If your TV is not HDMI ARC-compliant, connect your soundbar to the TV through a standard HDMI connection.

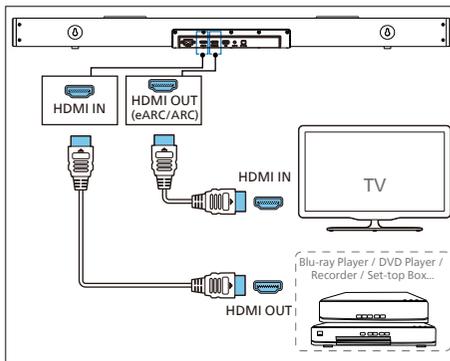

- Use an HDMI cable to connect the soundbar's HDMI IN socket to your external devices (e.g. games consoles, DVD players and blu-ray).
- Use an HDMI cable to connect the soundbar's HDMI OUT (eARC/ARC) socket to the TV's HDMI IN socket.

## Connect to Optical socket

- Using an optical cable, connect the **Optical in** connector on your soundbar to the **Optical out** connector on the TV or other device.

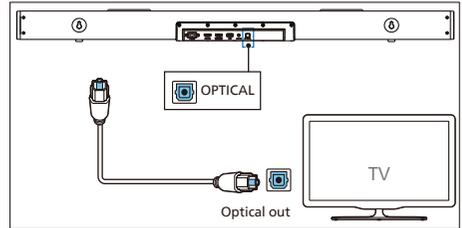


- The digital optical connector might be labeled **Spdif in** or **Spdif out**.

## Connect to AUX socket


### Use 3.5mm audio cable

- Use a 3.5mm to 3.5mm audio cable to connect the TV's headphone socket to the **Audio in** socket on the soundbar.

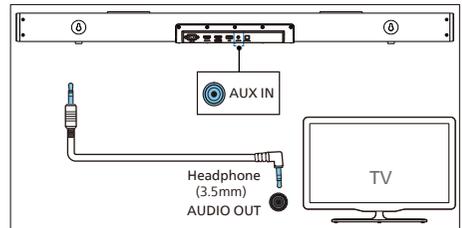


### Use 3.5mm-RCA audio cable

- Use a RCA to 3.5mm audio cable to connect the TV's audio output sockets to the **Audio in** socket on the soundbar.

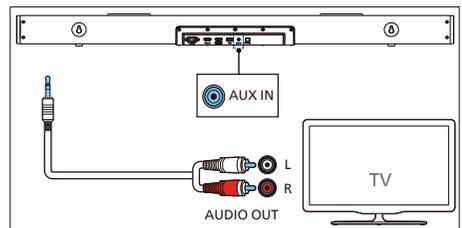

## Connect to power

- Before connecting the AC power cord, ensure you have completed all other connections.
- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.

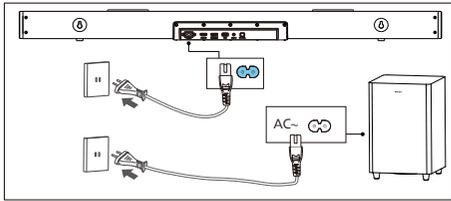

### Note

- Power cord quantity and plug type vary by regions.
- The included power cable is intended for use only with this product and should not be used with other products.

 
## Pair up with the subwoofer and Wireless surround speakers

### Tips

- The subwoofer and wireless surround speakers should be placed in an open area within 6 meters from the soundbar.

### Automatic pairing

Insert the soundbar, subwoofer and wireless surround speakers into the main power socket, then press the device or remote control to switch the device to the on mode. The subwoofer and wireless surround speakers will automatically pair with the soundbar.



- ↳ Determine the status based on the indicator of the wireless subwoofer and the wireless surround speakers.

LED State	Status
Fast blink	Enter pairing state
Constant on	Paired
Slowly blink	Unpaired state
Very slow blink	Standby state

### Tips

- Do not press **Pair** button on the rear of the subwoofer, except for manual pairing.

### Manual pairing for Subwoofer

If no audio from the wireless subwoofer can be heard, manually pair up the subwoofer.

- 1 Unplug both the subwoofer and soundbar from the mains sockets again, then plug them in again after 3 minutes.
- 2 Press and hold the **Pair** button on the rear of the subwoofer for 3 seconds.
  - ↳ The indicator on the subwoofer will rapidly blink.
- 3 Then press **⏻** on the soundbar or remote control to switch the soundbar **ON**.
  - ↳ The indicator on the subwoofer will become solid when successful.

- 4 If the indicator still keeps blinking, repeat step 1-3.

#### Tips

- The subwoofer should be within 6 meters of the soundbar in an open area (the closer the better).
- Remove any objects between the subwoofer and the soundbar.
- If the wireless connection fails again, check if there is a conflict or strong interference (e. g. interference from an electronic device) around the location. Remove these conflicts or strong interferences and repeat the above procedures.

### Manual pairing for surround speakers

#### Tips

- Do not press **Reset** button on the rear of the surround speakers, except for manual pairing.

If no audio from the wireless surround speakers can be heard, manually pair up the surround speakers.

- 1 Unplug both the surround speakers and soundbar from the mains sockets again, then plug them in again after 3 minutes.
- 2 Press and hold the **Reset** button on the rear of the surround speakers for 3 seconds.
  - ↳ The indicator on the surround speakers will rapidly blink.
- 3 Then press  on the soundbar or remote control to switch the soundbar **ON**.
  - ↳ The indicator on the surround speakers will become solid when successful.

## 4 Use your soundbar

This section helps you use the soundbar to play audio from connected devices.

### Before you start

- Make the necessary connections described in the quick start guide and the user manual.
- Switch the soundbar to the correct source for other devices.

---

### Turn ON and OFF

- When you first connect the unit to the main socket, the unit will be in **STANDBY** mode. The [Standby] indicator will light up.
- Press the  button on the remote control or on the main unit to switch the main unit **ON** or **OFF**.
- Disconnect the main plug from the main socket if you want to switch the unit off completely.

---

### Auto standby

The unit automatically turns to Standby mode after about 15 minutes if the TV or the external unit is disconnected (or USB and BT playback pause), switched off.

- To switch the unit off completely, remove the mains plug from the mains socket.
- Please turn the unit off completely to save energy when not in use

---

## Select modes

Press the **☐** (Source) button repeatedly on the soundbar or on the remote control to select the **eARC/ARC, OPT, AUX, USB, BT, HDMI** mode.

- ↳ The selected mode will show on the display.

---

## Adjust the volume

### Adjust the System's Volume

- Press **Vol+/-** (Volume) to increase or decrease a volume level.
- To mute sound, press **🔇** (Mute).
- To restore the sound, press **🔇** (Mute) again or press **Vol+/Vol-** (Volume).

### Adjust the Subwoofer's Volume

- Press **((SUB) +/-** (subwoofer) to increase or decrease the subwoofer's volume level.

### Adjust the Rear Surround's volume

- Press the Menu to select the **SURR** then increase or decrease the Rear Surround's volume level.

---

## Setup Menu

The unit allows you to configure advanced settings to provide you with an even better experience.

- 1 Press the **⚙️** (MENU) button on the remote control to open the menu.
- 2 Select the content with **◀ / ▶** (Left / Right) on the remote controller.
- 3 Press the **▶||** play button icon to enter the selected mode.
- 4 Change the initial values for each of the settings with the cursors **▲ / ▼** (Down / Up).

- 5 To return to the previous screen/ exit the settings, press **⏪** (Channel switching/Back). If no button is pressed within 5 seconds, the system will automatically exit the menu.

---

## SURR (Surround speakers)

Adjust the volume level for Lrs and Rrs at the same time.

- ↳ **SUR -5 ~ SUR +5**
- ↳ By default, the surround speakers are set to 0.

---

## BASS

Adjust the Bass Level.

- ↳ **BAS -5 ~ BAS +5**
- ↳ By default, the Bass is set to 0.

---

## TREBLE

Adjust Treble Level.

- ↳ **TRE -5 ~ TRE +5**
- ↳ By default, the Treble is set to 0.

---

## AURST (Audio Reset)

- ↳ **YES / NO**
- ↳ By default, the AURST is set to NO.

---

## DOLBY

### 1 S DEC (Surround Decoder)

- The Surround Decoder upmixes the signal to the relevant Dolby Audio Processing configuration.
  - ↳ **ON/OFF**
  - ↳ By default, the S DEC is set to OFF.

## 2 VIRTU (Speaker Virtualizer)

- The Speaker Virtualizer feature utilizes a combination of head-related transfer functions (HRTFs) and crosstalk cancellation to simulate the arrival of sound coming from the speaker locations of a more immersive speaker layout. When the Speaker Virtualizer is disabled, the Implementation applies artistic mixes and disables Dolby Atmos processing.

↳ ON/OFF

↳ By default, the VIRTU is set to ON.

## 3 CENSP (Center spreading)

- Center spreading is a process applied by the Surround Decoder. If a Center channel is requested in the output speaker layout and the input signal is stereo, the Surround Decoder spreads the Center channel content among the left, right, and center speakers. This process is known as center spreading. Center spreading expands the Center channel signal to the left and right front speakers to create a wider frontal audio image for the listener. The process is optimized and designed primarily for playback of stereo music content. If you enable center spreading, please enable Surround Decoder too.

↳ ON/OFF

↳ By default, the CENSP is set to OFF.

---

## SETIN

### 1 APD (Auto Power Down)

- In the selected source for at least 15 min of idle when no user operation.

↳ ON/OFF

↳ By default, the APD is set to ON.

### 2 DIMER

Set display brightness.

↳ HIGH / MED / LOW

↳ By default, the dimmer is set to MED.

### 3 DISPY (Display auto off function)

- Set to turn off the display automatically after 10 seconds of idle when no user operation.

↳ ON: Set display auto off function on.

↳ OFF: Set display auto off function off.

↳ By default, the display is set to ON.

---

## SYSTEM

### 1 VER (VERSION)

- Software version query.

↳ ▲ / ▼ review.

### 2 RESET

- Reset device to default setting

↳ YES/NO

---

## Bluetooth® Operation

Through Bluetooth, connect the soundbar with your Bluetooth device (such as an iPad, iPhone, iPod touch, Android phone, or laptop), and then you can listen to the audio files stored on the device through your soundbar speakers.

- 1 Press the  button on the soundbar or the remote control to select the  (Bluetooth) mode.

↳ NO BT is displayed on the display panel.

- 2 On the Bluetooth device, switch on Bluetooth, search for and select **Philips TAB8750** to start connection (see the user manual of the Bluetooth device on how to enable Bluetooth).

↳ NO BT is displayed on the display panel.

- 3 Wait until you hear voice prompt from the soundbar.

↳ If the successfully connected, BT is displayed on the display panel.

- 4 Select and play audio files or music on your Bluetooth device.
  - During play, if a call is coming, music play is paused. Play resumes when the call ends.
  - If your Bluetooth device supports AVRCP profile, on the remote control you can press ◀ / ▶ to skip to a track, or press ▶|| to pause/resume play.

### To exit Bluetooth, you can:

- Switch the unit to another source.
- Disable the function from your Bluetooth device. Or place your Bluetooth device out of the maximum operational range. The Bluetooth device will be disconnected from the unit after the voice prompt.
- If you want to connect your soundbar with another Bluetooth device, Press and hold the ✕ button on the soundbar, or Press and hold the ⏻ button for 3 seconds on the remote control disconnect the currently connected Bluetooth device.

### Note

- In an open space without obstructions. The maximum operational range between the soundbar and a Bluetooth device is approximately 10 meters (30 feet).
- Compatibility with all Bluetooth devices is not guaranteed.
- The music streaming may be interrupted by obstacles between the device and soundbar, such as wall, metallic casing that covers the device, or other devices nearby that operate in the same frequency.

## Listen to an external device

Ensure that the soundbar is connected to the TV or audio device.

- 1 Press the  (Source) button repeatedly on the soundbar or on the remote control to select the **HDMI eARC/ARC, HDMI, OPT** mode.
  - ↳ The display on the soundbar will show which mode is currently in use.
- 2 Operate your audio device directly for playback features.
- 3 Press the +/- (Volume) buttons to adjust the volume to your desired level.


### Note

- While in Optical/HDMI ARC mode, if there's no sound output from the unit, you may need to activate PCM or Dolby Digital Signal output on your source device (e.g. TV, DVD or Blu-ray player).

## Play audio through USB

Enjoy audio on a USB storage device, such as an MP3 player and USB flash memory, etc.

- 1 Insert the USB device.

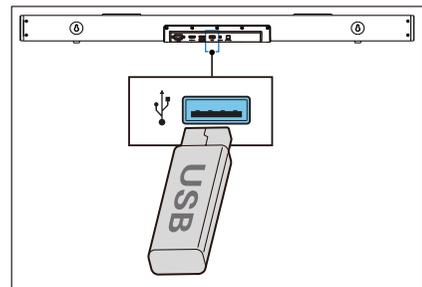

- Press the **Source** button repeatedly on the soundbar or on the remote control to select the USB mode.
- During playback:

Button	Action
<b>▶  </b>	Start, pause or resume play
<b>◀</b>	Skip to the previous track
<b>▶</b>	Skip to the next track

### Note

- This product may not be compatible with certain types of USB storage devices.
- If you use a USB extension cable, USB hub, or USB multifunctional card reader, the USB storage device may not be recognized.
- Do not remove the USB storage device while reading files.
- The system can support USB devices with up to 128 GB of memory.
- This system can play MP3/WAV/FLAC.
- Support a USB port: 5V --- 500mA.
- Only support FAT file system.

## 5 Product specifications

### Note

- Specifications and design are subject to change without notice.

### Bluetooth / Wireless

Bluetooth profiles	A2DP, AVRCP
Bluetooth version	V 5.4
Bluetooth frequency range / Transmitter power (EIRP)	2402 ~ 2480MHz < 10dBm

### Amplifier Section

Total	RMS 485W @THD <=10% Max. 970W
-------	----------------------------------

### Soundbar

Input:	100-240V~ 50/60Hz
Power consumption	45 W
Standby consumption	< 0.50 W
Frequency response	180Hz - 20kHz
Speakers impedance	4Ω × 7
USB direct version	2.0 Full Speed
USB	5V --- 500mA
Dimension (WxHxD)	980 x 66 x 130mm
Weight	3.45 kg
Operating temperature	0°C - 40°C

## Subwoofer

Power supply	100-240V~ 50/60 Hz
Power consumption	30 W
Standby consumption	< 2 W
Frequency response	35Hz - 180Hz
Impedance	3 Ω
Dimensions (W x H x D)	238 x 350 x 238 mm
Weight	4.2 kg
Operating temperature	0°C - 40°C

## Surround speakers (L&R)

Adapter	20V == 1.5A, 30W
Standby consumption	< 2 W
Frequency response	180Hz - 20kHz
Speakers impedance	4Ω x 4
Dimensions (W x H x D)	66 x 233 x 130mm
Weight	0.8 kg x 2
Operating temperature	0°C - 40°C

## Remote control

Distance/Angle	6m/30°
Battery type	AAA (1.5V X 2)

## Supported audio formats

HDMI eARC	LPCM 2ch, LPCM 5.1ch, LPCM 7.1.4ch, Dolby Digital, Dolby Digital plus, Dolby True HD, Dolby MAT, Dolby Atmos - Dolby Digital Plus, Dolby Atmos - TrueHD, Dolby Atmos - Dolby MAT
HDMI ARC	LPCM 2ch, LPCM 5.1ch, Dolby Digital, Dolby Digital plus, Dolby Atmos - Dolby Digital Plus
HDMI IN	LPCM 2ch, LPCM 5.1ch, LPCM 7.1.4ch, Dolby Digital, Dolby Digital plus, Dolby True HD, Dolby MAT, Dolby Atmos - Dolby Digital Plus, Dolby Atmos - TrueHD, Dolby Atmos - Dolby MAT
Optical	LPCM 2ch, LPCM 5.1ch, Dolby Digital
Bluetooth	SBC
USB	MP3 / WAV / FLAC

# 6 Troubleshooting

## Warning

- Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.

If you have problems using this product, check the following points before you request service. If you still have a problem, get support at [www.philips.com/support](http://www.philips.com/support).

---

## Main unit

### The buttons on the main unit do not work.

- Disconnect from the power supply for a few minutes, then connect again.

### No power

- Ensure that the AC cord is properly connected.
- Ensure that there is power at the AC outlet.
- Press  button on the remote control or soundbar to turn the soundbar on.

---

## Sound

### No sound from the soundbar speaker.

- Connect the audio cable from your soundbar to your TV or other devices. However, you do not need a separate audio connection when:
  - the soundbar and TV are connected through HDMI ARC connection, or
  - a device is connected to the HDMI in connector on your soundbar.
- On the remote control, select the correct audio input.

- Make sure that the soundbar is not muted.

### Distorted sound or echo.

- If you play audio from TV through this product, make sure that the TV is muted.

### No sound from the wireless subwoofer.

- Manually connect the subwoofer to the main unit.
- Increase the volume. Press + (Volume Up) on the remote control or on the soundbar.
- When using either of the digital input, if there is no audio:
  - Try setting the TV output to PCM or
  - Connect directly to your Blu-ray/ other sources.
  - Some TVs do not pass through digital audio.
- Your TV may be set to variable audio output. Confirm that the audio output setting is set to FIXED or STANDARD, not VARIABLE. Refer to your TV's user manual for more detailed information.
- If using Bluetooth, ensure that the volume on your source device is turned up and that the device is not muted.

---

## Bluetooth

### A device cannot connect with the soundbar.

- The device does not support the compatible profiles required for the soundbar.
- You have not enabled the Bluetooth function of the device. See the user manual of the device on how to enable the function.
- The device is not correctly connected. Connect the device correctly.

- The soundbar is already connected with another Bluetooth device. Disconnect the connected device, and then try again.

### **Quality of audio play from a connected Bluetooth device is poor.**

- The Bluetooth reception is poor. Move the device closer to the soundbar, or remove any obstacle between the device and the soundbar.

### **I can't find the Bluetooth name of this unit on my Bluetooth device.**

- Ensure the Bluetooth function is activated on your Bluetooth device.
- Re-pair the unit with your Bluetooth device.

---

### **Remote control does not work**

- Before you press any playback control button, first select the correct source.
- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities (+/-) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the unit.

---

### **The subwoofer is idle or the indicator of subwoofer does not light up**

- Unplug power cord from the mains socket, and plug it in again after 3 minutes to reset the subwoofer.

## 7 Trademarks



The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

### **Dolby Atmos**

Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012–2024 Dolby Laboratories. All rights reserved.

### **Bluetooth®**

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MMD Hong Kong Holding Limited is under license. Other trademarks and trade names are those of their respective owners.



Specifications are subject to change without notice.

Please visit [www.Philips.com/support](http://www.Philips.com/support) for the latest updates and documents.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.

