



# PHILIPS

## Wireless Speaker The Roller TAMS60




[www.philips.com/welcome](http://www.philips.com/welcome)



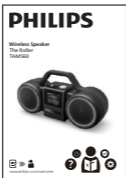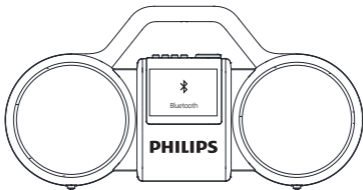







**Input: PD 5V/3A,9V/3A,12V/2.25A,15V/2A,20V/1.5A**


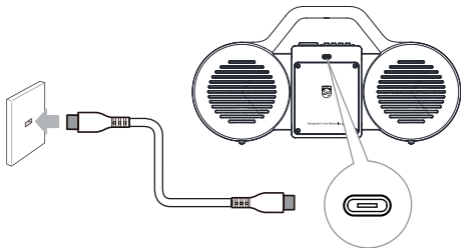


**Output: 5V=2A**


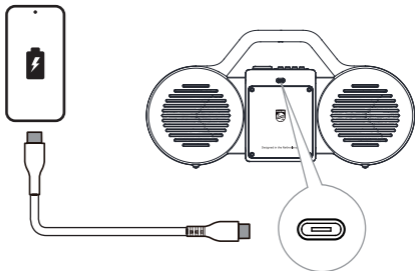


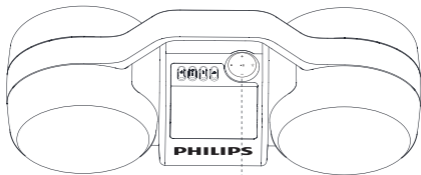 


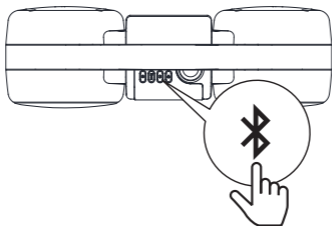

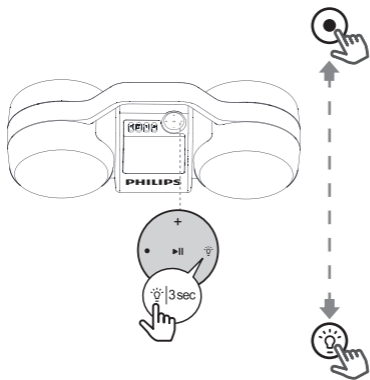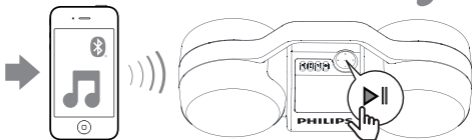


 - Cassette
- SpinDisc
- Amplifier
- Retro
- Pulse
- Vibe

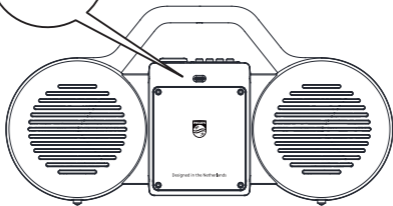

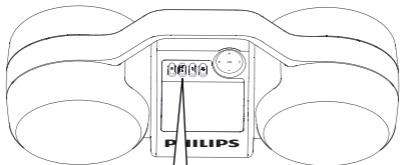


Off / On

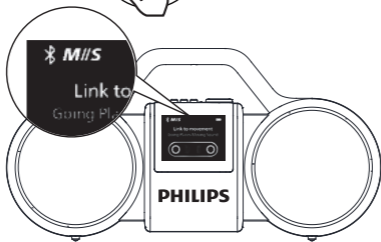

Bluetooth M/S  
Link to  
Going Play

M/S  
Link to movement  
Link to movement

PHILIPS

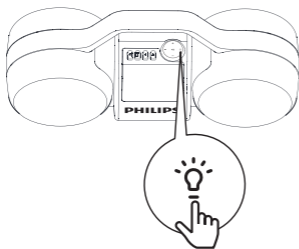

Neon Stage



Afterglow



Crowd Pulse



Arcade Glitch





Bassline




OFF



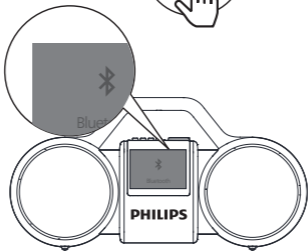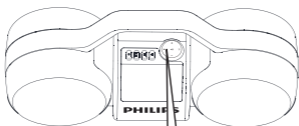

OFF



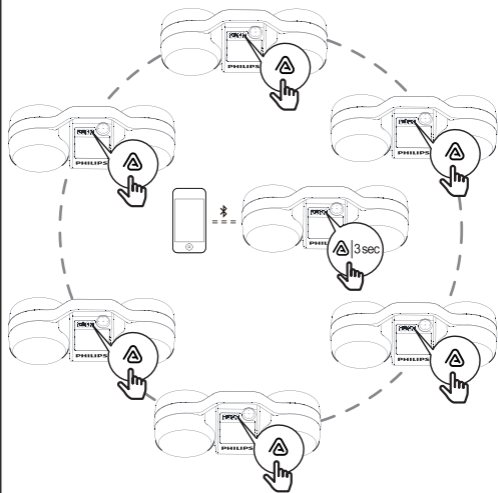



Philips Entertainment




Download on the  
App Store



GET IT ON  
Google Play



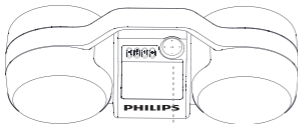



## Entertainment

The Roller



75%



### Sound Control



100




Display background

SpinDisc >



Moving sound



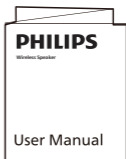

[www.philips.com/support](http://www.philips.com/support)





2026 © MMD Hong Kong Holding Limited. All rights reserved. Specifications are subject to change without notice.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.

