





Television
Quick Start Guide
6700 series

7314-320N15-60106821












The actual accessories may differ from the illustrations, which are for reference purposes only.



Tool needed for assembly

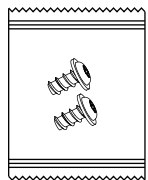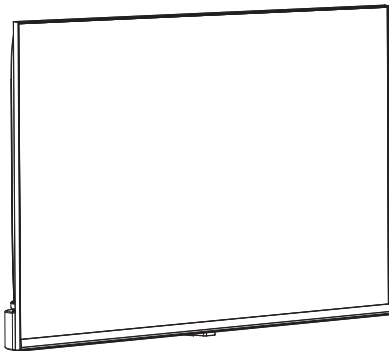


  Flat tail self-tapping screw
(2 pieces/bag)

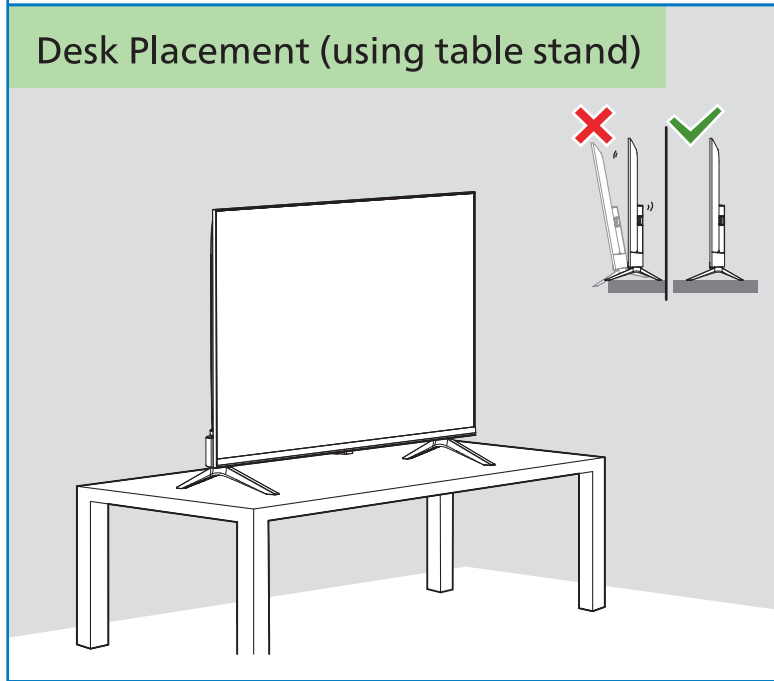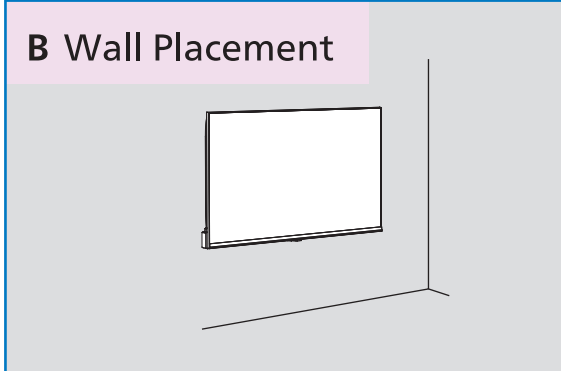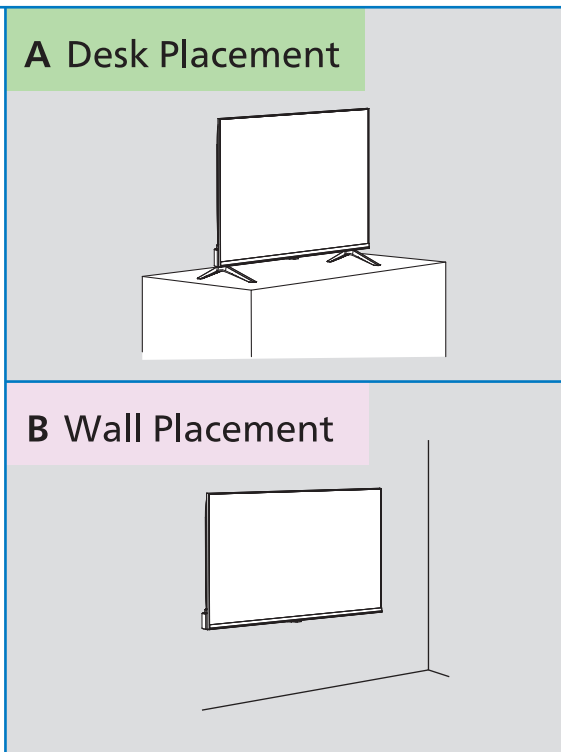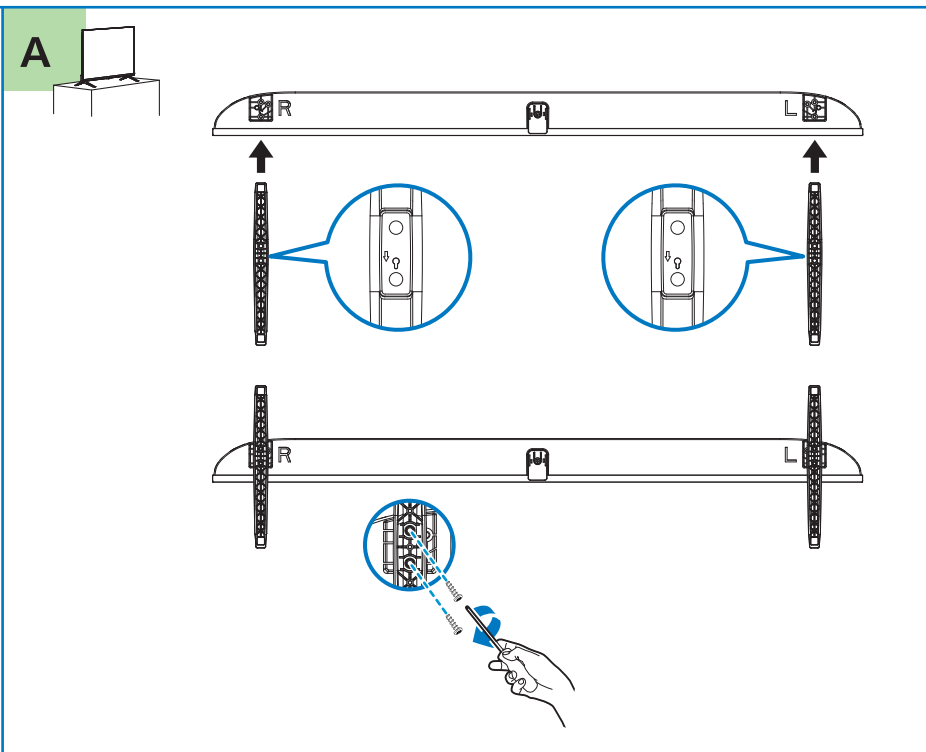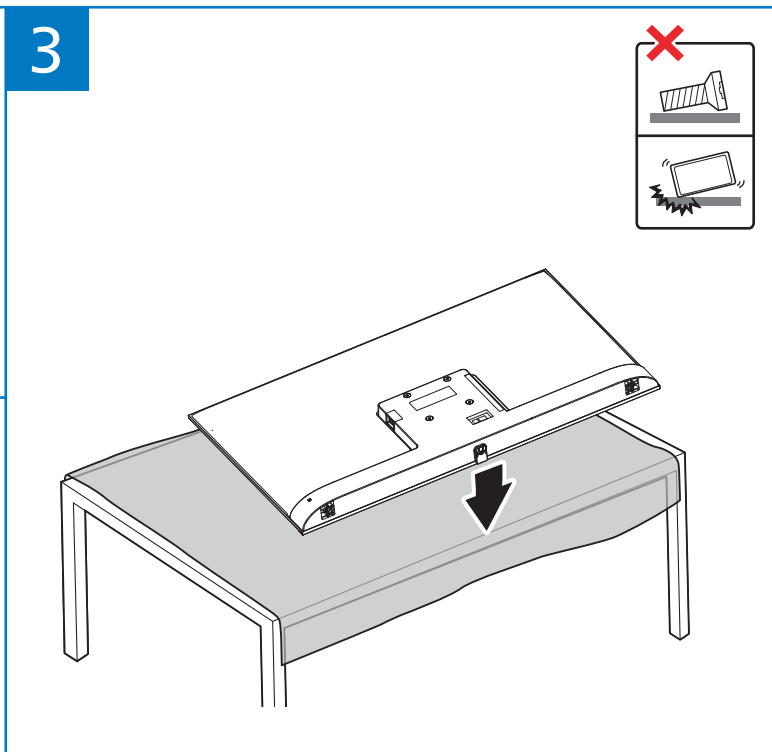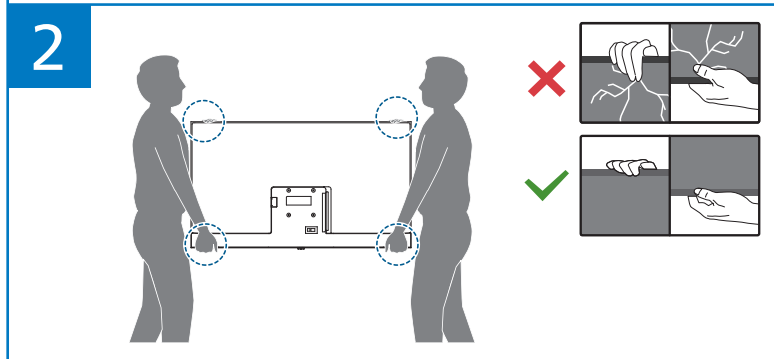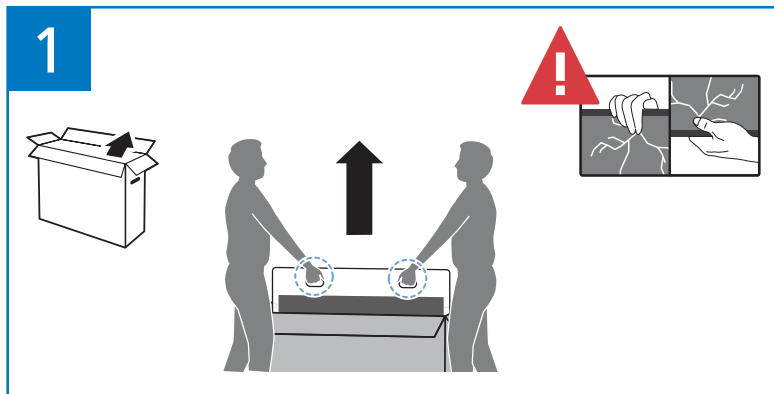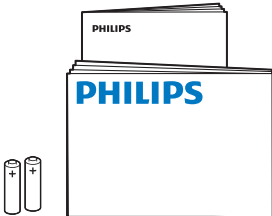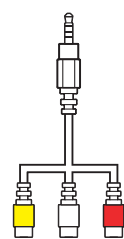

B

Diagonal (inch/cm)	X (mm)	Y (mm)	Screw Size	Screw Length (mm)
32" / 80	100	100	UP: M4 Down: ST4	10 10
40" / 100	100	100	UP: M4 Down: ST4	10 10
43" / 108	100	100	UP: M4 Down: ST4	10 10

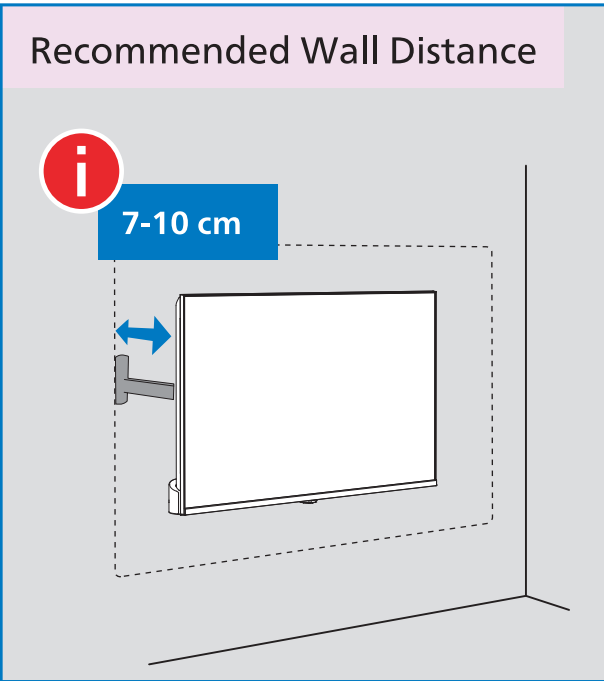

1

To install batteries, slide the battery door up.

2

Use 2x AAA LR03 1.5V (included)

3

Slide battery door back in place.

English

Read the safety instructions.

Deutsch

Lesen Sie die Sicherheitshinweise.

ภาษาไทย

โปรดอ่านคำแนะนำด้านความปลอดภัย

العربية

قراءة تعليمات السلامة.

Bahasa Malaysia

Baca arahan Keselamatan.

Français

Lisez les consignes de sécurité.

Tiếng Việt

Hãy đọc chỉ dẫn an toàn.

Bahasa Indonesia




Baca petunjuk keselamatan.

Português

Leia as instruções de segurança.

简体中文

请阅读安全说明。

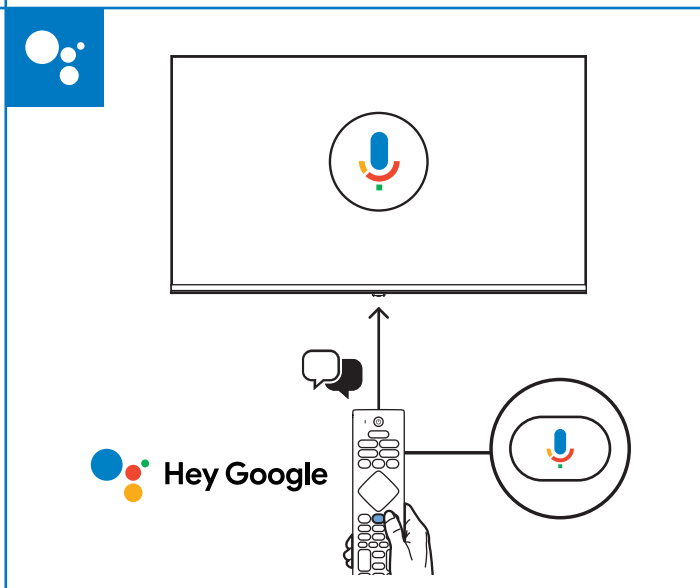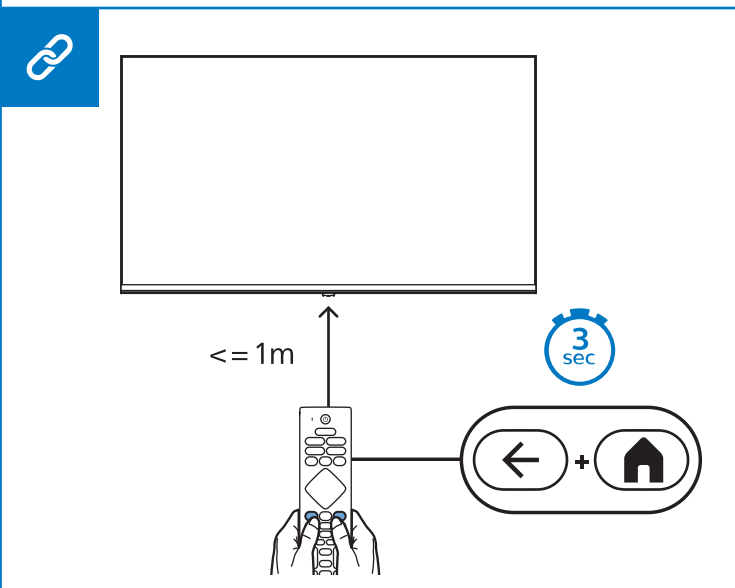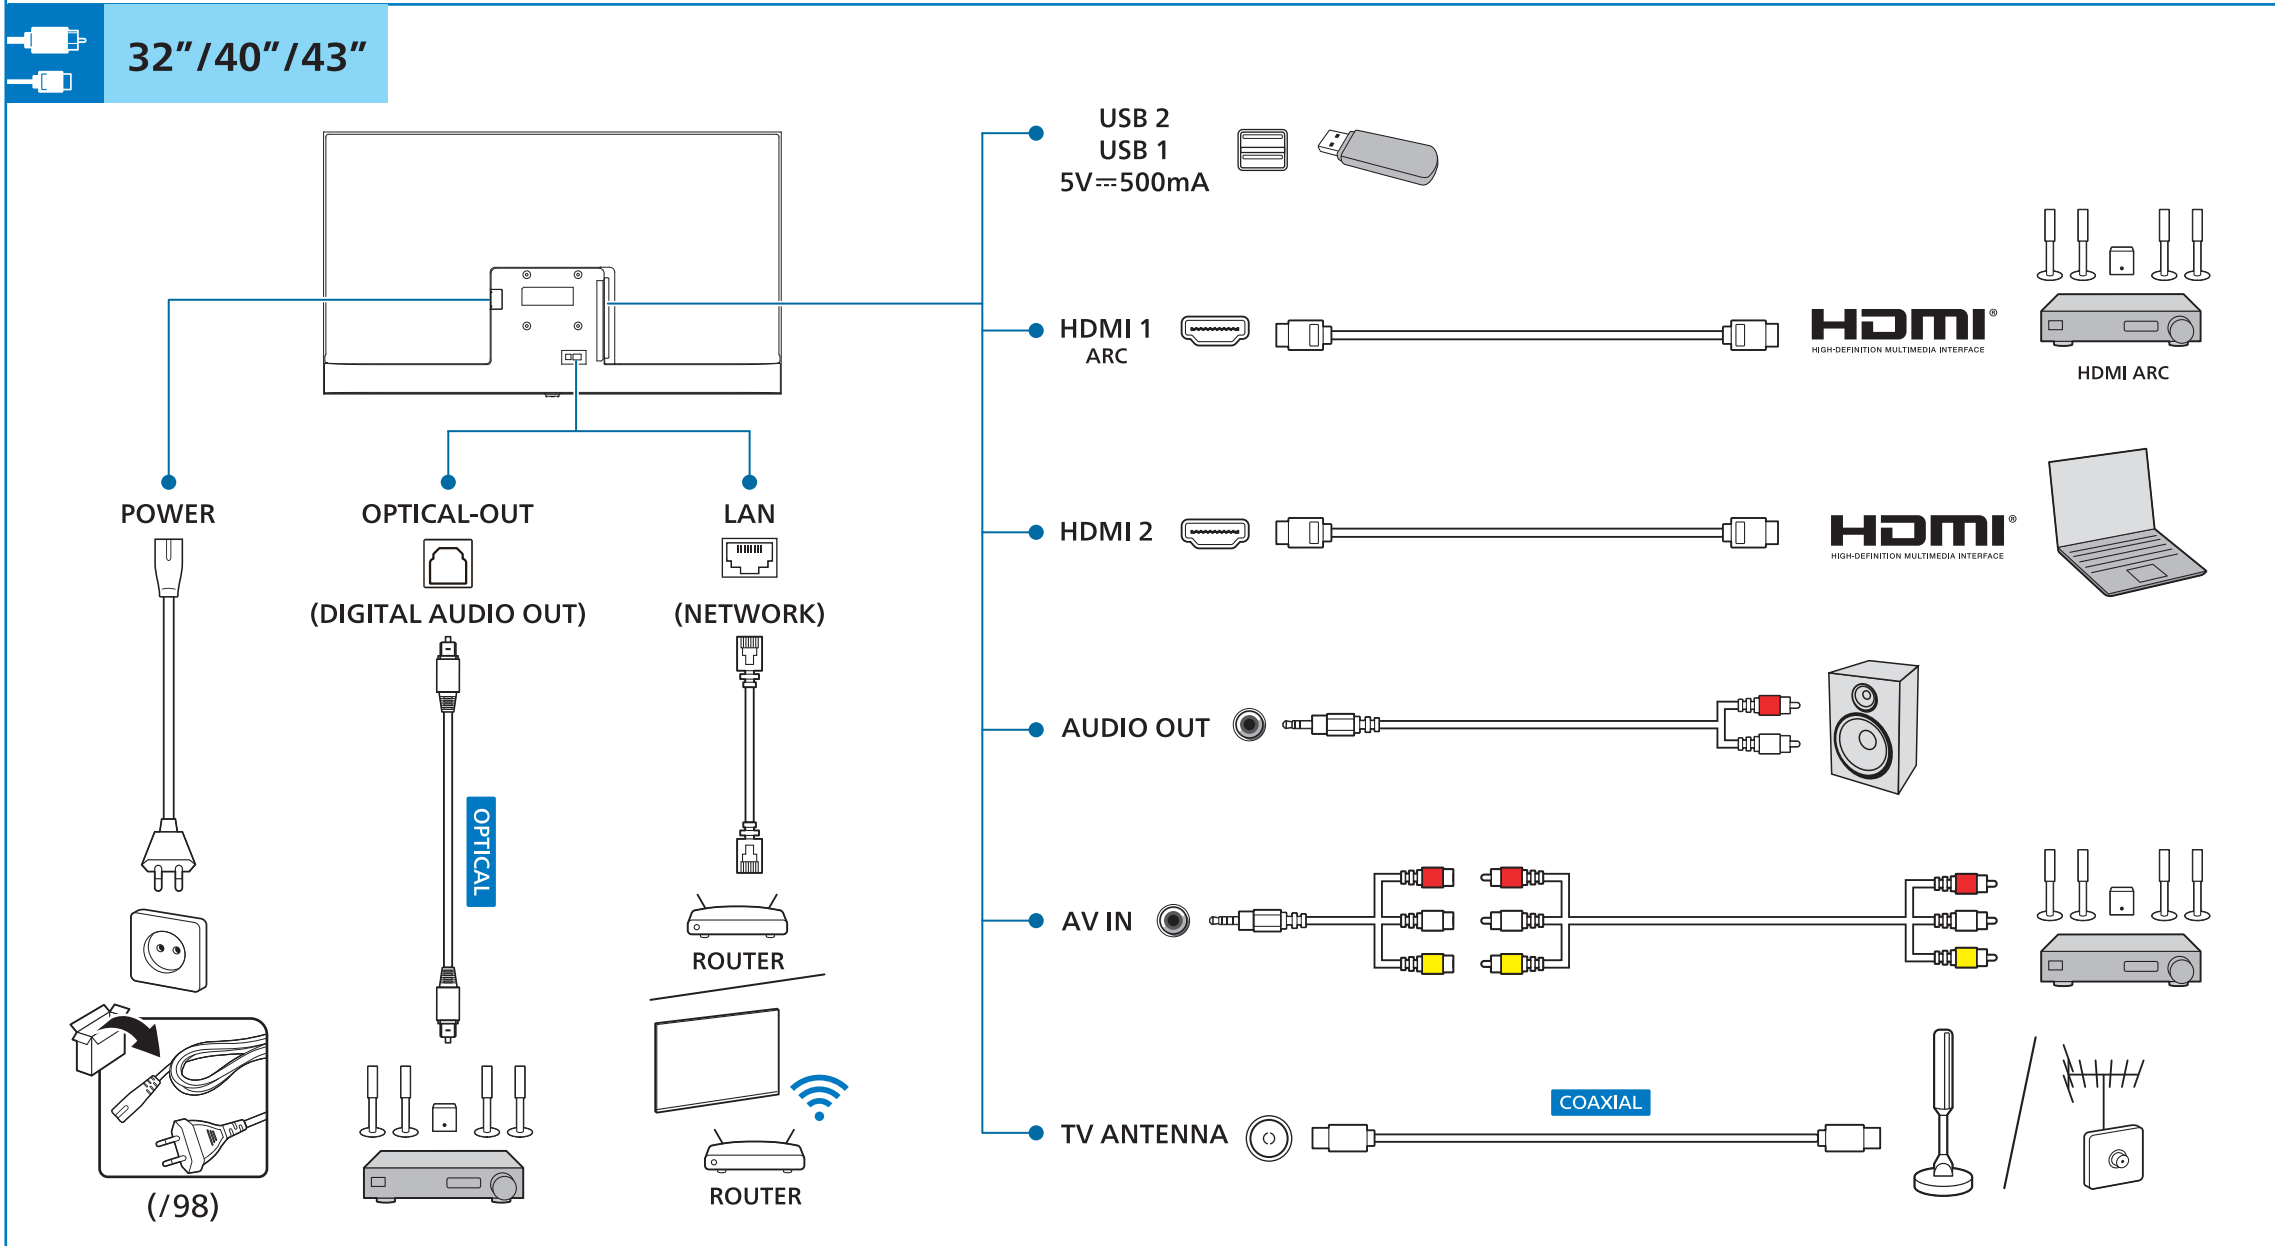

All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of TP Vision Europe B.V., and TP Vision Europe B.V. is the warrantor in relation to this product. 2026© TP Vision Europe B.V. All rights reserved. www.philips.com/welcome