





Contents

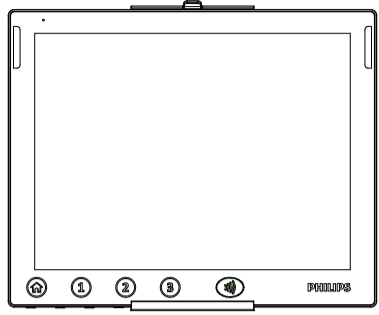

ePaper Display

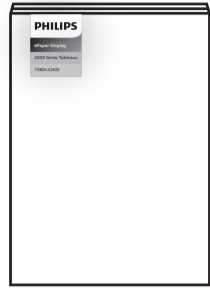


Quick Start Guide




USB C Cable

* Differences according to regions.
Display design and accessories may differ from those illustrated above.

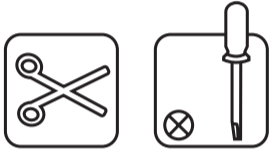


1

Wall Installation

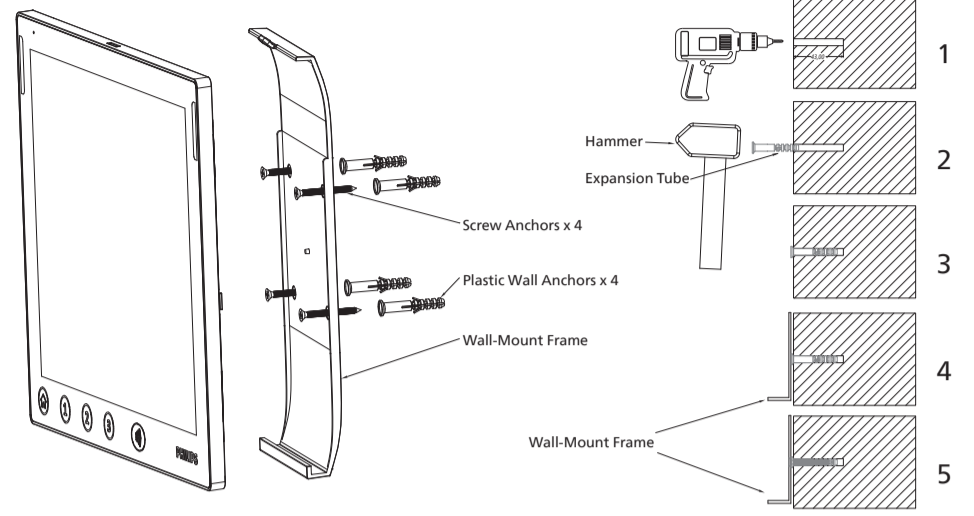

2


Control Panel

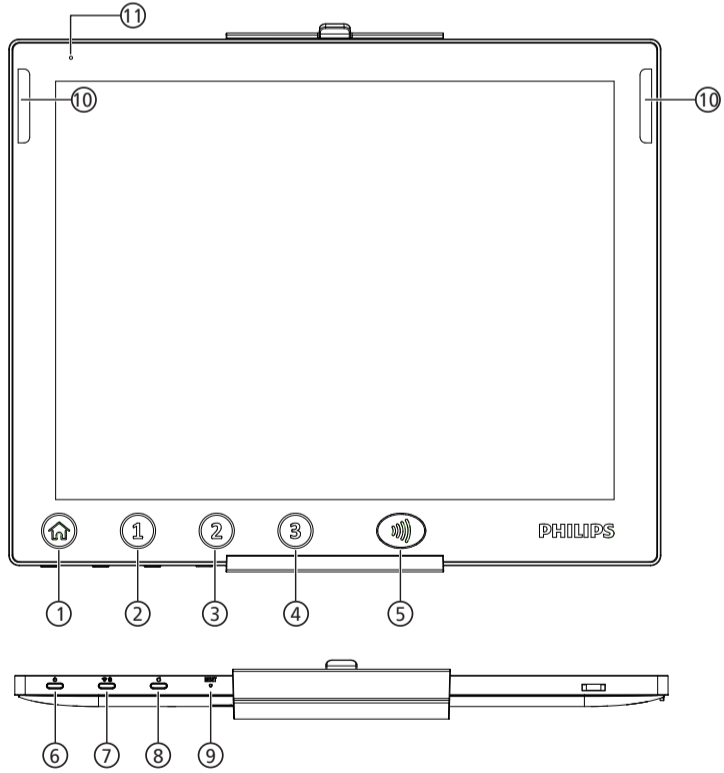

- ① User Key
- ② User Key
- ③ User Key
- ④ User Key
- ⑤ NFC (Near-field communication), Unlocked by card/function.
- ⑥ Power Switch: Activate or Standby
- ⑦ Wi-Fi/Bluetooth Switch
- ⑧ Message Update
- ⑨ Machine Reset
- ⑩ State Indicator
- ⑪ Power Indicator




3

Input/Output Terminals

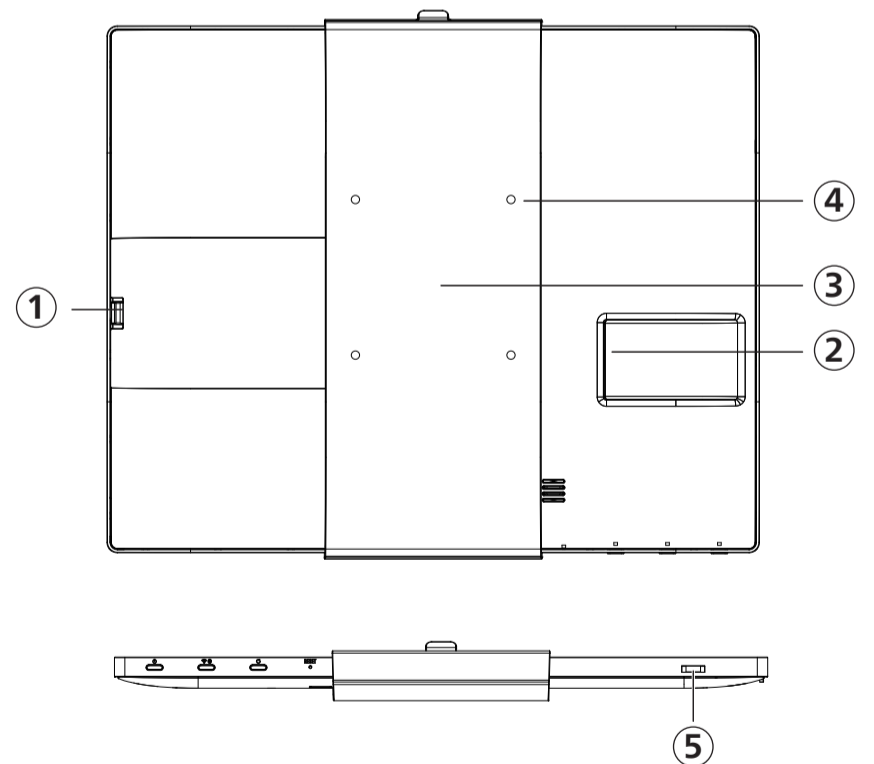

- ① Battery (optional)
- ② USB-C Power Input (5V)
- ③ Hook Trigger Button
- ④ VESA Mounting Standard
- ⑤ Anti Theft Hole

4 Anti-Theft Hole Use

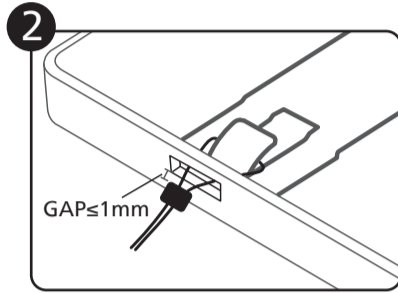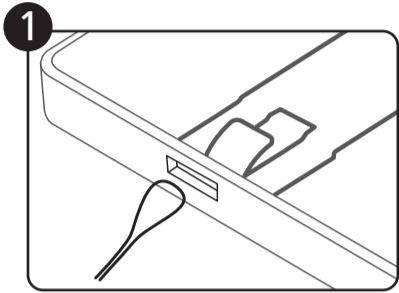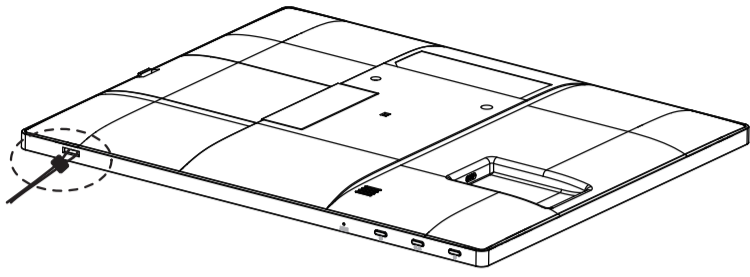


PHILIPS

ePaper Display

2000 Series Tableaux

13BDL2250I

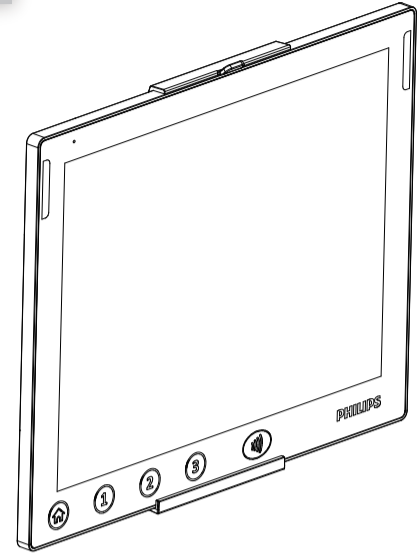

Quick start



For more information, please visit:
<https://www.philips.com/ppds>



Version: V1.1 2025-06-27

2025 © TOP Victory Investments Ltd. All rights reserved.

This product has been manufactured by and is sold under the responsibility of Top Victory Investments Ltd., and Top Victory Investments Ltd. is the warrantor in relation to this product. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

Specifications are subject to change without notice.



Q41G13M181307A