

PHILIPS
HD3034



EN User manual ZH-T 使用手冊



©2017 Koninklijke Philips N.V.
All rights reserved.
HD3034_UM_Taiwan_v2.0



English

1 Important

Safety

Read this user manual carefully before you use the fuzzy rice cooker and save it for future reference.

Danger

- Don't immerse the main body of the rice cooker in water, nor rinse it under the tap.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
- The appliance is not intended to be operated by means of

an external timer or a separate remote-control system.

- The appliance must not be immersed.
- Make sure to avoid spillage on the power connector to avoid a potential hazard.
- Always follow the instructions and use the appliance properly to avoid potential injury.
- Caution: Surface of the heating element is subject to residual heat after use.
- Make sure that the damaged power cord is replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.


Warning

- This appliance can be used by children aged from 8 years and above if they are continuously supervised and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Keep the appliance and its cord out of reach of children aged less than 8 years.
- Cleaning and user maintenance shall not be made by children.
- Cooking appliances should be positioned in a stable situation with the handles (if any)


positioned to avoid spillage of the hot liquids.

- Check if the voltage indicated on the rice cooker corresponds to the local power voltage before you connect it.
- Only connect the rice cooker to a grounded power outlet. Always make sure that the plug is inserted firmly into the power outlet.
- Do not use the appliance if the plug, the power cord, the inner pot, the sealing ring, or the main body is damaged.
- Keep the power cord out of the reach of children. Do not let the power cord hang over the edge of the table or worktop on which the rice cooker stands.
- Make sure the heating element, the temperature sensor, and the outside of the inner pot are clean and dry before you put the plug in the power outlet.
- Do not plug in the rice cooker or press any of the buttons on the control panel with wet hands.
- Never connect this rice cooker to an external timer switch in order to avoid a hazardous situation.


1 Using the rice cooker 使用電子鍋

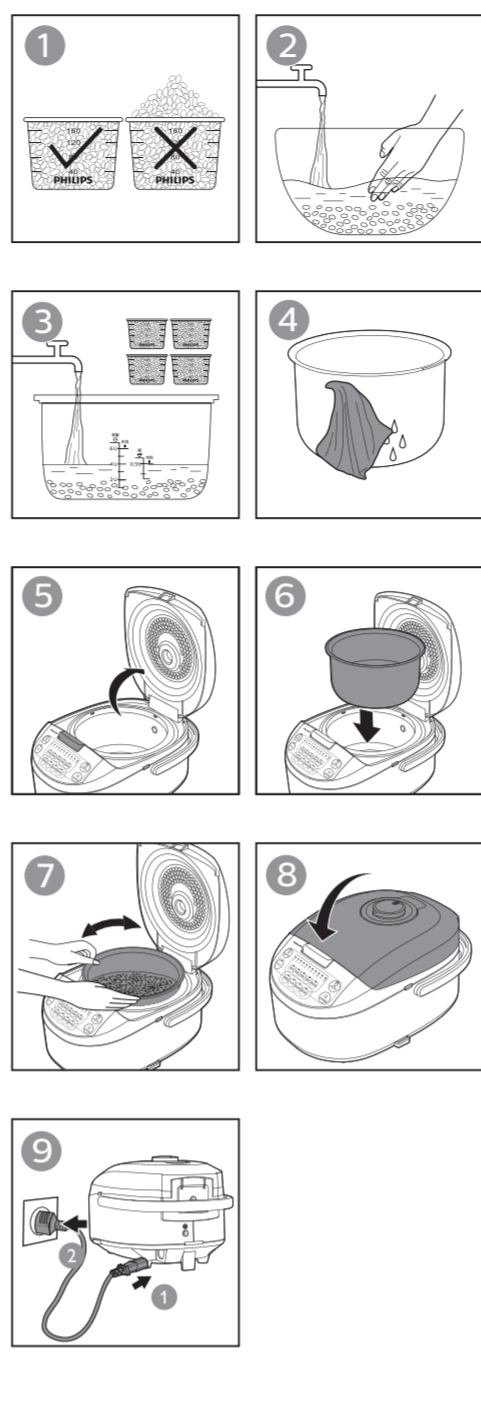


Rice cooking 煮飯

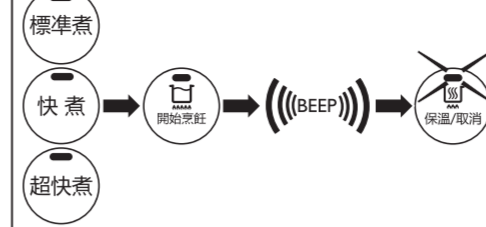


Crispy rice cooking 鍋巴飯

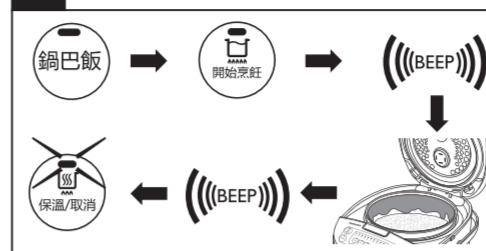


Cooking congee and making soup 煮粥和煲湯

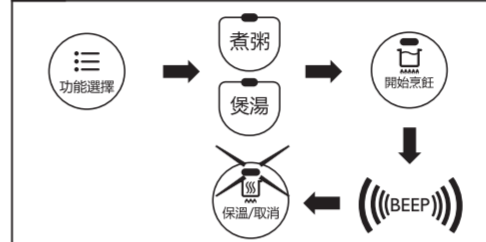


Baking cake 蛋糕

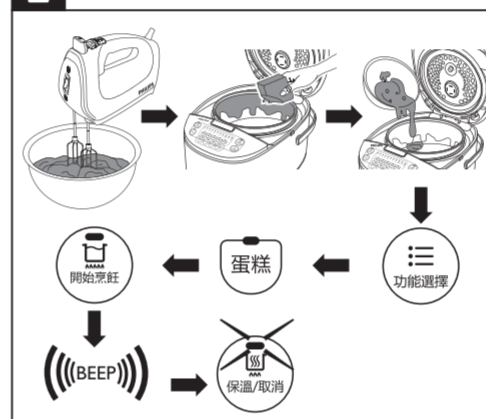


Steaming 蒸食物

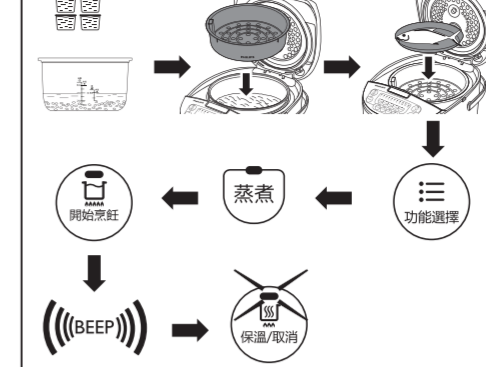

Reheating 熱飯

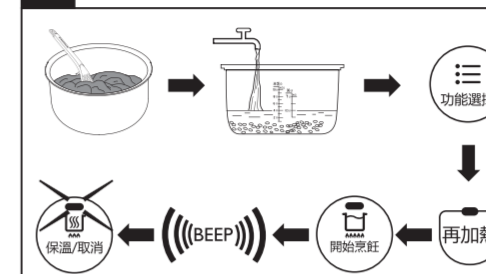

Preset time for delayed cooking 預約

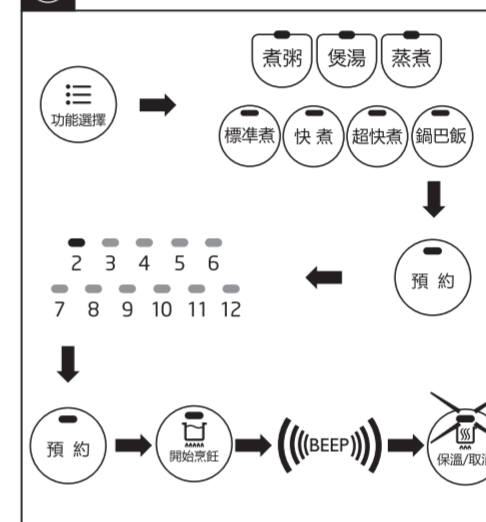

16 Steam	22 Ultra quick cook
17 Soup	23 Crispy rice
18 Congee	24 Menu
19 Warm/off	25 Cook
20 Preset	

Specifications

Capacity	3.0L
Power	600W
Voltage	110V 60Hz
Dimension(LxWxH)	34.5x25x21.5 cm
Net Weight	2.9 Kg

4 Before first use

Remove all packaging materials from the induction cooker.

Preparing for use

- Take out all the accessories from the inner pot. Remove the sheet between the inner pot and the heating element.
- Clean the parts of the rice cooker thoroughly before using the rice cooker for the first time (see chapter 'Cleaning').

Note

- Make sure all parts are completely dry before you start using the rice cooker.

Note

- You can cook 1 to 6 cups of rice.
- Each cup of uncooked rice normally gives 2 bowls of cooked rice. Do not exceed the quantities indicated on the inside of the inner pot. 1 cup of rice is approximately 180ml.
- Use a separate container to wash the rice to avoid damaging the non-stick coating of the inner pot.
- The level marked inside the inner pot is just an indication. You can always adjust the water level for different types of rice and your own preference.
- Make sure that the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element or the magnetic switch.

5 Using the rice cooker

Rice cooking

There are three rice cooking functions.

Cooking function	Estimated cooking time
Standard cook (☺)	50 minutes
Quick cook (☺)	40 minutes
Ultra quick cook (☺)	35 minutes

Note

- Do not exceed the volume indicated nor exceed the maximum water level indicated in the inner pot, as this may cause the rice cooker to overflow.
- You can press the cancel button (⏹) or unplug the rice cooker to turn off the keep warm function or when not in use.
- The cooking time is different due to different rice types, the quantity of rice, air pressure and voltage.
- The rice will overflow or not be fully cooked due to different rice types, the quantity of rice, air pressure and voltage, this is normal.

Crispy rice cooking

Cooking function	Estimated cooking time for 2 - 4 cups of rice
Crispy rice cooking (☺)	1 hour 20 minutes

Note

- You can press the cancel button (⏹) or unplug the rice cooker to turn off the keep warm function or when not in use.

Cooking congee and making soup

Cooking function	Estimated cooking time
Cooking congee (☺)	1 hour for 0.5 cup of rice
Making soup (☺)	1 hour

Note

- Do not exceed the volume indicated nor exceed the maximum water level indicated in the inner pot, as this may cause the rice cooker to overflow.
- You can press the cancel button (⏹) or unplug the rice cooker to turn off the keep warm function or when not in use.
- It is normal to find the congee more stickier if it is left in keep warm mode for too long.
- The cooking time is different due to different rice types, the quantity of rice, air pressure and voltage.
- The rice will overflow or not be fully cooked due to different rice types, the quantity of rice, air pressure and voltage, this is normal.

Tip

- The default cooking time is 1 hour.

Keep hands and face away from the rice cooker to avoid the steam.

- The inner pot and steam basket, during and after cooking process, may be hot and heavy.
- Do not lift and move the rice cooker while it is operating.
- Do not exceed the maximum water level indicated in the inner pot to prevent overflow.
- Do not place the cooking utensils inside the pot while cooking, keeping warm or reheating rice.
- Only use the cooking utensils provided. Avoid using sharp utensils.
- Do not use the cooking utensils provided by the rice cooker on open flame.
- To avoid scratches, it is not recommended to cook ingredients with crustaceans and shellfish. Remove the hard shells before cooking.
- Do not insert metallic objects or alien substances into the steam vent.
- Do not place a magnetic substance on the lid. Do not use the rice cooker near a magnetic substance.
- Always let the rice cooker cool down before you clean or move it.

- Always clean the rice cooker after use. Do not clean the rice cooker in dishwasher.
- Always unplug the rice cooker if not used for a longer period.
- If the rice cooker is used improperly or for professional or semi-professional purposes, or if it is not used according to the instructions in this user manual, the guarantee becomes invalid and Philips refuses liability for any damage caused.

Electromagnetic fields (EMF)

This appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

2 Your rice cooker

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

3 What's in the box

Rice cooker main unit	Steam basket
Rice scoop	Measuring cup
Power cord	User manual
Warranty card	

Overview

① Outer lid	⑦ Power socket
② Sealing ring	⑧ Heating element
③ Inner pot	⑨ Water level indications
④ Lid release button	⑩ Cooker handle
⑤ Control panel	⑪ Inner lid
⑥ Main body	⑫ Detachable steam vent cap

Controls overview

Ⓜ Reheat	Ⓜ Standard cook
Ⓜ Cake	Ⓜ Quick cook

