



EN User manual

ID Buku Petunjuk Pengguna



© 2019 Koninklijke Philips N.V.
All rights reserved.

3000 041 14542

English

1 Important

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.





Read this user manual carefully before you use the appliance, and save the user manual for future reference.

Danger

- Do not immerse the motor unit in water nor rinse it under the tap.

Warning

- Never use your fingers or an object to push ingredients into the feeding tube while the appliance is running. Only use the pusher.
- Before you connect the appliance to the power, make sure that the voltage indicated on the bottom of the appliance corresponds to the local power voltage.
- Never connect this appliance to a timer switch, to avoid a hazardous situation.
- Do not use the appliance if the power cord, the plug, protecting cover or any other parts are damaged or has visible cracks.
- If the power cord is damaged, you must have it replaced by Philips, a service center authorized by Philips, or similarly qualified persons to avoid a hazard.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

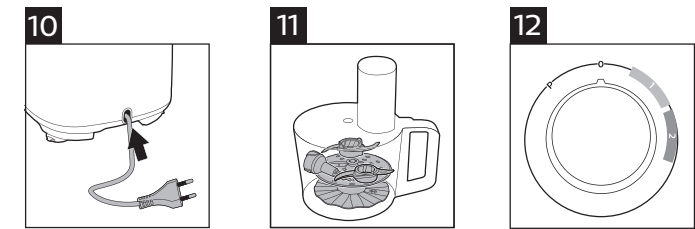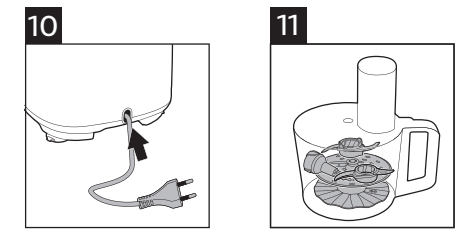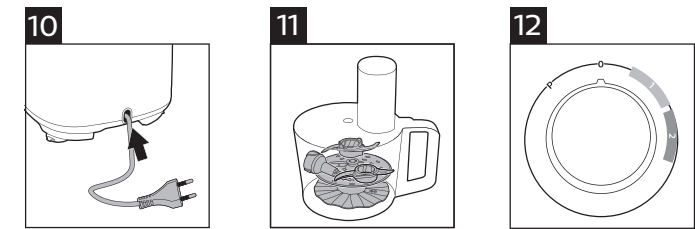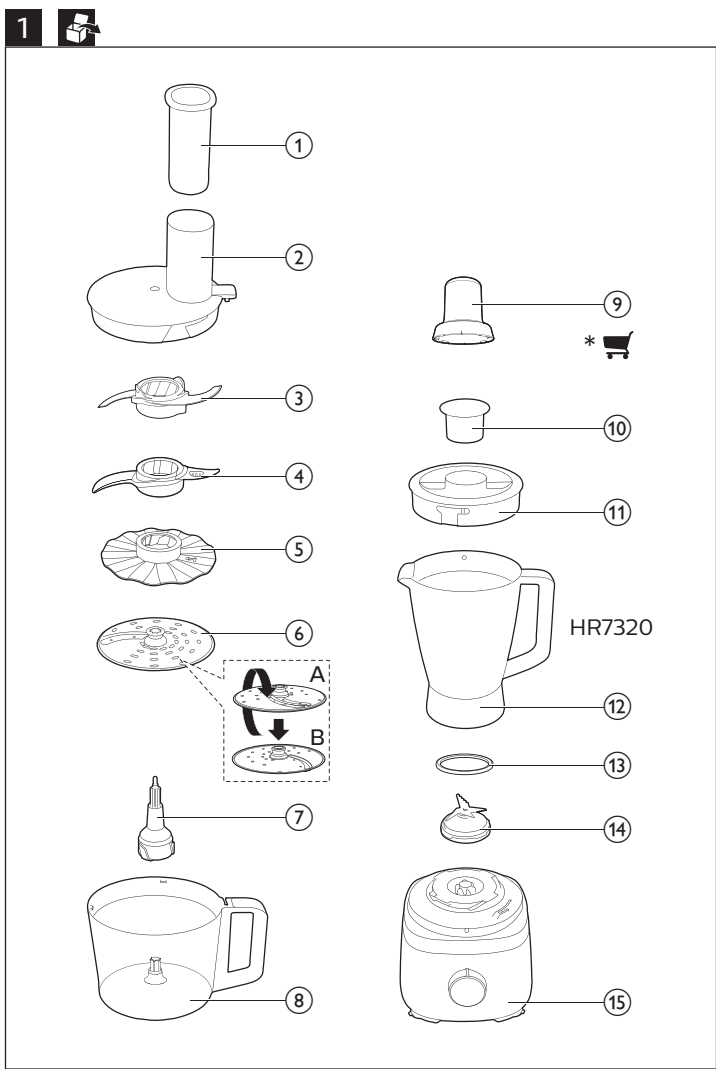


	✓	✓	✗		✓	✓	✓
	✓	✓	✗		✓	✓	✓
	✓	✓	✓		✓	✓	✗
	✓	✓	✗		✓	✓	✓
	✗	✗	✓		✓	✓	✓

- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Never let the appliance run unattended.
- If food sticks to the wall of the blender jar or bowl, switch off the appliance and unplug it. Then use a spatula (not provided) to remove the food from the wall.
- Be careful when you are emptying the bowl, handle or clean the discs, the blade units and the juicer sieve. The cutting edges are very sharp.
- Do not touch the blades, especially when the appliance is plugged in. The blades are very sharp.
- If the blades get stuck, unplug the appliance before you remove the ingredients that block the blades.
- Let hot ingredients cool down (<60°C) before processing them.
- Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.
- This appliance is intended for household use only.

Caution

- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

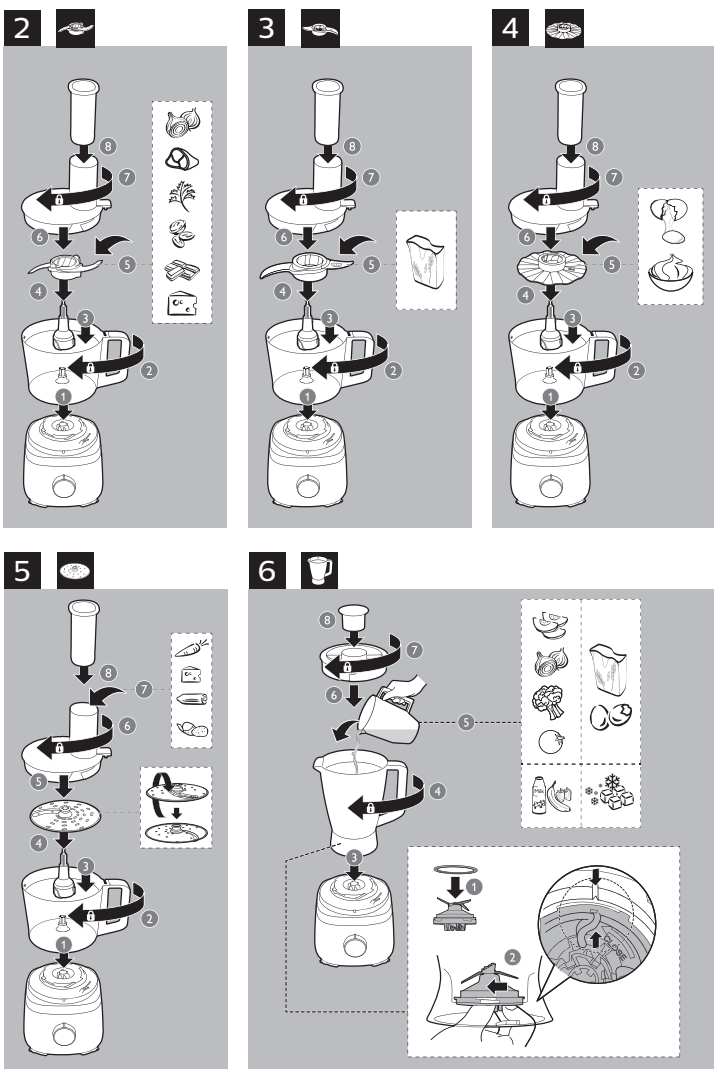

- Never switch off the appliance by turning the blender jar, the bowl or its lid. Always switch off the appliance by turning the speed selector to 0.
- Unplug the appliance immediately after use.
- Always wait until the moving parts stop running, then switch off and unplug the appliance before opening the lid and reaching into any of the parts that move in use.
- Always switch off and unplug the appliance if it is left unattended, and before assembling, disassembling, cleaning and changing accessories, or approaching parts that move in use.
- Thoroughly clean the parts that come into contact with food before you use the appliance for the first time. Refer to the instructions and table for cleaning given in this manual.
- Never use any accessories or parts from other manufacturers that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not exceed the maximum level indication on the bowl or the jar. Follow the quantities, processing time and speed as indicated in the user manual.
- Always let the appliance cool down to room temperature after each batch that you process.
- Certain ingredients such as carrots may cause discolorations on the surface of the parts. This does not have a negative effect on the parts. The discolorations usually disappear after some time.
- Noise level: Lc = 87 dB [A]

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF).



Recycling

This symbol means that this product shall not be disposed of with normal household waste (2012/19/EU).

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

2 Overview (Fig. 1)

- Food processor pusher
- Food processor bowl lid
- Blade unit
- Kneading accessory
- Emulsifying disc
- Double-sided disc
- A: For fine slicing
B: For fine shredding
- Drive shaft
- Food processor bowl
- Mill (optional purchase)
- Measuring cup for blender (HR7320 only)
- Blender lid (HR7320 only)
- Blender jar (HR7320 only)
- Seal ring (HR7320 only)
- Detachable blade unit for blender/mill (HR7320 only)
- Motor unit with control knob

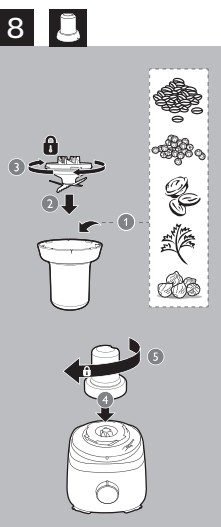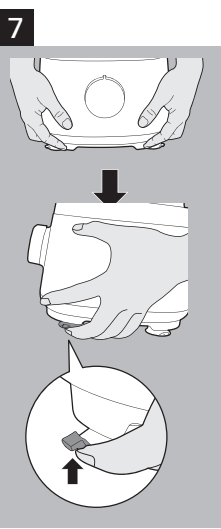

		(MAX)	kg (MAX)	
		5 x 1 sec	500 g	P
		5 x 1 sec	500 g	P12
		30 sec	50 g	P
		60 sec	250 g	2
		45 sec	250 g	2
		30 sec	200 g	2
		2-3 min	500 g 280 ml	1
		60-180 sec	350 ml	1
		60-180 sec	4 pcs	1
		30 sec	500 g	1
		30 sec	200 g	1
		30 sec	2 pcs	1
		30 sec	500 g	1
		1 min	1 L	2
		1 min	1 L	2
		1 min	1 L	2
		P x 9	6 x 8 g	P
		2 min	400 g 600 ml	2
		5 sec	25 g	P

* If you want to purchase an additional accessory, please contact Philips Consumer Care Center in your country.

* Jika ingin membeli aksesor tambahan, hubungi Pusat Layanan Konsumen Philips di negara Anda.

3 Before first use

Before you use the appliance and accessories for the first time, thoroughly clean the parts that come into contact with food.

To explore more helpful tips and basic recipes online, you can:

- Go to www.philips.com.
- Click the search button **Q** on the homepage.
- Type your product number HR7310 or HR7320 in the search box.
- Find or download the information you need from the searching result.
- For inspiring recipes, visit www.philips.com/kitchen.

Motor thermal protection (Auto-stop protection against overload)

Your food processor is designed to be protected from overheating and over-current conditions during use.

In case of overload, it will automatically stop to prevent motor damage.

To reset the appliance, follow the steps below:

- Turn the knob to 0 position and then unplug it.
- Remove some of the ingredients to reduce the load.
- Allow the appliance to cool down for 20 minutes.
- Connect the power plug to the power supply and reselect the desired speed.

4 Use your food processor

General Assembly

Before you use or assemble any of the accessories, make sure that you assemble according to Fig. 2 to 8.

- Turn the bowl clockwise until you hear a click to fix it onto the motor unit.
- Assemble the accessory or the accessory equipped with the shaft to the bowl.
- Put the ingredients in the bowl.
- Put the lid on the bowl, and turn the lid clockwise until you hear a click to fix it. Then put the pusher into the feeding tube.
 - For the discs, put the ingredients into the feeding tube with the pusher.
- Connect the power plug to the power supply.
- Check the advised ingredient quantity and setting in Fig. 9. Turn the knob to the desired speed setting.
- After use, turn the knob to 0, and then unplug the appliance.

Color matching speed guide

For perfect results every time, match the accessory color to the same speed color near the knob area.

Use speed 1 to whip cream, beat eggs, make pastries and bread doughs. Use speed 2 to chop onions, mince meat, make smoothies and more (Refer to Fig.9 for details).

Color	Optimized speed
Light orange	Speed 1
Deep orange	Speed 2

Blade unit (Speed 2)

Before you start, make sure that you assemble according to Fig. 2.

You can use the blade unit to chop, mix, mince, crumble or puree ingredients.

To remove food that sticks to the blade or to the inside of the bowl, use a spatula to remove the excess after you switch off the appliance.

Usage/Application	Purpose
Mincing meat/fish	Meat balls, fish cake, burger
Chopping onion/herb	Salsa, pesto or for garnishing
Crumbing nuts or chocolates	Toppings or garnishing for salads, bread, puddings
Pureeing nuts	Almond or peanut butter paste
Mashing potatoes	Make potato mesh
Mixing and beating	Mixing cake batters

Note

- Always put the blade unit in the bowl before you start to add the ingredients.
- Do not use the blade unit to chop hard ingredients, like coffee beans, turmeric, nutmeg, and ice cubes, as this may cause the blade to get blunt.
- Do not let the appliance run too long when you chop (hard) cheese or chocolate. Otherwise these ingredients become too hot, start to melt, and turn lumpy.

