



User manual
Buku Petunjuk Pengguna

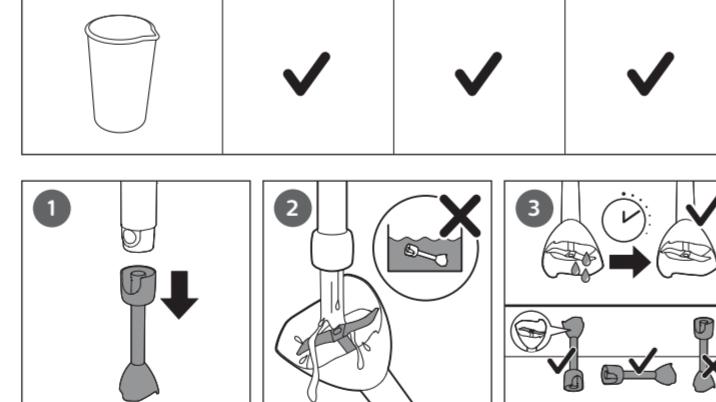

		100-200 g	30 sec
		100-400 ml	60 sec
		100-500 ml	60 sec
		100-500 ml	60 sec
		250 ml	70-90 sec
		4 x	120 sec
		2 kg	40-60 sec
		2x2x2 cm	

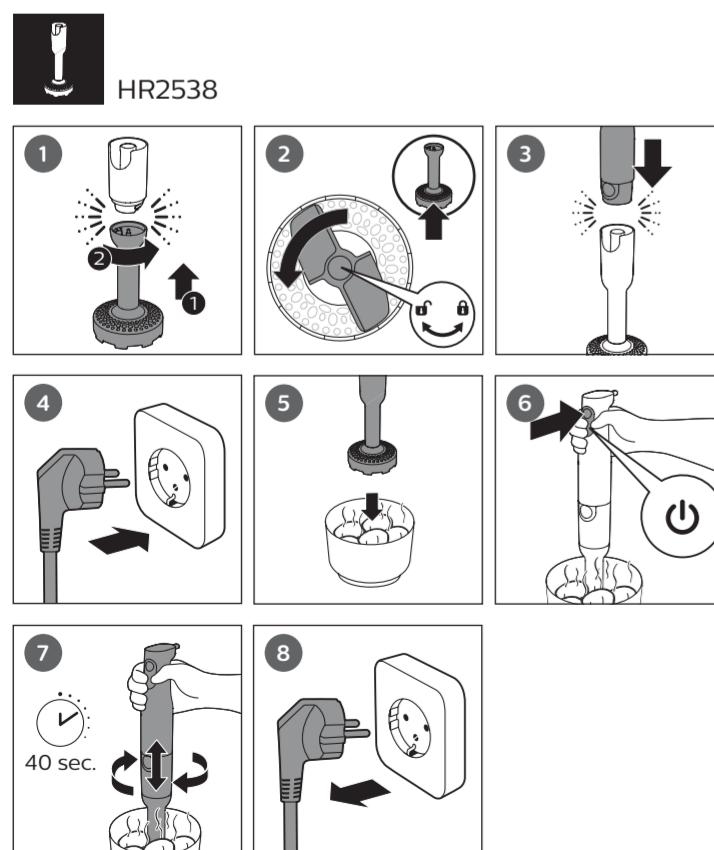

Philips
Pelumat
HR2533
220-240V - 50-60Hz 650W
Diimpor oleh:
PT Philips Indonesia Commercial
Gedung Cibis Nine Lantai 10
Jl. T.B. Simatupang No. 2 RT. 001 RW. 005 Kel. Cilandak Timur,
Kec. Pasar Minggu, Jakarta Selatan 12560 – Indonesia
Negara Pembuat: Cina
No. Reg.: I.19.PIC1.05712.1119

		100 g	5 x 1 sec.	
		120 g	5 sec.	
		20 g	5 x 1 sec.	
		100 g	20 sec.	
		200 g	5 x 1 sec.	
		200 g	10 sec.	
		30 g	5 x 1 sec.	
		200 g	30 sec.	
		100 g	20 sec.	
		80 g	30 sec.	

Specifications are subject to change without notice.
© 2020 Koninklijke Philips N.V.
All rights reserved.

100% recycled paper
100% papier recyclé
3000 044 79631 A

ENGLISH

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

General description

- On/off button
- Motor unit
- Release button
- Blender bar
- Whisk coupling unit (HR2533, HR2536, HR2537, HR2538 only)
- Whisk (HR2533, HR2536, HR2537, HR2538 only)
- Base
- Beaker
- Potato masher coupling unit (HR2538 only)
- Potato masher (HR2538 only)
- XL chopper lid (HR2537 only)
- XL chopper blade unit (HR2537 only)
- XL chopper bowl (HR2537 only)
- Compact chopper lid (HR2532, HR2533, HR2535, HR2536, HR2537, HR2538 only)
- Compact chopper blade unit (HR2532, HR2533, HR2535, HR2536, HR2537, HR2538 only)
- Compact chopper bowl (HR2532, HR2533, HR2535, HR2536, HR2537, HR2538 only)

Important

Read this user manual carefully before you use the appliance and save it for future reference.

Danger

- Never immerse the motor unit in water or any other liquid, nor rinse it under the tap. Only use a moist cloth to clean the motor unit.

Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.

- Do not use the appliance if the plug, the mains cord or other parts are damaged or have visible cracks.
- If the supply cord is damaged, it must be replaced by Philips, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not touch the cutting edges of the blade units under any conditions, especially when the appliance is plugged in. The cutting edges are very sharp.
- Never use a chopper blade unit without a chopper bowl.
- To avoid splashing, always immerse the blender bar or whisk (specific types only) into the ingredients before you switch on the appliance, especially when you process hot ingredients.
- If one of the blade unit gets stuck, unplug the appliance before you remove the ingredients that block the blade units.
- Be careful when you pour hot liquid into the beaker, as hot liquid and steam may cause scalding.
- This appliance is intended for normal household use only. It is not intended for use in environments such as staff kitchens of shops, offices, farms or other work environments. Nor is it intended to be used by clients in hotels, motels, bed and breakfasts and other residential environments.
- Never process hard ingredients like ice cubes with the appliance.
- Children should be supervised not to play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Cleaning and user maintenance shall not be made by children without supervision.
- Always disconnect the appliance from the supply if it is left unattended and before you assemble, disassemble, store or clean.
- Thoroughly clean the parts that come into contact with food before you use the appliance for the first time. Refer to the instructions and table for cleaning given in the manual.
- Always unplug the device from power supply before changing accessories or approaching parts that move in use.

Caution

- Do not use the appliance with any of the accessories longer than 3 minutes without interruption. Let the appliance cool down for 15 minutes before you continue processing.
- None of the accessories is suitable for use in the microwave.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Keep the motor unit away from heat, fire, moisture and dirt.
- Only use this appliance for its intended purpose as shown in the user manual.
- Never fill the beaker, XL chopper bowl (specific types only), or compact chopper bowl (specific types only) with ingredients that are hotter than 80°C/175°F.
- Do not exceed the quantities and processing times indicated in the table.
- Clean the blade unit of the blender bar under the tap. Never immerse the power unit in water.
- After cleaning, let the blender bar dry. Store it either horizontally or with the blade pointing upwards.
- Noise level: Lc = 85 dB(A)

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

Before first use

Thoroughly clean the parts that come into contact with food before you use the appliance for the first time. Refer to the instructions and table for cleaning given in the manual.

Note: Make sure all parts are completely dry before you start using the appliance.

Preparing for use

1. Let hot ingredients cool down before you process them or put them into the beaker (maximum temperature 80°C).
2. Cut large ingredients into pieces of around 2 x 2 x 2 cm before you process them.
3. Assemble the appliance properly before you put the plug in the wall outlet.

Note: Always unwind the power cord completely before you switch on the appliance.

Note: Remove all packing material or labels before using.

Hand blender



The hand blender is intended for:

- blending fluids, e.g. dairy products, sauces, fruit juices, soups, mixed drinks and shakes.
- mixing soft ingredients, e.g. pancake batter or mayonnaise.
- pureeing cooked ingredients, e.g. for making baby food.
- chopping nuts, fruits and vegetables.

Caution: Do not process ingredients such as ice cubes, frozen ingredients or fruits with stones

1. Attach the blender bar to the motor unit ("click") (fig. 1).
2. Put the ingredients into the beaker (fig. 2).
3. Put the plug into the wall outlet (fig. 3).
4. Immerse the blade guard completely in the ingredients in order to avoid splashing (fig. 4).
5. Switch on the appliance by pressing the On/off button (fig. 5).
6. Move the appliance slowly up and down and in circles to blend the ingredients (fig. 6).
7. After you have finished blending, unplug the appliance (fig. 7).

Compact chopper and XL Chopper



The compact chopper and XL chopper are intended for chopping ingredients such as nuts, raw meat, onions, hard cheese, boiled eggs, garlic, herbs, dry bread, etc.

1. Put the blade unit in the chopper bowl (fig. 2).

2. Put the ingredients in the chopper bowl (fig. 3).
3. Put the chopper lid on the chopper bowl (fig. 4).
4. Attach the motor unit onto the chopper lid ("click") (fig. 5).
5. Put the plug in the wall outlet (fig. 6).
6. Press the On/off button and let it operate until all ingredients are cut (fig. 7).
7. After you have finished chopping, unplug the appliance (fig. 8).

Whisk



The whisk is intended for whipping cream, whisking egg whites, desserts etc. Do not use the whisk to prepare dough or cake mixture.

1. Attach the whisk to the whisk coupling unit ("click") (fig. 1).
2. Attach the whisk coupling unit to the motor unit ("click") (fig. 2).
3. Put the ingredients in a bowl (fig. 3).
4. Put the plug in the wall outlet (fig. 4).
5. Immerse the whisk in the ingredients (fig. 5).
6. Switch the appliance on by pressing the On/off button (fig. 6).
7. Move the appliance slowly up and down and in circles (fig. 7).
8. After you have finished the whisking, remove the plug from the wall outlet (fig. 8).

Potato masher



1. Attach the potato masher to the potato masher coupling unit, turn the potato masher counterclockwise until it is locked ("click") (fig. 1).
2. To attach the paddle to the potato bar turn it counterclockwise until it locks. (fig. 2).
3. Attach the potato masher coupling unit to the motor unit (fig. 3).
4. Put the plug in the wall outlet (fig. 4).
5. Lower potato masher into a bowl with cooked potatoes (fig. 5).
6. Switch the appliance on by pressing the On/off button (fig. 6).
7. Move the appliance slowly up and down and in circles (fig. 7).
8. After you have finished smashing potatoes, remove the plug from the wall outlet (fig. 8).

Cleaning

Caution: Do not immerse the motor unit, the blender bar, the whisk coupling unit, the XL chopper lid, the compact chopper lid, and the potato masher coupling unit in water or any other liquids, nor rinse them under the tap. Use a moist cloth to clean these parts. Only the blender bar blade and guard can be rinsed under the tap (fig. 2).

Caution: Never use scouring pads, abrasive cleaning agents or aggressive liquids such as alcohol, gasoline or acetone to clean the appliance.

1. Unplug the appliance.

2. Press the release button on the motor unit to remove the accessory you have used.

3. Disassemble the accessory.

4. See the "Cleaning" chart for further instructions.

Ordering accessories

To buy accessories or spare parts, visit www.shop.philips.com/service or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the worldwide guarantee leaflet for contact details).

Guarantee and support

If you need information or support, please visit www.philips.com/support or read the separate worldwide guarantee leaflet.

Pesto Genovese

This recipe can be prepared with the XL chopper. The XL chopper is not supplied as a standard accessory with every model in this product range, but it can be ordered as an extra accessory. See chapter "Ordering accessories".

- 275 g Parmesan cut in approximately 3 cm cubes
- 2 cloves of garlic
- 50 g pine nuts
- 15 g fresh basil leaves
- 4 table spoons olive oil

1. Put the ingredients in the XL chopper bowl according to the order mentioned above.

2. Put the XL chopper lid on the bowl and then fasten the motor unit onto the lid.

3. Press the On/off button and let the chopper operate for 5 seconds.

INDONESIA

Pendahuluan

Selamat atas pembelian Anda dan selamat datang di Philips! Untuk memanfaatkan sepenuhnya dukungan yang ditawarkan Philips, daftarkan produk Anda di www.philips.com/welcome.

Gambaran umum

1. Tombol on/off
2. Unit motor
3. Tombol pelepas
4. Bilah blender
5. Unit sambungan pengocok (HR2533, HR2536, HR2537, HR2538 saja)
6. Pengocok (HR2533, HR2536, HR2537, HR2538 saja)
7. Gelas
8. Unit sambungan penumbuk kentang (HR2538 saja)
9. Penumbuk kentang (HR2538 saja)
10. Pengaduk penumbuk kentang (HR2538 saja)
11. Tutup perajang XL (HR2537 saja)
12. Unit pisau perajang XL (HR2537 saja)
13. Mangkuk perajang XL (HR2537 saja)
14. Tutup perajang ringkas (HR2532, HR2533, HR2535, HR2537, HR2538 saja)
15. Unit pisau perajang ringkas (HR2532, HR2533, HR2535, HR2536, HR2537, HR2538 saja)
16. Mangkuk perajang ringkas (HR2532, HR2533, HR2535, HR2536, HR2537, HR2538 saja)

Penting

Baca petunjuk pengguna ini dengan saksama sebelum menggunakan alat dan simpanlah sebagai referensi nanti.

Bahaya

- Jangan sekali-kali merendam unit motor di dalam air atau cairan lain apa pun, jangan pula menyiramnya di bawah keran air. Gunakan hanya kain yang lembap untuk membersihkan unit motor.

Peringatan

- Periksalah apakah voltase pada alat sesuai dengan voltase listrik di rumah Anda, sebelum menghubungkan alat.
- Jangan menggunakan alat jika steker, kabel listrik atau komponen lain ada yang rusak atau terlihat retak.
- Jika kabel listrik rusak, maka harus diganti oleh Philips, agen servisnya, atau personel dengan kualifikasi yang setara untuk menghindari bahaya.
- Jangan pernah menyentuh tepi pemotong pada unit pisau, terutama saat alat sudah dihubungkan ke stopkontak listrik. Tepi pemotong sangat tajam.
- Jangan sekali-kali menggunakan unit pisau perajang tanpa mangkuk perajang.
- Agar tidak terkena cipratannya, selalu masukkan bilah blender atau pengocok (tipe tertentu saja) ke dalam bahan sebelum menghidupkan alat, terutama saat Anda mengolah bahan yang panas.
- Jika salah satu unit pisau macet, cabut steker alat dari stopkontak sebelum mengeluarkan bahan-bahan yang mengganjal unit pisau.
- Berhati-hatilah saat menunggu cairan panas ke gelas blender, karena cairan panas bisa menyebabkan kulit melepuh.

- Alat ini tidak diperuntukkan dalam lingkungan seperti dapur staf bengkel, kantor, pertanian, atau lingkungan kerja lainnya. Alat ini tidak ditujukan untuk digunakan di lingkungan seperti dapur, dapur toko/restoran, kantor, peternakan, atau lingkungan kerja lainnya. Alat juga tidak ditujukan untuk digunakan oleh klien di hotel, motel, akomodasi kamar & sarapan ("bed and breakfast") atau lingkungan hunian serupa lainnya.

- Jangan sekali-kali mengolah bahan yang keras seperti es batu dengan alat.

- Anak kecil harus diwasih untuk memastikan mereka tidak bermain-main dengan alat ini.

- Alat ini tidak dimaksudkan untuk digunakan oleh orang (termasuk anak-anak) dengan cacat fisik, indra atau kecacatan mental yang kurang, atau kurang pengalaman dan pengetahuan, kecuali jika mereka diberikan pengawasan atau petunjuk mengenai penggunaan alat oleh orang yang bertanggung jawab bagi keselamatan mereka.

- Pembersihan dan perawatan tidak boleh dilakukan oleh anak-anak tanpa pengawasan.

- Selalu cabut steker alat supaya jika alat ditinggalkan tanpa pengawasan atau sebelum Anda memasang, membongkar, menyimpan, atau membersihkannya.

- Bersihkan secara cermat bagian-bagian yang bersentuhan dengan makanan sebelum menggunakan alat ini untuk pertama kali. Lihat petunjuk dan tabel untuk cara membersihkan yang terdapat di buku petunjuk pengguna.

- Selalu cabut perangkat dari suplay daya sebelum mengganti aksesoris atau mendekati komponen bergerak yang sedang digunakan.

Perhatian

- Jangan menggunakan alat dengan aksesoris apa pun lebih lama dari 3 menit secara terus-menerus. Biarkan alat mendingin selama 15 menit sebelum Anda melanjutkan pengolahan.

- Aksesoris tidak cocok digunakan dalam microwave.

- Jangan sekali-kali menggunakan aksesoris atau komponen apa pun dari produsen lain atau yang tidak secara khusus direkomendasikan oleh Philips. Jika Anda menggunakan aksesoris atau komponen tersebut, garansi Anda menjadi batal.

- Jauhkan unit motor dari panas, api, kelembaban dan kotor.

- Hanya gunakan alat ini untuk keperluan yang dimaksud di petunjuk pengguna.

- Jangan pernah mengisi gelas, mangkuk perajang XL (tipe tertentu saja), atau mangkuk perajang ringkas (tipe tertentu saja) dengan bahan yang panasnya lebih dari 80°C/175°F.

- Jangan melebihi takaran dan waktu pengolahan seperti yang ditunjukkan pada tabel.

- Bersihkan unit pisau pada bilah blender di bawah keran.

- Jangan pernah merendam unit daya di dalam air.

- Setelah dibersihkan, biarkan bilah blender kering terlebih dahulu. Simpan secara horizontal atau dengan pisau mengarah ke atas.

- Tingkat kebisingan: Lc = 85 dB(A)

Medan elektromagnet (EMF)

Alat Philips ini mematuhi semua standar dan peraturan yang berlaku terkait paparan terhadap medan elektromagnet.

Mendaur ulang

Jangan membuang alat bersama limbah rumah tangga biasa jika alat sudah tidak bisa dipakai lagi, tetapi serahkanlah ke titik pengumpulan resmi untuk didaur ulang. Dengan melakukan hal ini, Anda ikut membantu melestarikan lingkungan.

Patuhilah peraturan mengenai pengumpulan produk elektrik dan elektronik di negara Anda. Pembuangan produk secara benar akan membantu mencegah dampak negatif terhadap lingkungan dan kesehatan manusia.

Sebelum menggunakan alat pertama kali

Bersihkan secara cermat bagian-bagian yang bersentuhan dengan makanan sebelum menggunakan alat ini untuk pertama kali. Lihat petunjuk dan tabel untuk cara membersihkan yang terdapat di buku petunjuk pengguna.

Catatan: Pastikan semua komponen benar-benar kering sebelum mulai menggunakan alat.

Menyiapkan penggunaan

1. Biarkan bahan makanan yang panas mendingin terlebih dahulu sebelum mengolahnya atau meletakkannya ke dalam gelas blender (suhu maks. 80°C).
2. Potong bahan makanan yang besar menjadi potongan berukuran kurang lebih 2 x 2 x 2 cm sebelum mengolahnya.
3. Pasang alat dengan benar sebelum memasukkan steker ke stopkontak dinding.</