

PHILIPS

HD9650 series

User manual

TABLE OF CONTENTS

| | |
|--|-----------|
| Important | 3 |
| Introduction | 6 |
| General description | 6 |
| Before first use | 8 |
| Preparing for use | 8 |
| Placing the removable mesh bottom and fat reducer | 8 |
| Food table | 9 |
| Using the appliance | 12 |
| Airfrying | 12 |
| Changing to another preset during cooking | 16 |
| Using the manual mode | 17 |
| Changing the cooking temperature or time at any time | 18 |
| Choosing the keep warm mode | 19 |
| Making home-made fries | 19 |
| Cleaning | 20 |
| Storage | 22 |
| Recycling | 22 |
| Guarantee and support | 22 |
| Troubleshooting | 22 |

Important

Read this important information carefully before you use the appliance and save it for future reference.

Danger

- Never immerse the appliance in water nor rinse it under the tap.
- Do not let any water or other liquid enter the appliance to prevent electric shock.
- Always put the ingredients to be fried in the basket, to prevent them from coming into contact with the heating elements.
- Do not cover the air inlet and the air outlet openings while the appliance is operating.
- Do not fill the pan with oil as this may cause a fire hazard.
- Do not use the appliance, if the plug, the mains cord or the appliance itself is damaged.
- Never touch the inside of the appliance while it is operating.
- Never put any amount of food that exceeds the maximum level indicated in the basket.
- Always make sure heater is free and no food stuck in heater.

Warning

- If the supply cord is damaged, it must be replaced by Philips, its service agent or similarly qualified persons in order to avoid a hazard.
- Only connect the appliance to an earthed wall socket. Always make sure that the plug is inserted into the wall socket properly.
- This appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- The accessible surfaces may become hot during use.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of the reach of children less than 8 years.
- Do not place the appliance against a wall or against other appliances. Leave at least 10 cm free space at the back, on both sides and above the appliance. Do not place anything on top of the appliance.
- During hot air frying, hot steam is released through the air outlet openings. Keep your hands and face at a safe distance from the steam and from the air outlet openings. Also, be careful of hot steam and air when you remove the pan from the appliance.



- Never use light ingredients or packing paper in the appliance.
- Accessible surfaces may become hot during use.
- Storage of potatoes: The temperature shall be appropriate to the potato variety stored and it shall be above 6 °C to minimize the risk of acrylamide exposure in the prepared foodstuff.
- Do not place the appliance on or near a hot gas stove or all kinds of electric stove and electric cooking plates, or in a heated oven.
- Never fill the pan with oil.
- This appliance is designed to be used at ambient temperatures between 5°C and 40°C.
- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Keep the mains cord away from hot surfaces.
- Do not place the appliance on or near combustible materials such as a tablecloth or curtain.
- Do not use the appliance for any other purpose than described in this manual and use only original Philips-accessories.
- Do not let the appliance operate unattended.
- The pan, basket and fat reducer becomes hot during and after use of the appliance, always handle carefully.
- Thoroughly clean the parts that come into contact with food before you use the appliance for the first time. Refer to the instructions in the manual.

Caution

- This appliance is intended for normal household use only. It is not intended for use in environments such as staff kitchens of shops, offices, farms or other work environments. Nor is it intended to be used by clients in hotels, motels, bed and breakfasts and other residential environments.
- Always disconnect the appliance from the supply if it is left unattended and before you assemble, disassemble, store or cleaning.
- Place the appliance on a horizontal, even and stable surface.
- If the appliance is used improperly or for professional or semi-professional purposes or if it is not used according to the instructions in the user manual, the guarantee becomes invalid and Philips refuses any liability for damage caused.
- Always return the appliance to a service center authorised by Philips for examination or repair. Do not attempt to repair the appliance yourself, otherwise the guarantee becomes invalid.
- Always unplug the appliance after use.
- Let the appliance cool down for approximately 30 minutes before you handle or clean it.
- Make sure the ingredients prepared in this appliance come out golden yellow instead of dark or brown. Remove burnt remnants. Do not fry fresh potatoes at a temperature above 180°C (to minimise the production of acrylamide).

- Do not press the basket release button during shaking.
- Be careful when cleaning the upper area of the cooking chamber: Hot heating element, edge of Metal parts.
- Always make sure that the food is fully cooked in the Airfryer.
- Always make sure that you have the control over your Airfryer.
- When cooking fatty food, the Airfryer could emit smoke.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding electromagnetic fields.

Automatic shut-off

This appliance is equipped with an automatic shut-off function. When the time of the timer has elapsed, the device will shut off automatically. To switch off the appliance manually press the power on/off button.

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Philips Airfryer XXL uses hot air to fry your favorite food with little or no added oil. It is built to fry as crispy as deep fried with minimum amount of fat. By combining a powerful heater and motor with new Twin TurboStar technology, the hot air in the Airfryer XXL swirls fast, like a tornado – throughout the entire cooking basket. This extracts fat from food, and captures it all in the fat reducer at the bottom of the Airfryer.


Fat released from the food is captured in one place at the bottom of the pan for easy disposal and cleaning.

You can now enjoy perfectly cooked fried food – crispy on the outside tender on the inside – Fry, grill, roast and bake to prepare a variety of tasty dishes in a healthy, fast and easy way.

For more inspiration, recipes and information about the Airfryer, visit www.philips.com/kitchen or download the free Airfryer App for IOS[®] or Android[™].

General description

- 1 Drawer
- 2 Basket with removable mesh bottom
- 3 Removable mesh bottom
- 4 Fat reducer
- 5 Pan
- 6 Cord storage compartment
- 7 Air outlets
- 8 MAX indication
- 9 Power cord
- 10 Air inlet
- 11 Control panel
 - A. Temperature indication
 - B. Temperature button
 - C. Keep warm button
 - D. QuickControl dial
 - E. Power On/Off button
 - F. Preset button
 - G. Timer button
 - H. Time indication
 - I. Presets: French fries/frozen snacks, chicken, meat, fish, baking and manual

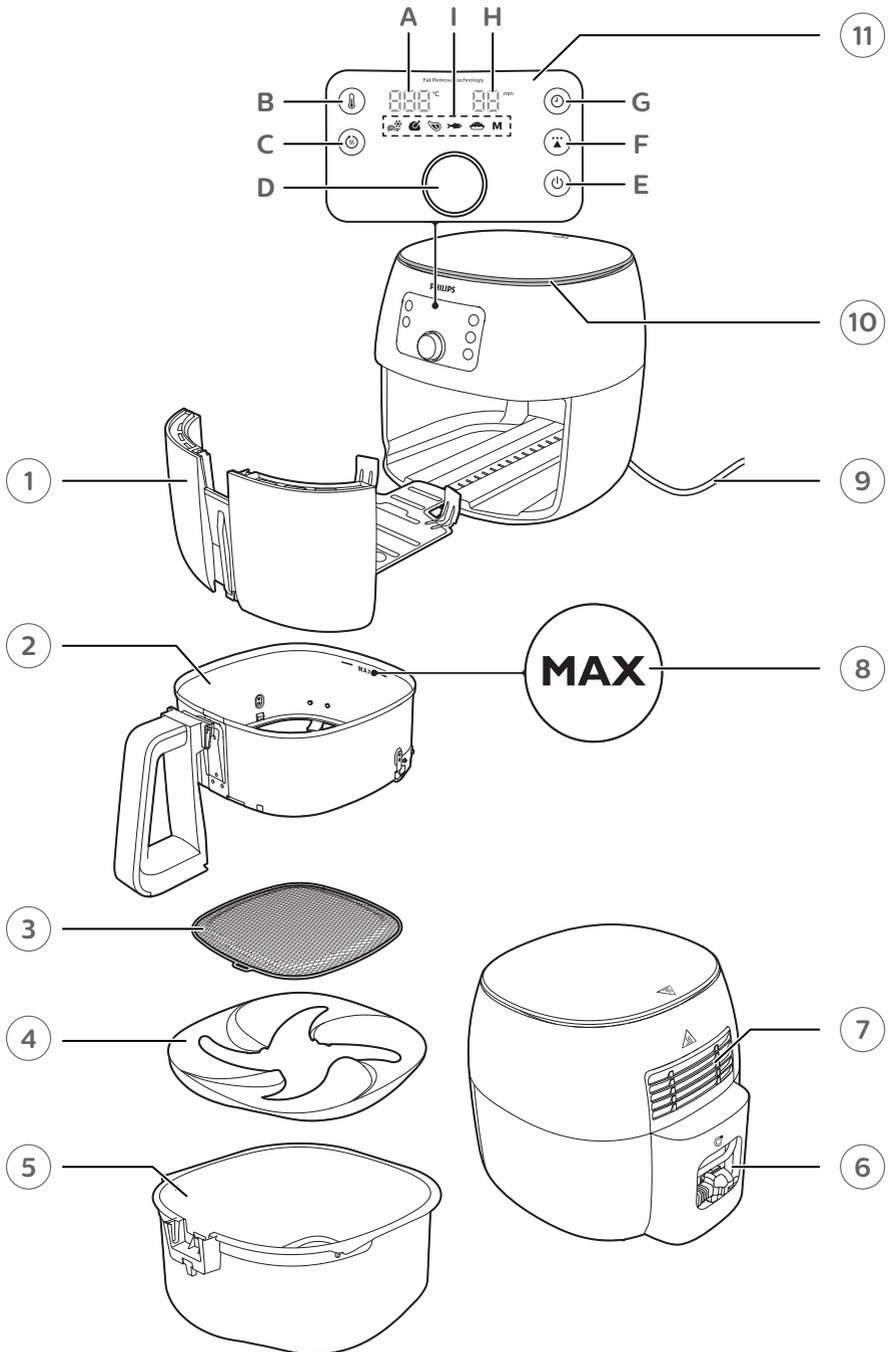

Before first use


- 1 Remove all packing material.
- 2 Remove any stickers or labels from the appliance.
- 3 Thoroughly clean the appliance before first use, as indicated in the cleaning table.

Preparing for use


Placing the removable mesh bottom and fat reducer




- 1 Open the drawer by pulling the handle.

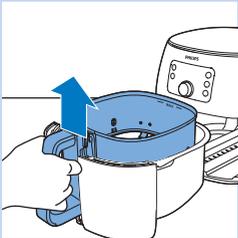


- 2 Remove the basket by lifting the handle.

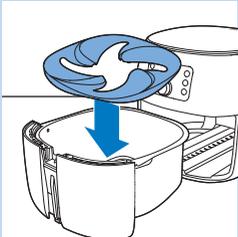


- 3 Place the fat reducer into the pan.

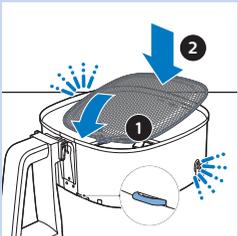

- 4 Insert the removable mesh bottom into the slot on the right bottom side of the basket. Push the mesh bottom down until it locks into position ("click" on both sides).

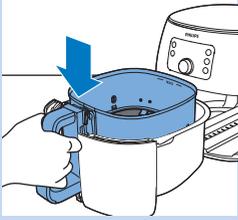

5 Put the basket in the pan.

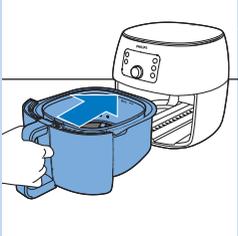

6 Slide the drawer back into the Airfryer by the handle.

Note

- Never use the pan without the fat reducer or the basket in it.

Food table

The table below helps you select the basic settings for the types of food you want to prepare.

Note

- Keep in mind that these settings are suggestions. As ingredients differ in origin, size, shape as well as brand, we cannot guarantee the best setting for your ingredients.
- When preparing larger amount of food (e.g. fries, prawns, drumsticks, frozen snacks), shake, turn, or stir the ingredients in the basket 2 to 3 times in order to achieve a consistent result.

| | Ingredients | Min.- max. amount | Time (min) | Temperature | Shake, turn, or stir halfway | Note |
|--|-------------------------------|-------------------|------------|-------------|------------------------------|--|
| | Thin frozen fries (7x7 mm) | 200-1400 g | 13-32 | 180°C | Yes | |
| | Thick frozen fries (10x10 mm) | 200-1400 g | 13-33 | 180°C | Yes | |
| | Home-made fries (10x10 mm) | 200-1400 g | 18-35 | 180°C | Yes | Soak 30 minutes in water, dry then add 1/4 to 1 tbsp of oil. |


|  | Ingredients | Min.- max. amount | Time (min) | Temperature | Shake, turn, or stir halfway | Note |
|---|--|-------------------------|------------|-------------|------------------------------|--|
|  | Homemade potato wedges | 200-1400 g | 20-42 | 180°C | Yes | Soak 30 minutes in water, dry then add 1/4 to 1 tbsp of oil. |
|  | Frozen snacks (chicken nuggets) | 80-1300 g (6-50 pieces) | 7-18 | 180°C | Yes | Ready when golden yellow and crispy outside. |
|  | Frozen snacks (small spring rolls around 20 g) | 100-600 g (5-30 pieces) | 14-16 | 180°C | Yes | Ready when golden yellow and crispy outside. |
|  | Whole chicken | 1200-1500 g | 50-55 | 180°C | | Avoid that legs touch the heating element. |
|  | Chicken breast Around 160 g | 1-5 pieces | 18-22 | 180°C | | |
|  | Drumsticks | 200-1800 g | 18-35 | 180°C | Yes | |
|  | Chicken fingers bread crumbed | 3-12 pieces (1 layer) | 10-15 | 180°C | | Add oil to the breadcrumbs. Ready when golden yellow. |
|  | Chicken wings Around 100 g | 2-8 pieces (1 layer) | 14-18 | 180°C | Yes | |
|  | Meat chops without bone Around 150 g | 1-5 chops | 10-13 | 200°C | | |
|  | Hamburger Around 150 g (diameter 10 cm) | 1-4 patties | 10-15 | 200°C | | |
|  | Thick sausages Around 100 g (diameter 4 cm) | 1-6 pieces (1 layer) | 12-15 | 200°C | | |

|  Ingredients | Min.- max. amount | Time (min) | Temperature | Shake, turn, or stir halfway | Note |
|--|-------------------|------------|-------------|------------------------------|--|
|  Thin sausages Around 70g (diameter 2 cm) | 1-7 pieces | 9-12 | 200°C | | |
|  Pork roast | 500-1000 g | 40-60 | 180°C | | Let it rest for 5 minutes before cutting. |
|  Whole fish Around 300-400 g | 1-2 | 18-22 | 200°C | | Cut off the tail if it does not fit into the basket. |
|  Fish filets Around 120 g | 1-3 (1 layer) | 9-12 | 200°C | | In order to avoid sticking, place the skin side to the bottom and add some oil. |
|  Shellfish Around 25-30 g | 200-1500 g | 10-25 | 200°C | Yes | |
|  Cake | 500g 18 oz | 28 | 180°C | | Use a cake pan. |
|  Muffins Around 50 g | 1-9 | 12-14 | 180°C | | Use heat-proof silicone muffin cups. |
|  Quiche (diameter 21 cm) | 1 | 15 | 180°C | | Use a baking tray or oven dish. |
|  Pre-baked toast / bread rolls | 1-6 | 6-7 | 180°C | | |
|  Fresh bread | 700 g | 38 | 160°C | | The shape should be as flat as possible to avoid that the bread touches the heating element when rising. |
|  Fresh rolls Around 80 g | 1-6 pieces | 18-20 | 160°C | | |
| M Chestnuts | 200-2000 g | 15-30 | 200°C | Yes | |

| 👤 | Ingredients | Min.- max. amount | Time (min) | Temperature | Shake, turn, or stir halfway | Note |
|---|-----------------------------------|-------------------|------------|-------------|------------------------------|---|
| M | Mixed vegetable (roughly chopped) | 300-800g | 10-20 | 200°C | Yes | Set the cooking time according to your own taste. |

Using the appliance

Airfrying

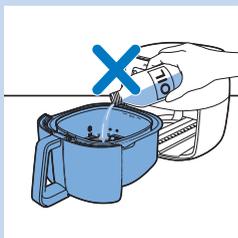

Caution

- This is an Airfryer that works on hot air. Do not fill the pan with oil, frying fat or any other liquid.
- Do not touch hot surfaces. Use handles or knobs. Handle the hot pan and fat reducer with oven-safe gloves.
- This appliance is for household use only.
- This appliance may produce some smoke when you use it for the first time. This is normal.
- Preheating of the appliance is not necessary.


- 1 Place the appliance on a stable, horizontal, level and heat-resistant surface. Make sure the drawer can be opened completely.




Note


- Do not put anything on top or on the sides of the appliance. This could disrupt the airflow and affect the frying result.

- 2 Pull the power cord out of the cord storage compartment at the back of the appliance.

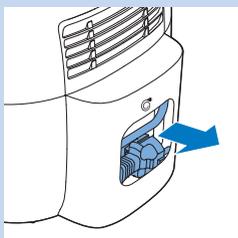


- 3 Put the plug in the wall outlet.

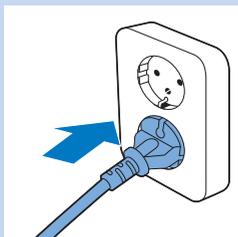

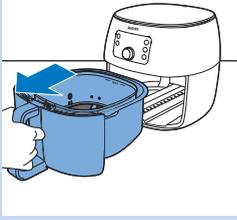


4 Open the drawer by pulling the handle.

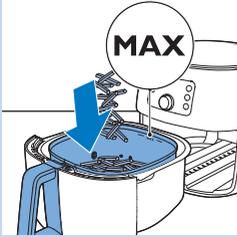

5 Put the ingredients in the basket.

Note


- The Airfryer can prepare a large range of ingredients. Consult the 'Food table' for the right quantities and approximate cooking times.
- Do not exceed the amount indicated in the 'Food table' section or overfill the basket beyond the 'MAX' indication as this could affect the quality of the end result.
- If you want to prepare different ingredients at the same time, make sure you check the suggested cooking time required for the different ingredients before you start to cook them simultaneously.

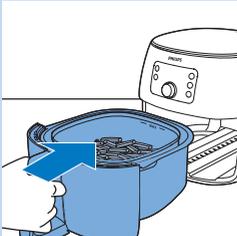


6 Slide the drawer back into the Airfryer by the handle.

Caution

- **Never use the pan without the fat reducer or basket in it. If you heat up the appliance without basket, use oven gloves to open the drawer. The edges and inside of the drawer become very hot.**
- **Do not touch the pan, fat reducer or basket during and for some time after use, as they get very hot.**

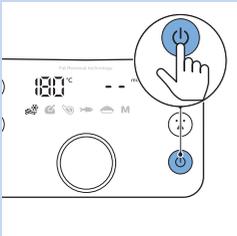


7 Press the Power On/Off (⏻) button to switch on the appliance.

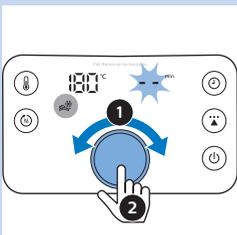

8 To change the preset, turn the QuickControl dial to the desired setting.

- ↳ To confirm the selected preset, push the QuickControl dial. The cooking time indication blinks on the screen.

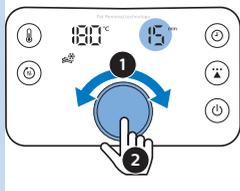

9 To change the cooking time, turn the QuickControl dial to the desired setting.

↳ To confirm the selected cooking time, push the QuickControl dial.

Note

- Refer to the food table with basic cooking settings for different types of food.


10 The appliance starts cooking after the cooking time has been confirmed.

Tip

- To pause the cooking process, push the QuickControl dial. To resume the cooking process, push the QuickControl dial again.

Note


- If you do not set the required cooking time within 30 minutes, the appliance automatically shuts off for safety reasons.
- If “-” is selected as the time indication, the appliance goes into preheating mode.
- Some ingredients require shaking or turning halfway through the cooking time (see ‘Food table’). To shake the ingredients, press the QuickControl dial to pause cooking, open the drawer and lift the basket out of the pan and shake it over the sink. Then slide the pan with the basket back into the appliance, and press the QuickControl dial to resume cooking.
- If you set the timer to half the cooking time, when you hear the timer bell it is time to shake or turn the ingredients. Be sure to reset the timer to the remaining cooking time.

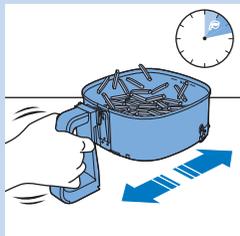

11 When you hear the timer bell, the set preparation time has elapsed.



12 Open the drawer by pulling the handle and check if the ingredients are ready.

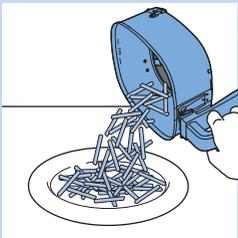

Note

- If the ingredients are not ready yet, simply slide the drawer back into the Airfryer by the handle and add a few extra minutes to the set time.

13 To remove small ingredients (e.g. fries), lift the basket out of the pan by the handle.

! Caution

- After the cooking process, the pan, the fat reducer, the basket, interior housing and the ingredients are hot. Depending on the type of ingredients in the Airfryer, steam may escape from the pan.

14 Empty the basket contents into a bowl or onto a plate. Always remove the basket from the pan to empty contents as hot oil may be in bottom of the pan.

Note


- To remove large or fragile ingredients, use a pair of tongs to lift out ingredients.
- Excess oil or rendered fat from the ingredients is collected on the bottom of the pan below the fat reducer.
- Depending on the type of ingredients cooking, you may want to carefully pour off any excess oil or rendered fat from the pan after each batch or before shaking or replacing the basket in the pan. Place the basket on a heat-resistant surface. Wearing oven-safe gloves, lift the pan off tracks and place on heat-resistant surface. Carefully remove the fat separator from the pan using rubber tipped tongs. Pour off excess oil or rendered fat. Return the fat separator to the pan, the pan to the drawer and the basket to the pan.

When a batch of ingredients is ready, the Airfryer is instantly ready for preparing another batch.


Note

- Repeat steps 1 to 14 if you want to prepare another batch.


Changing to another preset during cooking

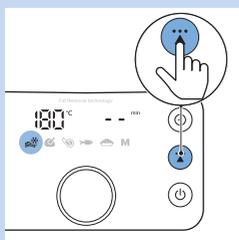


1 Press the preset (⋮) button.

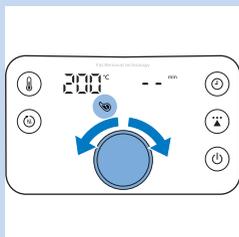


2 Turn the QuickControl dial to select another preset.

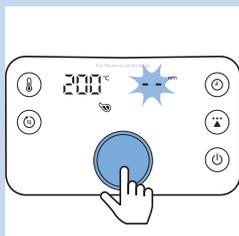

3 To confirm the selected preset, push the QuickControl dial. The cooking time indication blinks on the screen.

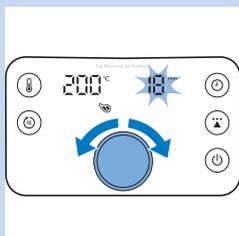


4 To change the cooking time, turn the QuickControl dial.

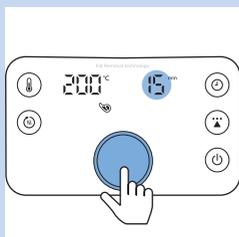


↳ To confirm the selected cooking time, push the QuickControl dial.


Using the manual mode

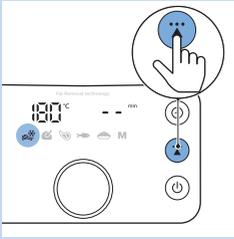

1 Press the preset (⋮) button.

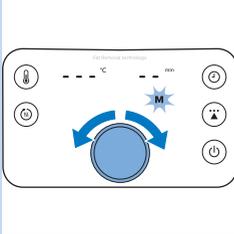


2 Turn the QuickControl dial to select the manual mode (M).

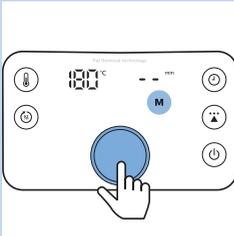


3 Push the QuickControl dial to enter the manual mode.

↳ The default temperature is 180°C.

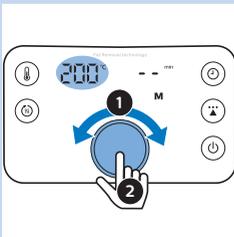

4 To change the temperature, turn the QuickControl dial.

↳ To confirm the temperature, push the QuickControl dial.

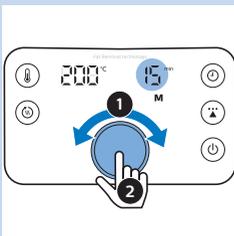


5 After the temperature is confirmed, the time indication “- -” starts blinking.


6 To change the cooking time, turn the QuickControl dial.

↳ To confirm the cooking time, push the QuickControl dial.

Changing the cooking temperature or time at any time


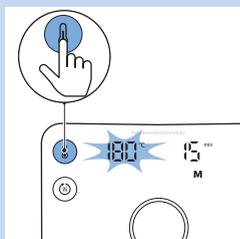


- 1 Press the temperature (ⓘ) or timer (🕒) button.

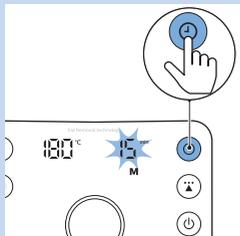

- 2 To change the cooking temperature or time, turn the QuickControl dial.


↳ To confirm the cooking temperature or time, push the QuickControl dial or the temperature/timer button again.

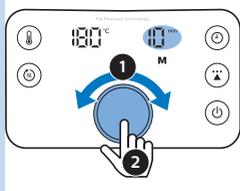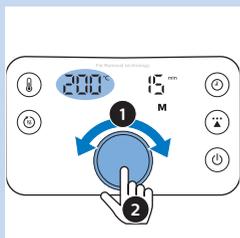

Note


- If you do not press the QuickControl dial or the temperature/timer button to confirm the changes, they will be automatically confirmed after 10 seconds.

Choosing the keep warm mode

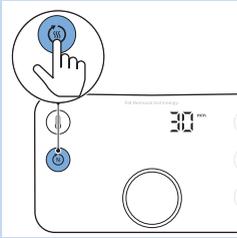

- 1 Press the keep warm (🕒) button (you can activate the keep warm mode at any time).

↳ The keep warm button lights up with pulsing effect.

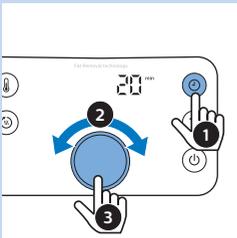

- 2 To pause the keep warm mode, push the QuickControl dial. To resume the keep warm mode, push the QuickControl dial again.

- 3 To exit the keep warm mode, press one of the following buttons: preset button, temperature button, or On/Off button.

Tip

- If food like French fries loses too much crispness during the keep warm mode, either shorten the keep warm time by switching off the appliance earlier or crisp them up for 2-3 minutes at the temperature of 180°C.

Note

- If you activate the keep warm mode during cooking (the keep warm button lights up with pulsing effect), the appliance will keep your food warm for 30 minutes after the cooking time has elapsed.
- During the keep warm mode, the fan and heater inside of the appliance turn on from time to time.
- The keep warm mode is designed to keep your dish warm immediately after it is cooked in the Airfryer. It is not meant for reheating.

Making home-made fries

To make great home-made fries in the Airfryer:

- Choose a potato variety suitable for making fries, e.g. fresh, (slightly) floury potatoes.
- It is best to air fry the fries in portions of up to 1000 grams for an even result. Larger fries tend to be less crispy than smaller fries.
- Shake the basket 2-3 times during the airfrying process.

1 Peel the potatoes and cut into sticks (8x8mm / 0.3 in thick).

2 Soak the potato sticks in a bowl of water for at least 30 minutes.

3 Empty the bowl and dry the potato sticks with a dish towel or paper towel.

4 Pour a half tablespoon of cooking oil in the bowl, put the sticks in the bowl and mix until the sticks are coated with oil.

5 Remove the sticks from the bowl with your fingers or a slotted kitchen utensil so excess oil remains in the bowl.



Note

- Do not tilt the bowl to pour all the sticks in the basket at once to prevent excess oil from going into the pan.

6 Put the sticks in the basket.

7 Fry the potato sticks and shake the basket halfway through the airfrying process. Shake 2-3 times if you prepare more than 500g of fries.



Note

- Consult the chapter "Food table" for the right quantities and cooking times.

Cleaning

Warning

- Let the basket, pan, fat reducer and the inside of the appliance cool down completely before you start cleaning.
- Remove the fat reducer from the pan using rubber tipped tongs. Do not remove using your fingers as hot fat or oil collects under the fat reducer.
- The pan, basket, fat reducer and inside of the appliance have a non-stick coating. Do not use metal kitchen utensils or abrasive cleaning materials as this may damage the non-stick coating.

Clean the appliance after every use. Remove oil and fat from the bottom of the pan after every use.

- 1** Press the power On/Off (⏻) button to switch off the appliance, remove the plug from the wall outlet and let the appliance cool down.

Tip


- Remove the pan and basket to let the Airfryer cool down more quickly.

- 2** Remove the fat separator from the pan using rubber tipped tongs. Dispose of rendered fat or oil from the bottom of the pan.



- 3** Clean the pan, basket and fat reducer in a dishwasher. You can also clean them with hot water, dishwashing liquid and a non-abrasive sponge (see 'cleaning table').

Tip

- If food residues stuck to the pan, fat reducer or basket, you can soak them in hot water and dishwashing liquid for 10-15 minutes. Soaking loosens the food residues and makes it easier to remove. Make sure you use a dishwashing liquid that can dissolve oil and grease. If there are grease stains on the pan, fat reducer or basket and you have not been able to remove them with hot water and dishwashing liquid, use a liquid degreaser.
- If necessary, food residues stuck to the heating element can be removed with a soft to medium bristle brush. Do not use a steel wire brush or a hard bristle brush, as this might damage the coating on the heating element.

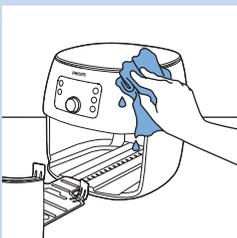

- 4** Wipe the outside of the appliance with a moist cloth.

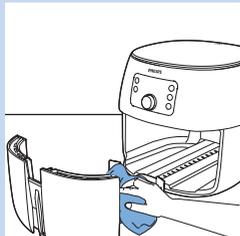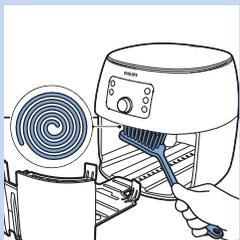

Note

- Make sure no moisture remains on the control panel. Dry the control panel with a cloth after you have cleaned it.

5 Clean the heating element with a cleaning brush to remove any food residues.

6 Clean the inside of the appliance with hot water and a non-abrasive sponge.

Storage

1 Unplug the appliance and let it cool down.

2 Make sure all parts are clean and dry before storing.

3 Insert the cord into the cord storage compartment.

Note

- Always hold the Airfryer horizontally when you carry it. Make sure that you also hold the drawer on the front part of the appliance as it can slide out of the appliance if accidentally tilted downwards. This can lead to damaging of the drawer.
- Always make sure that the removable parts of the Airfryer e.g. removable mesh bottom, etc. are fixed before you carry and/or store it.

Recycling



- This symbol means that this product shall not be disposed of with normal household waste (2012/19/EU).
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

Guarantee and support

If you need information or support, please visit **www.philips.com/support** or read the separate worldwide guarantee leaflet.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit **www.philips.com/support** for a list of frequently asked questions or contact the Consumer Care Center in your country.

| Problem | Possible cause | Solution |
|--|--|---|
| The outside of the appliance becomes hot during use. | The heat inside radiates to the outside walls. | This is normal. All handles and knobs that you need to touch during use stay cool enough to touch. |
| | | The pan, basket, fat reducer, and the inside of the appliance always become hot when the appliance is switched on to ensure the food is properly cooked. These parts are always too hot to touch. |
| | | If you leave the appliance switched on for a longer time, some areas get too hot to touch. These areas are marked on the appliance with the following icon:  As long as you are aware of the hot areas and avoid touching them, the appliance is completely safe to use. |
| My home-made fries do not turn out as I expected. | You did not use the right potato type. | To get the best results, use fresh (slightly) floury potatoes. If you need to store the potatoes, do not store them in a cold environment like in a fridge. Choose potatoes whose package states that they are suitable for frying. |
| | The amount of ingredients in the basket is too big. | Follow the instructions in this user manual to prepare home-made fries (see 'Food table' or download the free Airfryer App). |
| | Certain types of ingredients need to be shaken halfway through the cooking time. | Follow the instructions in this user manual to prepare home-made fries (see 'Food table' or download the free Airfryer App). |
| The Airfryer does not switch on. | The appliance is not plugged in. | When you switch on the appliance, you hear the sound of the working fan. If you do not hear this sound, check if the plug is inserted in the wall outlet properly. |

| Problem | Possible cause | Solution |
|--|---|--|
| | Several appliances are connected to one outlet. | The Airfryer has a high wattage. Try a different outlet and check the fuses. |
| I see some peeling off spots inside my Airfryer. | Some small spots can appear inside the pan of the Airfryer due to the incidental touching or scratching of the coating (e.g. during cleaning with harsh cleaning tools and/ or while inserting the basket). | You can prevent damage by lowering the basket into the pan properly. If you insert the basket at an angle, its side may knock against the wall of the pan, causing small pieces of coating to chip off. If this occurs, please be informed that this is not harmful as all materials used are food-safe. |
| White smoke comes out of the appliance. | You are cooking fatty ingredients and the fat reducer is not put in the pan. | Carefully pour off any excess oil or fat from the pan, place the fat reducer in the pan and then continue cooking. |
| | The pan still contains greasy residues from previous use. | White smoke is caused by greasy residues heating up in the pan. Always clean the pan, basket and fat reducer thoroughly after every use. |
| | Breading or coating did not adhere properly to the food. | Tiny pieces of airborne breading can cause white smoke. Firmly press breading or coating to food to ensure it sticks. |
| | Marinade, liquid or meat juices are splattering in the rendered fat or grease | Pat food dry before placing it in the basket. |
| My display shows 5 dashes as illustrated in the picture below.  | Safety feature has been activated due to overheating of the appliance. | Unplug the appliance and let it cool down for 1 minute before plugging in again. |

