


www.philips.com/support

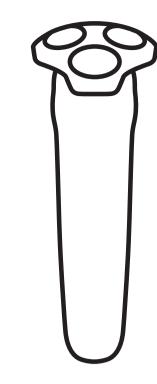



www.philips.com

© 2025 Koninklijke Philips N.V. All rights reserved. Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. (Royal Philips) or their respective owners.

©2024 Koninklijke Philips N.V. 保留所有权利。 规格如有更改,恕不另行通知。 商标由Koninklijke Philips N.V.及各自所有者所有。

3000.130.2826.3 (29/01/2025)







Important safety information Only use the product for its intended household purpose. Read this important

information carefully before you use the product and its batteries and accessories, and save it for future reference. Misuse can lead to hazards or serious injuries. The accessories supplied may vary for different products. The box shows which accessories are supplied with your product and whether your product is Bluetooth enabled.

Warning

- To charge the product, only use a certified safety extra low voltage (SELV) supply unit that complies with China GB standard GB4706.1-2005, 5 V ---≥ 1 A, IPX4, in order to guarantee electrical safety. We advise using Philips HQ87, or an equivalent certified supply unit. If you still need help, please contact the Philips Consumer Care Center. Using a non-certified supply unit may cause hazards or serious injuries.
- Keep the USB cable, the USB supply unit and the charging stand (if provided) dry (Fig. 1).
- This shaver is waterproof (Fig. 2). It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can therefore only be used without cord. Do not modify the supply unit.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Unplug the appliance before cleaning it with water. Do not use a damaged appliance. Replace damaged parts with new Philips
- Only use cold or lukewarm water to clean the appliance.
- Because of hygiene, only one person should use the appliance.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids to clean the appliance.
- Always place the cleaning system on a stable, level and horizontal surface to prevent leakage Always make sure the cartridge compartment is closed before you use the
- cleaning system. Water may drip from the socket at the bottom of the shaver when you rinse
- it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.
- Be careful when handling your smartphone near water and in moist environments.
- The radio waves of Bluetooth-enabled products may impair the operation of pacemakers and other medical devices. Consult your phycisian for advice and
- keep the product at least 20 cm away. Only use original Philips accessories or consumables.
- Charge, use and store the product at a temperature between 10 °C and 35 °C.
- Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures. If the product becomes abnormally hot or smelly, changes color or if charging
- takes longer than usual, stop using and charging the product and contact Philips. Do not place products and their batteries in microwave ovens or on induction
- cookers. Do not open, modify, pierce, damage or dismantle the product or battery to
- prevent batteries from heating up or releasing toxic or hazardous substances.
- Do not short-circuit, overcharge or reverse charge batteries.
- If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care Philips Quick Clean Pod Cartridge fluid

Keep out of reach of children.

Do not swallow

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields. Radio Equipment Directive

S7000 series appliances are equipped with Bluetooth class 2.

- The frequency band in which the Bluetooth on S7000 series appliances operates is 2.4 GHz.
- The maximum radio frequency power radiated in the frequency band in
- which the S7000 series appliances operate is less than 20 dBm. This equipment has been so constructed that the product complies with the requirement of Article 10(2) as it can be operated in at least one EU Member State as examined and the product is compliant with Article 10(10) as it has no restrictions on putting into service in all EU member states.

Hereby Philips declares that \$7000 series appliances are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The declaration of conformity may be consulted at www.philips. com/support

Support

For all product support, please visit www.philips.com/support. Parts that are subject to normal wear (such as shaving heads and cutting units) are not covered by the international warranty.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Shaver

Problem	Possible cause	Solution
I cannot connect the shaver.	You have not downloaded the app.	Download the app.
	Your shaver and smartphone are not paired yet.	Pair your shaver and smartphone following the instructions in the app.
	The first pairing attempt failed.	Unpair your shaver and smartphone and try pairing them again.
	Your smartphone cannot find your shaver.	Make sure your smartphone is equipped with Bluetooth 4.2 or higher.
		Make sure Bluetooth is activated on your smartphone and that the travel lock is switched off on your shaver.
		Make sure that your smartphone is within one meter of your shaver to enable a Bluetooth connection.
		Make sure your shaver is charged.
I want to use the shaver without the app.		You do not have to connect your shaver to your smartphone before each shave. The shaver works fine without the app, although you will not experience the same benefits. To get personalized shaving tips, just make sure that you connect it at least once every 20 shaves to synchronize your shave data.
The appliance does not work when I press the on/off button.	The appliance is still connected to a power source. For safety reasons, the appliance can only be used without cord.	Unplug the appliance and press the on/off button to switch on the appliance.
	The rechargeable battery is empty.	Recharge the battery.
	The travel lock is activated.	Press the on/off button for 3 seconds to deactivate the travel lock.
	The shaving unit is soiled or damaged to such an extent that the motor cannot run.	Clean the shaving heads thoroughly or replace them.
The appliance does not shave as well as it used to.	The shaving heads are damaged or worn.	Replace the shaving heads.
	Hairs or dirt obstruct the shaving heads.	Clean the shaving heads thoroughly.
Water is leaking from the bottom of the appliance.	During cleaning, water may collect between the inner	This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the

Philips Quick Clean P Problem	Possible cause	Solution	
My shaver isn't clean after using the Philips Quick Clean Pod.	You removed the shaver before the cleaning program was finished.	Leave the shaver in the Philips Quick Clean Pod for the full cleaning program. Each cleaning program takes approximately 1 minute. The cleaning icon goes out when the cleaning program is finished.	
	The Philips Quick Clean Pod Cartridge needs to be replaced.	Replace the Philips Quick Clean Pod Cartridge.	
	The Philips Quick Clean Pod is tilted.	Place the Philips Quick Clean Pod on a flat surface.	
My Philips Quick Clean Pod does not switch on.	The Philips Quick Clean Pod is powered by the motor of the shaver.	Place the shaver into the Philips Quick Clean Pod. Switch on the shaver.	
	The appliance is still connected to a power source.	Disconnect the shaver from the supply unit.	
	The shaver battery is empty.	Charge the shaver before using the Philips Quick Clean Pod.	
My Philips Quick Clean Pod is overflowing.	You regularly use the Philips Quick Clean Pod after rinsing the shaver but not shaking off excess water.	Shake off excess water after rinsing the shaving heads each time before putting the shaver into the Philips Quick Clean Pod.	
	You shaved with shaving gel or foam and did not rinse the shaver before using the Philips Quick Clean Pod.	Rinse the shaving heads thoroughly before using the Philips Quick Clean Pod.	

body and the outer shell of the appliance.

Recyclina

- This symbol means that electrical products and batteries shall not be disposed of with normal household waste (Fig. 3).
- Follow your country's rules for the separate collection of electrical products

Removal of built-in rechargeable battery

The built-in rechargeable battery must only be removed by a qualified professional when the appliance is discarded. Before removing the battery, make sure that the appliance is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the appliance and when you dispose of the rechargeable battery

When you handle batteries, make sure that your hands, the product and the batteries are dry.

To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard them.

- Check if there are screws in the housing of the appliance. If so, remove them. Remove any additional screws, panels or parts of the appliance until you see
- the printed circuit board with the rechargeable battery
- Remove the rechargeable battery.

Apple, the Apple logo, iPad, and iPhone are trademarks of Apple Inc., registered

in the U.S. and other countries. App Store is a service mark of Apple Inc. Android is a trademark of Google Inc. Google Play and the Google Play logo are

trademarks of Google Inc.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Koninklijke Philips N.V. is under

简体中文

重要安全信息 仅可将本产品用于预期家用用途。使用本产品及其电池和

附件之前,请仔细阅读本重要信息,并妥善保管以供日后 参考。 使用不当可能会导致危害或严重伤害。 随附的附件 可能因产品而异。 包装盒上会显示产品随附的附件以及产品是否支持

Bluetooth. 警告

为产品充电时,请必须使用符合GB4706.1-2005标准 的5V---、≥1A、IPX4安全超低电压(SELV)电源适配 器,以确保电气安全。我们建议使用飞利浦电源适配器 HQ87或同等且经认证的电源适配器。 若您需要帮助, 可 联系 飞利浦客户服务中心。 使用未经认证的电源适配器 可能会导致危害或严重伤害。

- 保持 USB 线缆、USB 电源部件和充电座(如有提供)干 燥(图1)。
- 警告符号注释:禁止用在打开的水龙头下进行清洗 (图 1)
- 该剃须刀具有防水性能(图 2)。适合在沐浴或淋浴时使 用,也可以放在水龙头下清洗。 出于安全原因,该剃须 刀在使用时不能连接电线。
- 符号注释:适合于在洗澡或淋浴时使用(图 2)。允许 在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本器
- 请勿改装电源部件。
- 本产品也可以由8岁或以上年龄的儿童以及肢体不健 全、感觉或精神上有障碍或缺乏相关经验和知识的人士 使用,但前提是有人对他们使用本产品进行监督或指 导,以确保他们安全使用,并且让他们明白相关的危 害。 切勿让儿童玩弄本产品。 不要让儿童在无人监督的 情况下对本产品进行清洁和保养。
- 用水清洁产品前,请先将电源插头拔掉。
- 请勿使用已经损坏的产品。 请用新的飞利浦部件更换损 坏的部件。
- 请仅使用冷水或温水清洁产品。
- 出于卫生考虑,仅能由一个人使用本产品。
- 切勿使用压缩气体、钢丝绒、研磨性清洁剂或腐蚀性液 体清洁设备。
- 清洁系统必须放在稳定、平坦的水平表面上,以防漏
- 使用清洁系统前,请始终确保滤芯仓已关闭。
- 冲洗剃须刀时,水可能从产品底部的插口漏出。这是正 常现象,而且没有危险,因为所有电子元件都封闭在剃 须刀内部的密封电源部件中。
- 请勿在包含电动空气清新器的墙壁插座上或其周围使用 电源部件,以免电源部件受到不可修复的损坏。
- 在靠近水边或在潮湿的环境中使用智能手机时请多加留 带有蓝牙功能产品的无线电波可能会影响心脏起搏器及

其他医疗设备的工作。 请咨询您的医生,并将本产品保

- 持至少 20 厘米的距离。
- 请仅使用飞利浦原装附件或消耗品。 充电、使用和存放本产品的温度应介于 10°C至 35°C之间。
- 请将产品和电池远离火源,切勿将其暴露于阳光直射处 或高温下。
- 如果产品异常发热或发出异味、变色或充电时间比平时 长,请停止使用并停止为其充电,并联系 Philips。
- 切勿将产品及其电池放置在微波炉中或电磁炉上。 - 为防止电池发热或释放有毒有害物质,切勿打开、改 装、刺穿、损坏或拆卸产品或电池。切勿使电池短路、 过度充电或反向充电。
- 如果电池损坏或出现泄漏,请避免与皮肤或眼睛接触。 如果不慎接触,请立即用清水冲洗并就医。

飞利浦须刀清洁中心滤芯液

- 请置于儿童接触不到的地方。

- 切勿吞食。

电磁场 (EMF)

本Philips产品符合所有有关暴露于电磁场的适用标准和法 规。 无线电设备指令

- S7000 系列产品配备蓝牙 Class 2。
- S7000 系列产品的蓝牙工作频带为 2.4 GHz。 S7000 系列产品工作频带内发送的最大射频功率小于 20
- 该设备的构造使产品符合第 10 条第 (2) 款的要求,根据 检查,其可以在至少一个欧盟成员国中使用,同时该产
- 品符合第 10 条第 (10) 款的要求,因为其在所有欧盟成 员国中使用均不受限制。 飞利浦特此声明, \$7000 系列产品符合指令 2014/53/
- EU 中的基本要求和其他相关规定。 有关符合性声明的内 容, 请参阅 www.philips.com/support。

支持

有关所有产品支持, 请访问

www.philips.com/support.

正常使用会出现磨损的部件(例如剃须刀头和修剪部件) 不在国际保修条款的涵盖范围之内。

S7837, S7832, S7388, S7389 产品中有害物质的名称及含量						
	有害物质					
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCB's 集成电路板	Х	0	0	0	0	0
Electrical contact pins 电接触片	Х	0	0	0	0	0
未実格依据CI/T 1	木耒校桥据SI/T 1136/的初宁编制					

公表情依据377 11364的观定编制。 O:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。 X:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求

		S7836 产品中	有害物质的名			
	有害物质					
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCB's 集成电路板	×	0	О	О	О	0
Electrical contact pins 电接触片	×	О	O	О	0	0
Power plug 电源插头	X	0	0	0	0	0

- 该表格中所显示的"有害物质"在产品正常使用情况下不 会对人身和环境产生任何伤害。

O: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下

X: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求

该表格中所显示的"有害物质"及其存在的部件向消费者 和回收处理从业者提供相关物质的存在信息,有助于产 品废弃时的妥善处理。

PHILIPS

产品:飞利浦电动剃须刀型号: \$7837 IPX7 空号: 5/83/ 额定电压: 3.6V === 额定输入功率: 1.7W 充电电压/电流: 5V===/1A 生产日期: 请见产品本体 产地: 中国广东珠海

珠海经济特区飞利浦家庭电器有限公司 珠海市金湾区三灶镇定湾二路365号 全国顾客服务热线: 4008 800 008

本产品的型号核准代码标识在产品标牌上

本产品根据国标 GB4706.1-2005 GB4706.9-2008,工信部无【2021】 129号制造

不包含电源适配器。使用者必须使用符合GB4706.1-2005标准的5V===、≥1A、IPX4电源适配器,以确保电气安全。

PHILIPS 飞利浦电动剃须刀

产品: 飞利浦 型号: S7832 IPX7 额定电压: 3.6V == 额定输入功率: 1.7W 充电电压/电流: 5V === 生产日期: 请见产品本体 产地:中国广东珠海

珠海经济特区飞利浦家庭电器有限公司 珠海市金湾区三灶镇定湾二路365号 全国顾客服务热线: 4008 800 008 本产品根据国标 GB4706.1-2005

本产品的型号核准代码标识在产品标牌上

GB4706.9-2008, 工信部无【2021】 129号制造 不包含电源适配器。使用者必须使用符合 GB4706.1-2005标准的5V === 、≥1A、IPX4电源适配器,以确保电气安全。

PHILIPS

产品: 飞利浦电动剃须刀型号: S7836 额定电压: 100-240V~ 额定频率: 50/60Hz 额定输入功率: 11W 生产日期: 请见产品本体 产地: 中国广东珠海

本产品的型号核准代码标识在产品标牌上 珠海经济特区飞利浦家庭电器有限公司 珠海市金湾区三灶镇定湾二路365号 全国顾客服务热线: 4008 800 008

IPX4

本产品根据国标 GB4706.1-2005 GB4706.9-2008,工信部无【2021】 129号制造

PHILIPS


产品: 飞利浦电动剃须刀 57389 IPX7 型号: 5/389 额定电压: 3.6V=== 额定输入功率: 1.7W 充电电压/电流: 5V===/1A 生产日期: 请见产品本体 产地:中国广东珠海

本产品的型号核准代码标识在产品标牌上 珠海经济特区飞利浦家庭电器有限公司 珠海市全湾区三灶镇定湾二路365号

全国顾客服务热线: 4008 800 008 本产品根据国标 GB4706.1-2005, GB4706.9-2008,工信部无【2021】

129号制造 不包含电源适配器。使用者必须使用符合

GB4706.1-2005标准的5V**===** 、≥1A、IPX4电源适配器,以确保电气安全。



PHILIPS

产品: 飞利浦电动剃须刀型号: S7388 IPX7 至5: 3/300 節定电压: 3.6V === 额定输入功率: 1.7W 充电电压/电流: 5V===/1A 生产日期: 请见产品本体 产地: 中国广东珠海

本产品的型号核准代码标识在产品标牌上 珠海经济特区飞利浦家庭电器有限公司 珠海市金湾区三灶镇定湾二路365号 全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.9-2008,工信部无【2021】 129号制造

不包含电源适配器。使用者必须使用符合 GB4706.1-2005标准的5V==-、≥1A、IPX4电源适配器,以确保电气安全。

保留备用

发行日期: 23/01/2025

故障种类和处理方法

本章归纳了使用本产品时最常见的一些问题。如果您无 法根据以下信息解决问题,请访问 www.philips.com/ support 查阅常见问题列表,或联系您所在国家/地区的客 户服务中心。

剃须刀

制须刀 问题	可能的原因	解决方法
无法连接剃 须刀。	应用程序尚未下 载。	下载应用程序。
	剃须刀和智能手 机未尚未配对。	请按照应用程序中的说明 将剃须刀和智能手机配 对。
	首次尝试配对失 败。	请先取消剃须刀与智能手 机的配对,并尝试重新配 对。
	您的智能手机找 不到剃须刀。	请确保您的智能手机配备 了蓝牙 4.2 或更高版本。
		确保在智能手机上已激活 蓝牙,并且已关闭剃须刀 上的旅行锁。
		确保智能手机与剃须刀之 间的距离在一 米以内,以 便启用蓝牙连接。
		请确保剃须刀已充电。
我想在没有 应用程序的 情况下使用 本剃须刀。		不必每次剃须前都将剃须 刀连接到智能手机。 剃须 刀在没有该应用程序的情 况下也能正常工作,但您 的体验会打折扣。 要获得 个性化的剃须提示,只需 确保每剃须 20 次至少连 接一次,以便同步剃须数 据。
按下开/关按钮时,产品不工作。	产品仍连接电源。 出于安全 原因,本产品在 使用时不能连接 电线。	拔掉产品插头并按开/关 按钮打开产品。
	充电电池的电量 已耗尽。	给电池充电。
	旅行锁功能处于 激活状态。	长按开/关按钮3秒解除旅 行锁功能。
	剃须刀头部件被 污染或损坏,导 致马达无法运 行。	彻底清洁剃须刀头或将其 更换。
产品的剃须 效果不如以 前好。	剃须刀头已损坏 或磨损。	更换剃须刀头。
	毛发或污垢堵塞	彻底清洁剃须刀头。

外壳之间。

水从产品底

部漏出。

了剃须刀头。

在清洁过程中,

这是正常现象,而且没有

水可能聚集在产 危险, 因为所有电子元件

品的机身内部与 都封闭在产品内部的密封

电源部件中。

飞利浦须刀清洁中心					
问题	可能的原因	解决方法			
使用飞利浦须刀 清洁中心后,剃 须刀依旧不干 净。	您在清洁程序结 束前取出剃须 刀。	请将剃须刀放在飞 利浦须刀清洁中心 中以完成整个清洁 程序、每个清洁 程序大约需要1分 钟。清洁程序结 束后,清洁图标熄 灭。			
	需要更换飞利浦 须刀清洁中心滤 芯。	更换飞利浦须刀清 洁中心滤芯。			
	飞利浦须刀清洁 中心倾斜。	将飞利浦须刀清洁 中心置于平面上。			
飞利浦须刀清洁 中心无法启动。	飞利浦须刀清洁 中心由剃须刀的 马达驱动。	将剃须刀放入飞利 浦须刀清洁中心 中。 打开剃须刀。			
	产品仍连接电 源。	断开剃须刀与电源 部件的连接。			
	剃须刀电池电量 耗尽。	在使用飞利浦须刀 清洁中心前,请给 剃须刀充电。			
飞利浦须刀清洁中心溢水。	经常在冲洗剃须 刀后但未甩掉多 余水分时使用飞 利浦须刀清洁中 心。	每次冲洗剃须刀头 后都要甩掉多余的 水分,然后再将剃 须刀放入飞利浦须 刀清洁中心中。			
	您在用剃须啫喱 或剃须泡沫剃须 后,并未冲洗剃 须刀,就使用飞 利浦须刀清洁中 心。	使用飞利浦须刀清 洁中心之前,请彻 底冲洗剃须刀头。			

回收

- 此符号表示电器产品和电池不能与一般的生活垃圾一同
- 请遵守您所在国家/地区有关分类回收电器产品和电池的 规定。

取出内置充电电池 在废弃器具前,必须将电池从器具中取出。在取出电池

时,器具必须要断电。电池应安全地处置。

当您使用工具打开产品时以及在您弃置充电电池时,请采 取必要的安全保护措施。

处理电池时,请确保您的双手、产品和电池都是干燥的。

为避免电池拆卸后发生意外短路,切勿让电池端子接触金 属物体(例如硬币、发夹、戒指)。 切勿用铝箔包裹电 池。 在丢弃之前,请用胶带将电池端子粘住或将电池放在 塑料袋中。

- 1. 检查产品的外壳中是否有螺丝。 如果有,请将其拆下。
- 2. 请拆下产品的其他螺丝、面板或部件,直到看见带有充 电电池的印刷电路板。
- 3. 卸下充电电池。

商标

Apple、Apple 徽标、iPad 和 iPhone 是 Apple Inc. 在美 国和其他国家/地区注册的商标。App Store 是 Apple Inc.

Android 是 Google Inc. 的商标。Google Play 和 Google Play 徽标是 Google Inc. 的商标。

Bluetooth®文字标志和徽标是归 Bluetooth SIG, Inc. 所有 的注册商标,Koninklijke Philips N.V. 对此类商标的任何 使用均已获得许可。

包装盒内有什么?



随附的附件可能因产品而异。包装盒上会显示随附于您产品的附件。

如何将剃须刀和智能手机连接?







剃须

(4)



在水龙头下冲洗剃须刀












1

如何为产品充电?



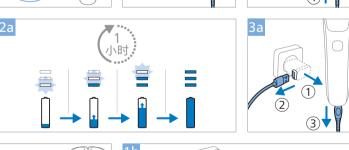

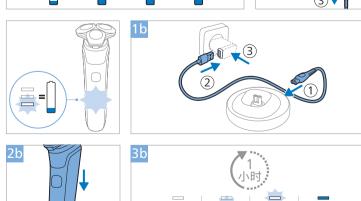

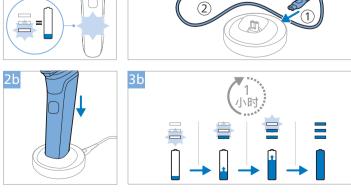






更换须刀清洁液









旅行锁









使用前拔掉充电器

