

**PHILIPS**

Professional  
Display Solutions

5214U Series

# User Manual

43HFL5214U/96  
50HFL5214U/96  
55HFL5214U/96  
65HFL5214U/96

---

# Contents

<b>1 Display Tour</b>	<b>3</b>	10.2 Open the Android display Home Screen	23
1.1 Professional Mode	3	10.3 Android display Settings	23
<b>2 Setting Up</b>	<b>4</b>	10.4 Connect your Android display	26
2.1 Read Safety	4	10.5 Internet	28
2.2 Display Stand and Wall Mounting	4	10.6 Software	29
2.3 Tips on Placement	4	<b>11 Help and Support</b>	<b>31</b>
2.4 Power Cable	5	11.1 Troubleshooting	31
<b>3 Switching On and Off</b>	<b>6</b>	11.2 Online Help	32
3.1 On or Standby	6	11.3 Support and Repair	32
3.2 Keys on Display	6	<b>12 Safety and Care</b>	<b>34</b>
<b>4 Remote Control</b>	<b>7</b>	12.1 Safety	34
4.1 Key overview	7	12.2 HEALTH CARE FACILITY APPARATUS	35
4.2 IR Sensor	8	12.3 Important and RoHS regulations	35
4.3 Batteries	8	<b>13 Terms of Use</b>	<b>37</b>
<b>5 Specifications</b>	<b>9</b>	13.1 Terms of Use - Display	37
5.1 Environmental	9	<b>14 Copyrights</b>	<b>38</b>
5.2 Power	9	14.1 HDMI	38
5.3 Operating System	9	14.2 Dolby Audio	38
5.4 Reception	9	14.3 DTS-HD	38
5.5 Display Type	10	14.4 Wi-Fi Alliance	38
5.6 Display Input Resolution	10	14.5 Kensington	38
5.7 Connectivity	10	14.6 Other Trademarks	38
5.8 Sound	10	<b>15 Open Source</b>	<b>39</b>
<b>6 Connect Devices</b>	<b>11</b>	15.1 Open Source Software	39
6.1 Connect Devices	11	15.2 Open Source License	39
6.2 Home Theatre System - HTS	12	15.3 Announcements	39
6.3 Blu-ray Disc Player	13	<b>Index</b>	<b>40</b>
6.4 Headphones	13		
6.5 Game Console	13		
6.6 USB Flash Drive	13		
6.7 Computer	13		
<b>7 Videos, Photos and Music</b>	<b>15</b>		
7.1 From a USB Connection	15		
7.2 Play your Videos	15		
7.3 View your Photos	15		
7.4 Play your Music	17		
<b>8 Games</b>	<b>18</b>		
8.1 Play a Game	18		
<b>9 Professional Menu App</b>	<b>19</b>		
9.1 About the Professional Menu App	19		
9.2 Open the Professional Menu App	19		
9.3 Recommended	19		
9.4 Google Cast	19		
9.5 Games	20		
9.6 More	20		
9.7 Professional Settings	21		
9.8 Google Account	22		
<b>10 Android display Home Screen</b>	<b>23</b>		
10.1 About the Android display Home Screen	23		

# Display Tour

---

## Professional Mode

---

### What you can do

In Professional Mode ON, you can have access to a large number of expert settings that enable advanced control of the display's state or to add additional functions.

This mode is intended for installations of display's in places such as hotels, cruise ships, stadia or any other business area where such control is required.

If you use the display at home, it is recommended to use it in Professional Mode OFF.

Please consult the Professional installation manual for further details.

# Setting Up

## 2.1

### Read Safety

Read the safety instructions first before you use the display.

## 2.2

### Display Stand and Wall Mounting


#### Display Stand

You can find the instructions for mounting the display stand in the Quick Start Guide that came with the display. In case you lost this guide, you can download it from [www.philips.com](http://www.philips.com).

Use the product type number of the display to look for the Quick Start Guide to download.

#### Wall Mounting

Your display is also prepared for a VESA-compliant wall mount bracket (sold separately). Use the following VESA code when purchasing the wall mount . . .

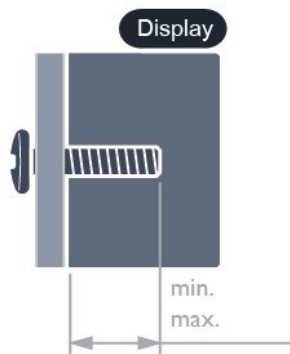

- 43HFL5214U  
VESA MIS-F 100x200, M6 (min.: 6 mm, max.:8 mm)
- 50HFL5214U  
VESA MIS-F 200x200, M6 (min.: 18 mm, max.:22 mm)
- 55HFL5214U  
VESA MIS-F 200x200, M6 (min.: 14 mm, max.:16 mm)
- 65HFL5214U  
VESA MIS-F 300x300, M6 (min.: 18 mm, max.:22 mm)

#### Preparation

First remove the 2 plastic screw caps out of the threaded bushes on the back of the display (for 5214U 55" only).

Make sure that the metal screws, to mount the display to the VESA-compliant bracket, go about 10mm deep inside the threaded bushes of the display.

#### Caution

Wall mounting the display requires special skills and should only be performed by qualified personnel. The display wall mounting should meet safety standards according to the display's weight. Also read the safety precautions before positioning the display. TPV bears no responsibility for improper mounting or any mounting that results in accident or injury.

## 2.3

### Tips on Placement


- Position the display where light does not shine directly on the screen.
- The ideal distance to watch display is 3 times its diagonal screen size. When seated, your eyes should be level with the centre of the screen.

#### Note:

Please keep the display away from dust-producing sources such as stoves. It is suggested to clean the dust regularly to avoid getting dust into the display.

## Power Cable

- Insert the power cable into the **POWER** connector on the back of the display.
- Make sure the power cable is securely inserted in the connector.
- Make sure that the power plug, in the wall socket, is accessible at all times.
- When you unplug the power cable, always pull the plug, never pull the cable.

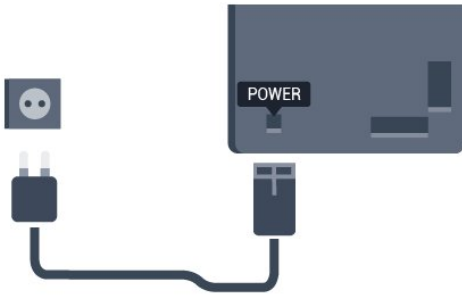

---

# Switching On and Off





---

## 3.1


### On or Standby

Make sure the display is connected to the mains AC power. Connect the supplied power cord to the AC in connector at the back of the display. The indicator light at the bottom of the display lights up.

#### Switch on

Press  on the remote control to switch the display on. Alternatively, press / /  Home. You can also press the small joystick key on the back or bottom of the display to switch the display on in case you can't find the remote control or its batteries are empty.

#### Switch to standby

To switch the display to standby, press  on the remote control. You can also press the small joystick key on the back or bottom of the display.

In standby mode, the display is still connected to the mains power but consumes very little energy.

To switch off the display completely, disconnect the power plug.

When disconnecting the power plug, always pull the power plug, never the cord. Ensure that you have full access to the power plug, power cord and outlet socket at all times.

---




## 3.2

### Keys on Display

If you lost the remote control or its batteries are empty, you can still do some basic display operations.


To open the basic menu...

1 - With the display switched on, press the joystick key on the back of the display to bring up the basic menu.

2 - Press left or right to select  Volume or  Sources. Select  Demo, to start a demo movie.

3 - Press up or down to adjust the volume or tune to the next or previous programme. Press up or down to go through the list of sources. Press the joystick key to start the demo movie.


4 - The menu will disappear automatically.

To switch the display on standby, select  and press the joystick key on the back or bottom of the display.

# Remote Control

## Key overview

### Top

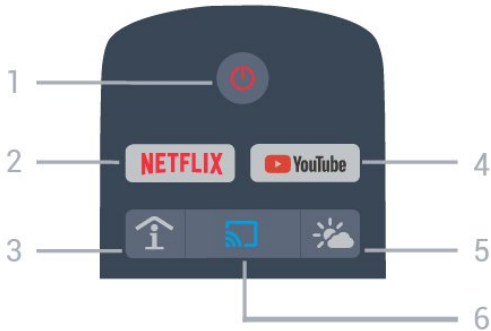

1 - Standby / On

To switch the display on or back to Standby.

2 - **NETFLIX**

To open the Netflix App directly. (With the display switched on or from standby.)

• If you have a Netflix membership subscription, you can enjoy Netflix on this display. Your display must be connected to the Internet.

• To open Netflix, press **NETFLIX** to open the Netflix App. You can open Netflix immediately from a display in standby.

[www.netflix.com](http://www.netflix.com)

3 - SMART INFO (Only in Professional Mode ON)

To show information provided by the Hotel.

4 - Youtube

To open Youtube.

5 - Weather (Only in Professional Mode ON)

To show the weather information of your location.

6 - Google Cast (Only in Professional Mode ON)

To mirror the content of your mobile device display on to the display.

### Middle



1 - SETTINGS

To open the settings menu.

2 - GUIDE

To open a list of the current and scheduled display programmes.

3 - BACK

• To switch back to the previous programme you selected.

• To return to previous menu.

4 - OPTIONS

To open or close the options menu.

5 - OK key

To confirm a selection or setting.

6 - Arrow / navigation keys

To navigate up , down , left or right .

7 -

To switch to the next or previous programme in the programm list.

8 - EXIT

To switch back to watching display.

9 - Home

To open the Home menu.

---

## Bottom



- 1 - Clock  
To display the clock.
- 2 - Volume  
To adjust the volume level.
- 3 - Number keys  
To select a display programme directly.
- 4 - Subtitle  
To switch subtitles on, off or Automatic.
- 5 - Programme  
To switch to the next or previous programme in the programme list.
- 6 - Mute  
To mute the sound or to restore it.
- 7 - AD  
Not available for this display.
- 8 - color keys  
Direct selection of options.

---

## 4.2

### IR Sensor

The display can receive commands from a remote control that uses IR (infrared) to send commands. If you use such a remote control, always make sure you point the remote control at the infrared sensor on the front of the display.

#### Warning

Do not put any objects in front of IR sensor of the display, it may block the IR signal.

---

## 4.3

### Batteries

If the display does not react on a key press on the remote control, the batteries might be empty.

To replace the batteries, open the battery compartment on the keyboard side of the remote control.

1 - Slide the battery door in the direction shown by the arrow.

2 - Replace the old batteries with 2 type AAA-R03-1.5V batteries. Make sure the + and the - ends of the batteries line up correctly.

3 - Reposition the battery door and slide it back until it clicks.

- Remove the batteries if you are not using the remote control for a long time.
- Safely dispose of your old batteries according to the end of use directions.



# Specifications

## 5.1

### Environmental

#### Product Fiche

##### 43HFL5214U

- Visible Screen Size : 108 cm / 43 inch
- Standby Power Consumption (W) : 0.4 W
- Display Resolution (Pixels) : 3840 x 2160p

##### 50HFL5214U

- Visible Screen Size : 126 cm / 50 inch
- Standby Power Consumption (W) : 0.4 W
- Display Resolution (Pixels) : 3840 x 2160p

##### 55HFL5214U

- Visible Screen Size : 139 cm / 55 inch
- Standby Power Consumption (W) : 0.4 W
- Display Resolution (Pixels) : 3840 x 2160p

##### 65HFL5214U

- Visible Screen Size : 164 cm / 65 inch
- Standby Power Consumption (W) : 0.4 W
- Display Resolution (Pixels) : 3840 x 2160p

\* When the display is turned off with the remote control and no function is active. Power consumption in full standby mode < 0.4. It takes several minutes going to full standby.

### End of Use

#### Disposal of your old product and batteries

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



Please recycle used batteries



Drained or discharged batteries must be recycled or discarded according to relevant laws and regulations. For more detailed information, please contact the unit

responsible for solid waste disposal in your country. (Display disposal method)

According to Environmental Protection Administration regulations, displays must be properly disposed of to avoid any negative impact on the environment. When disposing of a display, please use one of the following methods:

1. When purchasing a new display, you can entrust your old display to the seller for recycling.
2. You can contact the service hotline for the Resource Recycling Management Fund Committee on Electronic and Electrical Appliances Waste at : 0800-085-717.

Please take time to learn more about the different recycling processes for electrical and electronic products in your local area.

Please ensure to follow local regulations, do not dispose of your old products together with general household waste. Disposing of your old electronic products correctly will minimise any negative impact on the environment and the health of others.

Please take time to research the relevant regulations for battery recycling in your local area. Disposing of your batteries correctly will minimise any negative impact on the environment and the health of others.

## 5.2

### Power

Product specifications are subject to change without notice. For more specification details of this product, see [www.philips.com/support](http://www.philips.com/support)

#### Power supply

- Mains power: AC 110–240 V, 50–60Hz
- Ambient temperature: 5°C to 35°C
- Power-saving features: Eco mode, Picture mute (for radio), Auto switch-off timer, Eco settings menu.

## 5.3

### Operating System

Android OS :

Android Pie 9

---

5.4

## Reception

- Digital video playback : MPEG2 SD/HD (ISO/IEC13818-2) MPEG4 SD/HD (ISO/IEC 14496-10)
- Digital audio playback (ISO/IEC 13818-3)

---

5.5

## Display Type

### Diagonal screen size

- 108 cm / 43 inch
- 126 cm / 50 inch
- 139 cm / 55 inch
- 164 cm / 65 inch

### Display resolution

- 3840 x 2160

---

5.6

## Display Input Resolution

### Video formats

#### Resolution — Refresh rate

- 480i - 60 Hz
- 480p - 60 Hz
- 576i - 50 Hz
- 576p - 50 Hz
- 720p - 50 Hz 、 60 Hz
- 1080i - 50 Hz 、 60 Hz
- 1080p - 24 Hz 、 25 Hz 、 30 Hz 、 50 Hz 、 60 Hz
- 2160p - 24 Hz 、 25 Hz 、 30 Hz 、 50 Hz 、 60 Hz

#### • Computer formats

#### Resolutions (amongst others)

- 640 x 480p - 60 Hz
- 800 x 600p - 60 Hz
- 1024 x 768p - 60 Hz
- 1280 x 800p - 60 Hz
- 1280 x 960p - 60 Hz
- 1280 x 1024p - 60 Hz
- 1440 x 960p - 60 Hz
- 1600 x 1200p - 60 Hz
- 1920 x 1080p - 60 Hz
- 3840 x 2160p - 24 Hz 、 25 Hz 、 30 Hz 、 50 Hz 、 60 Hz

---

5.7

## Connectivity

### Side

- USB 1 - USB 2.0
- Headphones - Stereo mini-jack 3.5mm
- HDMI 1 in - ARC - Ultra HD

### Bottom

- Network LAN - RJ45
- HDMI 2 / 3 in - ARC - Ultra HD
- USB 2 - USB 2.0
- 8 **Ω** Audio out
- DATA(RJ-48)

---

5.8

## Sound

- Output power (RMS) : 20W
- Dolby Audio

# Connect Devices

## Connect Devices

### Connectivity Guide

Always connect a device to the display with the highest quality connection available. Also, use good quality cables to ensure a good transfer of picture and sound.

When you connect a device, the display recognizes its type and gives each device a correct type name. You can change the type name if you wish. If a correct type name for a device is set, the display automatically switches to the ideal display settings when you switch to this device in the Sources menu.

### Connect to network






Information input from the network.






LAN transmission rate: Supported rate is less than or equal to 100 / 10Mbps network.






### HDMI ports

#### Operate devices

To operate a device connected to HDMI and set up with EasyLink, select the device - or its activity - in the list of display connections.

Professional Mode OFF – Press / /  Home, select  Apps, select  SOURCES. Choose a device connected to an HDMI connection and press OK.

Professional Mode ON – Press / /  Home, select  TV, select  Sources. Choose a device connected to an HDMI connection and press OK.

Once the device is selected, the display remote control can control the device. However / /  Home and  OPTIONS keys and some other display keys are not forwarded to the device. If the key you need is not on the display remote control, you can select the key in the Options menu. Press  OPTIONS and select Controls in the menu bar. On the screen, select the device key you need and press OK.

Some very specific device keys might not be available


in the Controls menu.

Note: Only devices that support EasyLink Remote Control function will respond to the display remote control.

### HDMI Quality

An HDMI connection has the best picture and sound quality. One HDMI cable combines video and audio signals. Use an HDMI cable for display signal.

For best signal quality transfer, use a High speed HDMI cable and do not use an HDMI cable longer than 5 m.

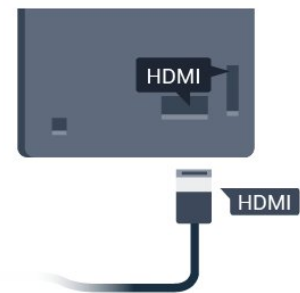

### Copy protection


HDMI cables support HDCP (High-bandwidth Digital Content Protection). HDCP is a copy protection signal that prevents copying content from a DVD disc or Blu-ray Disc. Also referred to as DRM (Digital Rights Management).

### HDMI ARC

All of the HDMI connections on the display have HDMI ARC.

If the device, typically a Home Theatre System (HTS), also has the HDMI ARC connection, connect it to any of the HDMI connections on this display. With the HDMI ARC connection, you do not need to connect the extra audio cable that sends the sound of the display picture to the HTS. The HDMI ARC connection combines both signals.

You can use any HDMI connection on this display to connect the HTS but ARC is only available for 1 device/connection at a time.

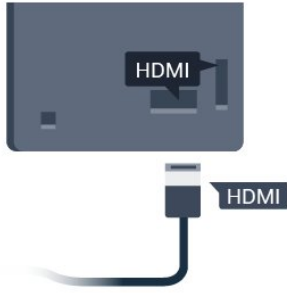


## HDMI CEC - EasyLink

An HDMI connection has the best picture and sound quality. One HDMI cable combines video and audio signals. Use an HDMI cable for High Definition (HD) display signals. For best signal quality transfer, use a High speed HDMI cable and do not use an HDMI cable longer than 5 m.

Connect HDMI CEC-compatible devices to your display, you can operate them with the display remote control.

EasyLink HDMI CEC must be switched on on the display and the connected device.

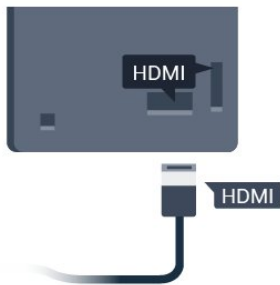

### Note:

- EasyLink might not work with devices from other brands.
- The HDMI CEC functionality has different names on different brands. Some examples are: Anynet, Aquos Link, Bravia Theatre Sync, Kuro Link, Simplink and Viera Link. Not all brands are fully compatible with EasyLink. Example HDMI CEC branding names are property of their respective owners.

## EasyLink On or Off

You can switch EasyLink on or off. The display comes with the EasyLink settings switched on.

To switch off EasyLink completely...

Professional Mode OFF – Press //

Home. Press (down), select **Settings** and press **OK**.

Select **Sources > EasyLink**, and press **OK**.

Select **EasyLink**, and press **OK**.

Select **Off** and press **OK**.

Press **BACK**, repeatedly if necessary, to close the menu.

Professional Mode ON – Please refer to the installation manual.

## EasyLink Remote Control

If you want devices to communicate but you don't want to operate them with the display remote control, you can switch off EasyLink Remote Control separately.

To switch EasyLink Remote Control on or off...

Professional Mode OFF – Press // Home. Press (down), select **Settings** and press **OK**.

Select **Sources > EasyLink**, and press **OK**.

Select **EasyLink Remote Control** and press **OK**.

Select **On** or **Off** and press **OK**.

Press **BACK**, repeatedly if necessary, to close the menu.

Professional Mode ON – Please refer to the installation manual.

## 6.2

# Home Theatre System - HTS


## Connect with HDMI ARC

Use an HDMI cable to connect a Home Theatre System (HTS) to the display. You can connect a Philips Soundbar or an HTS with a built-in disc player.

### HDMI ARC

If your Home Theatre System has an HDMI ARC connection, you can use any HDMI connection on the display to connect. With HDMI ARC, you do not need to connect the extra audio cable. The HDMI ARC connection combines both signals.

All HDMI connections on the display can offer the ARC signal. But once you have connected the Home Theatre System, the display can only send the ARC signal to this HDMI connection.

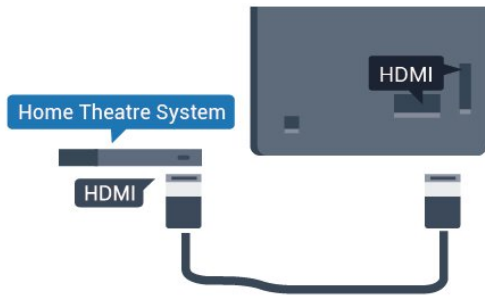


### Audio to video synchronisation (sync)

If the sound does not match the video on screen, you can set a delay on most Home Theatre Systems with a disc player to match the sound with the video.

6.3

## Blu-ray Disc Player


Use a High speed HDMI cable to connect the Blu-ray Disc player to the display.

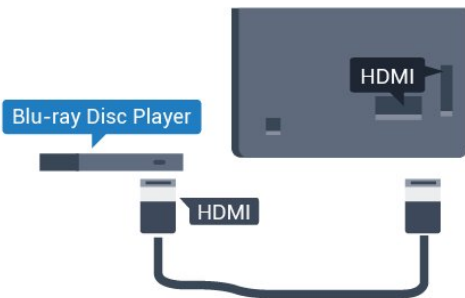


If the Blu-ray Disc player has EasyLink HDMI CEC, you can operate the player with the display remote control.

6.4

## Headphones

You can connect a set of headphones to the  connection on the back of the display. The connection is a mini-jack 3.5mm. You can adjust the volume of the headphones separately.

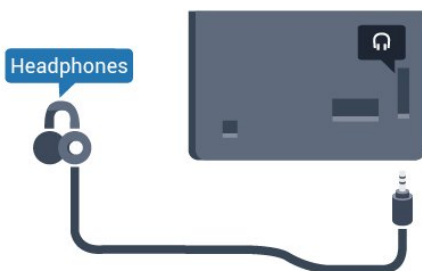


6.5

## Game Console

### HDMI

For best quality, connect the game console with a High speed HDMI cable to the display.

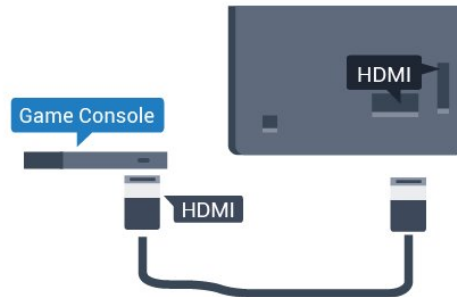

6.6

## USB Flash Drive

You can view photos or play your music and videos from a connected USB flash drive.


Insert a USB flash drive in one of the USB connections on the display while the display is switched on.









The display detects the flash drive and opens a list showing its content.

If the contents list does not appear automatically...

Professional Mode

OFF – Press  /  /  Home, select  Apps, select  Sources. Choose USB press  OK.

Professional Mode On – Press  /  /  Home, select  TV, select  SOURCES. Choose USB and press  OK.

To stop watching the USB flash drive content, press  or select another activity.

To disconnect the USB flash drive, you can pull out the flash drive anytime.


# Computer

## Connect

You can connect your computer to the display and use the display as a PC monitor.

### With HDMI

Use an HDMI cable to connect the computer to the display.

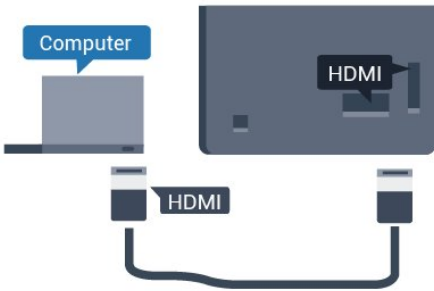

## Ideal Setting

If you connect a computer, we advise you to give the connection, on which the computer is connected, the correct device type name in the Source menu. If you switch to **Computer** in the Source menu, the display is set to the ideal Computer setting automatically.

To set the display to the ideal setting...

Professional Mode OFF – Press Home. Press (down), select **Settings** and press **OK**.

Select **Picture** and press (right) to enter the menu. Select **Picture Style > Computer** and press **OK**.

Select **On** or **Off**, and press **OK**.

Press repeatedly if necessary, to close the menu.

Professional Mode

ON – Press Home >

More > **Settings** > **Picture**. Press **OK**.

Select **Picture Style > Computer** and press **OK**.

Select **On** or **Off**, and press **OK**.

Press repeatedly if necessary, to close the menu.

(For professional mode information, please refer to Installation manual)





# Videos, Photos and Music

## From a USB Connection

You can view your photos or play your music and videos from a connected USB flash drive or USB Hard Drive.

With the display switched on, plug in a USB flash drive or a USB Hard Drive to one of the USB connections. The display detects the device and will list your media files.

If the list of files does not appear automatically...

- 1 - Press , select  Sources.
- 2 - Select  Media Browser and press **OK**.
- 3 - You can browse your files in the folder structure you have organised on the drive.
- 4 - To stop playing videos, photos and music, press .

## Play your Videos








### Play Videos

#### Open video folder

- 1 - Press , select  Sources.
- 2 - Select  Media Browser, select  Videos and press **OK**.

To go back to the folder, press .

#### Play a video






- 1 - Press , select  Sources.
- 2 - Select  Media Browser, select  Videos and press **OK**.
- 3 - Select one of video, you can press  Play all to play all files in the folder or press  Mark as favourite to add the selected video to favourite menu -  Favourites.

To pause the video, press **OK**. Press **OK** again to continue.


#### Control bar

To show or hide the control bar when a video is playing, press **OK**.



- 1 - Progress bar
- 2 - Playback control bar
  - : Jump to the previous video in a folder
  - : Jump to the next video in a folder
  - : Rewind
  - : Fast forward
  - : Pause the playback
- 3 - Mark as favourites
- 4 - Play all videos
- 5 - Subtitle: switch subtitles On, Off or On During Mute.
- 6 - Subtitle language: select a Subtitle Language (Not available for Professional Mode ON.)
- 7 - Audio language: select an audio language
- 8 - Shuffle: play your files in a random order
- 9 - Repeat: plays all videos in this folder once or continuously

### Video Options

During the video playback, press  **OPTIONS**, select **Info** and press **OK** to...

- **Mark as Favourite** – Set the selected video as favourite.
- **Play All** – Play all video files in this folder.
- **Subtitles** – If available, you can switch subtitles **On**, **Off** or **On During Mute**.
- **Audio Language** – If available, select an Audio Language.
- **Shuffle** – Play your files in a random order.
- **Repeat** – Plays all videos in this folder once or continuously.

## View your Photos

---

## About Photo Menu

You can quickly find a photo using sorting:

- 1 - Press **Sort** (yellow).
- 2 - Select **Most Recent First, Oldest First, A > Z, Z > A**.

---

## View Photos


Open photo folder

- 1 - Press **≡**, select **Sources**.
- 2 - Select **Media** Browser, select **Photos** and press **OK**.

View a photo

- 1 - Press **≡**, select **Sources**.
- 2 - Select **Media** Browser, select **Photos** and press **OK**.
- 3 - Select **Photos** and select one of photos, you can press **Slide show** to play all files in the folder or press **Mark favourite** to add the selected photo to favourite menu - **Favourites**.

Control bar

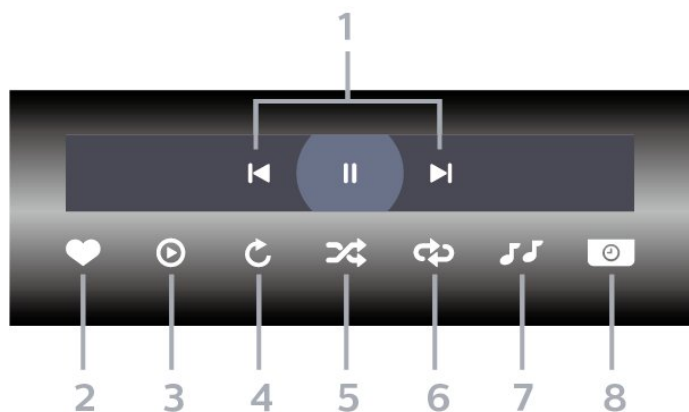

- 1 - Playback control bar
  - **◀**: Jump to the previous photo in a folder
  - **▶**: Jump to the next photo in a folder
  - **⏸**: Pause the slideshow playback
- 2 - Mark as favourites
- 3 - Start a slideshow
- 4 - Rotate the photo
- 5 - Shuffle: play your files in a random order
- 6 - Repeat: plays all photos in this folder once or continuously
- 7 - Stop the music playing in the background (Not available in Professional Mode ON)
- 8 - Set the speed of the slide show

---

## Photo Options

During the video playback, press **⊕ OPTIONS**, select **Info** and press **OK** to...

- Mark as favourites
- Start a slideshow
- Rotate the photo
- Shuffle: play your files in a random order
- Repeat: plays all photos in this folder once or continuously
- Stop the music playing in the background (Not available in Professional Mode ON)
- Set the speed of the slide show

---

## View 360 Photos


Open 360 Photos folder

- 1 - Press **SOURCES**, select **USB** and press **OK**.
- 2 - Select **USB Devices** and press **>** (right) to select the USB device you need.
- 3 - Select **360 Photos**, you can press **Mark favourite** to add the 360 photos folder to favourite menu.

View a 360 photo

- 1 - Press **SOURCES**, select **USB** and press **OK**.
- 2 - Select **USB Devices** and press **>** (right) to select the USB device you need.
- 3 - Select **360 Photos** and select one of photos, you can press **Slide show** to play all files in the folder or press **Mark favourite** to add the selected photo to favourite menu - **Favourites**.

Control bar

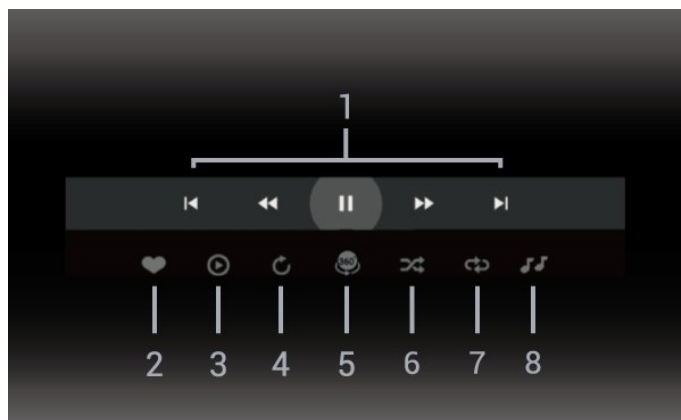

- 1 - Playback control bar
  - **◀**: Jump to the previous photo in a folder
  - **▶**: Jump to the next photo in a folder
  - **⏮**: Rewind playback at 2x, 4x, 32x speed



- ▶▶ : Wind playback at 2x, 4x, 32x speed
- || : Pause the playback

- 2 - Mark as favourites
- 3 - Play one / Play all: play one photo or play all photos in this folder.
- 4 - Manual mode /Auto mode: when the 360 player is started, it will auto pan the selected 360 photo from left to right (0 to 360 degrees) in 360 view. When manual mode is entered, the 360 player will stop auto panning/rotating to allow manually panning/rotating with the remote control keys.
- 5 - Little Planet view: Little Planet is an alternate and fun view of 360 photo. When Little Planet view is started, the 360 photo will be rendered in a wrapped around view like a planet.
- 6 - Shuffle: play your files in a random order.
- 7 - Repeat: plays all photos in this folder once or continuously.
- 8 - Stop the music playing in the background.

---

## 360 Photo Options

Browse 360 photo files...

- List/Thumbnails – List or thumbnails views
- Shuffle – Play your files in a random order
- Repeat – Play your files once or continuously
- Slide Show Speed – Set the speed of the slide show
- Stop music – Stop background music playing

---

7.4

## Play your Music

---





### About Music Menu

You can quickly find a music using classification: Genres, Artists, Albums, Tracks.






---


## Play Music

Open Music folder


- 1 - Press , select  Sources.
- 2 - Select  Media Browser, select  Music and press **OK**.

Play music

- 1 - Press , select .
- 2 - Select  Media Browser, select  Music and press **OK**.
- 3 - You can press  Mark favourite to add the

- music folder to favourite menu -  Favourites.
- 4 - You can quickly find a music using classification
  - Genres, Artists, Albums, Tracks.

Control bar

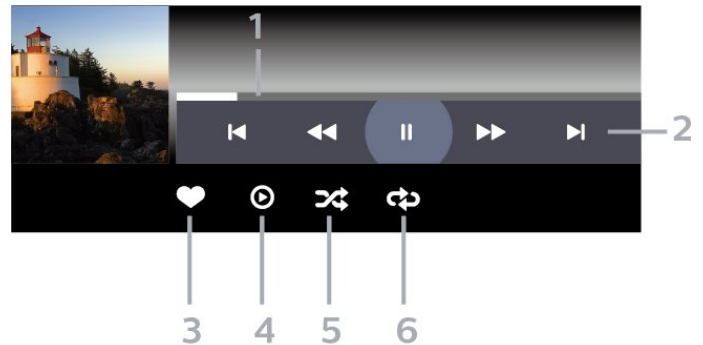


- 1 - Progress bar
- 2 - Playback control bar
  - ◀ : Jump to the previous music in a folder
  - ▶ : Jump to the next music in a folder
  - ◀◀ : Rewind
  - ▶▶ : Fast forward
  - || : Pause the playback

- 3 - Mark as favourites
- 4 - Play all music
- 5 - Shuffle: play your files in a random order
- 6 - Repeat: plays all music in this folder once or continuously

---

## Music Options

During playing the music, press  **OPTIONS**, select **Info** and press **OK** to...

- Mark as favourites
- Play all music
- Shuffle: play your files in a random order
- Repeat: plays all music in this folder once or continuously

---

# Games

---

## Play a Game

---



### From a Game Console


To start a game from a Game Console...


Switch on the Game Console.

Professional Mode OFF – Press // Home, select  Apps. Choose Sources and press OK.



Start the game.


Press  BACK repeatedly or press  EXIT or stop the app with its dedicated exit/stop button.

For more information on connecting a Game Console, in [Help](#), press the colour key  Keywords and look up [Game Console, connect](#).

Professional Mode ON – Press  SOURCES and select a game console or the name of the connection.

Start the game.





Press  BACK repeatedly or press  EXIT or stop the app with its dedicated exit/stop button.

For more information on connecting a Game Console, in [Help](#), press the colour key  Keywords and look up [Game Console, connect](#).

---





### By Apps

To start a game from a Game Apps...

Professional Mode Off – Press // Home, select  Apps and then select Google Play Games.

Sign in your Google account and start a game.

Press  BACK repeatedly or press  EXIT or stop the app with its dedicated exit/stop button.

Professional Mode ON – Press // Home. Select  Games.

Sign in your Google account and start a game.

Press  BACK repeatedly or press  EXIT or stop the app with its dedicated exit/stop button.







# Professional Menu App

9.1






## About the Professional Menu App

From the Professional Menu App, you can start any activity you can do with the display.

The left part of the Professional Menu App is organised in rows...

- Recommended 
- Programme 
- Cast 
- Apps 
- Games 
- More 

The upper right part of the Professional Menu App is organised in rows...



- Manage Account
- Messages  (This in an optional function depends on Hotel's internal settings.)
- Bill  (This in an optional function depends on Hotel's internal settings.)
- Set Alarm 
- Weather 
- Menu Language 
- Current Time

9.2

## Open the Professional Menu App

Professional Mode OFF - Please refer to Chapter "Android display Home Screen".

Professional Mode ON - To open the Professional Menu App and open an item...

- 1 - Open the Professional Menu App by pressing Home  / .
- 2 - Select an activity by using the arrow keys and press **OK** to start the activity.
- 3 - To close the Professional Menu App without changing the current activity, press **←**.






When opening the Professional Menu App, the background application/content playback will stop. You have to select the application or content from the Professional Menu App to resume.

9.3

## Recommended

To open the Professional Menu App and open Recommended...

- 1 - Open the Professional Menu App.
- 2 - Select **Recommended**  and press **OK** to open or start it.
- 3 - Select . Choose a programme from the list and press OK.
- 4 - Select  Apps. Choose an App from the list and press OK.

9.4

## Google Cast

### What You Need

If an app on your mobile device has Google Cast, you can cast your app on this display. On the mobile app, look for the Google Cast icon. You can use your mobile device to control what's on display. Google Cast works on Android and iOS.

Your mobile device must be connected to the same Wi-Fi home network as your display.

### Apps with Google Cast

New Google Cast apps come available every day. You can already try it with YouTube, Chrome, Netflix, Photowall ... or Big Web Quiz for Chromecast. See also [google.com/cast](http://google.com/cast)

Some Google Play products and features aren't

available in all countries.


Find more information  
on [support.google.com/androidtv](http://support.google.com/androidtv)

---

## Cast to Your display

To cast an app to the display...

To open the Professional Menu App and open Cast...





- 1 - Open the Professional Menu App.
- 2 - Select **Cast**  and press **OK** to open or start it.
- 3 - Connect Smart Phone to display by using Wi-Fi Direct (Scan the QR code or use the WiFi SSID and the password). Open an app which supports Google Cast.
- 4 - Tab the Google Cast icon.
- 5 - Select the display you would like to cast to.
- 6 - Press play on your smartphone or tablet. What you selected should start playing on display.

---

9.5

## Games

To open the Professional Menu App and open Games...

- 1 - Press / /  Home to open the Professional Menu App.
- 2 - Select **Games**  and press **OK**.






### Ideal game setting

For some games, where speed and precision is needed, set the display to the ideal **Game** setting before you start playing.

If your game console is added as a **Game** type of device in the Sources menu (list of connections), the display is set to the ideal Game setting automatically.

If the type of your game console is set as **Player** and used as a disc player most of the time, leave the device type set to **Player**.

To set the display to the ideal setting manually . . .



- 1 - Select / /  Home > **More** >  **Settings** >  **Picture** > **Picture style**.
- 2 - Select **Game** and press **OK**.
- 3 - Press **←**, repeatedly if necessary, to close the menu. Remember to set the Game or computer setting back to Off when you stop playing the game.





---

9.6






## More


To open the Professional Menu App and open More...

- 1 - Open the Professional Menu App.
- 2 - Select **More**  and press **OK** to open or start it.
- 3 - Select  **Settings**.




- **Picture**  :  
Switch between the preset picture styles. There are ideal styles for watching movies or photos, etc.
- **Sound**  :  
Switch between the preset sound styles. There are ideal styles for watching movies, listening to music or playing a game.
- **Picture Format**  :  
Select a picture format that fits the screen.
- **Menu Language**  :  
Select your language and press OK.

- 4 - Select  **Features**, and press OK.


- **Set alarm**  :  
An alarm can be set on the display. The display can wakeup on a defined alarm time. Alternatively, alarm time can be set by pressing the  button on the remote control.
- **Sleep Timer**  :  
With the slider bar you can set the time to up to 180 minutes in increments of 5 minutes. If set to 0 minutes, the sleep timer is switched off. You can always switch off your display earlier or reset the time during the countdown.
- **Weather**  :  
Display the observed temperature, it contains 5 days of weather forecast for the current location. Alternatively, alarm time can be set by pressing the  button on the remote control.

- **Guide** :  
Set the display to receive Guide data from the broadcaster or from the Internet.
- **TalkBack**  :  
Talkback helps visual-impaired users interact with and enjoy this display by using spoken word to let him know of what's on screen.


- 5 - Select **Personal**  and press OK.

- **Bill**  : It allows the hotel guest to view his/her hotel bill during his/her stay. (Only in Professional Mode ON.)
- **Messages**  :  
Guests shall be notified when new messages from Hotel are received on the display. (Only in Professional Mode ON.)
- **Message Display**  :  
Change the way Message notifications will be

shown. (Only in Professional Mode ON.)

· Manage Account  :

While signing in to Google account by using phone or laptop, make sure that the phone or laptop is connected to the same network as the display, then enter the code shown on display to complete sign in process. Guest can also use Google account email address and password to sign in.

· Clear History  :

Clear personal credentials from all applications (Also cleared automatically upon check-out, only in Professional Mode ON.)

---

9.7

## Professional Settings


---

### Picture Style

Select a style

Press // Home >  More >  Settings >  Picture > Picture style.

For easy picture adjustment, you can select a preset picture style.

- Personal - The picture preferences you set during the first start up.
- Vivid - Ideal for daylight viewing
- Natural - Natural picture settings
-  Standard - Most energy conscious setting - Factory setting
- Movie - Ideal for watching movies
- Game - Ideal for playing games
- Computer - Ideal for connecting to computer







---

### Picture Format

Select picture format

If the picture is not filling the whole screen, if black bars are showing on the top or bottom or at both sides, you can adjust the picture to fill the screen completely.

To select one of the basic settings to fill the screen...

Press // Home >  More >  Settings >  Picture format.







The following format can be available according the picture on screen.

- Wide screen
- Fill screen
- Fit to Screen
- Unscaled

---

## Sound Style

Select a style

Press // Home >  More >  Settings >  Sound > Sound style.







For easy sound adjustment, you can select a preset setting with sound style.

- Personal - Your personal choices made in Personalise picture and sound
- Original - Most neutral sound setting
- Movie - Ideal for watching movies
- Music - Ideal for listening to music
- Game - Ideal for gaming
- News - Ideal for speech

---

## Language

Change the language of the display menu and messages







Press // Home >  More >  Settings >  Menu Language.

Select your language and press **OK**.

---

## Eco Settings




Set screen off to save energy consumption



Press // Home >  More >  Features >  Sleep Timer > Screen Off.

If you only listen to music on display, you can switch off the display.

Only the display will switch off. To switch the screen back on, press any key on the remote control.

Set Display switch off timer

Press // Home >  More >  Features >  Sleep Timer > Sleep Timer.

Press the arrows  (up) or  (down) to adjust the value. The value 0 (Off) deactivates the automatic switch off.

Select Switch off timer, the display switches off automatically to save energy.

\* display switches off if receiving a display signal but you don't press a key on the remote control during a 4 hour period.

\* display switches off if not receiving a display signal nor a remote control command for 10 minutes.

\* If you use this model as a monitor and you do not

use the remote control of the model, you should deactivate this automatic switch off, to set the value to 0.

---

9.8

## Google Account

---




### Sign In

To enjoy the full capabilities of your Philips Android display, you can sign in to Google with your Google Account.

By signing in you'll be able to play your favourite games across phone, tablet and display. You'll also get customised video and music recommendations on your display home screen as well as access to YouTube, Google Play and other apps.

Use your existing **Google Account** to sign in to Google on your display. A Google Account consists of an email address and a password. If you don't have an Google Account yet, use your computer or tablet to create one (accounts.google.com). If you did not sign in during the first display installation, you can always sign in later.

### Sign In

Press / /  > Open the Professional Menu App screen.

Choose the Manage Account at the upper right part of the Professional Menu App screen and press **OK**. With the on-screen keyboard, enter your email address and password, press the same **OK** key to sign in.

# Android display Home Screen

## 10.1

### About the Android display Home Screen

To enjoy the benefits of your Android display, connect the display to the Internet.

Like on your Android smartphone or tablet, the Home screen is the centre of your display. From the Home screen you can decide what to watch by browsing entertainment options from app and live display. Your Home has lists to let you discover great contents from your favourite apps. You can also add additional lists or find new apps to get more contents.

## 10.2

### Open the Android display Home Screen

Professional Mode ON - please refer to the installation manual.

Professional Mode OFF - To open the Android display Home Screen and open an item...

1 - Press Menu and navigate to 'Philips Collection', then press OK.

2 - Select an activity using the arrow keys and press **OK** to start the activity.

3 - To close the Home menu without changing the current activity, press **←**.



When opening the Android display Home screen, the background application/content playback will stop. You have to select the application or content from the

Android display Home screen to resume.

## 10.3

### Android display Settings

#### Picture

##### Picture Settings

##### Picture Style

##### Select a style

Press **⏠/⏠/⏠** Home > **⚙️** Settings > Picture > Picture style.

For easy picture adjustment, you can select a preset picture style.

- Personal - The picture preferences you set during the first start up.
- Vivid - Ideal for daylight viewing
- Natural - Natural picture settings
- **🔪** Standard - Most energy conscious setting - Factory setting
- Movie - Ideal for watching movies
- Game - Ideal for playing games
- Computer - Ideal for connecting to computer

##### Customise a Style

Any picture setting you adjust, like Colour or Contrast, is stored in the currently selected **Picture Style**. It allows you to customise each style.

Only the style **Personal** can save its settings for each source in the Sources menu.

#### Colour, Contrast, Sharpness, Brightness

##### Adjust the picture colour

Press **⏠/⏠/⏠** Home > **⚙️** Settings > Picture > Colour.

Press the arrows **▲** (up) or **▼** (down) to adjust the colour saturation value of the picture.

##### Adjust the picture contrast

Press **⏠/⏠/⏠** Home > **⚙️** Settings >

Picture > Contrast. Press the arrows **▲** (up) or **▼** (down) to adjust the contrast value of the picture.

You can decrease contrast value to reduce power consumption.

##### Adjust the picture sharpness

Press **⏠/⏠/⏠** Home > **⚙️** Settings > Picture > Sharpness.

Press the arrows ▲ (up) or ▼ (down) to adjust the sharpness value of the picture.

### Adjust brightness

Press / / Home > Settings > Picture > Brightness.

Press the arrows ▲ (up) or ▼ (down) to set the level of brightness of the picture signal.

**Note:** Setting of brightness much away from reference value (50) may result lower contrast.

---

## Advanced Picture Settings

---

### Colour Settings

---

#### Advanced Colour Settings

##### Adjust the colour enhancement

Press / / Home > Settings > Picture > Advanced > Colour > Colour Enhancement.

Select **Maximum**, **Medium**, or **Minimum** to set the level of the colour intensity and the details in bright colours.

##### Select the preset colour temperature

Press / / Home > Settings > Picture > Advanced > Colour > Colour Temperature.

Select **Normal**, **Warm**, or **Cool** to set the colour temperature for your preference.

##### Customise colour temperature

Press / / Home > Settings > Picture > Advance

d > Colour > Custom Colour temperature.

Select **Custom** in Colour temperature menu to customise a colour temperature yourself. Press the arrows ▲ (up) or ▼ (down) to adjust the value. WP is white point and BL is black level. You can also select one of the presets in this menu.

---

## Advanced Contrast Settings

---

### Contrast Modes

Press / / Home > Settings > Picture > Advanced > Contrast > Contrast mode.

Select **Normal**, **Optimized for picture**, or **Optimized for energy savings** to set the display automatically reduces the contrast, for best power consumption or for best picture experience, or select **Off** to switch off the adjustment.

---

## Dynamic Contrast

Press / / Home > Settings > Picture > Advanced > Contrast > Dynamic contrast.

Select **Maximum**, **Medium**, or **Minimum** to set the level at which the display automatically enhances the details in the dark, middle and light areas of the picture.

---

## Video Contrast, Gamma

### Video contrast

Press / / Home > Settings > Picture > Advanced > Contrast > Video contrast.

Press the arrows ▲ (up) or ▼ (down) to adjust the video contrast level.

### Gamma

Press / / Home > Settings > Picture > Advanced > Contrast > Gamma.

Press the arrows ▲ (up) or ▼ (down) to set a non-linear setting for picture luminance and contrast.

---

## Advanced Sharpness Settings

---

### Ultra Resolution

Press / / Home > Settings > Picture > Advanced > Sharpness > Ultra Resolution.

Select **On** to have a superior sharpness in line edges and details.

---

## Picture Clean

---

### Noise reduction

Press / / Home > Settings > Picture > Advanced > Picture clean > Noise reduction.

Select **Maximum**, **Medium**, or **Minimum** to set the level for removing the noise in video content. Noise is mostly visible as small moving dots in on-screen picture.



---

## MPEG Artefact Reduction

Press Home > Settings > Picture > Advanced > Picture clean > MPEG Artefact Reduction.

Select Maximum, Medium, or Minimum to have different degrees of smoothing the artefacts in digital video content.

MPEG artefacts are mostly visible as small blocks or jagged edges in on-screen images.

---

## Picture Format

If the picture is not filling the whole screen, if black bars are showing on the top or bottom or at both sides, you can adjust the picture to fill the screen completely.

To select one of the basic settings to fill the screen...

- 1 - While watching display, press Home > Settings > Picture > Picture Format.
- 2 - Select a format from the list and press **OK**.
- 3 - Press **← BACK**, repeatedly if necessary, to close the menu.

The following format can be available according to the picture on screen . . .

- Wide screen
- Fill screen
- Fit to Screen
- Unscaled

---

## Sound

### Sound Style

Select a style

Press Home > Settings > Sound > Sound style.

For easy sound adjustment, you can select a preset setting with sound style.

- Personal - Your personal choices made in Personalise picture and sound
- Original - Most neutral sound setting
- Movie - Ideal for watching movies
- Music - Ideal for listening to music
- Game - Ideal for gaming
- News - Ideal for speech

---

### Sound Management

Select a device.

Press Home > Settings >

Sound > Sound Management.  
Configure the audio output devices.

- Display Speakers - Set the display to play the sound on display or on the connected audio system.
- Headphone/Bathroom speakers - On/Off.
- Headphone/Bathroom Spk Fixed Vol - When enabled, the volume level of the Headphone/Bathroom speaker will be fixed to the Switch on Settings.
- Headphone Detection - On/Off.

---

### Display placement

Press Home > Settings > Sound > display Placement.

Select On a display stand or On the wall to have best sound reproduction according to the setting.

---

## Eco Settings

### Sleep Timer

Press Home > Settings > Eco Settings > Sleep Timer.

Set the display to switch to standby automatically after a preset time. To disable this feature, please set time to zero.

Press the arrows **▲** (up) or **▼** (down) to adjust the value. The value 0 (Off) deactivates the automatic switch off.

Select Switch off timer, the display switches off automatically to save energy.

\* display switches off if receiving a display signal but you don't press a key on the remote control during a 4 hour period.

\* display switches off if not receiving a display signal nor a remote control command for 10 minutes.

---

### Screen Off

Press Home > Settings > Eco Settings > Screen Off.

If you only listen to music on display, you can switch off the display screen.





Only the display screen will switch off. To switch the screen back on, press any key on the remote control.

---

## Region, and Language

---

### languages

Press / /  Home >  Settings > Region, and Language > Languages.

Set the region or language settings.

- Android system / Menu Language - Change the language for menus and messages.
- Primary Audio - Set your highest preference for audio language in broadcasts.
- Secondary Audio - Set your next preference for audio language in broadcasts.
- Primary Subtitles - Set your highest preference for subtitles language in broadcasts.
- Secondary Subtitles - Set your next preference for subtitles language in broadcasts.
- Primary Text - Set your first preference for Text language in broadcasts.
- Secondary Text - Set your next preference for Text language in broadcasts.





---

## Universal Access Settings

Press / /  Home >  Settings > Accessibility > Universal access.

With Universal Access switched on, the display is prepared for use for the deaf, hard of hearing, blind or partially sighted people.

### Switch on universal access settings





Press / /  Home >  Settings > Accessibility > Universal access > On.


### Universal access for hearing impaired people



Press / /  Home >  Settings > Accessibility > Universal access > Hearing impaired > On.

- Switched on, the display automatically switches to the adapted audio and subtitles, if available.

### Universal access for blind or partially sighted people

Press / /  Home >  Settings > Accessibility > Universal access > Audio description > Audio description > On.

 Settings > Accessibility > Universal access > Audio description > Mixed volume, Audio effects, Speech.





- Select Mixed volume, you can mix the volume of the normal audio with the audio commentary. Press the arrows  (up) or  (down) to adjust the value.
- Set Audio effect to On for extra audio effects in the commentary audio, like stereo or fading sound.
- Select Speech to set speech preference, Descriptive or Subtitles.

---

## Content Rating





---

### Rating Level

Press / /  Home >  Settings > Content rating.

To prevent children from watching a programme not suitable for their age, you can set an age rating. When the age rating of a programme is equal to or higher than the age you have set as age rating for your child, the programme will be locked. To watch a locked programme, you must enter the code first.

### To set an age rating

Press / /  Home >  Settings > Content rating > Rating Level.

Select the age and press OK. To switch off the age rating, select None. However, in some countries you must set an age rating.

---

### Set Code and Change Code

Press / /  Home >  Settings > Content rating.

The child lock code is used to lock or unlock programmes.

Set new code or reset change code.

Press / /  Home >  Settings > Content rating > Change Code.

Note:

If you forgot your PIN code, you can override the current code use **8888** and enter a new code.

---

10.4

## Connect your Android display

---

### Network and Internet

---

#### Home Network

To enjoy the full capabilities of your Philips Android display, your display must be connected to the Internet.

Connect the display to a home network with a high-speed Internet connection. You can connect your display wirelessly or wired to your network router.

---

## Connect to Network

---

### Wireless Connection

---

#### What You Need

To connect the display to the Internet wirelessly, you need a Wi-Fi router with a connection to the Internet.

Use a high-speed (broadband) connection to the Internet.



---

#### Make the Connection

##### Make the Connection - WIRELESS

Press Home > Settings > Wireless and Networks > Connect to Network > WIRELESS.

1 - In the list of found networks, select on your wireless network. If your network is not in the list because the network name is hidden (you switched off the SSID broadcast of the router), select Add New Network to enter the network name yourself.

2 - Depending on the type of router, enter your encryption key - WEP, WPA or WPA2. If you entered the encryption key for this network before, you can select OK to make the connection immediately.

3 - A message will be shown when the connection is successful.

##### Make the Connection - WPS

Press Home > Settings > Wireless and Networks > Connect to Network > WPS.

If your router has WPS, you can directly connect to the router without scanning for networks. If you have devices in your wireless network that use the WEP security encryption system, you cannot use WPS.

1 - Go to the router, press the WPS button and return to the display within 2 minutes.

2 - Select Connect to make the connection.

3 - A message will be shown when the connection is successful.

##### Make the Connection - WPS WITH PIN Code

Press Home > Settings > Wireless

and Networks > Connect to Network > WPS WITH PIN Code.

If your router has WPS with a PIN code, you can directly connect to the router without scanning for networks. If you have devices in your wireless network that use the WEP security encryption system, you cannot use WPS.

1 - Write down the 8-digit PIN code shown on screen and enter it in the router software on your PC. Consult the router manual on where to enter the PIN code in the router software.

2 - Select Connect to make the connection.

3 - A message will be shown when the connection is successful.

---

#### Problems

##### Wireless network not found or distorted

- Microwave ovens, DECT phones or other Wi-Fi 802.11b/g/n/ac devices in your proximity might disturb the wireless network.

- Make sure that the firewalls in your network allow access to the display's wireless connection.

- If the wireless network does not work properly in your home, try the wired network installation.

##### Internet does not work

- If the connection to the router is OK, check the router connection to the Internet.

##### The PC and Internet connection are slow

- Look in your wireless router's user manual for information on indoor range, transfer rate and other factors of signal quality.

- Use a high-speed (broadband) Internet connection for your router.

##### DHCP

- If the connection fails, you can check the DHCP (Dynamic Host Configuration Protocol) setting of the router. DHCP should be switched on.


---

#### Wired Connection

---

##### What You Need

To connect the display to the Internet, you need a network router with a connection to the Internet. Use a high-speed (broadband) connection to the Internet.

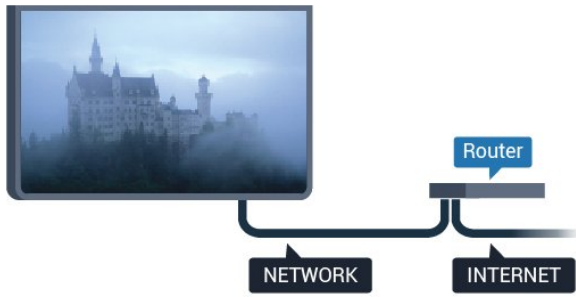


---

## Make the Connection

### Make the Connection - WIRED

Press Home > Settings > Wireless and Networks > Connect to Network > WIRED.

- 1 - Connect the router to the display with a network cable (Ethernet cable\*\*).
- 2 - Make sure that the router is switched on.
- 3 - The display constantly searches for the network connection.
- 4 - A message will be shown when the connection is successful.

If the connection fails, you can check the DHCP setting of the router. DHCP should be switched on.

\*\*To fulfill EMC regulations, use a shielded FTP Cat. 5E Ethernet cable.

---

## Google Account

### Sign In

To enjoy the full capabilities of your Philips Android display, you can sign in to Google with your Google Account.

By signing in you'll be able to play your favourite games across phone, tablet and display. You'll also get customised video and music recommendations on your display home screen as well as access to YouTube, Google Play and other apps.

Use your existing Google Account to sign in to Google on your display. A Google Account consists of an email address and a password. If you don't have an Google Account yet, use your computer or tablet to create one ([accounts.google.com](http://accounts.google.com)). To play games with Google Play, you need a Google+ profile. If you did not sign in during the first display installation, you can always sign in later.

### Sign In

Press Home > Apps > Google Play.

With the on-screen keyboard, enter your email

address and password, press the same OK key to sign in.

---

## Android Settings

You can set or view several Android specific settings or information. You can find the list of apps installed on your display and the storage space they need. You can set the language you like to use with Voice Search. You can configure the onscreen keyboard or allow apps to use your location. Explore the different Android settings. You can go to [www.support.google.com/androidtv](http://www.support.google.com/androidtv) for more information on these settings.

### To open these settings

Press Home > Settings > Settings > Android Settings.

---

## 10.5

## Internet

---

### Start Internet

You can browse the Internet on your display. You can view any Internet website but most of them are not prepared for a display screen.

- Some plug-ins (e.g. to view pages or videos) are not available on your display.
- You cannot send or download files.
- Internet pages are shown one page at a time and full screen.

To start the Internet browser...

- 1 - Press HOME.
- 2 - Scroll down and select Apps > Internet and press OK.
- 3 - Enter an Internet address and select ✓, press OK.
- 4 - To close Internet, press HOME or .

---

### Options on Internet

Some extras are available for the Internet.

To open the extras...

- 1 - With the website open, press OPTIONS.
- 2 - Select one of the items and press OK.
  - Add to speed dial: To enter a new Internet address.
  - Add to bookmarks: Add the page as bookmark
  - Page security: To view the security level of the current page.
  - New private tab: Open new private tab, and have private browsing
  - Settings: Settings for Zoom, Text size, Accessibility

mode, Always show menu bar, and clear (browsing) history

- Help: Internet browser information
- Exit Internet browser: Close Internet browser

---

10.6

## Software

---

### Update Software

---

#### Update from Internet

If the display is connected to the Internet, you may receive a message to update the display software. You need a high-speed (broadband) Internet connection. If you receive this message, we recommend you to carry out the update.

With the message on screen, select **Update** and follow the instructions on-screen.

You can also look for a software update yourself.

During the software update, there is no picture and the display will switch off and on again. This might happen several times. The update can take a few minutes. Wait until the display picture comes back up. Do not press the power switch **⏻** on the display or on the remote control during the software update.

To look for a software update yourself...

- 1 - Press **⏪/⏩/🏠** Home
- > **⚙️** Settings > **📺** Update Software.
- 2 - Select **Internet** and press **OK**.
- 3 - The display will look for an update on the Internet.
- 4 - If an update is available, you can update the software right away.
- 5 - A software update can take several minutes. Do not press the **⏻** key on the display or remote control.
- 6 - When the update is done, the display will return to the programme you were watching.

---

#### Update from USB

It might be necessary to update the display software.

You need a computer with an high-speed Internet connection and a USB flash drive to upload the software on the display. Use a USB flash drive with at least 2Gb free space. Make sure that write protection is switched off.

To update the display software...

- 1 - Press **⏪/⏩/🏠** Home > **⚙️** Settings > **📺** Update Software.
- 2 - Select **Firmware Upgrade from USB** and press **OK**.

#### Download the software

- 1 - Insert the USB flash drive into your computer.
- 2 - On the USB flash drive, locate the file **update.htm** and double click it.
- 3 - Click **Send ID**.
- 4 - If new software is available, download the .zip file.
- 5 - After the download, unzip the file and copy the file **autorun.upg** onto the USB flash drive. Do not place this file in a folder.

#### Update the display software

- 1 - Insert the USB flash drive into the display again. The update starts automatically.
- 2 - A software update can take several minutes. Do not press the **⏻** key on the display or remote control. Do not remove the USB flash drive.
- 3 - When the update is done, the display will return to the programme you were watching.

If a power cut occurs during the update, never remove the USB flash drive from the display. When the power returns, the update will continue.

To prevent an accidental update of the display software, delete the autorun.upg file from the USB flash drive.

---

#### Software Version

To view the current display software version...

- 1 - Press **⏪/⏩/🏠**, select **Settings ⚙️** and press **OK**.
- 2 - Select **Update Software > Current Firmware** and press **OK**.
- 3 - The version, release notes and creation date are shown.
- 4 - Press **⬅️** (left) repeatedly if necessary, to close the menu.

---

#### Update from website

You can find the current firmware version of your display in the settings menu under "Update Software" > "Current firmware".

Regularly check [www.philips.com/support](http://www.philips.com/support) for new Firmware updates.


Follow the instructions below to update the firmware of your display.

Download the latest software...

- 1 - Launch the Internet Explorer.
- 2 - Enter the Philips support site at url <http://www.philips.com/support>.
- 3 - Enter the model number. (You can find your model number from the label on the rear of the display.)
- 4 - When enter your display's product page, select

Support.

- 5 - Select "Software updates", and click on "Download file" to download the software. (The software is available as a zip file.)
- 6 - If the software version is higher than the version installed on your display, click the software download link.
- 7 - Accept the license agreement/Terms and Conditions, select "I agree", then the zip file will be downloaded automatically.
- 8 - Unzip the zip file to any directory using an archive utility.
- 9 - Create a folder name "upgrades" in the main directory of your USB flash drive.
- 10 - Copy the upg file you have extract earlier into the upgrades folder, as depicted in the picture below.
- 11 - Disconnect your USB flash drive from the computer.

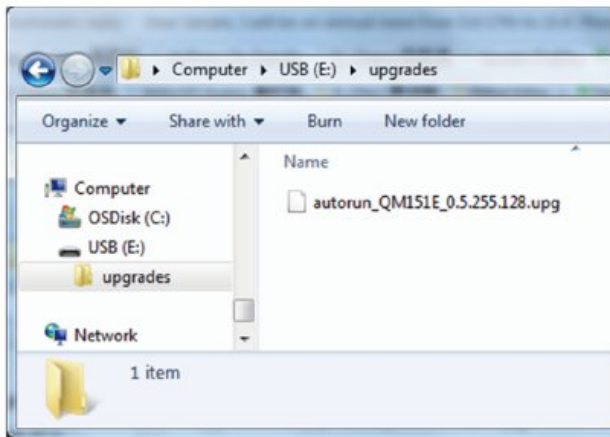

Update the software...

- 1 - Connect your USB flash drive (containing the software update) to the USB connector on the display. Wait 30 seconds or until the USB drive is recognized by the display.
- 2 - Your display will start loading the software automatically.
- 3 - When the loading of the software finished, press "Start" to activate the upgrade of the display.

---

# Help and Support

---

## Troubleshooting

---

### Switch On and Remote Control

#### The display does not switch on

- Disconnect the power cable from the power outlet. Wait for one minute then reconnect it.
- Make sure that the power cable is securely connected.

#### Creaking sound at startup or switch off

When you are switching the display on, off or to standby, you hear a creaking sound from the display chassis. The creaking sound is due to the normal expansion and contraction of the display as it cools and warms up. This does not affect performance.

#### Display does not respond to the remote control

The display requires some time to start up. During this time, the display does not respond to the remote control or display controls. This is normal behaviour.

If the display continues to be unresponsive to the remote control, you can check if the remote control is working by means of a mobile phone camera. Put the phone in camera mode and point the remote control to the camera lens. If you press any key on the remote control and you notice the infra red LED flicker through the camera, the remote control is working. The display needs to be checked. If you do not notice the flickering, the remote control might be broken or its batteries are low. This method of checking the remote control is not possible with remote controls which are wirelessly paired with the display.

#### The display goes back to standby after showing the Philips startup screen

When the display is in standby, a Philips startup screen is displayed, then the display returns to standby mode. This is normal behaviour. When the display is disconnected and reconnected to the power supply, the startup screen is displayed at the next startup. To switch on the display from standby, press **⏻** on the remote control or on the display.

#### The standby light keeps on blinking

Disconnect the power cable from the power outlet. Wait 5 minutes before you reconnect the power cable. If the blinking reoccurs, contact Philips display Consumer Care.

---

## Picture

### No picture / distorted picture

- Make sure that the antenna is properly connected to the display.
- Make sure that the correct device is selected as the display source.
- Make sure that the external device or source is properly connected.

### Sound but no picture

- Make sure that the picture settings are set correctly..

### Poor picture from a device

- Make sure that the device is connected properly.
- Make sure that the picture settings are set correctly.

### Picture does not fit the screen

Change to a different picture format.

### Picture position is incorrect

Picture signals from some devices may not fit the screen correctly. Check the signal output of the connected device.

### Computer picture is not stable

Make sure that your PC uses the supported resolution and refresh rate.

---

## Sound

### No sound or poor sound quality

If no audio signal is detected, the display automatically switches the audio output off — this does not indicate malfunction.

- Make sure that the sound settings are correctly set.
- Make sure that all cables are properly connected.
- Make sure that the volume is not muted or set to zero.
- Make sure that the display audio output is connected to the audio input on the Home Theatre System.

Sound should be heard from the HTS speakers.

- Some devices may require you to manually enable HDMI audio output. If HDMI audio is already enabled, but you still do not hear audio, try changing the digital audio format of the device to PCM (Pulse Code Modulation). Refer to the documentation accompanying your device for instructions.

---

## Connections

### HDMI

- Note that HDCP (High-bandwidth Digital Content Protection) support can delay the time taken for a display to show content from an HDMI device.
- If the display does not recognise the HDMI device and no picture is displayed, switch the source from one device to another and back again.
- If there are intermittent sound disruptions, make sure that output settings from the HDMI device are correct.
- If you use an HDMI-to-DVI adapter or HDMI-to-DVI cable, make sure that an additional audio cable is connected to AUDIO IN (mini-jack only), if available.

### EasyLink does not work

- Make sure that your HDMI devices are HDMI-CEC compatible. EasyLink features only work with devices that are HDMI-CEC compatible.

### No volume icon shown

- When a HDMI-CEC audio device is connected this behaviour is normal.

### Photos, videos and music from a USB device do not show

- Make sure that the USB storage device is set to Mass Storage Class compliant, as described in the storage device's documentation.
- Make sure that the USB storage device is compatible with the display.
- Make sure that the audio and picture file formats are supported by the display.

### Choppy playback of USB files

- The transfer performance of the USB storage device may limit the data transfer rate to the display which causes poor playback.

---

## Wi-Fi, Internet and Bluetooth

### Wi-Fi network not found or distorted

- Microwave ovens, DECT phones or other Wi-Fi 802.11b/g/n/ac devices in your proximity might disturb the wireless network.
- Make sure that the firewalls in your network allow access to the display's wireless connection.
- If the wireless network does not work properly in your home, try the wired network installation.

### Internet does not work

- If the connection to the router is OK, check the router connection to the Internet.

### The PC and Internet connection are slow

- Look in your wireless router's user manual for information on indoor range, transfer rate and other

factors of signal quality.

- Use a high-speed (broadband) Internet connection for your router.

### DHCP

- If the connection fails, you can check the DHCP (Dynamic Host Configuration Protocol) setting of the router. DHCP should be switched on.

### Bluetooth lost connection

- Places with a high amount of wireless activity – apartments with lots of wireless routers – can hamper the wireless connection.

---

## Network

### Wi-Fi network not found or distorted

- Microwave ovens, DECT phones or other Wi-Fi 802.11b/g/n/ac devices in your proximity might disturb the wireless network.
- Make sure that the firewalls in your network allow access to the display's wireless connection.
- If the wireless network does not work properly in your home, try the wired network installation.

### Internet does not work

- If the connection to the router is OK, check the router connection to the Internet.

### The PC and Internet connection are slow

- Look in your wireless router's user manual for information on indoor range, transfer rate and other factors of signal quality.
- Use a high-speed (broadband) Internet connection for your router.

### DHCP

- If the connection fails, you can check the DHCP (Dynamic Host Configuration Protocol) setting of the router. DHCP should be switched on.

---

11.2

## Online Help

To solve any Philips display related problem, you can consult our online support. You can select your language and enter your product model number.

Go to [www.philips.com/support](http://www.philips.com/support)

On the support site you can find your country's telephone number to contact us as well as answers to frequently asked questions (FAQs). In some countries, you can chat with one of our collaborators and ask your question directly or send a question by email. You can download new display software or the manual to read on your computer.



---

## Support and Repair

For support and repair, call the Consumer Care hotline in your country. Our service engineers will take care of a repair, if necessary.

Find the telephone number in the printed documentation that came with the display.

Or consult our website [www.philips.com/support](http://www.philips.com/support) and select your country if needed.

### Display model number and serial number

You might be asked to provide the display product model number and serial number. Find these numbers on the packaging label or on the type label on the back or bottom of the display.

### **⚠** Warning

Do not attempt to repair the display yourself. This may cause severe injury, irreparable damage to your display or void your warranty.

---

# Safety and Care

---

## 12.1

### Safety

---

#### Important

Read and understand all safety instructions before you use the display. If damage is caused by failure to follow instructions, the warranty does not apply.

No modify this equipment without authorization of the manufacturer.

---

#### Risk of Electric Shock or Fire

- Never expose the display to rain or water. Never place liquid containers, such as vases, near the display.
- If liquids are spilt on or into the display, disconnect the display from the power outlet immediately. Contact Philips display Consumer Care to have the display checked before use.
- Never expose the display, remote control or batteries to excessive heat. Never place them near burning candles, naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the display.
- Never place heavy objects on the power cord.
- Avoid force coming onto power plugs. Loose power plugs can cause arcing or fire. Ensure that no strain is exerted on the power cord when you swivel the display screen.
- To disconnect the display from the mains power, the power plug of the display must be disconnected. When disconnecting the power, always pull the power plug, never the cord. Ensure that you have full access to the power plug, power cord and outlet socket at all times.

---

#### Risk of Injury or Damage to the display

- Two people are required to lift and carry a display that weighs more than 25 kg or 55 lbs.
- If you mount the display on a stand, only use the supplied stand. Secure the stand to the display tightly.
- Place the display on a flat, level surface that can support the weight of the display and the stand.
- When wall mounted, ensure that the wall mount can safely bear the weight of the display set. TPV bears no responsibility for improper wall mounting that

results in accident, injury or damage.

- Parts of this product are made of glass. Handle with care to avoid injury or damage.

#### Risk of damage to the display !

Before you connect the display to the power outlet, ensure that the power voltage matches the value printed on the back of the display. Never connect the display to the power outlet if the voltage is different.

---

#### Stability Hazards

A display set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS ensure the display set is not overhanging the edge of the supporting furniture.
- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the display set.
- ALWAYS use furniture that can safely support the display set.
- ALWAYS educate children about the dangers of climbing on furniture to reach the display set or its controls.
- ALWAYS route cords and cables connected to your display so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the display set to a suitable support.
- NEVER place the television set on cloth or other materials that may be located between the display set and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the display or furniture on which the display is placed.

If the existing display set is going to be retained and relocated, the same considerations as above should be applied.

---

#### Risk of batteries

- Do not ingest the battery. Chemical burn hazard.
- The remote control may contain a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or

placed inside any part of the body, seek immediate medical attention.

- Risk of fire or explosion if the battery is replaced by an incorrect type.
- Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types).
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

## Risk of Overheating

Never install the display in a confined space. Always leave a space of at least 10 cm or 4 inches around the display for ventilation. Ensure curtains or other objects never cover the ventilation slots on the display.

## Lightning Storms

Disconnect the display from the power outlet and antenna before lightning storms. During lightning storms, never touch any part of the display, power cord or antenna cable.

## Low Temperatures

If the display is transported in temperatures below 5°C or 41°F, unpack the display and wait until the display temperature reaches room temperature before connecting the display to the power outlet.

## Humidity

In rare occasions, depending on temperature and humidity, minor condensation can occur on the inside of the display glass front (on some models). To prevent this, do not expose the display to direct sunlight, heat or extreme humidity. If condensation occurs, it will disappear spontaneously while the display is playing for a few hours. The condensation moisture will not harm the display or cause malfunction.

12.2

## Health Care Facility Apparatus

If this display is intended for entertainment purposes for use in a hospital, a nursing home, a medical-care center, or a similar health-care facility in which installation is limited to a nonhazardous area, it must be installed wall-mounted or ceiling mounted.

It is not intended for use in a critical-care area in which a patient is treated with an externalized electrical conductor, such as a probe, a catheter,

or other electrode, connected to the heart; however, the apparatus will be contacted by a patient during his stay in a health-care facility.

12.3

## Important and RoHS regulations

Please carefully read and understand all instructions for safe operation before use. Any damage caused by failure to follow the instructions will not be covered by the warranty.

### RoHS regulatory requirements

Device name: Philips LED backlit smart display

Model (type):

43HFL5214U/96, 50HFL5214U/96, 55HFL5214U/96, 65HFL5214U/96

單元	限用物質及其化學符號					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr <sup>+6</sup> )	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
塑料外框	○	○	○	○	○	○
後殼	○	○	○	○	○	○
液晶面板	—	○	○	○	○	○
電路板組件	—	○	○	○	○	○
底座	○	○	○	○	○	○
電源線	—	○	○	○	○	○
其他線材	—	○	○	○	○	○
喇叭	—	○	○	○	○	○

備考1. '○' 係指該項限用物質之百分比含量未超出百分比含量基準值。  
備考2. '—' 係指該項限用物質為排除項目。

### Safety precautions

**Warning:** Excessive use may cause damage to eyesight.

**Precautions:**

- You should take a 10-minute break for every 30 minutes of use
- Children under the age of 2 should not look at the screen and those over the age of 2 should not look at the screen for more than 1 hour per day.

## Technical specifications for low-power radio frequency equipment

Without approval, businesses, shops or users are not permitted to change the frequency, increase the power or change the original design characteristics and functions of the low-power RF equipment certified by inspection. The use of low-power radio frequency equipment must not affect flight safety or interfere with lawful communications. If any interference is discovered, it should be stopped immediately and improved to ensure no interference before continuing use. The aforementioned lawful communication refers to radio communication operated in accordance with the provisions of the Telecommunications Management Act. Low-power radio frequency equipment must withstand interference from lawful communications or electrical equipment used for radio wave radiation in industrial, scientific and medical applications.

Wireless information transmission equipment operating in the 5.25–5.35 GHz frequency band is limited to indoor use only.

Avoid interfering with the operation of nearby radar systems.

High-gain directional aerials can only be used in fixed point-to-point systems.

---

# Terms of Use

---

## 13.1

### Terms of Use – Display

2021 © TP Vision Europe B.V. All rights reserved.

This product was brought to the market by TP Vision Europe B.V. or one of its affiliates, hereinafter referred to as TP Vision, which is the manufacturer of the product. TP Vision is the warrantor in relation to the display with which this booklet was packaged. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners. TP Vision reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

The written material packaged with the display and the manual stored in the memory of the display or downloaded from the Philips website [www.philips.com/support](http://www.philips.com/support) are believed to be adequate for the intended use of the system.

The material in this manual is believed adequate for the intended use of the system. If the product, or its individual modules or procedures, are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. TP Vision warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied. TP Vision cannot be held responsible neither for any errors in the content of this document nor for any problems as a result of the content in this document. Errors reported to Philips will be adapted and published on the Philips support website as soon as possible.

Terms of warranty – Risk of injury, damage to display or void of warranty!

Never attempt to repair the display yourself. Use the display and accessories only as intended by the manufacturer. The caution sign printed on the back of the display indicates risk of electric shock. Never remove the display cover. Always contact Philips display Customer Care for service or repairs. Find the telephone number in the printed documentation that came with the display. Or consult our website [www.philips.com/support](http://www.philips.com/support) and select your country if needed. Any operation expressly prohibited in this manual, or any adjustments and assembly procedures not recommended or authorised in this manual, shall void the warranty.

Pixel characteristics

This display product has a high number of colour

pixels. Although it has effective pixels of 99.999% or more, black dots or bright points of light (red, green or blue) may appear constantly on the screen. This is a structural property of the display (within common industry standards) and is not a malfunction.

---

# Copyrights

---

## 14.1

### HDMI

#### HDMI

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.




---

## 14.2

### Dolby Audio

Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works.

Copyright 1992–2021 Dolby Laboratories. All rights reserved.




---

## 14.3

### DTS-HD

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, DTS and the Symbol together, DTS-HD, and the DTS-HD logo are registered trademarks or trademarks of DTS, Inc. in the United States and/or other countries. © DTS, Inc. ALL RIGHTS RESERVED.



### Wi-Fi Alliance

#### Wi-Fi

The Wi-Fi CERTIFIED™ Logo is a registered trademark of Wi-Fi Alliance®




---

## 14.5

### Kensington

#### Kensington

(If applicable)

Kensington and Micro Saver are registered US trademarks of ACCO World Corporation with issued registrations and pending applications in other countries throughout the world.




---

## 14.6

### Other Trademarks

All other registered and unregistered trademarks are the property of their respective owners.

---

# Open Source

---

## 15.1

## Open Source Software

This television contains open source software. TP Vision Europe B.V. hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source software packages used in this product for which such offer is requested by the respective licences.

This offer is valid up to three years after product purchase to anyone in receipt of this information. To obtain the source code, please write in English to .

..

[open.source@tpv-tech.com](mailto:open.source@tpv-tech.com)

or please scan the Qrcode below to read the READ ME document online.




---

# Open Source License

---

## 15.3

## Announcements

You can receive an announcement on new display software available for download or other software related issues.

To read these announcements...

- 1 - Press **⚙**, select **All Settings** and press **OK**.
- 2 - Select **Update Software > Announcements**, and press **OK**.
- 3 - If there is an announcement, you can read it or select one of the announcements available.
- 4 - Press **⬅** (left) repeatedly if necessary, to close the menu.

---

# Index

## A

Android Settings	28
Announcements	39

## C

Child Lock	26
Colour, Colour gamut	24
Computer, connect	14
Content rating lock	26
Contrast, Contrast Mode	24
Contrast, Dynamic Contrast	24

## E

Eco Settings	25
--------------	----

## G

Game Console, connect	13
-----------------------	----

## H

Hard of hearing	26
Home	19

## M

Media	15
MPEG Artefact Reduction	24

## N

Network Installation	27
Network, connect	27
Network, Wired	27
Network, WPS with PIN code	27

## O

Open Source software	39
----------------------	----

## P

Partially sighted	26
Photos, Videos and Music	15
Picture Style	23
Picture, picture format	25
Power consumption check	25
Product Fiche	9

## S

Safety Instructions	34
Sharpness, MPEG Artefact Reduction	24
Software, Update	29
Sound, styles	25
Switching On	6

## T

Terms of Use	37
Troubleshooting	31

## U

Universal Access	26
------------------	----

## W

Wi-Fi	27
Wired Network	27
Wireless Network	27





All registered and unregistered trademarks are property of their respective owners.  
Specifications are subject to change without notice.  
Philips and the Philips' shield emblem are trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.  
This product has been manufactured by and is sold under the responsibility of Top Victory Investments Ltd. (or one of its related affiliates), and Top Victory Investments Ltd. (or one of its related affiliates), is the warrantor in relation to this product.  
2021© TOP Victory Investments Ltd.  
All rights reserved.