

Quick Start Guide




Step A *Connect*

Step B *Setup*

Step C *Enjoy*

What's in the Box?


You should find these items upon opening the box.

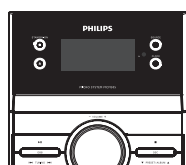


Main unit



Remote Control

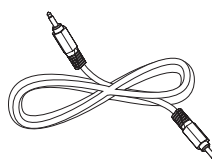

MP3 Link cable

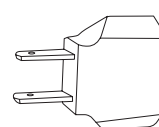

Flat pin adaptor



Quick Start Guide



User Manual

PHILIPS

Step A *Connect*

1


Connect the speaker cables.

2

Connect the AC power cord to the wall socket.

Tip

See the User Manual for how to connect other equipment to this system.

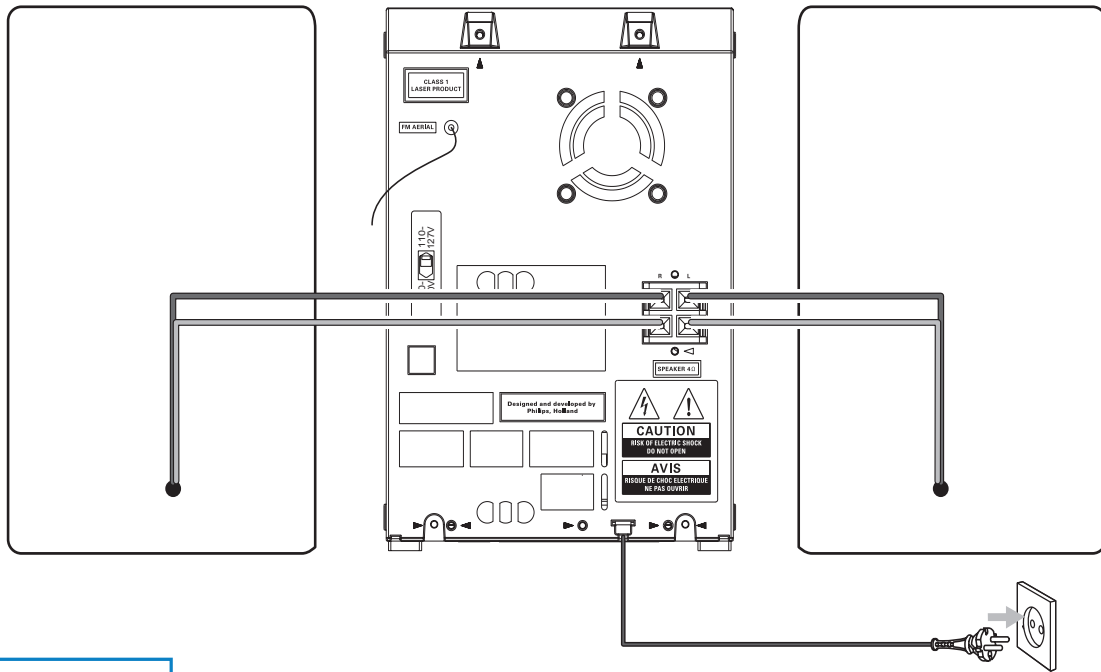

Step B *Setup*

Set clock

Note

– In Eco Power Standby mode, press **CLOCK** to show clock first, then press and hold **CLOCK** to proceed clock setting.

1

In standby mode, press and hold **CLOCK** on the main unit.

2

Press **■** on the main unit to select 12 hour or 24 hour format.

3

Turn **VOLUME +/-** to set the hour.

4


Press **CLOCK** to confirm.
→ The minute digits are displayed and begin to blink.

5

Turn **VOLUME +/-** to set the minute.

6


Press **CLOCK** to confirm.

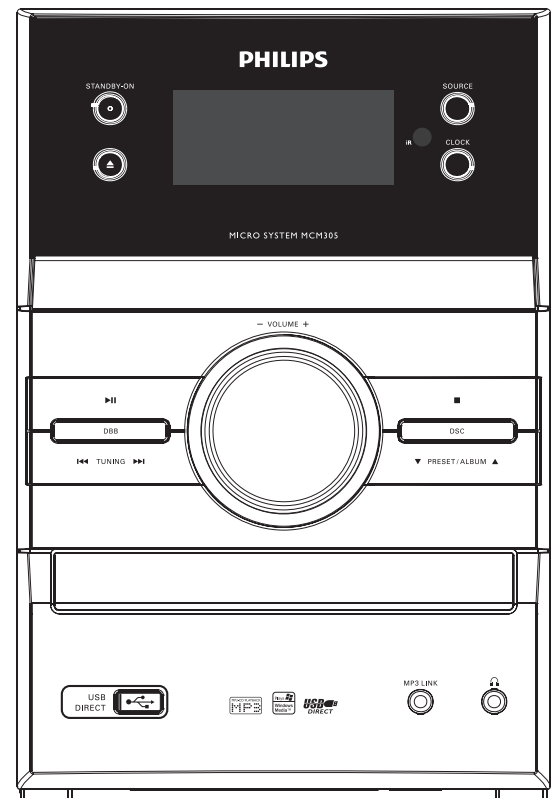

Step C *Enjoy*

Play disc


- 1 Press **CD** to select the disc source.
- 2 Press **▲** to open the disc tray.
- 3 Insert a disc with the printed side facing up, then close the disc tray.
- 4 To pause/resume play, press **▶||**.
- 5 To stop play, press **■**.

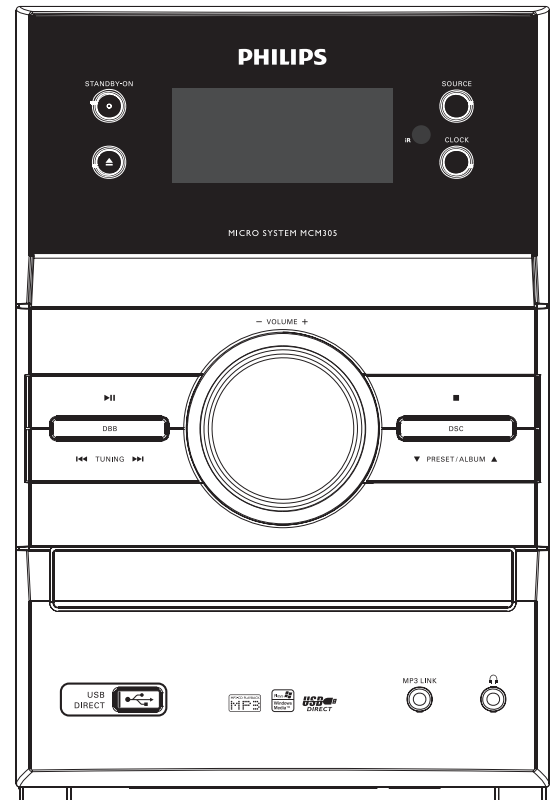

Play from USB

Ensure that the USB device contains playable audio content.

- 1 Flip open the USB socket cover on the front panel.
- 2 Insert the USB plug of a USB device into the socket.
- 3 Press **USB** to select the USB source.

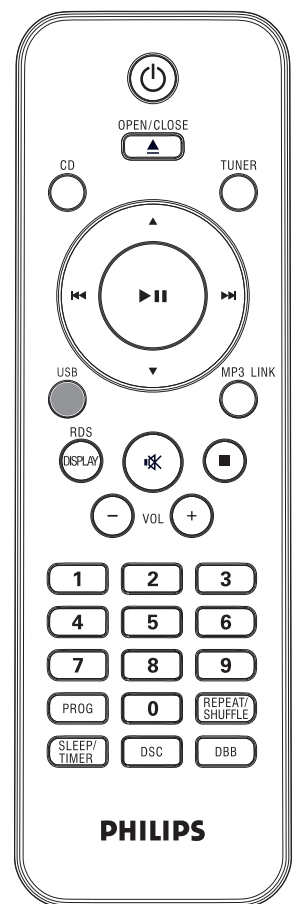

Step C *Enjoy*

Tune to a radio station

1

Press TUNER to select the tuner source.

2

Press and hold **⏮️/⏭️** for more than 2 seconds.

3

Repeat step 2 to tune to more stations.

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

