

# Quick Start Guide








Step A *Connect*

Step B *Setup*

Step C *Enjoy*

## What's in the Box?


You should find these items upon opening the box.

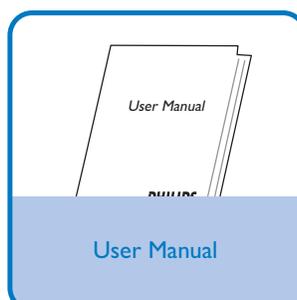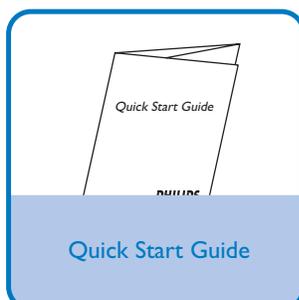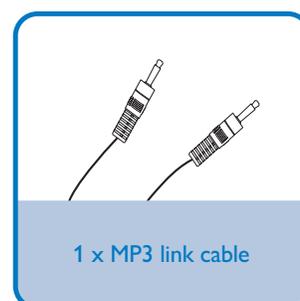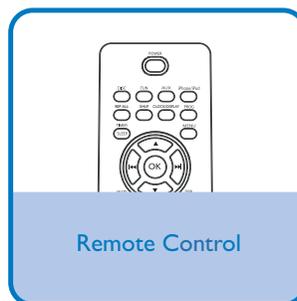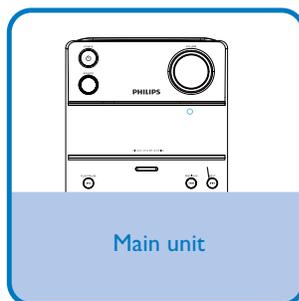

**PHILIPS**

## Step A *Connect*


- 1 Fully insert the plugs from the speakers into the speaker sockets on the back of the main unit.
- 2 Connect the AC power cord to the power outlet.

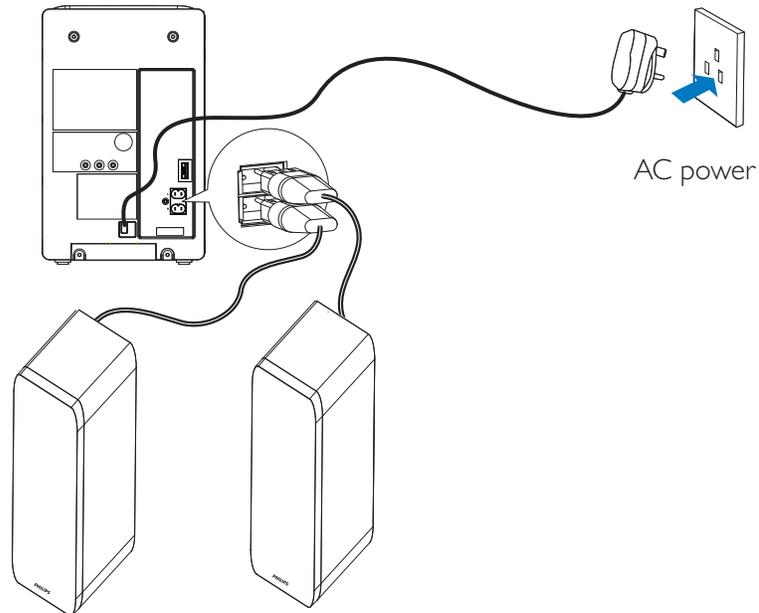

## Step B *Setup*

### Set clock


- 1 In the standby mode, press and hold **CLOCK/DISPLAY** to activate the clock setting mode.  
À The 12 hour or 24 hour format is displayed.
- 2 Press **PROG** repeatedly to select 12 hour or 24 hour format.
- 3 Press **CLOCK/DISPLAY** to confirm.  
À The hour digits are displayed and begin to blink.
- 4 Press **◀▶** to set the hour.
- 5 Press **CLOCK/DISPLAY** to confirm.  
À The minute digits are displayed and begin to blink.
- 6 Press **◀▶** to set the minute.
- 7 Press **CLOCK/DISPLAY** to confirm.

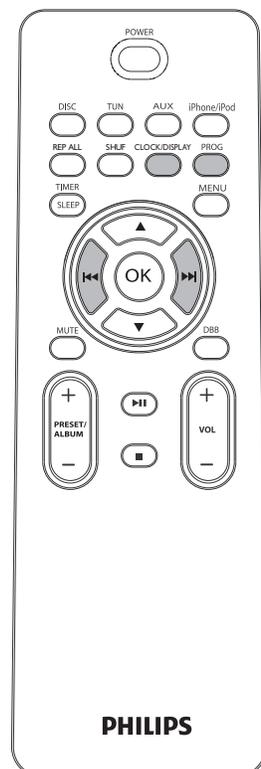

## Step C *Enjoy*


### *Play disc*

- 1 Press **DISC** to select the disc source.
- 2 Lift the disc door on the top of the unit.
- 3 Insert a disc with the printed side facing up, then close the disc tray.
- 4 Press **▶||** to start play.
- 5 To stop play, press **■**.

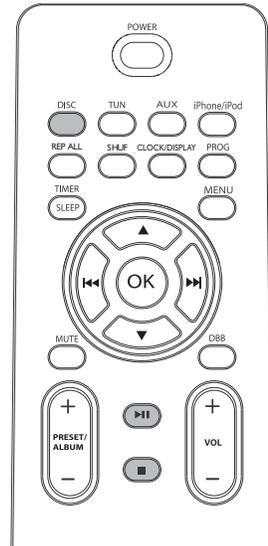

### *Listen to radio*

- 1 Press **TUN** repeatedly to select FM.
- 2 Press and hold **◀◀▶▶** for more than 2 seconds.
- 3 Repeat step 2 to tune to more stations.

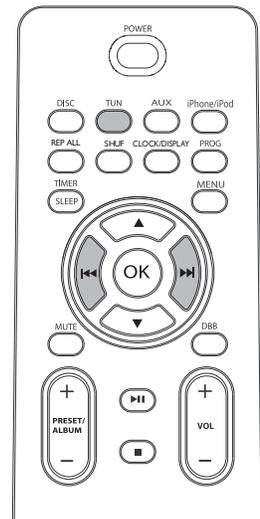

### *Play from iPod/iPhone*

- 1 Place the iPod/iPhone in the dock.  
Á The unit switches to iPod/iPhone mode automatically.
- 2 To pause play, press **▶||**.
- 2 To resume play, press **▶||**.



**Tip**

*Detailed play features and additional functions are described in the supplied user manual.*

© 2010 Koninklijke Philips Electronics N.V.  
All rights reserved.

<http://www.philips.com>

