


PHILIPS AVENT

GB

TC


SC



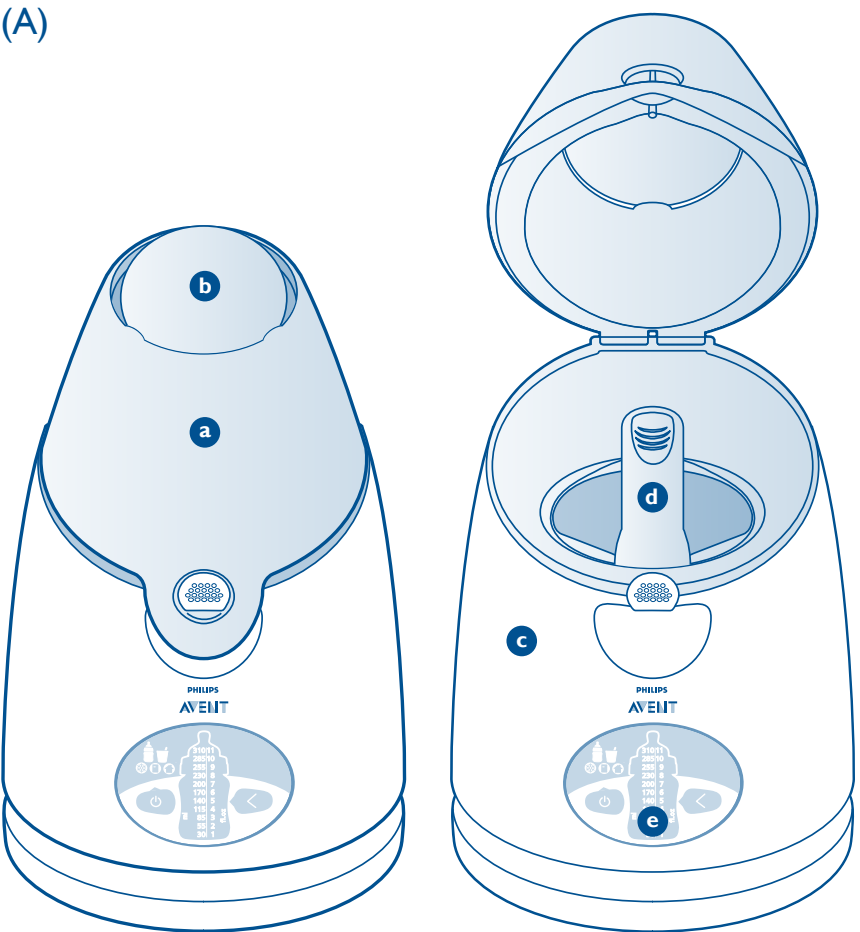

(B)

		30ml / 1oz
		150ml / 5.5oz
		150ml / 5.5oz

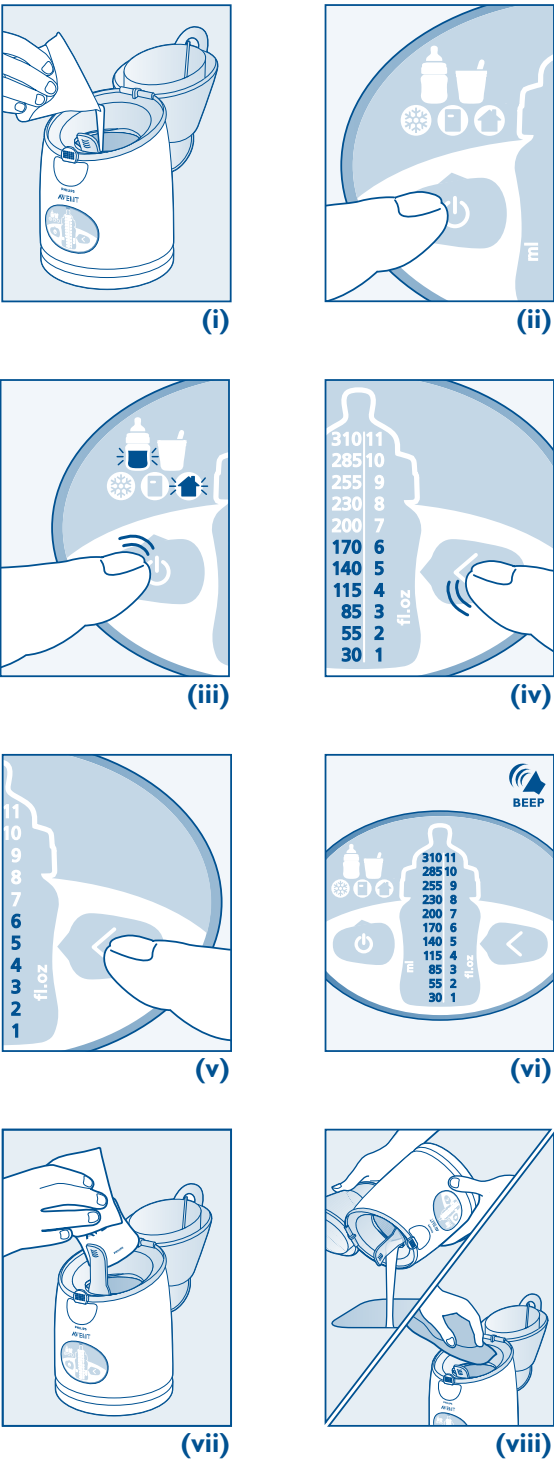

GB Thank you for choosing Philips AVENT








The Philips AVENT Digital Bottle and Baby Food Warmer is the only warmer with advanced Technology, designed to smartly and accurately adjust warming time based on contents and amount. Whether warming milk or baby food that is frozen, chilled or at room temperature, the Digital Bottle and Baby Food Warmer heats quickly, safely and evenly – with no hot spots. The versatile design holds all AVENT Bottles, VIA Cups, and baby food jars or tins.

Please take 5 minutes to read through the ENTIRE INSTRUCTION LEAFLET including the warnings before using your Digital Bottle and Baby Food Warmer for the first time. PLEASE RETAIN THESE INSTRUCTIONS for future reference. Instructions are also available at www.philips.com/AVENT.

Contents (A):

- | | |
|--|-----------------------------------|
| a. Lid | c. Warmer Base |
| b. Lid Flap – Lifts to accommodate larger bottles (330ml/11oz) | d. Lifter |
| | e. Interactive Electronic Display |

Interactive Electronic Display Guide

	Milk Mode (in ANY container)		Power/Mode Selection Button – Hold button for 3 seconds to switch the warmer on/off. Press repeatedly to select milk or baby food and starting temperature.
	Baby Food Mode (in ANY container)		
	Freezer Temperature Mode (Select when warming from frozen)		Volume Selection/Start Button – Press repeatedly to select the volume of milk or food. Once desired selections are made, hold button for 3 seconds to start warming cycle.
	Fridge Temperature Mode (Select when warming from chilled)		
	Room Temperature Mode (Select when warming from room temperature)	<div><div>140 5 115 4 85 3 55 2 30 1</div><div>mlfl.oz</div><div>Volume Display – Displays the selected amount of liquid or food in both ml and oz</div></div>	

N.B. Whilst pressing the Power/Mode Selection or Volume Selection/Start Button, please hold the warmer base to prevent the warmer from slipping.

Instructions for Use

- Ensure that the warmer is placed on a firm level surface. Open the lid using the front catch, and fill the warmer with the appropriate amount of water (i) – See page 2 to determine water amount. Place the fully assembled bottle (including dome cap to prevent overheating) or storage container with lid in the warmer. For food jars and tins, please refer to manufacturer's instructions.

N.B. When warming a 330ml/11oz bottle, the lid flap will lift to accommodate the larger size. This will cause a small amount of steam to rise from the warmer.

Close the lid ensuring that the front catch 'clicks' shut.

- Plug in the warmer and switch on at the mains.
- Switch on the warmer by holding the Power/Mode Selection Button for 3 seconds (ii). The warmer will beep, and the milk, room temperature and ml/oz symbols will illuminate. It is now ready for use. If the lid has not been closed correctly, the symbols will flash. When the unit is switched on, it automatically defaults to the milk/room temperature mode. If this is the mode you need, go to step 5. If not, proceed to step 4.
- Choose milk or food, and select the starting temperature (iii) by pressing the Power/Mode Selection Button repeatedly until the desired symbols are illuminated.
Please note that there are 6 possible options: milk from room temperature, milk from chilled,

milk from frozen, food from room temperature, food from chilled, and food from frozen. (See Display Guide if needed.)

N.B. Warming food jars or tins from frozen is NOT recommended. However, you can warm frozen food in VIA Cups within the warmer.

N.B. Please ensure that the correct options are selected, as milk and food should not be heated for too long.

- Select the amount of milk or food in the bottle or container by repeatedly pressing the Volume Selection/Start Button until the desired volume is illuminated (iv). If the desired amount is not shown on the display, please select the amount nearest to it.

N.B. For volumes in grams, select the same amount in ml (e.g. for 85g select 85ml).

N.B. The maximum volume that may be selected when warming food from frozen is 230ml/8oz.

- Start the warming cycle (v): Once the desired settings are illuminated, hold down the Volume Selection/Start Button until the warmer beeps. The volume display will now flash ascending and descending lights up to the selected amount.

The warming cycle is in progress – Do not open the lid.

- Completion of warming cycle (vi): When the cycle is complete, the warmer will beep intermittently for 30 seconds and all the volume display lights will continuously flash for 3 minutes. You can remove the contents as soon as the warmer begins beeping. After 3 minutes, the warmer will beep 5 times and will turn off automatically.

N.B. Philips AVENT recommends removing and using the contents immediately when the warming cycle is complete, even before the warmer automatically turns off.

- Open the lid carefully to avoid any residual steam. Be careful when opening the lid as steam can escape and cause injury. Use a cloth when removing the container, as it may be hot (vii). Use the lifter to raise small bottles, VIA Cups, small food jars or tins. Pull the lifter just above the circular rim. Rest the lifter on the rim where it naturally sits.

N.B. Do not remove the lifter from the warmer.

- Before feeding your baby: **Always check feed temperature before feeding**

(a) Milk – shake the bottle or milk storage container and check the temperature of the milk by sprinkling a few drops on the back of your hand.

(b) Food – stir the food thoroughly and test it yourself with a spoon to ensure it is not too hot. If food is not warm enough, consult the Troubleshooting Guide.

N.B. Please ensure the lid of the container is tightly secured prior to shaking.

- Unplug at the mains, and empty any residual water (viii). Ensure that the plug does not come into contact with water. If warming an additional bottle or container, continue from step 1. Otherwise, clean the inside and outside of the warmer with a damp cloth (viii). To remove the lifter for cleaning purposes ONLY, lift vertically up until it naturally resists. Push the handle away from you and rotate 90° or until it can naturally be removed, then lift out.

N.B. For microbiological and hygienic reasons, once heated, milk and food should not be reheated again, and should be discarded if not used immediately. Please consult your health professional/breastfeeding adviser for further guidance about safety recommendations on feeding.

N.B. If at any time the warmer is switched on and not running a cycle, it will automatically turn off after 3 minutes if no selections have been made.

Approximate Warming Times

Milk 115ml/4oz from room temperature	2 mins
Milk 115ml/4oz from chilled	3 mins
Milk 255ml/9oz from room temperature	3 mins
Milk 255ml/9oz from chilled	4.5 mins
Food 230ml/8oz from room temperature	5 mins
Food 230ml/8oz from chilled	7 mins

Care of your Digital Bottle and Baby Food Warmer

Always unplug the warmer and allow it to cool before cleaning. Wipe the inside and outside of the warmer with a damp cloth. **DO NOT USE AN ABRASIVE CLEANER.** Using cool pre-boiled or filtered water in your warmer may reduce limescale build-up. When the warmer needs de-scaling, the mode and starting temperature symbols will flash on the electronic display. To ensure maximum effectiveness, you should de-scale your warmer every time it is required. To acknowledge the de-scale warning, press and hold the Power/Mode Selection or Volume Selection/Start Button for 3 seconds. If you do not wish to de-scale, please be aware that the unit will not remind you to de-scale on your next use, but will instead begin re-counting cycles until the next de-scaling is needed.

IMPORTANT! DE-SCALING

Under no circumstances should anything other than citric acid or vinegar be used as it may cause irreparable damage. Avoid contact with eyes as this may cause irritation. Keep out of the reach of children.

EITHER:

Mix one sachet of citric acid* (10g) with 200ml/7oz of water. Pour solution into the empty warmer. **DO NOT** place a bottle, jar or cup into the warmer when de-scaling. Close the lid of the warmer and programme the warmer to run with 310ml/11oz of milk from frozen. After the warming cycle has ended, leave the solution to cool for 30 minutes before emptying the warmer and rinsing with tap water. Wipe the inside and outside of the warmer with a damp cloth only.

OR:

Pour 100ml/3.5oz of vinegar mixed with 200ml/7oz of cold water into the warmer. Allow liquid to stand in the unit until any limescale has dissolved. **DO NOT** place a bottle, jar or cup into the warmer when de-scaling. **DO NOT** start the warming cycle. Empty the unit and rinse thoroughly. Wipe the inside and outside of the warmer with a damp cloth only.

*Citric acid is available from most chemists and through Philips AVENT Customer Service.

WARNING!

- The Digital Bottle and Baby Food Warmer is fitted with a non-rewirable moulded plug. The mains supply lead of the appliance CANNOT be replaced. If the lead is damaged, the appliance should be discarded. The supplied lead must not be used on any other appliance and no other cord should be used with the Digital Bottle and Baby Food Warmer. This product is manufactured to comply with the Radio Interference Requirements and the EEC Directive 89/336/EEC.
- Failure to follow instructions may cause scalding or damage to product.**
- Always ensure water has been added before switching on the warmer.
 - Always ensure that you are using the correct volume of water before beginning the warming cycle. The warmer should be emptied of residual water before each subsequent use.
 - Heating food jars or tins from frozen within this warmer is **NOT RECOMMENDED**.
 - To avoid possible scalding, do not place hands over the lid flap or open the lid flap during the warming cycle.
 - When warming a 330ml/11oz bottle, the lid flap will lift to accommodate the larger size. This will cause a small amount of steam to rise from the warmer.
 - To avoid possible scalding, take care when opening the lid after a completed cycle as there may be some residual steam.
 - When in use, the warmer contains hot water. Be careful to avoid spilling any water on yourself when removing contents from the warmer.
 - Use the lifter to remove small bottles, VIA Cups, and small baby food jars or tins.
 - Always use a cloth when removing bottles, cups, jars and tins from the warmer.
 - **Always check feed temperature before feeding.**
 - For microbiological and hygienic reasons, once heated, milk and food should not be reheated again.
 - Never immerse the warmer or power cord in water.
 - This appliance is intended for use by responsible persons, keep out of the reach of small children and the infirm.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children should be supervised to ensure they do not play with the appliance.
 - Failure to follow de-scaling instructions may cause irreparable damage.
 - There are no serviceable parts inside the Digital Warmer. Do not attempt to open, service or repair the warmer yourself.

Troubleshooting Guide

Food is not warm enough	The temperature of warmed food depends on the consistency of the food. Philips AVENT recommends that, ideally, pureed food only should be heated with this warmer. If you find that thicker food is not warm enough at the end of the warming cycle, fill the warmer with an additional 30ml/1oz of water. On step 4 and 5, choose the food from room temperature mode and programme the warmer at the 30ml/1oz option. Before feeding your baby, stir the food. Always check food temperature before feeding.
Milk is not warm enough	If you find that milk is not warm enough at the end of a warming cycle, fill the warmer with an additional 30ml/1oz of water. On step 4 and 5, choose the milk from room temperature mode and programme the warmer at the 30ml/1oz option. Before feeding your baby, shake the bottle or storage container gently and check the temperature of the milk by sprinkling a few drops on the back of your hand.
Display will not illuminate / Warmer will not turn on	Check that the lid is closed correctly. Check that the mains lead is plugged into the mains and the power outlet is switched on. Then hold the Power/Mode Selection Button for 3 seconds.
Symbols on the display are flashing	<ul style="list-style-type: none">• If the milk, room temperature and ml/oz symbols are flashing, then the lid has not been closed correctly.• If all volume symbols are flashing, and the warmer beeps intermittently for 30 seconds then the cycle is complete. Follow Step 8 onwards to remove the bottle or container from the warmer.• If all mode and starting temperature symbols are flashing, then the unit requires de-scaling. See section 'Care of your Digital Bottle and Baby Food Warmer' on page 6. To acknowledge the de-scale warning, press and hold the Power/Mode Selection or Volume Selection/Start Button for 3 seconds. If you do not wish to de-scale, please be aware that this may cause irreparable damage.
The warmer is beeping	<ul style="list-style-type: none">• If ml/oz symbols flash, and the warmer beeps twice, insufficient water has been placed in the warmer. Unplug the warmer, discard the milk or food and empty any remaining water. Be careful as the warmer is hot. Follow instructions from Step 1 onwards.• If all volume symbols are flashing, and the warmer beeps intermittently for 30 seconds then the cycle is complete. Follow Step 8 onwards to remove the bottle or container from the warmer.
To stop the warming cycle	Press the Power/Mode Selection Button and the warmer will beep and return to default settings.
To start the warming cycle	Once the correct mode, starting temperature and volume have been selected, press and hold the Volume Selection/Start Button until the warmer beeps.
If the lid is opened during warming cycle	If the lid is opened at any time during the warming cycle, the lights on the display panel will flash and the warmer will stop and return to default settings. In order to reset the warmer after the lid has been opened, empty out any residual water, then follow instructions for use from step 1 onwards. Since this could occur at any stage of the warming cycle, milk or food should be discarded for safety reasons.
Difficulty setting the appropriate amount of frozen food	The maximum volume that may be selected when warming food from frozen is 230ml/8oz.

Guarantee

- Philips AVENT guarantees that should the Digital Bottle and Baby Food Warmer become faulty during 24 months from the date of purchase, it will be replaced free of charge during this time. Please return it to the retailer where it was purchased. Please keep your receipt as proof of purchase, together with a note of when and where purchased. For the guarantee to be valid, please note:
- The Digital Bottle and Baby Food Warmer must be used according to the instructions in this leaflet and connected to a suitable electricity supply.
 - The claim must not be a result of accident, misuse, dirt, neglect or fair wear and tear.
- This guarantee does not affect your statutory rights.**

TC 感謝您選擇飛利浦新安怡

飛利浦新安怡智慧奶瓶和嬰兒食品加熱器是唯一採用先進技術的加熱器，它能夠根據容器內含食物類別和食物量自動進行準確的加熱時間調整。無論是加熱冷凍的、冷藏的還是室溫下的牛奶或嬰兒食品，本智慧奶瓶和嬰兒食品加熱器均可迅速、安全和均勻地對其加熱-不會出現局部過燙現象。其多用途設計可容納所有新安怡系列的奶瓶、VIA 杯以及嬰兒食品瓶或食品罐。

首次使用您的智慧奶瓶和嬰兒食品加熱器之前，請花 5 分鐘時間通讀產品使用說明，包括警告。請保留這些說明供日後參閱。使用說明也可從 www.philips.com/AVENT 獲取。

元件明細 (A)：

- a. 頂蓋









b. 活動蓋 - 可提升以容納大容量奶瓶 (330ml/11oz)

c. 加熱器底座

d. 提升裝置

e. 互動式電子顯示幕

互動式電子顯示幕指南

	牛奶加熱模式 (適用於任何容器)		電源/模式選擇按鈕 - 按住按鈕 3 秒可 開啟/關閉加熱器。反復按該按鈕 可選擇牛奶或嬰兒食品及起始溫度。
	嬰兒食品加熱模式 (適用於任何容器)		
	冷凍食品加熱模式 (當加熱常溫食品時選擇)		容量選擇/啟動按鈕 - 反復按該按鈕可選擇牛奶或食品容量。一旦選擇好設定，按住按鈕3 秒鐘即可開始加熱。
	冷藏食品加熱模式 (當加熱常溫食品時選擇)		
	常溫食品加熱模式 (當加熱常溫食品時選擇)		
		<div>140 5 115 4 85 3 55 2 30 1</div> <div>fl.oz</div>	容量顯示 - 以 ml 和 oz 為單位顯示選取的液體或食品量

注意：當按下「功率/模式選擇」按鈕或「容量選擇/啟動」按鈕時，請按住加熱器底座，防止其滑動。。

使用說明

1. 確保加熱器放置於平穩的表面。抓住前把手開啟頂蓋，向加熱器注入大約 (i) 的水 - 參見第 2 頁圖示，確定用水量。將完全組裝好的奶瓶（包括奶瓶蓋以防止過熱）或帶蓋子的儲物容器放入加熱器。對於食品瓶和食品罐的操作方法，請參閱製造商的說明。

注意：當加熱 330ml/11oz 奶瓶時，活動蓋會升起以容納較大的體積。這將導致少量蒸汽從加熱器內冒出。

合上頂蓋，確保前面的把手發出「啞」的一聲。

2. 插上加熱器插頭，接通電源。

3. 按住「電源/模式選擇」按鈕 3 秒鐘，開啟加熱器 (ii)。加熱器將會鳴叫，顯示幕會顯示牛奶、常溫和 ml/oz 等標識資訊。這表明加熱器已準備就緒。如果未正確合上頂蓋，這些標識會閃爍。當加熱器開啟後，系統自動預設為「牛奶/常溫」模式。如果這是您需要的模式，請跳至第 5 步操作。如果不是，請繼續第 4 步操作。

4. 選擇牛奶或食品，然後反復按「功率/模式選擇」按鈕選擇起始溫度 (iii)，顯示幕會顯示代表您的選擇的標識。

請注意，共有 6 種可能的選項：常溫牛奶、冷藏牛奶、冷凍牛奶、常溫食品、冷藏食品 and 冷凍食品。（如需要，請參閱顯示幕指南。）

注意：不建議加熱冷凍的食品瓶或食品罐。但您可以將冷凍食品放在 VIA 杯內，然後放入加熱器加熱。

注意：請確保選擇正確的設定，因為牛奶和食品的加熱時間不宜過長。

5. 選擇奶瓶或容器內的牛奶或食品量 - 反復按「容量選擇/啟動」按鈕，直至顯示幕顯示出您想要的容量 (iv)。如果想要的容量不在選項之列，請選擇最為接近的容量。

注意：對於容量單位用「克」表示的，請選擇等量的毫升數（例如 85g 就是 85ml）。

注意：加熱冷凍食品時可選擇的最大容量為 230ml/8oz。

6. 開始加熱 (v)：一旦顯示幕顯示出您想要的設定，請按住「容量選擇/啟動」按鈕，直至加熱器發出鳴叫聲。此時，容量顯示將閃爍上升或下降至選取的容量。

加熱正在進行 - 請勿開啟頂蓋。

7. 加熱完成 (vi)：當完成加熱時，加熱器會間歇性鳴叫 30 秒，所有容量指示燈將持續閃爍 3 分鐘。一旦加熱器開始鳴叫，您就可以取出加熱的食品。3 分鐘之後，加熱器將鳴叫 5 聲，而後將自動關閉。

注意：飛利浦新安怡建議當加熱完成時，立即取出食品並食用，而且最好在加熱器自動關閉前取出。

8. 開啟頂蓋時，請小心被殘餘蒸汽燙傷。開啟頂蓋時請小心被溢出的蒸汽燙傷。取出容器時，請使用一塊布料隔熱，以免被燙傷 (vii)。請使用提升裝置提起小奶瓶、VIA 杯、小食品瓶或小食品罐。將提升裝置從輪輦正上方拔出。將提升裝置自然放置於輪輦上。

注意：請勿將提升裝置從加熱器內取出。

9. 給您的寶寶喂食之前：喂食前一定要測試食品的溫度

(a) 牛奶 - 搖晃奶瓶或儲奶容器，滴幾滴到手背上，確保 牛奶不會過燙。

(b) 食品 - 徹底攪拌食品，自己先用湯匙試溫，確保不會過燙。如果食品不夠熱，請參閱「故障排除指南」。

注意：搖晃之前，請確保容器蓋子處於緊蓋狀態。

10. 斷掉電源，倒掉加熱器內的所有水分 (viii)。確保插頭不會與水接觸。如果要加熱其他奶瓶或容器，請繼續從第 1 步開始操作。否則，請用一塊濕布清潔加熱器內部和外部 (viii)。當取出提升裝置僅作清潔目的時，請垂直提起至可自然垂直為止。將把手推理自己並旋轉 90° 或旋轉到能夠自然脫落為止，然後提出。

注意：出於微生物學和衛生方面的考慮，加熱過的牛奶和食品不得再次接受加熱處理，如未食用，請立即倒掉。請諮詢健康專家/哺育顧問，進一步獲取關於安全餵養的指導。

注意：如果加熱器開啟後並未進行任何選擇來執行加熱工作，它將在 3 分鐘之後自動關閉。

大致加熱時間

常溫下的牛奶 115ml/4oz	2 分鐘
冷藏過的牛奶 115ml/4oz	3 分鐘
常溫下的牛奶 255ml/9oz	3 分鐘
冷藏過的牛奶 255ml/9oz	4.5 分鐘
常溫下的食品 230ml/8oz	5 分鐘
冷藏過的食品 230ml/8oz	7 分鐘

智慧奶瓶和嬰兒食品加熱器的維護

清洗前，一定要拔掉加熱器插頭，使其冷卻。用一塊濕布擦拭加熱器內部和外部。請勿使用研磨性清潔用品。在加熱器內使用預先煮開的水或過濾水可減少水垢的產生。當加熱器需要除垢時，電子顯示幕上的模式與起始溫度標識將會閃爍。為確保最大使用功效，應在每次看到除垢提示時為您的加熱器除垢。要接收除垢警告，請按住「電源/模式選擇」按鈕或「容量選擇/啟動」按鈕 3 秒鐘。如果您不想除垢，請注意，下次使用時，本加熱器不再進行除垢提醒，但將開始累計加熱次數，直至下一次需要除垢時清零。

非常重要！除垢

任何情況下均不得使用除檸檬酸或食醋之外的任何產品除垢，否則可能導致無法修復的損壞。避免與眼睛接觸，否則可能導致眼睛受刺激。請放置於兒童不易觸及處。

您可以這樣除垢：

將一小袋檸檬酸* (10g) 與 200ml/7oz 水混合。將混合後的溶液倒入空的加熱器。除垢時，請勿將奶瓶、食品瓶或杯子放入加熱器。合上加熱器頂蓋，將加熱器設定為加熱 310ml/11oz 冷凍牛奶。加熱結束後，讓溶液冷卻 30 分鐘，然後倒掉並用自來水沖洗。只用一塊濕布擦拭加熱器內部和外部。

或者：

向加熱器內倒入 100ml/3.5oz 食醋與 200ml/7oz 冷水的混合溶液。放置不管，直至所有水垢分解掉。除垢時，請勿將奶瓶、食品瓶或杯子放入加熱器。請勿啟動加熱程序。倒掉加熱器內的液體，然後徹底沖洗乾淨。只用一塊濕布擦拭加熱器內部和外部。

*檸檬酸可從大多數藥店購買到，或者可以透過飛利浦新安怡客戶服務部購買。

警告！

本智慧奶瓶和嬰兒食品加熱器配備了一個不可再接的成型插頭。本電器的電源線是不可更換的。如果電源線損壞，本電器應廢棄。不得將所配電源線用於任何其他電器，也不得將任何其他電源線用於本智慧奶瓶和嬰兒食品加熱器。本產品的製造符合《無線電干擾要求》以及《EEC 指令 89/336/EEC》的規定。請務必遵守使用說明，以免被燙傷或造成產品損壞。

- 開啟加熱器之前，一定要確保在加熱器內加水。
- 開始加熱之前，請確保用水量正確。每當再次使用本加熱器之前，請倒掉殘餘水分。
- 不建議使用本加熱器加熱冷凍過的食品瓶或食品罐。
- 為避免燙傷，請勿在加熱過程中將手放置在活動蓋上方。
- 當加熱 330ml/11oz 奶瓶時，活動蓋會升起以容納較大的體積。這將導致少量蒸汽從加熱器內冒出。
- 為避免燙傷，在加熱結束後開啟頂蓋時請小心，因為可能殘留有少量蒸汽。
- 使用時，加熱器內有熱水。將加熱過的容器從加熱器內取出時，請小心，避免將熱水濺到您自己身上。
- 請使用提升裝置取出小奶瓶、VIA 杯、小嬰兒食品瓶或小食品罐。
- 當從加熱器內取出奶瓶、杯子、食品瓶和食品罐時，一定要使用一塊布料來隔熱。
- 喂食前一定要測試食品的溫度
- 出於微生物學和衛生方面的考慮，加熱過的牛奶和食品不得再次接受加熱處理。
- 請勿將本加熱器或電源線浸入水中。
- 本電器僅供有責任能力的人士使用，請放置於兒童和體弱者不易觸及處。
- 本電器不得由身體、感官或智力不健全者或者缺乏經驗或知識者（包括兒童）使用，除非有負責他們安全的人對他們使用本產品進行監督或指導。
- 應對兒童進行監督，以確保他們不會觸碰本電器。
- 不按除垢說明操作可能導致無法修復的損壞。
- 本智慧加熱器不含任何可維修部件。請勿擅自開啟、維護或維修本加熱器。

故障排除指南

食品不夠熱	加熱後的食品溫度取決於食品的密度。飛利浦新安怡建議，最好僅使用本加熱器加熱泥狀食品。如果加熱結束後，您發現較厚的食品不夠熱，請往加熱器內增加 30ml/1oz 水。在第 4 和第 5 步，選擇「加熱常溫食品」模式並將加熱器設定為 30ml/1oz。給您的寶寶喂食之前，請攪拌食品。喂食前一定要試溫。
牛奶不夠熱	如果加熱結束後，您發現牛奶不夠熱，請往加熱器內增加 30ml/1oz 水。在第 4 和第 5 步，選擇「加熱常溫牛奶」模式並將加熱器設定為 30ml/1oz。給您的寶寶喂食之前，請輕輕搖晃奶瓶或儲物容器，然後滴幾滴到您自己的手背上，以確保食品不會過燙。
顯示幕不亮 / 加熱器無法啟動	檢查頂蓋是否蓋好。檢查電源線插頭是否插入電源，電源插座是否開啟。然後按住「電源/模式選擇」按鈕 3 秒鐘。
顯示幕上的標識不停閃爍	<ul style="list-style-type: none">• 如果牛奶、常溫和 ml/oz 標識不停閃爍，說明頂蓋未蓋好。• 如果所有容量標識都在閃爍且加熱器間歇性鳴叫 30 秒，說明加熱已結束。按照上述第 8 步的說明，將奶瓶或容器從加熱器內取出。• 如果所有模式和起始溫度標識都在閃爍，說明設備需要除垢。參見第 6 頁「智慧奶瓶和嬰兒食品加熱器維護」章節的說明。要接收除垢警告，請按住「電源/模式選擇」按鈕或「容量選擇/啟動」按鈕不放，保持 3 秒鐘。如果您不想除垢，這可能造成無法修復的損壞。
加熱器不停鳴叫	<ul style="list-style-type: none">• 如果 ml/oz 標識閃爍，加熱器鳴叫兩聲，說明加熱器內水量不足。拔掉加熱器插頭，倒掉牛奶或食品，並倒掉殘餘水分。由於加熱器很燙，請小心。從上述第 1 步開始操作。• 如果所有容量標識都在閃爍且加熱器間歇性鳴叫 30 秒，說明加熱已結束。按照上述第 8 步的說明，將奶瓶或容器從加熱器內取出。
停止加熱	按下「電源/模式選擇」按鈕，加熱器將鳴叫並返回預設設定。
開始加熱	一旦選擇了正確的模式、起始溫度和容量，請按住「容量選擇/啟動」按鈕，直至加熱器鳴叫。
如果在加熱過程中開啟頂蓋	如果頂蓋在加熱過程的任何時間被開啟，顯示面板上的指示燈會閃爍，加熱器將停止工作並返回預設設定。為了在頂蓋被開啟之後重新設定加熱器，請倒掉殘留的水分，然後從使用說明第 1 步開始操作。由於這種情況可能在加熱過程的任何階段發生，出於安全考慮，最好將牛奶或食品倒掉。
很難準確設定冷凍食品的量	加熱冷凍食品時可選擇的最大容量為 230ml/8oz。

品質保證

飛利浦新安怡保證，智慧奶瓶和嬰兒食品電加熱器在購買後二十四個月內出現問題可免費更換。請將其退回給原零售商。請保留收據與何時何地購買的記錄作為購買證明。要保證質保有效，請注意：

- 必須根據本手冊中的說明使用本智慧奶瓶和嬰兒食品加熱器，並使用合適的電源。
- 質保範圍不包括因意外事故、錯誤使用、汙物、人為疏忽或正常磨損造成的損壞。

本品質保證不影響您的法定權利。

感谢您选择飞利浦新安怡

飞利浦新安怡智能奶瓶和婴儿食物加热器是唯一采用先进技术的加热器，它能够根据容器内含食物类别和食物量自动进行准确的加热时间调整。无论是加热冷冻的、冷藏的还是室温下的牛奶或婴儿食物，本智能奶瓶和婴儿食物加热器均可迅速、安全和均匀地对其加热-不会出现局部过热现象。其多用途设计可容纳所有新安怡系列的奶瓶、VIA 杯以及婴儿食物瓶或食品罐。

首次使用您的智能奶瓶和婴儿食物加热器之前，请花 5 分钟时间通读产物使用说明，包括警告。请保留这些说明供日后参阅。使用说明也可从 www.philips.com/AVENT 获取。

目录 (A):









- a. 盖子

b. 活动盖——可提升以调节空间摆放大瓶子 (330ml/11oz)
- c. 加热器底座

d. 提升装置

e. 交互式电子显示屏

交互式电子显示屏指南

	牛奶/母乳加热模式 (适用任何容器)		电源/模式选择按钮——按住按钮3秒后可开启或关闭加热器。反复按键选择牛奶/母乳或婴儿食品并开始温度。
	婴儿食物加热模式 (适用任何容器)		
	冷冻加热模式 (当加热冷冻食物时选择)		容量选择/开始按钮——反复按键以选择牛奶/母乳或食品的体积。一旦选择设定，按住按钮3秒后开始加热。
	冷藏加热模式 (当加热冷藏食物时选择)		
	常温加热模式 (当加热常温下食物时选择)	<div><div>140 5</div><div>115 4</div><div>85 3</div><div>55 2</div><div>30 1</div></div> 	容量显示——用 ml 和 oz 表示已选择的水或食物的体积

注：在按电源/模式选择按钮或容量选择/开始按钮时，请按住加热器底部防止其滑动。

使用说明

1. 确保将加热器摆放在平稳的地方，抓住前把手打开盖子，倒入大约 (i) 的水到加热器中——见第2页的图示以确定用水量。将完全组装好的瓶子 (包括气包盖以防止过热) 或储藏容器盖好放入加热器中。至于食物瓶罐的操作方法请参考厂方说明书。

注：当加热330ml/11oz的瓶子时，盖子会调解到更大的尺寸。这会导致少量的蒸汽漏出。关上盖子以确保前面把手发出“卡”的一声。
2. 加热器插上电源并开启。

3. 按住电源/模式选择按钮3秒打开加热器 (ii)。加热器会发出嘟嘟声，然后显示屏上会显示牛奶/母乳，室温和ml/oz等信息。表明已经准备就绪。如果没有正确关上盖子，则指示灯会闪烁。当所有组件启动时，系统自动默认为牛奶/母乳/常温模式。如果刚好是您需要的模式，请跳至第五步，如果不是，继续第四步操作。

4. 选择牛奶/母乳或食物，然后按电源/模式选择按钮选好开始的温度。反复按按钮直至希望的指示灯亮起 (iii)。

请注意，有6个可能的选择：常温下牛奶/母乳，冷的牛奶/母乳，冷冻牛奶/母乳，常温下食物，冷的食物，冷冻食物。(需要时请见第三页的显示指南)。

- 注：不建议加热冷冻食物瓶罐。但您可以将冷冻食物放在VIA杯里加热。

注：请确保选择了正确的选项，因为牛奶/母乳和食物的加热时间不能过长。
5. 选择瓶子或容器里牛奶/母乳或食物的容量，反复按容量选择/开始按钮直到您希望的体积指示灯亮起 (iv)。如果希望的容量不在所选之列，请选择最为接近的容量。

注：对于容量单位用克表示的，选择等量的毫升数 (例如85g就是85ml)。

注：加热230ml/8oz的冰冻食物时可选择最大容量。
6. 开始加热工作 (v): 当您希望的设置亮起，请按下容量选择/开始按钮直至加热器发出嘟嘟声。容量指示灯上升或下降闪烁到所选择的量为止。

加热器工作时——请不要打开盖子。
7. 完成加热过程 (vi): 完成加热后，加热器会在30秒内间歇地发出嘟嘟声，容量指示灯持续闪烁3分钟。当加热器开始发出嘟嘟声时您就可以取出加热食物。3分钟后，加热器将在提示5次后自动关闭。

注：飞利浦新安怡建议完成加热后立刻取出食物并食用，最好在加热器自动关闭前取出。
8. 打开盖子时要小心残余的蒸汽。打开盖子时请小心蒸汽以免烫伤。将加热的食物从容器中取出时最好使用一块布以免烫伤 (vii)。使用提升装置取出小瓶子，VIA杯，小食物瓶罐。将提升装置从轮纲上方拔出，将其自然置于轮纲上。

注：不要从加热器上取下提升装置。
9. 喂婴儿之前：喂食前请始终检查食物的温度。

牛奶/母乳——摇晃瓶子或牛奶容器，在手背上洒几滴牛奶/母乳以保证温度适中。

食物——彻底搅拌食物，自己先舀一勺试尝，确保不会过烫。如果食物不够热，请参考故障测定指南。

注：在摇晃前请保证瓶子或牛奶容器的盖子是紧紧盖上的。
10. 拔下主机插头，清空剩余水 确保插头不接触到水。如需加热更多瓶子或容器，请从步骤1开始操作。否则，用湿布清洁加热器的内壁和外壁 (viii)。取下提升装置仅作清洗目的，垂直提升至可自然竖直。将手柄推离自己并转动90°的位置或直至可自然取下，然后拔出。

注：出于生物卫生考虑，每次加热后牛奶/母乳和食物不得再次加热，如果您未立即食用应马上倒掉。请咨询健康专家/母乳喂养顾问，进一步的了解有关安全喂养的建议。
- 注：如果加热器开启但没有任何选择输入，则将在3分钟后自动关闭。

加热时间约值

常温下牛奶/母乳115ml/4oz	2 mins
冷的牛奶/母乳115ml/4oz	3 mins
常温下牛奶/母乳255ml/9oz	3 mins
冷的牛奶/母乳255ml/9oz	4.5 mins
常温下食物230ml/8oz	5 mins
冷的食物230ml/8oz	7 mins

智能奶瓶和婴儿食物加热器的维护

请确保清洗加热器前按下插头，使其冷却。用湿布擦拭加热器的内壁和外壁。不得使用擦洗剂擦洗。使用凉开水或过滤水清洗加热器会形成水垢。当加热器需要除垢时，模式和开始温度设置的指示灯会在显示屏上闪烁。为确保机器的最大使用功效，最好在每次使用完毕后进行除垢。接收到除垢提示后，按住电源/模式选择按钮或容量选择/开始按钮3秒。如果您不想除垢，请注意机器在下次使用时不再进行除垢提醒，但是其循环次数将累计，直至下次除垢清零。

注意！除垢

除了柠檬酸和醋酸，不得使用其它任何化学物品进行除垢以免造成无法挽回的损坏。请避免接触眼睛以免形成刺激。置于儿童无法触及的地方。

您可以这样除垢：

可以在200ml/7oz的水中加入(10g)的柠檬酸*。然后倒入空的加热器中。除垢过程中不得将瓶子，罐子或杯子放入加热器中。盖上盖子，然后设置到310ml/11oz冰冻牛奶/母乳的模式。加热一次结束后冷却30分钟，然后用清水冲洗并倒干净。仅用湿布擦拭内壁和外壁。

或者：

在200ml/7oz的冷水中加入100ml/3.5oz的醋酸至加热器中。直到部件上的水垢都被溶解。除垢过程中不要把瓶子，罐子或杯子放入加热器中。彻底清洗并清空。用干布擦拭内壁和外壁。

*柠檬酸可以从绝大多数药剂师处买到，也可以从飞利浦新安怡客户服务中心处获取。

警告！

本智能奶瓶和婴儿食物加热器配备了一个不可再接的成型插头。本电器的电源线是不可更换的。如果电源线损坏，本电器应废弃。该产物生产符合无线电干扰要求IEC 标准89/336/EEC。

如不按以下说明进行操作易引起烫伤或产物损坏。

- 确保在开启加热器前加入水。
- 确保在开始加热前加入适量的水。在下次使用前，清空加热器里残留的水。
- 不建议使用加热器加热冰冻食品瓶罐。
- 不要把双手放在活动盖上或在加热过程中打开盖子避免造成烫伤。
- 加热330ml/11oz的瓶子时，请提升活动盖调节为更大空间。这会造成少量的蒸汽外溢。
- 为避免烫伤，完成加热后打开盖子时请小心残留的蒸汽。
- 在使用过程中，加热器中有热水。请在取出加热食品时避免溅到自己。
- 使用提升装置取下小瓶子，VIA杯，和婴儿食品小瓶罐。
- 从加热器上取下瓶子，杯子和瓶罐时使用抹布。
- 在喂食前检查食物温度。
- 出于生物卫生的考虑，牛奶/母乳与食物在加热一次后不应再次加热。
- 千万不要将加热器或电源线浸在水中。
- 本电器可由具行为能力的人使用，请放置在儿童及老弱病残无法接触的地方。
- 本产物不打算由肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人（包括儿童）使用，除非有负责他们安全的人对他们使用本产物进行监督或指导。
- 应监督小孩不得玩弄该电器。
- 不按除垢说明的操作会造成无法挽回的损坏。
- 本智能加热器不含任何可维修部件。切勿擅自打开、维护或维修本加热器。

故障测定指南

食物不够热	食物加热的温度和食物的密度有关。飞利浦新安怡建议，汤类食物应该可以用该加热器加热到理想的温度。如果您发现加热后过厚的食物仍不够热，请再加30ml/1oz的水。根据第4步第5步方法操作，选择食物常温模式，然后将加热器设定到30ml/1oz的选项。喂小孩前搅拌食物。喂食前始终检查食物的温度。
牛奶/母乳不够热	如果您发现加热后牛奶/母乳依然不够热，请再加30ml/1oz的水。根据第4步第5步方法操作，选择食物常温模式，然后将加热器设定到30ml/1oz的选项。喂小孩前摇晃瓶子或轻轻倒入储藏容器中，在手背上洒几滴牛奶/母乳以检查牛奶/母乳的温度。
显示屏不亮/加热器无法启动	检查盖子正确盖上。检查主机电源线已插好且电源出口打开。然后按住电源/模式选择按钮3秒钟。
显示屏上的信号不停闪烁	<ul style="list-style-type: none">• 如果牛奶/母乳，常温和ml/oz的信号不停闪烁，请正确关上盖子。• 如果所有的容量信号闪烁，加热器间歇30秒发出嘟嘟声，而且加热完成。从第8步开始，将瓶子或容器从加热器中取出。• 如果所有模式和起始温度指示灯不停闪烁，说明本电器需要除垢。参见第 6 页“智能奶瓶和婴儿食物加热器维护”章节的说明。要接收除垢警告，请按住“电源/模式选择”按钮或“容量选择/启动”按钮不放，保持 3 秒钟。如果您不想除垢，这可能造成无法修复的损坏。
加热器发出嘟嘟声	<ul style="list-style-type: none">• 如果ml/oz的信号灯在闪烁，加热器叫了两次，则表示加热器中水量不足。拔下插头，取出牛奶/母乳或食物，清空残余水。小心加热器很烫。然后从第1步起开始操作。• 如果所有的容量信号都在闪烁，加热器间歇30秒发出嘟嘟声，随后加热完成。请从第8步开始操作，从加热器中取出瓶子或容器。
停止加热	按电源/模式选项按钮，加热器发出嘟嘟声，所有设置还原成初始设置。
开始加热	一旦选择了正确的模式、起始温度和容量后，按住容量选择/开始按钮直至加热器发出嘟嘟声。
在加热过程中如果盖子被打开	如果在加热过程中盖子被打开，显示面板上的灯会不停闪烁，加热器会停止工作并还原至初始设置。为了在盖子打开后重新设置加热器，需先倒掉残余水，然后从说明第一步起开始操作。由于这种情况可能在加热的任何一个阶段发生，出于安全考虑，牛奶/母乳或食物最好倒掉。
冰冻食物的量很难准确设定	加热冰冻食物时选择最大体积230ml/8oz。

质保书

飞利浦新安怡保证，智能奶瓶和婴儿食物电加热器在购买后二十四个月内出现问题可免费更换。请将其退回给原零售商。请保留收据与何时何地购买的记录作为购买证明。要保证质保有效，请注意：

- 必须根据本手册中的说明使用本智能奶瓶和婴儿食物加热器，并使用合适的电源。
- 该声明对引起的任何事故，误操作，污垢，疏忽或正常磨损或损坏概不负责。

该质保书不会影响您的法律权利。

PHILIPS

AVENT

产品

: 飞利浦新安怡智能奶瓶/婴儿食物加热器

型号

: SCF260

额定电压

: 220V~

额定频率

: 50Hz

额定输入功率

: 275 W

生产日期

: 请见产品底部

产地

: 英国

35

884026035710

飞利浦（中国）投资有限公司

上海市天目西路218号1602-1605

全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-1998, GB4706.19-2004制造

使用产品前请，请仔细阅读本使用说明书。请妥善保管本使用说明书
发行日期:2009/08/20

GB Call FREE on **0800 289 064**

IRL Call FREE on **1800 509 021**

AU **1 300 364 474**

TC **+886 (2) 8245 7399 / 0800-231-099**

SC **400 880 0008**

www.philips.com/AVENT

Philips AVENT, a business of Philips Electronics UK Ltd.

Philips Centre, Guildford Business Park, Guildford, Surrey, GU2 8XH