

**PHILIPS**

**sonicare**

ExpertClean



※この写真の製品はHX9662/06です。

フィリップス ソニッケアー  
エキスパートクリーン 充電式電動歯ブラシ

品番 **HX9617/03, HX9627/01**  
**HX9632/01, HX9662/06**  
**HX9692/07, HX9692/03**

ソニックアーク エキスパートクリーンをお買い上げいただき、まことにありがとうございます。製品をご使用いただく前に、Philips Sonicareアプリをダウンロードし、製品をアプリに接続していただくことをお勧めします。長い間で愛用いただくために、ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。

※Philips Sonicareアプリの使いかたについては、P2「アプリの使いかた」を参照してください。

## ブラシヘッド認識 機能について

エキスパークリーンでは、ブラシヘッド認識機能対応のブラシヘッドをお使いいただくことでハンドルのモードと強さ設定が自動で設定され、いつでも最適な状態でブラッシングをお楽しみいただけます。

ブラシヘッドにはお勧めのモードと強さがあらかじめ設定されていますが、これらはお好みに合わせて変更することができます。

お勧めのブラッシングモードと強さ設定の変更方法については「ブラッシングモード設定」(P16)と「ブラッシングモードについて」の項(P17～19)を参照してください。



Philips  
Sonicare

## アプリの 使いかた

エキスパートクリーンでは、お持ちのスマートフォンと連携し、Philips Sonicareアプリをご利用いただくことができます。本アプリは、お客様一人ひとりに合った上手なオーラルケアの方法とコツをお知らせします。理想的なオーラルケアのため、Philips Sonicareアプリをぜひ活用ください。

### Philips Sonicareアプリをダウンロード

- 1 スマートフォンでApp StoreもしくはGoogle Playにアクセスし、「Sonicare」と検索して、Philips Sonicareアプリをダウンロードします。
- 2 アプリを起動します。
- 3 画面の指示に従い、ハンドルの接続画面までお進みください。

### ハンドルをアプリに接続

- 1 スマートフォンのBluetooth®設定がオンになっていることを確認してください。
- 2 画面上のプラスのアイコンをタップし、次の画面で画面下のBluetooth接続の案内をタップし、接続画面に移動します。
- 3 ハンドルを充電器から外し、電源ボタンまたはモードボタンを押して、アプリと接続します。2回目以降は、アプリを起動するとハンドルが自動的にアプリに接続されます。
- 4 画面の指示に従って、ログイン画面までお進みください。

### MyPhilipsアカウントを作成

Philips Sonicareアプリをご使用いただくには、MyPhilipsアカウントが必要です。

- 1 ログイン画面の右下をタップし、お住まいの地域を選択してください。
- 2 指示に従ってアカウントの作成を行ってください。
- 3 画面の指示に従ってページを進んでください。

※MyPhilipsアカウントをお持ちの方は、「ログイン」からログインしてください。

※FacebookかGoogle+のアカウントをお持ちの方は、いずれかを選択してログインいただくことで、SNSアカウントの情報を元にMyPhilipsアカウントが自動的に作成されます。

### ご自身の情報を登録

表示される質問に沿って、ご自身のオーラルケアに関するご要望を登録してください。

### Bluetooth接続とブラッシングデータの同期

- 1 ハンドルに保存されているブラッシングのデータをアプリと同期させるため、スマートフォンのBluetooth設定がONになっていることを確認し、アプリを開きます。
- 2 スマートフォンとハンドルを近づけてください。ハンドルとスマートフォンの初期接続が完了している場合、自動的にハンドルが接続され、ブラッシングのデータが同期されます。

※Apple、Appleロゴ、iPadおよびiPhoneは、アメリカおよびその他の国におけるApple Inc.の登録商標です。App Storeは、Apple Inc.のサービスマークです。

※AndroidはGoogle LLCの商標です。Google PlayおよびGoogle PlayロゴはGoogle LLCの商標です。

※Bluetooth®のワードマークおよびロゴはBluetooth SIG, Inc.が所有する登録商標であり、Koninklijke Philips N.V.またはその関連会社は、これらのマークをライセンスに基づいて使用しています。その他の商標や商品名はそれぞれの所有者に帰属します。

### アプリ 使用上のご注意

※最新の対応OSはウェブの製品ページよりご覧いただけます。

※タブレットではお使いになれません。

※一部の機種では正常に動作しない場合があります。

※App StoreもしくはGoogle Playにアクセスして、お手持ちのデバイスが対応機種であることをご確認ください。


## 商品のご確認

お買い上げいただいた製品により、セット内容が異なります。

下の表を参考に、製品および付属品が揃っていることをご確認ください。

ご購入いただいた商品の品番を  
ご確認ください

※品番はパッケージ天面に記載されています。



|                         | HX9617<br>/03  | HX9627<br>/01  | HX9632<br>/01  | HX9662<br>/06  | HX9692<br>/07 | HX9692<br>/03     |                |
|-------------------------|----------------|----------------|----------------|----------------|---------------|-------------------|----------------|
| ハンドル                    | HX960V<br>ホワイト | HX960K<br>ブラック | HX962K<br>ブラック | HX962G<br>ホワイト | HX962P<br>ピンク | HX962G<br>ホワイト    | HX962K<br>ブラック |
| プレミアム<br>クリーン<br>ブラシヘッド | 1本<br>(ホワイト)   | 1本<br>(ブラック)   | 1本<br>(ブラック)   | 1本<br>(ホワイト)   | 1本<br>(ホワイト)  | 2本<br>(ホワイト、ブラック) |                |
| プレミアム<br>ガムケア<br>ブラシヘッド | —              | —              | 1本<br>(ブラック)   | 1本<br>(ホワイト)   | 1本<br>(ホワイト)  | —                 |                |
| 充電器                     | 1個             | 1個             | 1個             | 1個             | 1個            | 1個                |                |
| トラベルケース                 | 1個             | 1個             | 1個             | 1個             | 1個            | 2個<br>(ホワイト、ブラック) |                |

\*初めてお使いになる前に、製品および付属品に傷や破損がないか必ずご確認ください。万が一、傷や破損があった場合はそのまま使用せず、フィリップスサポートセンターにお問い合わせください。

\*日本国内では未発売の品番の記載がある可能性があります。



# 目次

## ●ご使用方法

|                           |       |
|---------------------------|-------|
| ブラシヘッド認識機能について .....      | 1     |
| アプリの使いかた .....            | 2     |
| 商品のご確認 .....              | 3     |
| 目次 .....                  | 5     |
| 必ずお守りください .....           | 6~9   |
| 各部の名称 .....               | 10    |
| 充電のしかた .....              | 11・12 |
| 保管のしかた .....              | 12    |
| ブラシヘッドの使いかた .....         | 13・14 |
| 上手なみがきかた .....            | 15    |
| ブラッシングモード設定 .....         | 16    |
| ブラッシングモードについて .....       | 17~19 |
| 便利な機能 .....               | 20・21 |
| お手入れのしかた .....            | 22    |
| 製品を廃棄するとき .....           | 23・24 |
| 故障かな?と思ったら .....          | 25・26 |
| Guidance in English ..... | 27~54 |
| 保証とアフターサービス .....         | 55    |
| 仕様 .....                  | 56    |
| 無料修理規定 .....              | 58    |
| 保証書 .....                 | 最終ページ |

## ●廃棄について

## ●困ったとき

## ●英文解説

## ●保証証

# 必ずお守り ください

ご使用の前に必ず取扱説明書をよくお読みのうえ、正しくお使いください。また、取扱説明書は大切に保管してください。

## 安全上のご注意

- ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。
- 誤った取扱いをしたときに想定される内容を「危険」、「警告」、「注意」に区別しています。

### ○絵表示について



**危険** 人が死亡または重傷を負う可能性が大きい内容。



**警告** 人が死亡または重傷を負う可能性が想定される内容。



**注意** 人が傷害を負う可能性および物的損害のみの発生が想定される内容。

### ○絵表示の例



・△記号は、「危険、警告、注意」を示します。図の中や近くに具体的な注意内容(左図の場合は高温注意)を示します。



・⊘記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁止内容(左図の場合は分解禁止)を示します。



・●記号は、必ずしていただく「強制」を示します。図の中や近くに具体的な強制内容(左図の場合は電源プラグをコンセントから抜くこと)を示します。



## 危険

- 本機は充電式電池を内蔵しています。火中投入、加熱、高温での充電・使用・放置をしないでください。発熱・発火・破裂の原因になります。

## ⚠ 警告



●製品を廃棄するとき以外は、絶対に分解や改造、修理をしないでください。火災、感電、けがの原因になります。修理はフィリップスサポートセンターにお問い合わせください。



●本製品は歯、歯ぐきの洗浄のために設計されています。本取扱説明書に記載されている以外の目的では使用しないでください。本製品を適切に使用できない場合は、すみやかにご使用を中止してください。また、痛みや不快感が生じた場合はすみやかに医師にご相談ください。



●使用して気分が悪くなった場合は使用を中止してください。事故や体調不良の原因になります。



●異常・故障時には、直ちに使用を中止してください。そのまま、使用すると火災・感電・けがに至るおそれがあります。



●製品が破損した場合（ブラシヘッド、ハンドルまたは充電器）は、直ちに使用を中止してください。本製品には、修理できない部品が含まれています。破損した場合は、フィリップスサポートセンターにお問い合わせください。



●電源プラグは、根元まで確実に差し込んでください。火災や感電の原因になります。スムーズにコンセントに電源プラグが装着できない場合、無理に押し込もうとしないでください。



●充電器の電源コードを傷付けたり、無理に曲げたり、引っ張ったり、ねじったり、たばねたり、重い物を載せたり、挟み込んだり、加工したりしないでください。また、充電器を熱したものの上に置いたり、屋外で使用しないでください。電源コードが破損し、火災・ショート・感電の原因になります。



●充電器の電源コードや電源プラグが傷んだり、コンセントの差し込みが緩いときは使用しないでください。感電・ショート・発火の原因になります。



●充電器を交換する場合は、必ず専用の充電器と交換してください。



●ハンドルを充電するときは、専用の充電器以外では行わないでください。



●充電器底面に表示されている電源以外は使用しないでください。火災・感電の原因となります。スムーズにコンセントに電源プラグが装着できない場合、無理に押し込もうとしないでください。



●濡れた手で電源プラグを抜き差ししないでください。感電やけがをすることがあります。



●充電器を水につけたり、水をかけたりしないでください。ショート・感電の原因になります。



●充電器をバスタブ、洗面台、流し台などの水まわりに置いたり、水まわりの近くに保管しないでください。ショート・感電の原因になります。



●充電器を浴室等で使用および保管しないでください。感電する場合があります。



●お手入れの際は必ず充電器の電源プラグをコンセントから抜いてください。感電やけがをすることがあります。



●充電器をお手入れした後は、完全に乾く前に電源コンセントに接続しないでください。ショート・感電の原因になります。



●乳幼児の手の届くところに本製品を置かないでください。



●自分で意思表示ができない人（幼児を含む）に使用させないでください。またお体の不自由な人だけでは使用しないでください。口腔の感覚が弱い方なども使用しないでください。事故やケガの原因になります。

## ⚠ 注 意



●健康面で不安のある方や、ペースメーカー等の体内埋込型医療機器、家庭用医用電気機器を使用している場合は、使用前に医師又は機器メーカーに確認してください。



●ハンドルを充電する場合は、磁性金属の上で充電しないでください。充電効率が下がります。



●お子様ご使用の際には、保護者の監督のもとに行ってください。



●ブラシヘッドは家族や他人と共用しないでください。感染や炎症の原因になります。



●充電器の上にコインやクリップなど、金属製の物を置かないでください。熱くなり、やけどの原因になります。



●歯や歯ぐきにブラシヘッドを強くあてたり、1カ所に長くあてすぎたりしないでください。歯や歯ぐきを傷つけることがあります。歯周病がひどい人などは歯科医師にご相談ください。



●充電器の電源プラグをコンセントから抜くときは、電源コードを持たずに必ず先端の電源プラグを持って引き抜いてください。感電やショートして発火することがあります。



●充電時以外は、充電器の電源プラグをコンセントから抜いてください。けがややけど、絶縁劣化による感電・漏電火災の原因になります。



●収納時に電源コードを充電器に巻きつけないでください。電源コードに負荷がかかり断線し、ショートによる火災などの原因になります。



●器具用プラグにピンやごみを付着させないでください。感電・ショート・発火の原因になります。



●ブラシヘッドのプラスチック部分を歯にあてないでください。歯や歯ぐきを傷つける原因になります。



●治療中の歯や不安定な入れ歯など口腔内に気になる症状がある場合は、その部位での使用はしないでください。けがの原因になります。



●本製品は、食器洗浄機で洗浄・乾燥しないでください。



●お手入れの際に、アルコール、酢、漂白剤などを使用しないでください。変色、変形の原因になります。

## 使用上のご注意

1. 本製品はパーソナルケア用であり、歯科医院や医療機関において複数の患者に使用するものではありません。
2. 毛がひろがったり毛先がつぶれたブラシヘッドは使わないようにしてください。破損した毛がブラッシング中に取れてしまうことがあります。このようなことを防ぐため、また、最適な歯垢の除去と機能を維持するために、ブラシが目に見えて傷んでいない場合でも、ブラシヘッド交換お知らせランプが点灯したとき、もしくは約3カ月ごとに交換してください。
3. 一般の口腔衛生用品を初めてご使用になる場合と同様、過去2カ月間に口腔内の治療や歯ぐきの手術を受けられた場合は、本製品をご使用になる前に、あらかじめ歯科医師にご相談ください。
4. 本製品をご使用の結果、万一激しい出血があった場合や、本製品を使い始めて1週間経過後も出血が認められる場合には、ご使用を中止し、歯科医師にご相談ください。
5. 健康面で不安なことがある場合はご使用の前にかかりつけの医師にご相談ください。
6. 炭酸ナトリウム(ホワイトニング用歯磨き粉の一般的成分)を含む歯磨き粉をお使いの場合は使用ごとにブラシヘッドを本体から外し、よく水洗いしてください。プラスチック部のひび割れが生じる危険性があります。
7. ブラシヘッドが変形する可能性があるため、精油やココナッツオイルを含む歯磨き粉などの製品との併用はお控えください。
8. 最良の効果を得るためにフィリップスソニックアーク純正ブラシヘッドをご使用ください。
9. ボタンを押すときは、指の腹でボタンの中心部を押してください。爪で押すと故障の原因となります。

# 各部の名称

※ ブラシヘッドキャップは  
同梱されています。

ブラシヘッド  
(プレミアムクリーン  
ブラシヘッド)

ハンドル

電源ボタン

ブラッシング  
強さ表示ランプ

モード・強さボタン


ブラッシングモード  
表示ランプ

ブラシヘッド交換  
お知らせランプ

充電表示ランプ

プレミアムガムケア  
ブラシヘッド

※HX9632/01、  
HX9662/06、  
HX9692/07のみ

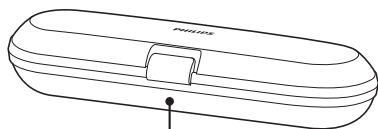

トラベルケース

充電器

※イラストはイメージです。

# 充電のしかた

初めてお使いのときや半年以上使用していなかった場合は、充電を始めても充電表示ランプが点滅しないことがあります。このような場合でも、数分後に充電表示ランプが点滅し始めますので、そのまま充電してください。

※本製品は、ご使用の都度充電をしても充電電池の寿命には影響ありません。



※24時間経過しなくても充電が完了することがあります。

※ご使用後は、ハンドルを充電器にセットして充電してください。

※充電器は、水で濡れたところや水がかかるところに置かないでください。

## 充電器で充電する場合

1. 充電器の電源プラグをコンセントに差し込みます。
2. 充電表示ランプが見えるように、ハンドルの底面が充電器に完全に接するようにハンドルを立てます。

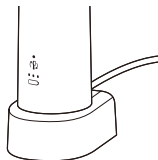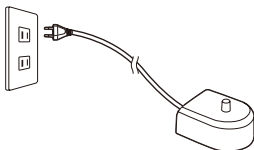

※充電中は、充電表示ランプが点滅します。

※充電中は、電源ボタンを押しても動作しません。



### 注意

充電時以外は、充電器の電源プラグをコンセントから抜いてください。けがややけど、絶縁劣化による感電・漏電火災の原因になります。

## 【充電表示について】 .....

### ハンドルが充電器に置かれているとき

(充電器の電源プラグがコンセントに差し込まれているとき)

| 電池残量 | ランプの表示           | ランプの数 | ビープ音 |
|------|------------------|-------|------|
| 充電完了 | 緑色に点灯<br>(その後消灯) | 3     | なし   |
| 高    | 緑色に点滅            | 3     | なし   |
| 中    | 緑色に点滅            | 2     | なし   |
| 低    | 緑色に点滅            | 1     | なし   |

### ブラッシング終了後

| 電池残量 | ランプの表示       | ランプの数 | ビープ音 |
|------|--------------|-------|------|
| 高    | 緑色に点灯        | 3     | なし   |
| 中    | 緑色に点灯        | 2     | なし   |
| 低    | 緑色に点灯        | 1     | なし   |
| 充電催促 | オレンジ色に<br>点滅 | 1     | あり   |



#### 注意

- 充電器底面に表示されている電源以外は、使用しないでください。
- 専用の充電器のみを使用してください。
- 充電器の上にコインやクリップなど、金属製の物を置かないでください。


※他の製品やソニーケアの他モデルの充電は、行わないでください。

※充電中は本体および充電器が多少あたたかくなりますが異常ではありません。


※使用期間の経過による充電電池の劣化に伴い充電後の使用回数は減少する場合があります。

## 保管のしかた (長期間使用しない場合)

1. 充電器の電源プラグをコンセントから抜き、お手入れをします(P22を参照してください)。



2. 直射日光を避け、冷暗所で保管してください。

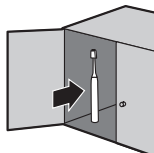

# ブラシヘッドの 使いかた

## \*ブラッシングのコツ

性能を最大限引き出すために、ブラシヘッドを歯と歯ぐきに対して45度の角度で軽くあててブラッシングしていただくのがコツです。



### 注意

ブラッシングの際は、本製品の動きに任せてください。力を入れて押しあてたりこすったりすると、正しく歯を磨くことができなったり、故障の原因になることがあります。

## ブラシヘッドの取り付け／取り外し

### 【取り付けかた】



ブラシヘッドの毛先がハンドルの正面を向くように、ブラシヘッドの向きをそろえ、ブラシヘッドが止まるまで金属シャフトにヘッドをしっかり差し込んで取り付けます。



※ブラシヘッドとハンドルの間には、わずかなすき間があります。

### 【取り外しかた】



ハンドルをしっかり握って固定し、ブラシヘッドを真上に引き抜いて取り外します。

## 基本的な使いかた


### 1. ブラッシングモードに適したブラシヘッドをハンドルに取り付けます。

各ブラッシングモードにお勧めのブラシヘッドについては、「ブラッシングモードについて」(P17～19)を参照してください。



### 2. ブラシヘッドを数秒間、水でゆすいで濡らします。 お好みにより、歯磨き粉を付けます。

※ブラシヘッドの携帯用ブラシヘッドキャップはご使用前に外してください。

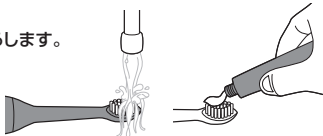


- ソニックアークを初めてお使いいただくと、少しくすぐったく感じることや振動が強く感じられることがありますがお使いいただくにつれて慣れていきます。
- ソニックアークの動きに任せてください。力を入れてこすりすぎると、逆効果です。
- 1日2回のブラッシングをお勧めします。

### 3. ブラシヘッドを歯と歯ぐきのさかい目に角度(45度)をつけて、隙間が空かないようにあてます。電源ボタンを押します。

※ ブラシヘッドを歯にあてる力が強すぎると、振動の変化(および振動音のわずかな変化)やライトリングの点灯でお知らせします。「過圧防止センサー機能」(P21)を参照してください。

※ ブラシの中央部が常に歯にあたるようにしてブラッシングしてください。

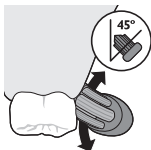

### 4. 歯にブラシヘッドを軽くあてて、同じ箇所です約2秒間ずつブラッシングしてください。

※ 効果的なブラッシングをするために、この要領で口腔内全体をブラッシングしてください。

※ ブラシ毛が広がる場合があります。ブラシヘッドで歯を強く磨かないでください。



### 5. 歯の裏側をブラッシングするときは、ハンドルを立てるようにはブラシをたてにあて、垂直方向に何度かブラッシングします。






### 6. ブラッシング後は、水で口をゆすぎます。

# 上手なみがきかた

効果的に歯を磨くために、以下のポイントにご注意ください。

## 効果的なブラッシング方法

| 歯と歯ぐきの境目                                                                                                                      | 奥歯の奥                                                                                                                          | かみ合わせ                                                                                                          | 前歯の裏側                                                                                                    |
|-------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
|  <p>45°</p> <p>ブラシを斜め(45度)にあててください。</p>       |  <p>ブラシを少し立てるようにあててください。</p>                 |  <p>かみ合わせ面に対して垂直にあててください。</p> |  <p>ブラシをたてにあててください。</p> |
| 歯の表側                                                                                                                          | 奥歯の裏側                                                                                                                         |                                                                                                                |                                                                                                          |
|  <p>45°</p> <p>ブラシを歯の表面に斜め(45度)にあててください。</p> |  <p>45°</p> <p>ブラシを歯の表面に斜め(45度)にあててください。</p> |                                                                                                                |                                                                                                          |

## ヒント

- ・歯磨き粉をお使いになる場合は、歯磨き粉が周囲に飛び散ることを防ぐためブラシヘッドを口腔内に入れてから電源を入れてください。
- ・本製品の性能を最大限引き出すために、ブラシヘッドを歯に軽くあててブラッシングしてください。
- ・ブラシペーサー機能により口腔内を均等にくまなくブラッシングできます。「ブラシペーサー機能」(P20)を参照してください。
- ・本製品を初めてお使いになる場合、人によっては、少しくすぐったく感じることや振動が強く感じられることがあります、お使いいただくにつれて慣れていきます。

## このような場合

### ●歯列矯正装置をつけている方

歯と歯列矯正装置の間に、ブラシの毛先を斜め(45度)にあてるようにして磨きます。  
歯と矯正装置の間にブラシの毛先を無理に押し込まないでください。

### ●治療後の歯科補綴物

詰め物、クラウン、インプラント等の歯科補綴物にもご使用いただけますが、何か異常を感じた場合は、歯科医師にご相談ください。


## ■ ブラシヘッド交換のタイミング

最良のブラッシング効果を得るため、ブラシはブラシヘッド交換お知らせランプが点灯したとき、青色のブラシ毛が白くなったとき、もしくは約3カ月ごとに交換してください。

# ブラッシング モード設定


## ブラッシングモード設定の切り替え

本製品にはブラッシングモードの選択機能があります。お好みに合わせてブラッシングモードを選択してください。

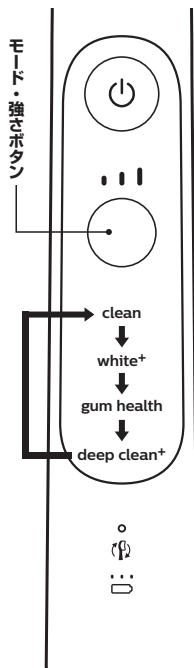

※図はホワイトプラスモード  
つき製品です。

- 待機状態(ブラッシングモード表示ランプが点灯している状態)でモード・強さボタンを押すごとに、1つずつブラッシングモードが切り替わります。選択されたブラッシングモードが点灯します。
- オンの状態(ブラッシング中の状態)でモード・強さボタンを押すと、モード設定が切り替わらずに、ブラッシングの強さが変わります。ブラッシングの強さ設定についてはP19「強さ設定」の項を参照してください。

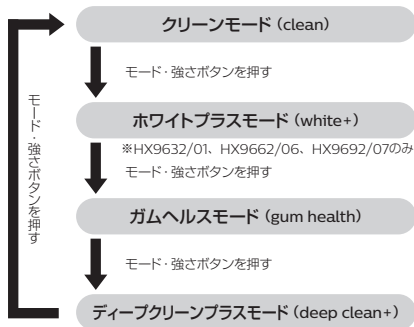

※ブラシヘッド取り付け後、ブラッシングモードや強さを変更するとハンドルがそのモードや強さを記憶し、次に同じブラシヘッドを取り付けた際、そのモードに設定します。

# ブラッシングモード について

口腔内を均等にくまなくブラッシングするために、歯磨き時間の区切りをピープ音とブラシの振動を一時停止することでお知らせします。この機能をブラシペーサー機能といいます。ブラッシングモードにより、ブラッシング中にブラシペーサー機能がお知らせする間隔が異なります。


※ ブラシヘッド認識機能対応のブラシヘッドを取り付けると、ハンドルがブラシヘッドのタイプを認識し、ブラシヘッドごとに適したブラッシングモードを設定します。ブラシヘッド取り付け後にモード・強さボタンを押してブラッシングモードや強さを変更すると、ブラシヘッドにそのモードや強さが記録され、次に同じブラシヘッドを取り付けた際、そのモードや強さが自動的に選択されます。初期設定に戻したい場合は、各ブラッシングモードのお勧めのブラシヘッドを参照して設定しなおしてください。

## クリーンモード (clean)

歯垢をしっかりと落とす、通常のブラッシングモードです。

|            |                  |
|------------|------------------|
| ブラッシング時間   | 2分               |
| お勧めの強さ設定   | 強                |
| お勧めのブラシヘッド | プレミアムクリーンブラシヘッド* |

1. 上あご右側(①)の歯の表裏を20秒間ブラッシングします。
2. 上あご前側(②)へ移動し、順に③から⑥までの口腔内を均等にブラッシングします。

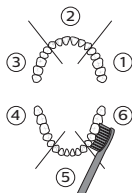

※20秒間隔でピープ音が鳴り、移動のタイミングをお知らせします。


## ホホワイトプラスモード (white+)

歯の表面のステイン(着色汚れ)を落とす動作(2分間)の後に、歯を磨きあげ光沢を与えます(40秒間)。

※HX9632/01、HX9662/06、HX9692/07のみ

|            |                      |
|------------|----------------------|
| ブラッシング時間   | 2分40秒                |
| お勧めの強さ設定   | 強                    |
| お勧めのブラシヘッド | プレミアムホホワイトブラシヘッド(別売) |


1. 上あご右側(①)の歯の表裏を20秒間ブラッシングします。
2. 上あご前側(②)へ移動し、順に③から⑥までの口腔内を均等にブラッシングします。

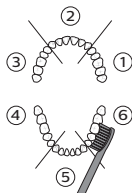

※20秒間隔でピープ音が鳴り、移動のタイミングをお知らせします。

3. 口腔内すべて(①～⑥)のブラッシングが終わると、磨きあげのための振動に切り替わります。
4. 磨きあげのための振動に切り替わったら、上あご表側(②)を20秒間ブラッシングします。
5. 下あご表側(⑤)を20秒間ブラッシングします。

※20秒間隔でピープ音が鳴り、移動のタイミングをお知らせします。  
※磨きあげのための振動に切り替わると、使用感や振動音が変わります。




### ガムヘルスモード (gum health)


歯垢をしっかり落とす通常の歯磨き(2分間)の後に、歯と歯ぐきの境目にやさしい刺激を与えます(1分20秒間)。

|            |                 |
|------------|-----------------|
| ブラッシング時間   | 3分20秒           |
| お勤めの強さ設定   | 強               |
| お勤めのブラシヘッド | プレミアムガムケアブラシヘッド |

1. 上あご右側(①)の歯の表裏を20秒間ブラッシングします。
2. 上あご前側(②)へ移動し、順に③から⑥までの口腔内を均等にブラッシングします。
3. 口腔内すべて(①～⑥)のブラッシングが終わると、歯ぐきケアのための振動に切り替わります。
4. 歯ぐきケアのための振動に切り替わったら、上あご右側奥歯(①)の表裏を20秒間ブラッシングします。
5. 上あご左側奥歯(③)と、下あご右側奥歯(④)と、下あご左側奥歯(⑥)の各表裏を20秒間ブラッシングします。

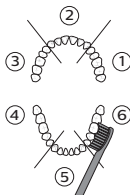

※20秒間隔でピープ音が鳴り、移動のタイミングをお知らせします。

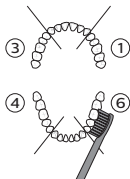

※20秒間隔でピープ音が鳴り、移動のタイミングをお知らせします。  
※歯ぐきケアのための振動に切り替わると、使用感や振動音が変わります。

## ディープクリーンプラス モード (deep clean+)

歯ぐきに心地よい刺激を与えながら歯垢を落とします。

※ブラッシング時間は、Philips Sonicareアプリを使用する場合としない場合で異なります。


### [Philips Sonicareアプリを使用しない場合]

|            |                                                             |
|------------|-------------------------------------------------------------|
| ブラッシング時間   | 3分<br>(ブラシペーサー機能が30秒ごとにお知らせ)                                |
| お勤めの強さ設定   | 強                                                           |
| お勤めのブラシヘッド | プレミアムクリーンブラシヘッド、<br>プレミアムガムケアブラシヘッド、<br>プレミアムホワイトブラシヘッド(別売) |

### [Philips Sonicareアプリを使用する場合]

|            |                                                             |
|------------|-------------------------------------------------------------|
| ブラッシング時間   | 2分<br>(ブラシペーサー機能が20秒ごとにお知らせ)                                |
| お勤めの強さ設定   | 強                                                           |
| お勤めのブラシヘッド | プレミアムクリーンブラシヘッド、<br>プレミアムガムケアブラシヘッド、<br>プレミアムホワイトブラシヘッド(別売) |

1. 上あご右側(①)の歯の表裏を30秒間ブラッシングします。
2. 上あご前側(②)へ移動し、順に③から⑥までの口腔内を均等にブラッシングします。

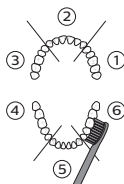

※30秒間隔でピープ音がり、移動のタイミングをお知らせします。

※Philips Sonicareアプリのガイドに従ってブラッシングしてください。Philips Sonicareアプリについては、「アプリの使いかた」(P2)を参照してください。


## ブラシヘッド認識機能 (最適なモードと強さを選択する機能)

ブラシヘッド認識機能とは、ブラシヘッド認識機能対応のブラシヘッドをハンドル本体が認識し、登録された情報に基づいてブラッシングモードと強さが自動で選択される機能です。初めてお使いの際には、それぞれのブラシヘッドに登録されたお勤めのモードと強さがハンドルに自動的に設定されます。

ブラシヘッド取り付け後、ブラッシングモードや強さを変更すると、ハンドルがその設定をブラシヘッドに上書きし、次にそのブラシヘッドを取り付けた際には、上書きされた設定が選択されます。

## 強さ設定

ブラッシングの振動の強さをお好みの強さに調節できます。  
振動の強さは、3段階(弱、中、強)に調節できます。

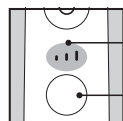

ブラッシング  
強さ表示ランプ

モード・  
強さボタン

※ハンドルにブラシヘッド認識機能対応ブラシヘッドを取り付けると、ハンドルがブラシヘッドのタイプを認識し、ブラシヘッドごとに適したブラッシングの強さを設定します。

※ブラッシング強さ表示ランプで、設定された強さを確認できます。

※強さ設定を変更する場合は、ブラッシング中にモード・強さボタンを押してください。ハンドルがオフまたは待機状態のときは強さ設定を変更できません。

※効果的にブラッシングするために、ブラッシングモードごとに推奨する強さ設定でのご使用をお勧めします。

## 便利な機能

### イージースタート機能（振動に慣れていただくための機能）

イージースタート機能とは、通常より弱い振動からお使いいただき、ご使用回数に合わせ段階的に振動を強めていく機能です。本製品を使用して、ブラッシングの振動が強いと感じた場合は、イージースタート機能をご利用ください。本製品を初めてお使いいただきから15回目のブラッシングで通常の強さの振動になります。

※工場出荷時の設定では、イージースタート機能はオフになっています。

※イージースタート機能は、舌磨きモードではご利用できません。

※14回目のブラッシングまでは、必ず最低1分間の歯みがきを行ってください。イージースタート機能が正常に動作しない場合があります。

※本製品本来の歯垢除去効果が損なわれますので、慣れるための最初の準備期間を過ぎた後にイージースタート機能を使い続けることはお勧めしません。

#### 【イージースタートのオンおよびオフ設定】

※イージースタート機能のオンまたはオフ設定を行う場合は、必ずハンドルを充電器に置いた状態で行ってください。

**充電器にハンドルを置き、電源プラグをコンセントに差し込みます。**

#### ●イージースタート機能をオンまたはオフにする

電源ボタンを長押しして、ピープ音が1回目（ピッ）に鳴ったときに指を離します。

その後充電表示ランプが緑色に点滅してピープ音が3回鳴るとオン、充電表示ランプがオレンジ色に点滅してピープ音が3回鳴るとオフの設定になります。

この操作を行うたびにオンとオフが切り替わります。

### スマートタイマー機能（ブラッシング自動停止機能）

スマートタイマー機能は、設定されたブラッシング時間で自動的に停止する機能です。

設定された時間のブラッシングサイクルの最中でブラッシングを停止したい場合は電源ボタンを押してください。設定された時間の動作中に電源を切っても30秒以内に入れると残ったブラッシングサイクルを実行します。下記の場合はスマートタイマーがリセットされます。

・ブラッシングを30秒以上中断した場合

・ハンドルを充電器にセットした場合

ブラッシング時間の設定詳細については「ブラッシングモードについて」(P17～19)を参照してください。

※米国の歯科専門家は1日2回各2分間以上のブラッシング時間を推奨しています。

### ブラシペーサー機能（時間の区切りをピープ音でお知らせする機能）

ブラシペーサー機能とは、ブラッシングの区切りをピープ音（「ピー」という音）とブラシの振動の一時停止でお知らせする機能です。口腔内を均等にくまなくブラッシングすることができます。一定の間隔で短いピープ音が鳴り、ブラシの振動が一瞬止まります。口腔内を一定の間隔でブラッシングすることができます。

## 過圧防止センサー機能（ブラッシングが強すぎるときにお知らせする機能）

過圧防止センサー機能とは、歯にブラシヘッドを押しあてる強さが強すぎるときにお知らせする機能です。ハンドルに内蔵された過圧防止センサーにより、ブラシヘッドを歯に強く当てすぎると、その圧力が弱まるまで、ハンドルの振動が変化します。

過圧防止センサー機能のお知らせがあった場合は、歯にブラシヘッドを押しあてる強さをゆるめてブラッシングしてください。ハンドルの振動が通常状態に戻ります。

※工場出荷時の設定では、過圧防止センサー機能はオンになっています。

**【過圧防止センサー機能のオンおよびオフ設定】** ※過圧防止センサー機能のオンまたはオフ設定を行う場合は、必ずハンドルを充電器に置いた状態で行ってください。

**充電器にハンドルを置き、電源プラグをコンセントに差し込みます。**

### ●過圧防止センサー機能をオンまたはオフにする


電源ボタンを長押しして、ピープ音が1回目（ピッ）、2回目（ビピッ）、3回目（ビビピッ）に鳴ったときに指を離します。

その後充電表示ランプが緑色に点滅してピープ音が3回鳴るとオン、充電表示ランプがオレンジ色に点滅してピープ音が3回鳴るとオフの設定になります。

この操作を行うたびにオンとオフが切り替わります。

## ブラシヘッド交換お知らせ機能（ブラシヘッドの交換時期をお知らせする機能）

ブラシヘッド交換お知らせ機能とは、ブラシヘッドの交換時期が近づいたことをお知らせする機能です。ブラシヘッドを歯にあてる力や使用時間を記録し、ブラシヘッドが磨耗して交換が必要な時期になるとブラシヘッド交換お知らせランプがオレンジ色に点滅し、ピープ音が鳴ります。ブラシヘッド交換お知らせランプがオレンジ色に点滅し、ピープ音が鳴ったときは、ブラシヘッドを交換してください。お口の健康と最適なブラッシング効果を保つため、ブラシヘッドの交換時期をお守りください。

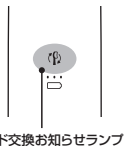

※工場出荷時の設定では、ブラシヘッド交換お知らせ機能はオンになっています。

※ブラシヘッド認識機能がついたブラシヘッドとハンドルをセットした状態でお使いいただける機能です。ブラシヘッド認識機能のないブラシヘッドをご使用の場合や、ハンドル単体でのオンおよびオフの設定はできません。

### 【ブラシヘッド交換お知らせ機能のオンおよびオフ設定】

※ブラシヘッド交換お知らせ機能のオンまたはオフ設定を行う場合は、必ずハンドルを充電器においてブラシヘッドを装着した状態で行ってください。

**充電器にハンドルを置き、電源プラグをコンセントに差し込みます。**

### ●ブラシヘッド交換お知らせ機能をオンまたはオフにする

電源ボタンを長押しして、ピープ音が1回目（ピッ）、2回目（ビピッ）に鳴ったときに指を離します。

その後充電表示ランプが緑色に点滅してピープ音が3回鳴るとオン、充電表示ランプがオレンジ色に点滅してピープ音が3回鳴るとオフの設定になります。

この操作を行うたびにオンとオフが切り替わります。

# お手入れのしかた

## ⚠ 注意

- 本製品はすべて食器洗浄器や乾燥機、電子レンジで洗浄・乾燥しないでください。
- ハンドル、充電器は絶対に液体の中に入れないでください。
- お手入れの際に、アルコール、酢、漂白剤などを使用すると変色、変形の原因になります。絶対に使用しないでください。充電器をお手入れする際は、電源コード・プラグも調べてください。もし電源コード・プラグの異常がありましたら、事故防止のため使用を中止し、フィリップスサポートセンターにお問い合わせください。

## ハンドル

1. ブラシヘッドを外して、金属シャフト部をぬるま湯で洗浄してください。

※歯磨き粉などをきれいに洗い流してください。

※金属シャフト上のゴム製シールを先の尖ったもので突き刺さないようにしてください。破損する可能性があります。



2. ハンドル表面を布で全体的にむらなく拭いてください。



## ブラシヘッド

1. ご使用のたびにブラシヘッドと毛先を水で洗い、自然乾燥させてください。



2. ハンドルからブラシヘッドを外して、接合部を少なくとも1週間に1回ぬるま湯で洗浄してください。



- 最良のブラッシング効果を得るため、ブラシヘッド交換お知らせランプが点灯したとき、青色のブラシ毛が白くなったとき、もしくは約3カ月ごとにブラシヘッドを交換してください。
- ブラシヘッド交換お知らせランプが点灯した場合や破損の兆候が見えた場合は、速やかにブラシヘッドをお取り換えください。
- 最良の効果を得るためにフィリップスソニックアーク純正ブラシヘッドをご使用ください。
- 本ハンドルはブラシヘッド認識機能対応以外のブラシヘッドもご使用いただけますが、ブラシヘッド認識機能、ブラシヘッド交換お知らせ機能はご利用になれませんのでご注意ください。

## 充電器

1. お手入れの前に、必ず充電器の電源プラグをコンセントから抜いてください。
2. 充電器の表面を湿らせた布で拭き、柔らかいタオルで水分を拭き取ってください。

## 製品を廃棄するとき

※お客様による充電電池の  
修理交換はできません。

### リチウムイオン電池のリサイクルについて

この製品はリチウムイオン電池を使用しています。リチウムイオン電池はリサイクル可能な貴重な資源です。ご使用済みの製品の廃棄に際しては、リチウムイオン電池を取り出し、各自治体の処理方法に従いリサイクル協力店にお持ちください。



- 製品を廃棄するとき以外は、絶対にハンドルを分解しないでください。
- 一度分解したハンドルは安全上の理由から、絶対に再使用しないでください。
- 完全に放電してから、充電電池を取り外してください。
- 作業を行う際は、目、手、指などけがのないよう注意してください。
- 作業台に傷が付くおそれがあります。必要に応じ表面の保護などを行ってください。

### 充電電池の取り外しかた

- ・充電電池を取り外すときは、タオルまたは布、ハンマー、マイナスドライバーをご用意してください。
- ・必ず以下の手順に従って安全に作業を行ってください。

1. ハンドルを充電器から取り出し、電源ボタンをオンにして完全に動作しなくなるまで電池を放電します。


※何度もこの手順を繰り返して、完全に動作しなくなったことをご確認ください。

2. ブラシヘッドは外して廃棄し、ハンドル全体をタオルか布で包みます。




3. 片手でハンドルの上部を持ち、ハンドルの底から1.5cmの位置をハンマーで叩きます。ハンドルを回転させながら、四方向から強く叩いて底のキャップを外します。

※キャップ、ハンドル内側の留め具が外れるまで、繰り返し叩いてください。

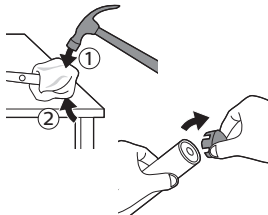


4. ハンドルの上下を逆さまにして持ち、表面が頑丈で安定した場所でシャフトを押し下げます。


※ハンドル内部の部品を取り出せない場合は、「3」の動作を繰り返し、部品を取り出してください。

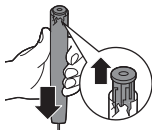

5. 充電電池と内部部品の底の黒い枠との間にマイナスドライバーの先を入れ、こじ開けて充電電池を離し、黒い枠を壊します。




6. 充電電池の底と黒い枠の間にマイナスドライバーの先を差し込み、充電電池と緑色の回路基板の接続部にある金属タブを壊します。これで黒い枠から充電電池の底が外れます。

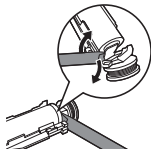


7. 充電電池をハンドル内部部品から引き出し、もう一方の充電電池タブを引き出して取り外します。

※充電電池タブの先端は鋭く尖っています。指などをケガしないよう注意してください。

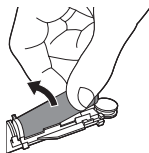

8. ショートしないように充電電池の端子をテープで覆い、充電電池を廃棄します。

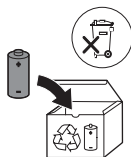

※取り出した充電電池はリサイクル協力店などに持ち込み、残りの製品部分は各自治体の処理方法に従い適切に廃棄してください。

## 故障かな?と 思ったら

故障かな?と思ったら  
お調べください。

### 作動しない。

- 充電残量をご確認ください。詳しくは「充電表示について」(P12)を参照してください。
- コンセントに充電器の電源プラグがきちんと差し込まれていることを確認してください。
- ブラシヘッドが金属シャフトにしっかりと差し込まれていることを確認してください。ブラシヘッドが古く接続部が摩耗している場合には、新しいブラシヘッドに交換してください。

### 動作がおかしい(例:動きにムラがある、ブラッシング中にブラッシング力が弱くなった)。

- 充電残量が少なくなっている可能性があります。24時間充電してください。

### 充電しても数分しか使えない。

- 充電時間が短い可能性があります。24時間充電してください。

### ブラッシングの力が弱く感じる。

- ブラシヘッドを押しあてすぎると、ブラシの振幅が小さくなります。ブラシヘッドは歯に軽くあてるようにしてください。
- イージースタート機能が働いている可能性があります。詳しくは「イージースタート機能」(P20)を参照してください。
- 充電が不十分な場合もあります。再度24時間充電してください。
- ブラシヘッドが消耗していないかご確認ください(使用頻度、使用方法により異なります)。

### ブラッシング中、一瞬毛先の動きが止まる。

- ブラシペーサー機能により、口腔内を均等にくまなく磨けるよう一定の間隔でピープ音が鳴り、ブラシヘッドの振動が一瞬止まります。詳しくは「ブラシペーサー機能」(P20)、「ブラッシングモードについて」(P17~19)を参照してください。

**使い始めてから20秒～3分程度でブラシヘッドの動作が止まる。** .....

- スマートタイマー機能により、電源ボタンを入れてから1～3分経過すると自動的に動作が止まります。詳しくは「スマートタイマー機能」(P20)を参照してください。
- ブラッシングモードにより、ブラッシング時間が異なります。詳しくは「ブラッシングモードについて」(P17～19)を参照してください。

**ブラシヘッドが歯にあたる時にガタガタ音をする。** .....

- ブラシを斜め(45度)にあててください。詳しくは「上手なみがきかた」(P15)を参照してください。

**変なにおいがする。** .....


- ハンドル、ブラシヘッド、充電器をお手入れしてください。「お手入れのしかた」(P22)を参照してください。

## Bluetoothがつかない。

- スマートフォンのBluetoothの設定がオンになっているか確認してください。設定についてはお使いのスマートフォンの取扱説明書を参照してください。
- ハンドルのランプが光り、待機状態になっているかを確認してください。待機状態になっていない場合、モード・強さボタンを1回押してハンドルを待機状態にしてください。
- 複数のBluetooth機器をお使いになっている場所、電子レンジを使用中の周辺、その他電磁波が発生している場所では、本製品は正常に動作しない場合があります。周辺の機器をお切りになるなどして、改めて接続をお試しください。
- スマートフォンに既に複数の製品がBluetoothで接続されている場合には、つながりにくくなることがあります。他の機器の接続を解除し、改めて接続をお試しください。

※本アプリはタブレットではお使いいただけません。

**\* 以上の点検により、正常な状態に戻らない場合は、フィリップスサポートセンターにお問い合わせください。**

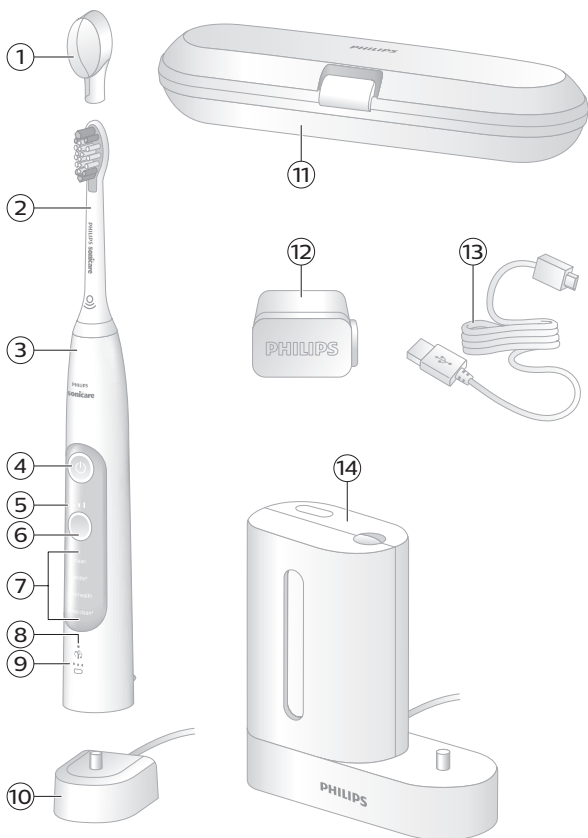

## Introduction

Congratulations on your new Philips Sonicare power toothbrush! Superior plaque removal, whiter teeth and healthier gums are at your fingertips. Using Sonicare's combination of gentle sonic technology and clinically developed and proven features, you can be confident that you're getting the very best clean, every time. Further support and product registration are available to you at: <http://www.philips.com/welcome>.

Welcome to the Philips Sonicare family!

## Intended Use

ExpertClean series power toothbrushes are intended to remove adherent plaque and food debris from the teeth to reduce tooth decay and improve and maintain oral health. ExpertClean series power toothbrushes are intended for consumer home use. Use by children should be with adult supervision.

## Important safety information

Read this important information carefully before you use the appliance and save it for future reference.

Note: The accessories and features of different models vary. For example, some models come with a sanitizer or are equipped with Bluetooth.

## Danger

- Keep the charger and/or sanitizer away from water. Do not place or store the appliance where it can fall or be pulled into a tub or sink.
- Do not immerse the charger and/or sanitizer in water or any other liquid.

## ENGLISH

- After cleaning, make sure the charger and/or sanitizer is completely dry before you connect it to the wall socket.

### **Warning**

- This appliance can be used by children and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children without supervision.
- Children shall not play with the appliance.
- Keep the sanitizer out of the reach of children at all times.
- Stop using the sanitizer if the UV light bulb remains on when the door is open. UV light can be harmful to the human eye and skin.
- If the appliance is damaged in any way (brush head, toothbrush handle, charger and/or sanitizer), stop using it.

- The mains cord cannot be replaced. If the mains cord is damaged, discard the charger and/or sanitizer.
- Always replace the charger and/or sanitizer with one of the original type in order to avoid a hazard.
- This appliance contains no user-serviceable parts. If the appliance is damaged, contact the Consumer Care Center in your country (see 'Warranty and support').
- Keep the cord away from heated surfaces.
- Do not use the charger and/or sanitizer outdoors or near heated surfaces.

## **Caution**

- Do not clean the brush head, handle, charger, charger cover or sanitizer in the dishwasher.
- If you have had oral or gum surgery in the previous 2 months, consult your dentist before you use this appliance.
- Consult your dentist if excessive bleeding occurs after using this appliance or if

## ENGLISH

bleeding continues to occur after 1 week of use. Also consult your dentist if you experience discomfort or pain when you use this appliance.

- This Philips appliance complies with the safety standards for electromagnetic devices. If you have a pacemaker or other implanted device, contact your doctor or the appliance manufacturer of the implanted appliance prior to use.
- If you have medical concerns, consult your doctor before you use this appliance.
- This appliance has only been designed for cleaning teeth, gums and tongue. Do not use it for any other purpose. Stop using the appliance and contact your doctor if you experience any discomfort or pain.
- This appliance is a personal care device and is not intended for use on multiple patients in a dental practice or institution.
- Do not use other brush heads than the ones recommended by Philips Sonicare.
- Stop using a brush head with crushed

or bent bristles. Replace the brush head every 3 months or sooner if signs of wear appear.

- If your toothpaste contains peroxide, baking soda or bicarbonate (common in whitening toothpastes), thoroughly clean the brush head with soap and water after each use. This prevents possible cracking of the plastic.
- Avoid direct contact with products that contain essential oils or coconut oil. Contact may result in bristle tufts dislodging.
- The UV light bulb of the sanitizer is hot during and immediately after the sanitizing cycle. Do not touch the UV light bulb when it is hot.
- Do not operate the sanitizer without the protective screen in place to avoid contact with a hot UV light bulb.
- If you have used the sanitizer for 3 UV clean cycles in a row, switch it off for at least 30 minutes before you start another UV clean cycle.

### Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

### Radio Equipment Directive

Hereby, Philips declares that electric toothbrushes with radio frequency interface (Bluetooth) are in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: **[www.philips.com/support](http://www.philips.com/support)**

The radio frequency interface in this product operates at 13.56 MHz.

The maximum RF power transmitted by the appliance is 30.16 dBm.

### Your Philips Sonicare (Fig. 1)


- 1 Hygienic travel cap
- 2 Smart brush head(s)
- 3 Handle
- 4 Power on/off button
- 5 Intensity light
- 6 Mode/intensity button
- 7 Modes
- 8 Brush head replacement reminder light
- 9 Battery indication
- 10 Charger
- 11 Travel case \*
- 12 USB wall adapter\*
- 13 Micro USB cable \*
- 14 UV Sanitizer\*

\* Note: The content of the box may vary based on the model purchased.

## Using your Philips Sonicare

### Brushing instructions

- 1 Push the brush head firmly onto the handle. Wet bristles and apply toothpaste.

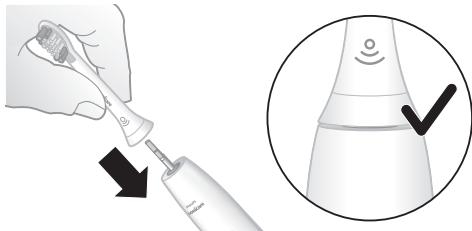


Note: It is normal to see a slight gap between the brush head and the handle. This allows the brush head to vibrate properly.

- 2 Place the toothbrush bristles against the teeth at a slight angle (45 degrees), pressing firmly to make the bristles reach the gumline or slightly beneath the gumline.

Note: Keep the center of the brush in contact with the teeth at all times.


- 3 Press the power on/off button to turn on the Philips Sonicare.

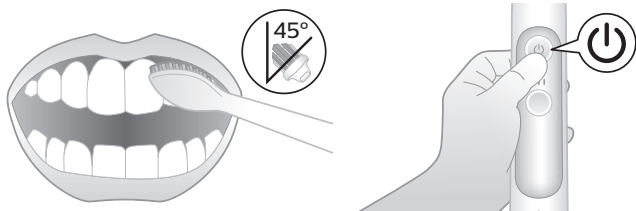

- 4 Apply light pressure to maximize Philips Sonicare's effectiveness and let the Philips Sonicare toothbrush do the brushing for you. Gently move the brush head slowly across


## ENGLISH

the teeth in a small back and forth motion so the longer bristles reach between your teeth. Continue this motion throughout the brushing cycle.

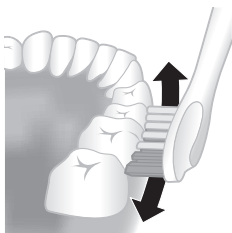

Note: To learn how to brush with specific modes, see 'Modes'.

- 5 To clean the inside surfaces of the front teeth, tilt the brush handle semi-upright and make several vertical overlapping brushing strokes on each tooth.

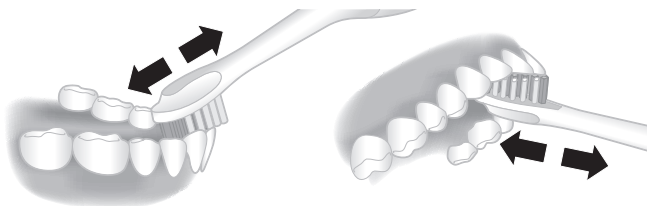

Note:

- A change in vibration from the handle alerts you when you apply too much pressure (see Pressure sensor)
- Your Philips Sonicare toothbrush is safe to use on braces, dental moderations and dental restorations (fillings, crowns, veneers)
- Do not use your power toothbrush in the shower.

## Brush heads

To see what type of brush head you have, check the label at the

bottom of the brush head. The symbol at the bottom of the brush head indicates that it is a smart brush head, equipped with the BrushSync technology.



| Brush head name  | Premium Plaque Control | Premium White            | Premium Gum Care |
|------------------|------------------------|--------------------------|------------------|
| Brush head label | C3                     | W3                       | G3               |
| Benefit          | Plaque removal         | Plaque and stain removal | Healthier Gums   |

To explore our full range of brush heads, go to **[www.philips.com/toothbrush-heads](http://www.philips.com/toothbrush-heads)** for more information.

\*Note: The type of brush heads vary based on the model purchased.

## BrushSync Technology

BrushSync technology enables your brush heads to communicate with your handle using a microchip. The symbol at the bottom of the brush head indicates that it is equipped with the BrushSync technology. This enables the following features:

- Brush Head Mode Pairing
- Brush Head Replacement Reminder

## Brushing modes


Your power toothbrush is equipped with up to 4 different modes\*: Clean, Deep Clean+, White+\* and Gum health\*.

Based on the smart brush head you use, the mode will be

# ENGLISH

selected automatically.

To manually change the mode, press the mode/intensity button while the toothbrush is off.

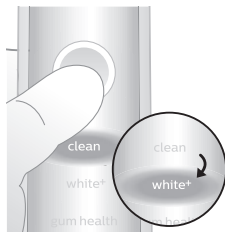

\* Note:







- The type and number of modes vary based on the model purchased.
- All brush heads work with each mode.
- When the Philips Sonicare toothbrush is used in clinical studies, it must be used at high intensity, with the EasyStart feature turned off.

## Brush head mode pairing

Brush heads with BrushSync technology are equipped with a microchip chip which communicates to the handle and automatically pairs it with the recommended mode and intensity.

Note: If you change modes/intensity, the brush head will remember the last used setting. If you wish to brush with the recommended setting, you can find the recommended mode/intensity in 'Brushing Modes'.

|                               | <b>Clean and Deep Clean+</b> | <b>White+</b>                     | <b>Gum Health</b>              |
|-------------------------------|------------------------------|-----------------------------------|--------------------------------|
| <b>Benefit</b>                | Plaque removal               | Plaque and surface stains removal | Plaque removal and gum massage |
| <b>Recommended brush head</b> | Premium Plaque Control* (C3) | Premium White* (W3)               | Premium Gum Care* (G3)         |
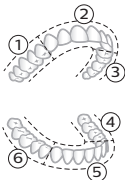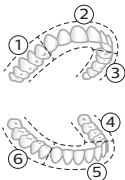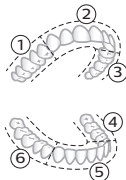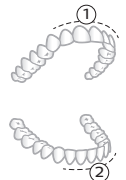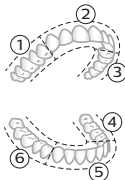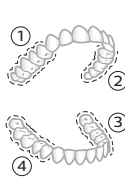
|                                    | <b>Clean and Deep Clean+</b>                                                                                                                                                                                                                                               | <b>White+</b>                                                                                                                                                                                                                                                          | <b>Gum Health</b>                                                                                                                                                                                                                                                            |
|------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Recommended intensity level</b> | 3                                                                                                                                                                                                                                                                          | 3                                                                                                                                                                                                                                                                      | 3                                                                                                                                                                                                                                                                            |
| <b>Total brushing time</b>         | Clean: 2 minutes<br>Deep Clean: 3 minutes*                                                                                                                                                                                                                                 | 2 minutes and 40 seconds                                                                                                                                                                                                                                               | 3 minutes and 20 seconds                                                                                                                                                                                                                                                     |
| <b>How to brush</b>                | <p>Clean: Brush each segment for 20 seconds</p>  <p>Deep Clean+: Brush each segment for 30 seconds</p>  | <p>Brush each segment for 20 seconds,</p>  <p>then brush segments 1 and 2 for 20 seconds each.</p>  | <p>Brush each segment for 20 seconds,</p>  <p>then brush segments 1, 2, 3 and 4 for 20 seconds each.</p>  |


\*Note:

- The modes and type brush head vary based on the model purchased.
- When brushing with the Sonicare App in 'Deep Clean' mode, the brushing time will be 2 minutes.

### Intensity settings

Your power toothbrush comes with 3 different intensity settings: low, medium and high. When attached to the handle, the smart brush head will automatically select the recommended intensity. To manually change the intensity, turn on the handle and press the mode/intensity button.

While toothbrush is ON, press this button to change intensity setting

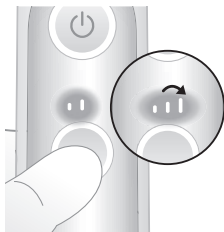

---

### Features

- EasyStart
- Sonicare App - Connected brushing experience
- Brush head replacement reminder
- Pressure sensor
- BrushPacer

### Easy-Start

The EasyStart feature gently increases the power of the handle over the first 14 brushings to help you get used to the brushing power of the Philips Sonicare.

The EasyStart feature works with all modes.

Note: The EasyStart feature comes deactivated with your product. To activate EasyStart, see 'Activating or deactivating features'.

### Sonicare App – Getting Started

The Sonicare App pairs with your toothbrush to provide you with interactive features. By connecting your toothbrush to your Sonicare App account, you will be able to:

- Easily review your weekly Progress Report for ways to improve your brushing routine
- Receive personalized tips and recommendations for managing your oral health

To start using the Sonicare App:

- Download the Sonicare App to your phone
- Open the App and follow the guided steps
- Pair your toothbrush with the App
- Create your account
- Personalize your App experience by answering questions about your brushing habits and interests
- Brush regularly
- Receive weekly updates to improve your oral care

Note: Make sure your phone's Bluetooth is turned on. Your toothbrush uses the Bluetooth connection to transfer your brushing data to the App. If you have questions about why your data is collected, be sure to review the Sonicare Privacy Statement, available throughout the App setup process.

## Sonicare App – Your oral healthcare dashboard

Your Sonicare power toothbrush is equipped with smart sensors to provide you with feedback about your brushing habits, including:

- Daily brushing sessions
- Time spent during each brushing session
- Applied brushing pressure
- Brush head replacement reminder (based on its actual usage and effectiveness)

The Sonicare App collects the data provided by the smart sensors and tracks your brushing habits over time.

Each of the interactive features available in the App are designed to help you understand your brushing habits and provide you with simple, dentist-approved recommendations for improving and maintaining your oral health. You will receive personalized brushing information in the Sonicare App.

### Brush Head Replacement Reminder

Over time, the handle will track the wear of your smart brush head by measuring:

- The overall pressure you apply while brushing
- The total time you've brushed with your brush head

Once your brush head is no longer effective, the Brush Head Replacement Reminder will blink amber and audibly beep.



Note: The Brush Head Replacement Reminder comes activated with your product. To deactivate this feature, see 'Activating or deactivating features'.

### Pressure sensor

Your Philips Sonicare measures the pressure you apply while brushing to protect your gums and teeth from damage.

If you apply too much pressure, the handle will change its vibration until you reduce the pressure.

Note: The Pressure Sensor comes activated with your product. To deactivate this feature, see 'Activating or deactivating features'.

### Brush Pacer

The BrushPacer features indicates when you are supposed to move onto the next section of your teeth via a brief change in vibration.

The toothbrush will automatically turn off at the end of the brushing session.

## Charging and battery status

### Charging

- 1 Plug the charger into an electrical outlet.
- 2 Place the handle on the charger.
- 3 The charging indicator will flash green until your toothbrush is fully charged.

Note: Your handle comes pre-charged for first use. After first use, charge for at least 24 hours.

### Charging on charger or sanitizer

- 1 Plug the charger or sanitizer into an electrical outlet.
- 2 Place the handle on the charger or sanitizer.
- 3 The charger will charge your toothbrush until it is fully charged.

Note: Your handle comes pre-charged for first use. After first use, charge for at least 24 hours.

### Charging with the travel case\*

\* Note: The charging travel case may not be included depending on the model purchased.

- 1 Connect the charging travel case to 5V DC input power either from:
  - The USB adapter provided
  - a UL-listed or certified to ANSI/UL 60950-1 personal computer's standard USB connector or,
  - a UL-listed or certified to ANSI/UL 60950-1 LPS power supply with USB output port or,
  - a UL-listed or certified 1310 Class 2 power supply.

**Important: The wall adapter must be a safe extra low voltage source, compatible with the electrical ratings marked on the bottom of the device.**

- 2 The travel case will charge your toothbrush until your toothbrush is fully charged.

Note: Charging the handle with the charging travel case may take longer than on the charger.

## ENGLISH

### Battery Status (handle on plugged in charger)

When the handle is placed on the charger, sanitizer or travel case , the battery light will flash green based on the current battery level.

| Number of Flashing LEDs | Battery charging status |
|-------------------------|-------------------------|
| 1                       | Low                     |
| 2                       | Medium                  |
| 3                       | High                    |

Note: When the handle is fully charged, the three battery indicator lights light up green. After 30 seconds the battery indicator lights switch off.

### Battery Status (when handle is not placed on Charger)

When removing the handle from the charger, sanitizer or travel case, the battery light at the bottom of the handle will indicate the status of the battery.

| LED Color      | Number of LEDs | Battery status      |
|----------------|----------------|---------------------|
| Solid Green    | 3              | High                |
| Solid Green    | 2              | Medium              |
| Solid Green    | 1              | Low                 |
| Flashing Amber | 1 (with beeps) | Empty or near empty |

## UV Sanitizer


- With the UV sanitizer you can clean your brush head after every use.

Unplug the sanitizer, discontinue use and call Consumer Care if:

- The UV light bulb remains on when the door is open.
- The window is broken or missing from the sanitizer.
- The sanitizer gives off smoke or a burning smell while it is operating.


Note: UV light can be harmful to the human eye and skin. This device should be kept out of reach of children at all times.

- 1 After brushing, rinse the brush head and shake off excess water.

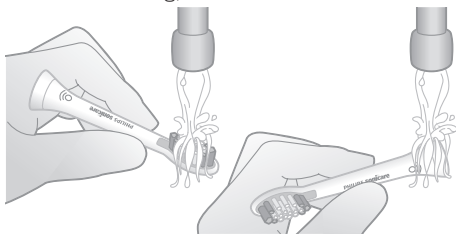

**Warning: Do not place the travel cap on the brush head during sanitization.**

- 2 Place your finger in the door recess on top of the sanitizer and pull open the door.

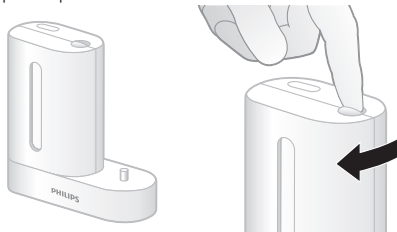


- 3 Place the brush head on one of the 2 pegs in the sanitizer with the bristles facing the light bulb.

Note: Only clean Philips Sonicare snap-on brush heads in the sanitizer.

Note: Do not clean Philips Sonicare for Kids brush heads in the sanitizer.

- 4 Make sure the sanitizer is plugged into a live outlet of appropriate voltage.
- 5 Close the door and press the green power on/off button once to select the UV clean cycle.

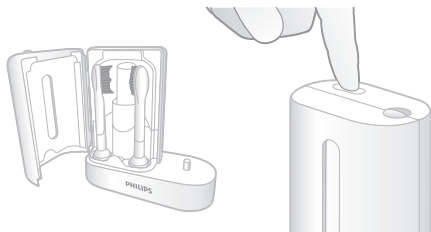

Note: You can only turn on the sanitizer if the door is properly closed.

Note: The sanitizer stops if you open the door during the sanitizing cycle.

Note: The sanitizer cycle runs for 10 minutes and then automatically shuts off.

The sanitizer is in operation when the light glows through the window.

## Activating or deactivating features

You can activate or deactivate the following features of your toothbrush:

- EasyStart
- Brush Head Replacement Reminder
- Pressure Sensor



Step 1: Place the handle on the charger



Step 2: Press and hold power button for:

Easy start

Brush Head  
Replacement  
Reminder

Pressure Sensor

3 seconds

Up to 5  
seconds

Up to 7 seconds



Step 3: Let go power button when you hear

1 beep

1 beep and  
then 2 beeps

1 beep, 2 beeps  
and then 3 beeps



If you see battery indicator lights flashing green 2 times and hear Low to High triple tones, then the feature has been activated.

OR



If you see battery indicator lights flashing amber once and hear High to Low triple tones, then the feature has been deactivated.


## Cleaning

- All parts can be cleaned by damp cloth or rinsed with warm water.




## ENGLISH


- Remove the brush head from the handle and rinse it thoroughly.

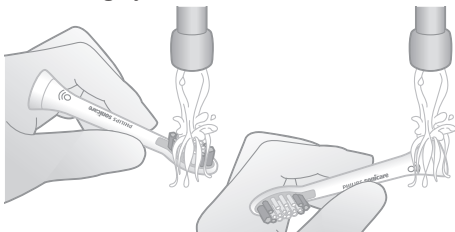

- Rinse the entire handle, especially the brush head connection, at least once a week.

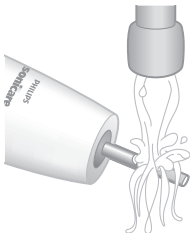

**Caution: Do not push on the rubber seal at the top of the handle. Gently clean around the rubber seal.**

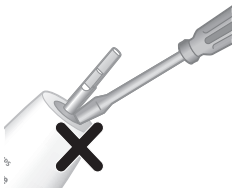

### Cautions:

- Do not clean the brush head, travel cap, handle, charger, UV sanitizer or travel case in the dishwasher.

- Do not use isopropyl alcohol, vinegar, bleach, or any other household cleaning products, to clean the handle as this may cause discoloration.
- Unplug the charger before you clean it.
- Do not use essential oils to clean the brush heads as this can cause damage.


## Cleaning the UV Sanitizer

**Warning: Do not immerse the sanitizer in water or rinse it under the faucet.**

**Warning: Do not clean the sanitizer when the UV light bulb is hot.**

For optimal effectiveness, it is recommended to clean your sanitizer weekly.

- 1 Unplug the sanitizer.
- 2 Pull the drip tray straight out. Clean the interior of the sanitizer with a damp cloth.
  - Rinse the drip tray and wipe it clean with a damp cloth.

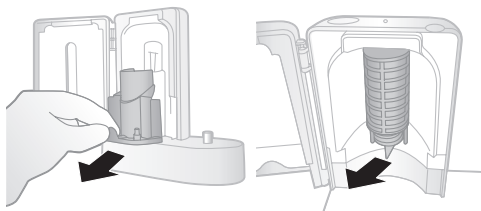

- 3 Remove the protective screen in front of the UV light bulb.

To remove the screen, grasp the edges next to the snaps, gently squeeze and pull out the protective screen.

- 4 Remove the UV light bulb.

To remove the light bulb, grasp it and pull it out of the metal clasp.

## ENGLISH

**5** Clean the protective screen and the UV light bulb with a damp cloth.

**6** Reinsert the UV light bulb.

To reinsert the light bulb, align the bottom of the light bulb with the metal clasp and push the bulb into the clasp.

**7** Reinsert the protective screen.

To reinsert the screen, align the pegs on the screen with the slots on the reflective surface near the UV light bulb. Push the screen straight into the slots on the sanitizer.

## Storage

If you are not going to use the product for an extended period of time, unplug it from the electrical outlet, clean it and store it in a cool and dry place away from direct sunlight.

## Frequently asked questions

| Question                                                   | Answer                                                                                                                                                                                                                                                   |
|------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Can I leave my Sonicare on the charger between brushings?  | Yes, you can always keep your Philips Sonicare toothbrush on a plugged-in charger. This will not affect the battery lifetime.                                                                                                                            |
| Will other brush heads fit my Philips Sonicare toothbrush? | All Philips Sonicare electric toothbrush brush heads that snap on will fit your toothbrush. However, not all can be used for BrushSync technology. You can identify the brush heads with BrushSync technology by the icon at the base of the brush head. |

| Question                                                                          | Answer                                                                                                                                                                                                                                             |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| How often do I need to replace my brush head?                                     | We recommend you to replace your Philips Sonicare brush head after 3 months of use (based on brushing twice a day for 2 minutes each session). The Brush Head Replacement Reminder will also notify you when it is time to change your brush head. |
| Is my Philips Sonicare toothbrush waterproof?                                     | Yes, your Philips Sonicare toothbrush is waterproof. However, never put your handle in a dishwasher to clean it. And do not use it under the shower.                                                                                               |
| What phones are compatible with the Philips Sonicare App?                         | The Philips Sonicare app support Android OS, and Apple iOS. For the most up to date version of the Philips Sonicare App check out the Android Play Store or Apple App Store. Mobile devices must have Bluetooth 4.0 and newer.                     |
| What other Philips Sonicare toothbrushes can I use with the Philips Sonicare App? | You can only use Philips Sonicare Flexcare Platinum Connected, DiamondClean Smart, and ExpertClean toothbrushes with the Sonicare app. Look for the Bluetooth symbol on the front panel of the package.                                            |

## Storage

If you are not going to use the product for an extended period of time, unplug it from the electrical outlet, clean it and store it in a cool and dry place away from direct sunlight.

### Recycling

- This symbol means that this product shall not be disposed of with normal household waste (2012/19/EU).
- This symbol means that this product contains a built-in rechargeable battery which shall not be disposed of with normal household waste (2006/66/EC). Please take your product to an official collection point or a Philips service center to have a professional remove the rechargeable battery.
- The UV light bulb of the sanitizer contains mercury. Do not throw the UV light bulb away with the normal household waste at the end of its life. Hand it in at an official collection point for recycling.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

### Removing the rechargeable battery


**Warning:** Only remove the rechargeable battery when you discard the appliance. Make sure the battery is completely empty when you remove it.

To remove the rechargeable battery, you need a towel or cloth, a hammer and a flat-head (standard) screwdriver. Observe basic safety precautions when you follow the procedure outlined below. Be sure to protect your eyes, hands, fingers, and the surface on which you work.

- 1 To deplete the rechargeable battery of any charge, remove the handle from the charger, turn on the Philips Sonicare and let it run until it stops. Repeat this step until you can no longer turn on the Philips Sonicare.




- 2 Remove and discard the brush head. Cover the entire handle with a towel or cloth.

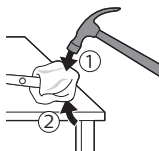


- 3 Hold the top of the handle with one hand and strike the handle housing 0.5 inch above the bottom end. Strike firmly with a hammer on all 4 sides to eject the end cap.


Note: You may have to hit on the end several times to break the internal snap connections.

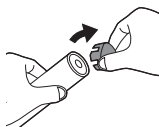


- 4 Remove the end cap from the toothbrush handle. If the end cap does not release easily from the housing, repeat step 3 until the end cap is released.

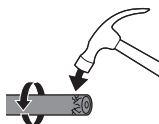


- 5 Holding the handle upside down, press the shaft down on a hard surface. If the internal components do not easily release from the housing, repeat step 3 until the internal components are released.

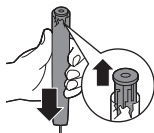


- 6** Remove the rubber battery cover.

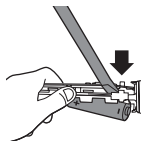

- 7** Wedge the screwdriver between the battery and the black frame at the bottom of the internal components. Then pry the screwdriver away from the battery to break the bottom of the black frame.

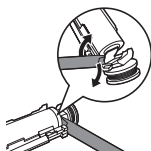


- 8** Insert the screwdriver between the bottom of the battery and the black frame to break the metal tab connecting the battery to the green printed circuit board. This will release the bottom end of the battery from the frame.

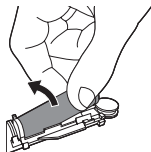

- 9** Grab the battery and pull it away from the internal components to break the second metal battery tab.

**Caution: Be aware of the sharp edges of the battery tabs so as to avoid injury to your fingers.**

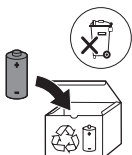

- 10** Cover the battery contacts with tape to prevent any electrical short from residual battery charge. The rechargeable battery can now be recycled and the rest of the product discarded appropriately.

Note: Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

## Warranty and support

If you need information or support, please visit

**[www.philips.com/support](http://www.philips.com/support)** or read the international warranty leaflet.

## Warranty restrictions

The terms of the international warranty do not cover the following:

- Brush heads.
- Damage caused by use of unauthorized replacement parts.
- Damage caused by misuse, abuse, neglect, alterations or unauthorized repair.
- Normal wear and tear, including chips, scratches, abrasions, discoloration or fading.
- UV light bulb.

# 保証と アフターサービス

## 保証書と修理サービスについて (必ずお読みください)

### 〈保証書・最終ページに付属〉

- 保証は、本製品を購入された方のみ適用されます。
- 保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取っていただき、内容をよくお読みになったあと大切に保管してください。

|      |                             |
|------|-----------------------------|
| 保証期間 | お買い上げ日から2年間                 |
| 対象部分 | ハンドル、充電器(ブラシヘッド、トラベルケースは除く) |

### 【補修用性能部品の保有期間】

- 補修用性能部品の保有期間は製造打ち切り後6年です。
- 性能部品とは、その製品の機能を維持するために必要な部品です。

### 【ご不明な点や修理に関するご相談は】

- 修理に関するご相談ならびにご不明な点は、フィリップスサポートセンターにお問い合わせください。

### 【修理を依頼されるときは】

- 修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検してください。尚、異常のあるときはご使用を中止し、フィリップスサポートセンターにお問い合わせください。

### 【保証期間中は】

- 製品と保証書をご用意いただき、フィリップスサポートセンターにお問い合わせください。  
保証書の記載内容により無料修理いたします。  
ただし、保有期間内であっても在庫がなくなった場合など、修理対応できない場合があります。

### 【保証期間が過ぎているときは】

- 修理によって商品の機能が維持できる場合は、補修用性能部品の保有期間内であれば、ご希望により有料で修理させていただきます。ただし、保有期間内であっても在庫がなくなった場合など、修理対応できない場合があります。

### 【海外での本製品の保証及びアフターサービスについて】

- 本製品の保証は海外においても有効です。(同シリーズ製品の取り扱いがある国に限ります)
- 日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。
- 海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お困りの点がございましたら下記までご連絡ください。

Philips Oral Healthcare, LLC.  
22100 Bothell Everett Hwy Bothell, WA 98021 U.S.A.  
Phone: +1 (800) 682-7664

### 【お客様の個人情報のお取り扱いについて】

- お受けましたお客様の個人情報は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「フィリップスのプライバシーに関する通知」に基づき適切に管理いたします。

|         |       |              |
|---------|-------|--------------|
| 便 利 メ モ |       |              |
| お買い上げ日  | 年 月 日 | お買い上げ店名      |
|         |       | TEL (      ) |

### ご使用の時このような症状はありませんか？

- 本体にさわると時々電気を感ずる。
- こげくさい臭いがする。
- 電源コードを動かすと通電したり、しなかったりする。
- その他の異常、故障がある。



このような症状の時は、故障や事故防止のため、電源をOFFにし、電源プラグをコンセントからはずして、必ずフィリップスサポートセンターにお問い合わせください。

愛情点検

### 仕 様

| 品 番                 | HX9617/03                            | HX9627/01      | HX9632/01      | HX9662/06      | HX9692/07     | HX9692/03      |                |
|---------------------|--------------------------------------|----------------|----------------|----------------|---------------|----------------|----------------|
| ハンドル品番<br>(カラー)     | HX960V<br>ホワイト                       | HX960K<br>ブラック | HX962K<br>ブラック | HX962G<br>ホワイト | HX962P<br>ピンク | HX962G<br>ホワイト | HX962K<br>ブラック |
| 充電器品番               | HX6100                               |                |                |                |               |                |                |
| 電源方式                | 充電式(専用充電器使用)                         |                |                |                |               |                |                |
| 本体寸法<br>(高さ×幅×奥行)   | 250×28×31mm<br>(プレミアムクリーンブラシヘッド装着時)  |                |                |                |               |                |                |
| 質量<br>(ハンドル+ブラシヘッド) | 約132g<br>(プレミアムクリーンブラシヘッド装着時)        |                |                |                |               |                |                |
| 定格電圧                | AC100V～240V、50/60Hz                  |                |                |                |               |                |                |
| 充電時間                | 約24時間                                |                |                |                |               |                |                |
| 使用時間                | 満充電後、通常使用で約2週間(目安として2分間のブラッシングを1日2回) |                |                |                |               |                |                |
| 使用充電電池              | リチウムイオン電池(Li-ion)                    |                |                |                |               |                |                |
| 消費電力                | 充電器：0.4W～1.4W(充電時)                   |                |                |                |               |                |                |

※改良のため、予告なく仕様を変更することがあります。

#### ● ブラシヘッド ●

- 最良のブラッシング効果を得るため、ブラシはブラシヘッド交換お知らせランプが点灯したとき、もしくは約3カ月ごとに交換してください。
- 破損の兆候が見えた場合は、速やかにお取り換えください。
- 最良の効果を得るためにフィリップスソニックケア純正ブラシヘッドをご使用ください。

製造元

Philips Oral Healthcare, LLC.

22100 Bothell Everett Hwy  
Bothell, WA 98021 U.S.A.

株式会社 フィリップス・ジャパン

〒108-8507

東京都港区港南2-13-37 フィリップスビル



## 無料修理規定

### 〈無料修理規定〉

1. 保証期間内に取扱説明書、本体貼付ラベル等の注意書に従った正常な使用状態で故障した場合には無料修理します。
2. 保証期間内に故障して無料修理をお受けになる場合には、フィリップスサポートセンターにお問い合わせください。
3. ご贈答品の修理に関するご相談は、フィリップスサポートセンターにお問い合わせください。
4. 保証期間内でも次の場合には有料修理になります。
  - ①使用上の誤り及び不当な修理や改造による故障及び損傷。
  - ②お買い上げ後の輸送、移動、落下等による故障及び損傷。
  - ③火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障及び損傷。
  - ④一般家庭以外（例えば、業務用の長時間使用）に使用された場合の故障及び損傷。
  - ⑤本書の提示がない場合。
  - ⑥本書にお買い上げ年月日、お客様名、販売店名の記入のない場合、或は字句を書き換えられた場合。

※この保証書は、本書に明示した期間、条件のもとにおいて無料修理をお約束するものです。従ってこの保証書によってお客様の法律上の権利を制限するものではありません。保証期間経過後の修理についてご不明の場合は、フィリップスサポートセンターにお問い合わせください。

※保証期間経過後の修理・補修用性能部品の保有期間について  
詳しくは、取扱説明書の保証とアフターサービスの項目をご覧ください。

※お客様にご記入いただいた個人情報（保証書の控え）は保証期間内のサービス活動及びその後の安全点検活動のために利用させていただく場合がございます。ご了承ください。また個人情報は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「フィリップスのプライバシーに関する通知」に基づき適切に管理いたします。

# フィリップス ソニックアーク エキスパートクリーン 保証書

## CERTIFICATE OF PURCHASE

この保証書は、「無料修理規定」記載内容で無料修理を行うことをお約束するものです。お買い上げの日から下記期間中に故障が発生した場合は、フィリップスサポートセンターにお問い合わせください。お客様にご記入いただいた個人情報(保証書の控え)は、株式会社フィリップス・ジャパンのホームページ<http://www.philips.co.jp/>に掲載されている「フィリップスのプライバシーに関する通知」に基づき適切に管理いたします。

|             |                                                                                                   |
|-------------|---------------------------------------------------------------------------------------------------|
| 品 名         | 充電式電動歯ブラシ                                                                                         |
| 品 番         | フィリップス ソニックアーク エキスパートクリーン<br>(HX9617/03, HX9627/01, HX9632/01, HX9662/06<br>HX9692/07, HX9692/03) |
| 保 証 期 間     | お買い上げ日より2年                                                                                        |
| 対 象 部 分     | ハンドル、充電器(ブラシヘッド、トラベルケースは除く)                                                                       |
| お 買 い 上 げ 日 | 年 月 日                                                                                             |
| お 客 様       | ご住所 〒                                                                                             |
|             | ご芳名                                                                                               |
|             | 電話番号                                                                                              |
| ★ 販 売 店     | 販売店名・住所・電話番号                                                                                      |

- ★ 保証書は再発行しませんので、大切に保管してください。
- ★ ご販売店様へ この保証書はお客様へのアフターサービスの実施と責任を明確にするものです。贈答品、記念品の場合も含めて必ず記入捺印してお客様にお渡しください。

### ★ 製品の使用方法や修理に関するお問い合わせ

フィリップスサポートセンター

# 0120(944)859

Webからの  
お問い合わせ ▼



受付時間:9:00~18:00(年末年始除く)

## MyPhilips登録のご案内



フィリップスでは、製品をより快適にご使用いただくために製品登録をおすすめしております。

- MyPhilipsでは製品の保証書や購入証明書の写真も保管でき、万が一購入証明書を紛失された場合にも安心です。

URL <http://www.philips.co.jp/myphilips-about>

