




© 2017 Koninklijke Philips N.V.  
All rights reserved  
4222.003.4345.1 (3/5/2017)

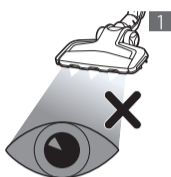

[www.philips.com](http://www.philips.com)



English

## Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

## Important safety information

Read this important information carefully before you use the appliance and save it for future reference.

### Danger

- Never vacuum up water or any other liquid, flammable substances or hot ashes.

### Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the plug, the mains cord or the appliance itself is damaged.
- If the mains cord is damaged, you must have it replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the appliance and its cord out of the reach of children.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
- Do not point the hose, the tube or any other accessory at the eyes or ears nor put it in your mouth.

### Caution

- Never use the appliance without any of the filters. This could damage the motor and shorten the life of the appliance.
- Always clean all parts as shown in the user manual. Do not clean any parts with water and/or cleaning agents if this is not particularly shown in the user manual.
- If you clean a washable filter with water, make sure it is completely dry before you put it back into the appliance. Do not dry the filter in direct sunlight, on a radiator or in a tumble dryer. Replace a washable filter if it can no longer be cleaned properly or if it is damaged.

- The TriActive LED nozzle contains LED lights. Do not look directly at the light source (Fig. 1).
- Do not point the LED lights directly at the eyes of people or pets.
- Do not use the CarpetClean nozzle on hard floors, as this may cause scratches.
- Do not clean the nozzles with water or a cleaning agent.
- To guarantee optimal dust retention and performance of the vacuum cleaner, always replace the filters with original Philips filters of the correct type.
- Maximum noise level: Lc = 84 dB(A)

#### Electromagnetic fields (EMF)

- This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

#### Ordering accessories

To buy accessories or spare parts, visit [www.shop.philips.com/service](http://www.shop.philips.com/service) or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

#### Warranty and support

If you need information or support, please visit [www.philips.com/support](http://www.philips.com/support) or read the international warranty leaflet.

#### Recycling

- This symbol means that this product shall not be disposed of with normal household waste (2012/19/EU) (Fig. 2).
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

#### Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit [www.philips.com/support](http://www.philips.com/support) for a list of frequently asked questions or contact the Consumer Care Center in your country.

| Problem   | Possible cause   | Solution   |
|---|--|--|
| The suction power is insufficient.                                      | The dust container is full.  | Empty the dust container.  |
|   | The filters are dirty.   | Clean or replace the filters.  |
|   | The suction power is set to a low setting.   | Increase the suction power with the regulator on the appliance or on the handgrip.   |
|   | The nozzle, tube or hose is blocked up.  | To remove the obstruction, disconnect the blocked-up item and connect it (as far as possible) the other way around. Switch on the vacuum cleaner to force the air through the blocked-up item in opposite direction. |
| When I use my vacuum cleaner I sometimes feel electric shocks.          | Your vacuum cleaner builds up static electricity. The lower the air humidity, the more static electricity the appliance builds up. | Discharge the appliance by frequently holding the tube against other metal objects in the room (for example the legs of a table or chair, a radiator etc.). You can also raise the air humidity level in the room.   |
| The vacuum cleaner switched off, but I did not press the on/off button. | The automatic auto/off function has been activated because you did not move the handgrip for 2 seconds.                            | As soon as you start moving the handgrip again, the vacuum cleaner switches on automatically.  |
| The auto on/off feature does not work.                                  | You may have disabled the feature.   | Press and hold the on/off button on the handgrip for 5 seconds to activate the feature. The auto on/off icon lights up.  |
| The auto on/off icon flashes.   | The gyroscopic sensor does not work.   | Please contact the Consumer Care Center.   |

Türkçe

#### Giriş

Ürünümüzü satın aldığınız için teşekkür ederiz; Philips'e hoş geldiniz! Philips'in sunduğu destekten tam olarak yararlanmak için ürününüzü [www.philips.com/welcome](http://www.philips.com/welcome) adresinden kaydedtin.

#### Önemli güvenlik bilgileri

Cihazı kullanmadan önce bu önemli bilgileri dikkatlice okuyun ve gelecekte başvurmak üzere saklayın.

#### Tehlike

- Hiçbir zaman su veya başka bir sıvıyı, yanıcı maddeleri veya sıcak külleri süpürmeyin.

#### Uyarı

- Cihazı prize takmadan önce, üstünde yazılı olan gerilimin, evinizdeki şebeke gerilimiyle aynı olup olmadığını kontrol edin.
- Cihazın fişi, kordonu veya kendisi hasarlıysa kesinlikle kullanmayın.
- Cihazın elektrik kablosu hasarlıysa bir tehlike oluşturmasını önlemek için mutlaka Philips'in yetki verdiği bir servis merkezi veya benzer şekilde yetkilendirilmiş kişiler tarafından değiştirilmesini sağlayın.
- Bu cihaz, güvenliklerinden sorumlu kişilerin nezareti veya talimatı olmadan, düşük fiziksel, sinirsel ya da zihinsel becerilere sahip veya bilgi ve tecrübe açısından yetersiz kişiler tarafından (çocuklar da dahil) kullanılmamalıdır.
- Küçük çocukların cihazla oynamaları engellenmelidir.
- Cihazı ve kablosunu çocukların ulaşabilecekleri yerlerden uzak tutun.
- Cihazı temizlemeden veya cihazın bakımını yapmadan önce fişi prizden çekilmelidir.
- Hortumu, boruyu veya diğer herhangi bir aksesuarı gözlerinize veya kulaklarınıza tutmayın ya da ağzınıza sokmayın.

#### Dikkat

- Cihazı hiçbir filtre olmadan kesinlikle kullanmayın. Bu, motorun zarar görmesine ve cihazın kullanım ömrünün azalmasına neden olabilir.
- Tüm parçaları her zaman kullanım kılavuzunda gösterilen şekilde temizleyin. Kullanım kılavuzunda özellikle gösterilmediği takdirde herhangi bir parçayı su ve/veya temizlik maddeleri ile temizlemeyin.
- Yıkanebilir bir filtreyi suyla temizliyorsanız, cihaza geri takmadan önce tamamen kuru olduğundan emin olun. Filtreyi doğrudan güneş ışığı altında, radyatör üzerinde veya çamaşır kurutma makinesinde kurutmayın. Yıkanebilir filtreyi artık tam temizlenemediğinde ya da hasar gördüğünde değiştirin.
- Üç Aktif LED başlıkta LED lambaları vardır. Işık kaynağına (Şek. 1) doğrudan bakmayın.

- LED lambalarını doğrudan insanların veya hayvanların gözüne tutmayın.
- Halı Temizleme başlığını sert zeminler üzerinde kullanmayın, aksi takdirde çizikler meydana gelebilir.
- Başlıkları suyla veya temizlik malzemesiyle temizlemeyin.
- Elektrikli süpürge için optimum toz tutma ve performans sağlaması için, filtreleri her zaman doğru tipteki orijinal Philips filtreleri ile değiştirin (bk. 'Aksesuar siparişi' bölümü).
- Maksimum gürültü seviyesi: Lc = 84 dB(A)

#### Elektromanyetik alanlar (EMF)

- Bu Philips cihaz, elektromanyetik alanlara maruz kalmaya ilişkin geçerli tüm standartlara ve düzenlemelere uygundur.

#### Aksesuarların sipariş edilmesi

Aksesuar veya yedek parça satın almak için [www.shop.philips.com/service](http://www.shop.philips.com/service) adresini ziyaret edin ya da Philips bayinize gidin. Ülkenizdeki Philips Müşteri Hizmetleri Merkezi ile de iletişim kurabilirsiniz (iletişim bilgileri için dünya çapında geçerli garanti belgesine göz atın).

#### Garanti ve destek

Bilgi veya desteğe ihtiyaç duyarsanız, lütfen [www.philips.com/support](http://www.philips.com/support) adresini ziyaret edin veya uluslararası garanti kitapçığını okuyun.

#### Geri dönüşüm

- Bu simge, bu ürünün normal evsel atıklarla birlikte atılmaması gerektiği anlamına gelir (2012/19/EU) (Şek. 2).
- Elektrikli ve elektronik ürünlerin ayrı olarak toplanmasına ilişkin ülkenizde yürürlükte olan yönetmeliklere uyun. İmha işleminin doğru şekilde yapılması çevreyi ve insan sağlığını olumsuz etkileyecek sonuçların önlenmesine yardımcı olur.

#### Sorun giderme

Bu bölümde, cihazla ilgili en sık karşılaşılabileceğiniz sorunları özetleyeceğiz. Sorunu aşağıda verilen bilgileri kullanarak çözemiyorsanız, sık sorulan sorular listesi için [www.philips.com/support](http://www.philips.com/support) adresini ziyaret edin veya ülkenizdeki Müşteri Destek Merkezi ile iletişim kurun.

| Sorun  | Olası neden   | Çözüm   |
|--|---|---|
| Emiş gücü yetersiz.  | Toz haznesi dolu olabilir.  | Toz haznesini boşaltın.   |
|  | Filtreler kirli olabilir.   | Filtreleri temizleyin ya da değiştirin.   |
|  | Emiş gücü düşük ayarda olabilir.  | Emme gücünü cihazdaki veya saptaki regülatörle artırm.  |
|  | Başlık, boru veya hortum tıkanmış olabilir.   | Tıkanıklığı gidermek için tıkanan aparatı çıkartarak ters taraftan (mümkün olduğunca uzak) bağlayın. Elektrikli süpürgeyi açarak tıkanmış parçaya ters yönden hava gönderin.                  |
| Elektrikli süpürgeyi kullanırken bazen elektrik çarpmış gibi hissediyorum. | Elektrikli süpürge statik elektrik birikebilir. Havadaki nem ne kadar düşük olursa, cihazlarda biriken statik elektrik o kadar yüksek olur. | Boruyu sık sık odadaki diğer metal nesnelere değdirerek cihaz yükünü boşaltın (örneğin, masanın veya sandalyenin ayakları, radyatör vb.). Ayrıca, odadaki nem seviyesini de artırabilirsiniz. |
| Açma/kapama düğmesine basmamış olmama rağmen elektrikli süpürge durdu.     | Tutma yeri 2 saniyeden uzun bir süre hareketsiz kaldığından otomatik kapanma fonksiyonu otomatik olarak devreye girmiştir.                  | Siz tutma yerini tekrar hareket ettirmeye başlar başlamaz, elektrikli süpürge otomatik olarak çalışmaya başlar.   |
| Otomatik açma/kapama özelliği çalışmıyor.                                  | Bu özelliği devre dışı bırakmış olabilirsiniz.  | Bu özelliği etkinleştirmek için tutma yerindeki açma/kapama düğmesine 5 saniye boyunca basılı tutun. Otomatik açma/kapama simgesi yanar.  |
| Otomatik açma/kapama simgesi yanıp söner.                                  | Topaç sensör çalışmıyor.  | Lütfen Müşteri Hizmetleri Merkezi ile iletişim kurun.   |