




HR2541
HR2542
HR2543
HR2545

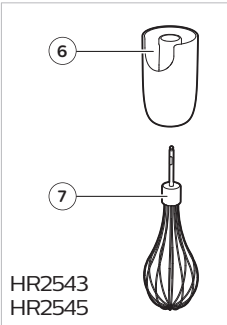


HR2543
HR2545

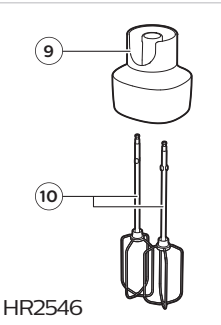



HR2546

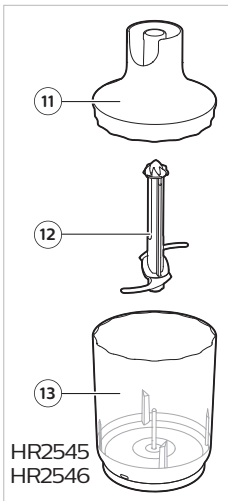



HR2545
HR2546

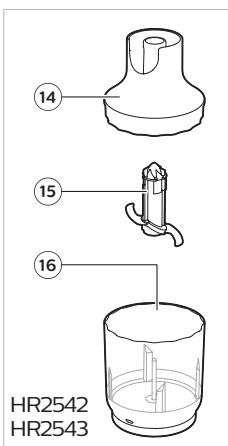

HR2542
HR2543

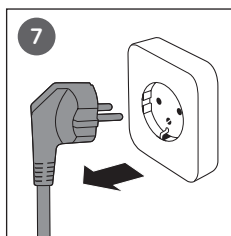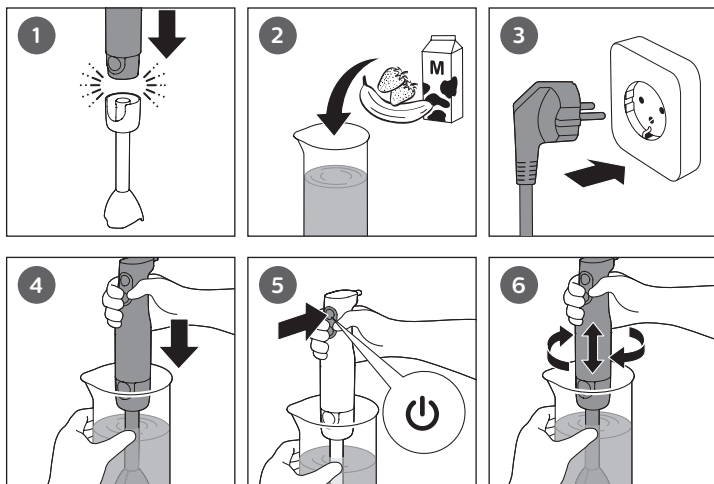

HR2543
HR2545

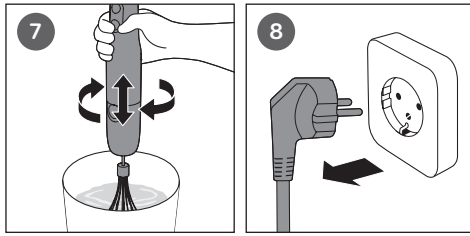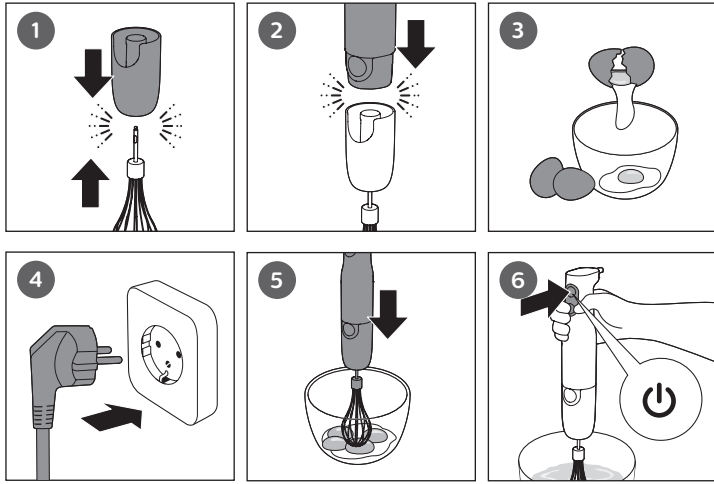


PHILIPS

HR2541, HR2542,
HR2543, HR2545
HR2546

User manual
Buku Petunjuk Pengguna



HR2546

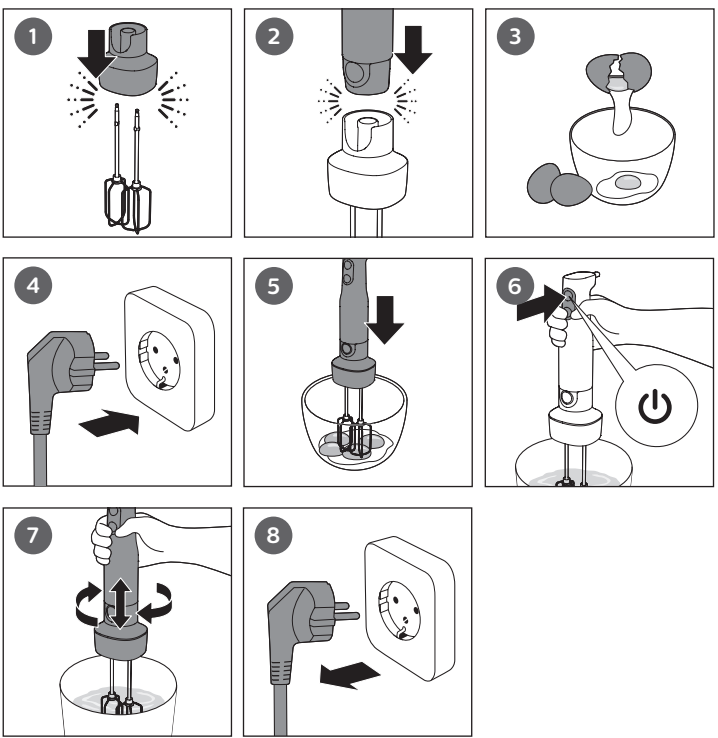

		 (MAX)		
		100-200 g	30 sec	TURBO
		100-400 ml	60 sec	①
		100-500 ml	60 sec	①
		100-500 ml	60 sec	①
 HR2543 HR2545		250 ml	70-90 sec	TURBO
		4 x	120 sec	TURBO
 HR2546		250 ml	70-90 sec.	TURBO
		4 x	2 min.	TURBO
		750 g	3 min.	TURBO
		750 g	2 min.	①




	✗	✗	✓
	✓	✗	✓
	✗	✗	✓
 HR2543 HR2545	✓	✓	✓
 XL Compact	✗	✗	✓
	✓	✓	✓
 HR2545 HR2542 HR2543	✓	✓	✓
 HR2541 HR2542 HR2545	✓	✓	✓




HR2542
HR2543



HR2545
HR2546

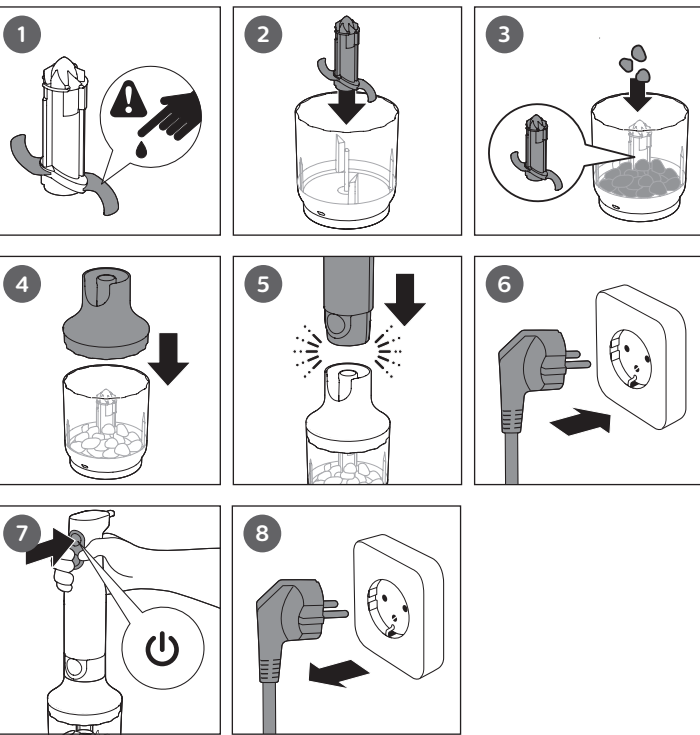

		 (MAX)			
Compact		100 g	5 x 1 sec.	①	
		120 g	5 sec.	TURBO	
		20 g	5 x 1 sec.	①	
		100 g	20 sec.	TURBO	
XL		200 g	5 x 1 sec.	①	
		200 g	10 sec.	TURBO	
		30 g	5 x 1 sec.	①	
		200 g	30 sec.	TURBO	
		100 g	20 sec.	TURBO	
		80 g	30 sec.	TURBO	
		80 g	30 sec.	TURBO	

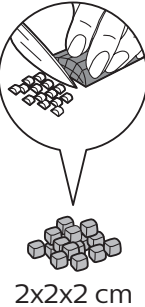

Pelumat

Model: HR2641

Daya: 700W

Tegangan: 220-240V, 50-60Hz

Negara Pembuat: Cina

Diimpor oleh:

PT. Philips Indonesia Commercial
Gedung Cibis Nine Lantai 10
Jl. T.B. Simatupang No. 2 RT. 001 RW. 005
Kel. Cilandak Timur, Kec. Pasar Minggu
Jakarta Selatan 12560
Indonesia

Reg. No.: l.xx.xxxx.xxxxx.xxxx



Specifications are subject to change without notice.
© 2019 Koninklijke Philips N.V.
All rights reserved.

100% recycled paper
100% papier recyclé
3000 044 79641 A

ENGLISH

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

General description

- On/off button
- TURBO button
- Motor unit
- Release button
- Blender bar with integrated blade unit
- Whisk coupling unit (HR2543, HR2545 only)
- Whisk (HR2543, HR2545 only)
- Beaker (HR2541, HR2542, HR2543, HR2545 only)
- Double beater coupling unit (HR2546 only)
- Double beater (HR2546 only)
- XL chopper lid (HR2545, HR2546 only)
- XL chopper blade unit (HR2545, HR2546 only)
- XL chopper bowl (HR2545, HR2546 only)
- Compact chopper lid (HR2542, HR2543 only)
- Compact chopper blade unit (HR2542, HR2543 only)
- Compact chopper bowl (HR2542, HR2543 only)

Important

Read this user manual carefully before you use the appliance and save it for future reference.

Danger

- Never immerse the motor unit in water or any other liquid, nor rinse it under the tap. Only use a moist cloth to clean the motor unit.

Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the plug, the mains cord or other parts are damaged or have visible cracks.
- If the supply cord is damaged, it must be replaced by Philips, its service agent or similarly qualified persons in order to avoid a hazard.

- Do not touch the cutting edges of the blade units under any conditions, especially when the appliance is plugged in. The cutting edges are very sharp.
- Never use a chopper blade unit without a chopper bowl.
- To avoid splashing, always immerse the blender bar, whisk (specific types only) or double beater (specific types only) into the ingredients before you switch on the appliance, especially when you process hot ingredients.
- If one of the blade unit gets stuck, unplug the appliance before you remove the ingredients that block the blade units.
- Be careful when you pour hot liquid into the beaker, as hot liquid and steam may cause scalding.
- This appliance is intended for normal household use only. It is not intended for use in environments such as staff kitchens of shops, offices, farms or other work environments. Nor is it intended to be used by clients in hotels, motels, bed and breakfasts and other residential environments.
- Never process hard ingredients like ice cubes with the appliance.
- Children should be supervised not to play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Cleaning and user maintenance shall not be made by children without supervision.
- Always disconnect the appliance from the supply if it is left unattended and before you assemble, disassemble, store or clean.
- Thoroughly clean the parts that come into contact with food before you use the appliance for the first time. Refer to the instructions and table for cleaning given in the manual.
- Always unplug the device from power supply before changing accessories or approaching parts that move in use.

Caution

- Do not use the appliance with any of the accessories longer than 3 minutes without interruption. Let the appliance cool down for 15 minutes before you continue processing.
- None of the accessories is suitable for use in the microwave.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Keep the motor unit away from heat, fire, moisture and dirt.
- Only use this appliance for its intended purpose as shown in the user manual.
- Never fill the beaker, XL chopper bowl (specific types only), or compact chopper bowl (specific types only) with ingredients that are hotter than 80°C/175°F.
- Do not exceed the quantities and processing times indicated in the table.
- Clean the blade unit of the blender bar under the tap. Never immerse the power unit in water.
- After cleaning, let the blender bar dry. Store it either horizontally or with the blade pointing upwards.
- Noise level: Lc = 85 dB(A)

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- Follow your country’s rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

Before first use

Thoroughly clean the parts that come into contact with food before you use the appliance for the first time. Refer to the instructions and table for cleaning given in the manual.

Note: Make sure all parts are completely dry before you start using the appliance.

Preparing for use

- Let hot ingredients cool down before you process them or put them into the beaker (maximum temperature 80°C).
- Cut large ingredients into pieces of around 2 x 2 x 2 cm before you process them.
- Assemble the appliance properly before you put the plug in the wall outlet.

Note: Always unwind the power cord completely before you switch on the appliance.

Note: Remove all packing material or labels before using.

Hand blender



The hand blender is intended for:

- blending fluids, e.g. dairy products, sauces, fruit juices, soups, mixed drinks and shakes.
- mixing soft ingredients, e.g. pancake batter or mayonnaise.
- pureeing cooked ingredients, e.g. for making baby food.
- chopping nuts, fruits and vegetables.

Caution: Do not process ingredients such as ice cubes, frozen ingredients or fruits with stones

- Attach the blender bar to the motor unit (“click”) (fig. 1).
- Put the ingredients into the beaker (fig. 2)
- Put the plug into the wall outlet (fig. 3)
- Immerse the blade guard completely in the ingredients in order to avoid splashing (fig. 4).
- Switch on the appliance by pressing the On/off button or the TURBO button (fig. 5).
- Move the appliance slowly up and down and in circles to blend the ingredients (fig. 6).
- After you have finished blending, unplug the appliance (fig. 7).

Compact chopper and XL Chopper



The compact chopper and XL chopper are intended for chopping ingredients such as nuts, raw meat, onions, hard cheese, boiled eggs, garlic, herbs, dry bread, etc.

- Put the blade unit in the chopper bowl (fig. 2).
- Put the ingredients in the chopper bowl (fig. 3).
- Put the chopper lid on the chopper bowl (fig. 4).
- Attach the motor unit onto the chopper lid (“click”) (fig. 5).
- Put the plug in the wall outlet (fig. 6).

- Press the On/off button and let it operate until all ingredients are cut (fig. 7).
- After you have finished chopping, unplug the appliance (fig. 8).

Whisk



The whisk is intended for whipping cream, whisking egg whites, desserts etc. Do not use the whisk to prepare dough or cake mixture.

- Attach the whisk to the whisk coupling unit (“click”) (fig. 1).
- Attach the whisk coupling unit to the motor unit (“click”) (fig. 2).
- Put the ingredients in a bowl (fig. 3).
- Put the plug in the wall outlet (fig. 4).
- Immerse the whisk in the ingredients (fig. 5).
- Switch the appliance on by pressing the On/off button or the TURBO button (fig. 6).
- Move the appliance slowly up and down and in circles (fig. 7).
- After you have finished the whisking, remove the plug from the wall outlet (fig. 8).

Double beater



The Double beater accessory is intended for mixing all kinds of light doughs, e.g. sponge cake, cake batter and for mashing potatoes, whipping cream, whisking egg whites and desserts.

- Attach the double beater to the double beater coupling unit (“click”) (fig. 1).
- Attach the double beater coupling unit to the motor unit (“click”) (fig. 2)
- Put the ingredients in a bowl (fig. 3).
- Put the plug in the wall outlet (fig. 4).
- Immerse the double beater in the ingredients (fig. 5).
- Switch the appliance on by pressing the On/off button or the TURBO button (fig. 6).
- Move the appliance slowly in circles (fig. 7).
- After you have finished the whisking, remove the plug from the wall outlet (fig. 8)

Cleaning

Caution: Do not immerse the motor unit, the blender bar, the whisk coupling unit, the XL chopper lid, the compact chopper lid, and the double beater coupling unit in water or any other liquids, nor rinse them under the tap. Use a moist cloth to clean these parts. Only the blender bar blade and guard can be rinsed under the tap (fig. 2).

Caution: Never use scouring pads, abrasive cleaning agents or aggressive liquids such as alcohol, gasoline or acetone to clean the appliance.

- Unplug the appliance.
- Press the release button on the motor unit to remove the accessory you have used.
- Disassemble the accessory.
- See the “Cleaning” chart for further instructions.

Ordering accessories

To buy accessories or spare parts, visit **www.shop.philips.com/service** or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the worldwide guarantee leaflet for contact details).

Guarantee and support

If you need information or support, please visit **www.philips.com/support** or read the separate worldwide guarantee leaflet.

Pesto Genovese

This recipe can be prepared with the XL chopper. The XL chopper is not supplied as a standard accessory with every model in this product range, but it can be ordered as an extra accessory. See chapter “Ordering accessories”.

- 275 g Parmesan cut in approximately 3 cm cubes
- 2 cloves of garlic
- 50 g pine nuts
- 15 g fresh basil leaves
- 4 table spoons olive oil

- Put the ingredients in the XL chopper bowl according to the order mentioned above.
- Put the XL chopper lid on the bowl and then fasten the motor unit onto the lid.
- Press the TURBO button and let the chopper operate for 5 seconds.

INDONESIA

Pendahuluan

Selamat atas pembelian Anda dan selamat datang di Philips! Untuk memanfaatkan sepenuhnya dukungan yang ditawarkan Philips, daftarkan produk Anda di **www.philips.com/welcome**.

Gambaran umum

- Tombol on/off
- Tombol TURBO
- Unit motor
- Tombol pelepas
- Bilah blender dengan unit pisau terintegrasi
- Unit sambungan kocokan (HR2543, HR2545 saja)
- Kocokan (HR2543, HR2545 saja)
- Gelas (HR2541, HR2542, HR2543, HR2545 saja)
- Unit sambungan pengocok ganda (HR2546 saja)
- Pengocok ganda (HR2546 saja)
- Tutup perajang XL (HR2545, HR2546 saja)
- Unit pisau perajang XL (HR2545, HR2546 saja)
- Mangkuk perajang XL (HR2545, HR2546 saja)
- Tutup perajang ringkas (HR2542, HR2543 saja)
- Unit pisau perajang ringkas (HR2542, HR2543 saja)
- Mangkuk perajang ringkas (HR2542, HR2543 saja)

Penting

Baca petunjuk pengguna ini dengan saksama sebelum menggunakan alat dan simpanlah sebagai referensi nanti.

Bahaya

- Jangan sekali-kali merendam unit motor di dalam air atau cairan lain apa pun, jangan pula menyiramnya di bawah keran air. Gunakan hanya kain yang lembap untuk membersihkan unit motor.

Peringatan

- Periksalah apakah voltase pada alat sesuai dengan voltase listrik di rumah Anda, sebelum menghubungkan alat.
- Jangan menggunakan alat jika steker, kabel listrik atau komponen lain ada yang rusak atau terlihat retak.
- Jika kabel listrik rusak, maka harus diganti oleh Philips, agen servisnya, atau personel dengan kualifikasi yang setara untuk menghindari bahaya.
- Jangan pernah menyentuh tepi pemotong pada unit pisau, terutama saat alat sudah dihubungkan ke stopkontak listrik. Tepi pemotong sangat tajam.
- Jangan sekali-kali menggunakan unit pisau perajang tanpa mangkuk perajang.
- Untuk menghindari cipratan, selalu rendam bilah blender, kocokan (hanya tipe-tipe tertentu), atau pengocok ganda (hanya tipe-tipe tertentu) ke dalam bahan sebelum Anda menyalakan alat, terutama saat mengolah bahan panas.
- Jika salah satu unit pisau macet, cabut steker alat dari stopkontak sebelum mengeluarkan bahan-bahan yang mengganjal unit pisau.
- Berhati-hatilah saat menuangkan cairan panas ke gelas blender, karena cairan panas bisa menyebabkan kulit melepuh.
- Alat ini tidak diperuntukkan dalam lingkungan seperti dapur staf bengkel, kantor, pertanian, atau lingkungan kerja lainnya. Alat ini tidak ditujukan untuk digunakan di lingkungan seperti staf dapur, dapur toko/restoran, kantor, peternakan, atau lingkungan kerja lainnya. Alat juga tidak ditujukan untuk digunakan oleh klien di hotel, motel, akomodasi kamar & sarapan (“bed and breakfast”) atau lingkungan hunian serupa lainnya.
- Jangan sekali-kali mengolah bahan yang keras seperti es batu dengan alat.
- Anak kecil harus diawasi untuk memastikan mereka tidak bermain-main dengan alat ini.
- Alat ini tidak dimaksudkan untuk digunakan oleh orang (termasuk anak-anak) dengan cacat fisik, indera atau kecakapan mental yang kurang, atau kurang pengalaman dan pengetahuan, kecuali jika mereka diberikan pengawasan atau petunjuk mengenai penggunaan alat oleh orang yang bertanggung jawab bagi keselamatan mereka.
- Pembersihan dan perawatan tidak boleh dilakukan oleh anak-anak tanpa pengawasan.
- Selalu cabut steker alat dari suplai jika alat ditinggalkan tanpa pengawasan atau sebelum Anda memasang, membongkar, menyimpan, atau membersihkannya.
- Bersihkan secara cermat bagian-bagian yang bersentuhan dengan makanan sebelum menggunakan alat ini untuk pertama kali. Lihat petunjuk dan tabel untuk cara membersihkan yang terdapat di buku petunjuk pengguna.
- Selalu cabut perangkat dari suplay daya sebelum mengganti aksesori atau mendekati komponen bergerak yang sedang digunakan.

Perhatian

- Jangan menggunakan alat dengan aksesori apa pun lebih lama dari 3 menit secara terus-menerus. Biarkan alat mendingin selama 15 menit sebelum Anda melanjutkan pengolahan.
- Aksesori tidak cocok digunakan dalam microwave.
- Jangan sekali-kali menggunakan aksesori atau komponen apa pun dari produsen lain atau yang tidak secara khusus direkomendasikan oleh Philips. Jika Anda menggunakan aksesori atau komponen tersebut, garansi Anda menjadi batal.
- Jauhkan unit motor dari panas, api, kelembaban dan kotor.
- Hanya gunakan alat ini untuk keperluan yang dimaksud di petunjuk pengguna.
- Jangan pernah mengisi gelas, mangkuk perajang XL (tipe tertentu saja), atau mangkuk perajang ringkas (tipe tertentu saja) dengan bahan yang panasnya lebih dari 80°C/175°F.
- Jangan melebihi takaran dan waktu pengolahan seperti yang ditunjukkan pada tabel.
- Bersihkan unit pisau pada bilah blender di bawah keran. Jangan pernah merendam unit daya di dalam air.
- Setelah dibersihkan, biarkan bilah blender kering terlebih dahulu. Simpan secara horisontal atau dengan pisau mengarah ke atas.
- Tingkat kebisingan: Lc = 85 dB(A)

Medan elektromagnet (EMF)

Alat Philips ini mematuhi semua standar dan peraturan yang berlaku terkait paparan terhadap medan elektromagnet.

Mendaur ulang

- Jangan membuang alat bersama limbah rumah tangga biasa jika alat sudah tidak bisa dipakai lagi, tetapi serahkanlah ke titik pengumpulan resmi untuk didaur ulang. Dengan melakukan hal ini, Anda ikut membantu melestarikan lingkungan.
- Patuhi peraturan mengenai pengumpulan produk-produk elektrik dan elektronik di negara Anda . Pembuangan produk secara benar akan membantu mencegah dampak negatif terhadap lingkungan dan kesehatan manusia.

Sebelum menggunakan alat pertama kali.

Bersihkan secara cermat bagian-bagian yang bersentuhan dengan makanan sebelum menggunakan alat ini untuk pertama kali. Lihat petunjuk dan tabel untuk cara membersihkan yang terdapat di buku petunjuk pengguna.

Catatan: Pastikan semua komponen benar-benar kering sebelum mulai menggunakan alat.

Menyiapkan penggunaan

- Biarkan bahan makanan yang panas mendingin terlebih dahulu sebelum mengolahnya atau meletakkannya ke dalam gelas blender (suhu maks. 80°C).
- Potong bahan makanan yang besar menjadi potongan berukuran kurang lebih 2 x 2 x 2 cm sebelum mengolahnya.
- Pasang alat dengan benar sebelum memasukkan steker ke stopkontak dinding.

Catatan: Selalu lepas gulungan kabel sepenuhnya sebelum alat dihidupkan.

Catatan: Lepaskan semua material kemasan atau label sebelum menggunakan.

Blender tangan



Blender tangan dimaksudkan untuk:

- memblender bahan cair seperti susu, saos, jus buah, sup, minuman campur, dan minuman kocok.
- mencampur bahan makanan lembut seperti adonan kue penekuk atau mayones.

- menghaluskan bahan makanan masak, misalnya untuk membuat makanan bayi.
- Mencacah kacang-kacangan, buah, dan sayuran.

Perhatian: Jangan mengolah bahan-bahan seperti es batu, bahan makanan beku, atau buah-buahan berbiji

- Pasang bilah blender ke unit motor (bunyi “klik”) (gbr. 1).
- Masukkan semua bahan ke dalam gelas blender (gbr. 2)
- Colokkan steker ke stopkontak dinding (gbr. 3)
- Pastikan pelindung pisau tertutup sepenuhnya oleh bahan agar tidak muncul cipratan (gbr. 4).
- Hidupkan alat dengan menekan tombol On/off atau tombol TURBO (gbr. 5).
- Goyangkan alat ke atas dan bawah dan dalam arah memutar secara perlahan untuk meratakan campuran bahan (gbr. 6).
- Setelah selesai memblender, cabut steker alat (gbr. 7).

Pencacah ringkas dan pencacah XL



Pencacah ringkas dan pencacah XL dimaksudkan untuk mencacah bahan seperti kacang, daging mentah, bawang, keju keras, telur rebus, bawang putih, rempah-rempah, roti kering, dsb.

- Pasang unit pisau ke mangkuk pencacah (gbr. 2).
- Masukkan bahan-bahan ke mangkuk pencacah (gbr. 3).
- Pasang tutup pencacah pada mangkuk pencacah (gbr. 4).
- Pasang unit motor ke tutup pencacah (bunyi “klik”) (gbr. 5).
- Colokkan steker ke stopkontak dinding (gbr. 6).
- Tekan tombol On/off dan biarkan alat beroperasi hingga semua bahan terpotong (gbr. 7).
- Setelah selesai mencacah, cabut steker alat (gbr. 8).

Kocokan



Kocokan dimaksudkan untuk mengocok krim, putih telur, pencuci mulut dsb. Jangan gunakan kocokan untuk menyiapkan adonan padat atau adonan kue.

- Pasang kocokan ke unit sambungan kocokan (sampai berbunyi “klik”) (gbr. 1).
- Pasang unit sambungan kocokan ke unit motor (bunyi “klik”) (gbr. 2).
- Masukkan bahan ke dalam mangkuk (gbr. 3).
- Colokkan steker ke stopkontak dinding (gbr. 4).
- Masukkan kocokan ke dalam bahan (gbr. 5).
- Hidupkan alat dengan menekan tombol On/off atau tombol TURBO (gbr. 6).
- Goyangkan alat ke atas dan bawah dan memutar secara perlahan (gbr. 7).
- Setelah selesai mengocok, cabut steker dari stopkontak dinding (gbr. 8).

Pengaduk ganda



Aksesori pengaduk ganda ditujukan untuk mencampur semua jenis adonan ringan, misalnya kue spons, adonan kue, dan untuk menumbuk kentang, krim kocok, putih telur, dan pencuci mulut.

- Pasang pengaduk ganda ke unit sambungan pengaduk ganda (hingga berbunyi “klik”) (gbr. 1).
- Pasang unit sambungan pengaduk ganda ke unit motor (hingga berbunyi “klik”) (gbr. 2)
- Masukkan bahan ke dalam mangkuk (gbr. 3).
- Colokkan steker ke stopkontak dinding (gbr. 4).
- Masukkan pengaduk ganda ke dalam bahan-bahan (gbr. 5).
- Hidupkan alat dengan menekan tombol On/off atau tombol TURBO (gbr. 6).
- Gerakkan alat perlahan-lahan dengan gerakan melingkar (gbr. 7).
- Setelah selesai mengocok, cabut steker dari stopkontak dinding (gbr. 8)

Membersihkan

Perhatian: Jangan merendam unit motor, badan blender, unit sambungan kocokan, tutup pencacah XL, tutup pencacah ringkas, dan unit sambungan pengaduk ganda dalam air atau cairan lain, atau membilasnya di bawah keran. Gunakan kain lembap untuk membersihkan komponen. Hanya pisau bilah blender dan pelindung yang dapat dicuci di bawah keran (gbr. 2).
Perhatian: Jangan sekali-kali menggunakan sabut gosok, bahan pembersih abrasif atau cairan keras seperti alkohol, bensin, atau aseton untuk membersihkan alat.

- Cabut steker alat dari listrik.
- Tekan tombol pelepas pada unit motor untuk melepas aksesori yang digunakan.
- Lepaskan aksesori.
- Lihat tabel “Pembersihan” untuk petunjuk lebih lanjut.

Memesan aksesori

Untuk membeli aksesori atau suku cadang, kunjungi **www.shop.philips.com/service** atau kunjungi dealer Philips Anda. Anda juga dapat menghubungi Pusat Layanan Konsumen Philips di negara Anda (lihat pamflet garansi internasional untuk rincian kontak).

Garansi dan dukungan

Jika Anda membutuhkan informasi atau dukungan, harap kunjungi **www.philips.com/support** atau bacalah pamflet garansi internasional.

Pesto Genovese

Resep ini dapat disiapkan menggunakan perajang XL. Perajang XL tidak disertakan sebagai aksesori standar pada setiap model dalam jajaran produk ini, tetapi bisa dipesan sebagai aksesori tambahan. Lihat bab “Memesan aksesori”.

- 275 g keju Parmesan, potong dadu 3 cm
- 2 siung bawang putih
- 50 g kacang pinus
- 15 g daun basil segar
- 4 sdm minyak zaitun

- Masukkan bahan-bahan ke mangkuk perajang XL sesuai dengan urutan yang disebutkan di atas.
- Pasang tutup perajang XL pada mangkuk dan pasang unit motor pada tutup.
- Tekan tombol TURBO dan biarkan perajang beroperasi selama 5 detik.