

ENGLISH

Introduction
Congratulations on your purchase and welcome to Philips!
To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important

Read this important information carefully before you use the appliance and save it for future reference.

Danger

- Always put the ingredients to be fried in the basket, to prevent them from coming into contact with the heating elements.
- Do not cover the air inlet and the air outlet openings while the appliance is operating.
- Do not fill the pan with oil as this may cause a fire hazard.
- Never immerse the appliance in water or any other liquid, nor rinse it under the tap.
- Do not let any water or other liquid enter the appliance to prevent electric shock.
- Never put any amount of food that exceeds the maximum level indicated in the basket.
- Never touch the inside of the appliance while it is operating.

Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the plug, the mains cord or the appliance itself is damaged.

If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similar qualified persons in order to avoid a hazard.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance and its cord out of the reach of children.

Keep the mains cord away from hot surfaces.

Only connect the appliance to an earthed wall socket. Always make sure that the plug is inserted into the wall socket properly.

This appliance is not intended to be operated by means of an external timer or a separate remote-control system.

Do not place the appliance against a wall or against other appliances. Leave at least 10 cm free space on the back and sides and 10 cm free space above the appliance. Do not place anything on top of the appliance.

Do not use the appliance for any other purpose than described in the user manual.

During hot air frying, hot steam is released through the air outlet openings. Keep your hands and face at a safe distance from the steam and from the air outlet openings. Also be careful of hot steam and air when you remove the pan from the appliance.

The accessible surfaces may become hot during use. (fig. 1)

The pan, basket and accessories inside the Airfryer become hot during use. Be careful when you handle them.

Do not place the appliance on or near a hot gas stove or all kinds of electric stove and electric cooking plates, or in a heated oven.

Never use light ingredients or baking powder in the appliance.

Do not place the appliance on or near combustible materials such as a tablecloth or curtain.

Do not touch the appliance operate unattended.

Immediately unplug the appliance if you see dark smoke coming out of the appliance. Wait for the smoke emission to stop before you pull the pan out of the appliance.

Storage of potatoes: The temperature shall be appropriate to the potato variety stored and it shall be above 6°C to minimize the risk of acrylamide exposure in the prepared foodstuff.

Do not plug in the appliance or operate the control panel with wet hands.

Caution

This appliance is intended for normal household use only. It is not intended for use in environments such as staff kitchens of shops, offices, farms or other work environments. Nor is it intended to be used by clients in hotels, motels, bed and breakfasts and other residential environments.

Always return the appliance to a service centre authorised by Philips for examination or repair. Do not attempt to repair the appliance yourself; otherwise the guarantee becomes invalid.

If the appliance is used improperly or for professional or semi-professional purposes or if it is not used according to the instructions in the user manual, the guarantee becomes invalid and Philips refuses any liability for damage caused.

Always place and use the appliance on a dry, stable, level and horizontal surface.

Always unplug the appliance after use.

Let the appliance cool down for approx. 30 minutes before you handle or clean it.

Make sure the ingredients prepared in this appliance come out golden-yellow instead of dark or brown. Remove burnt remnants. Do not fry fresh potatoes at a temperature above 180°C (to minimise the production of acrylamide).

Be careful when cleaning the upper area of the cooking chamber. Hot heating element, edge of Metal parts.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding electromagnetic fields.

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

Guarantee and support

If you have need information or support, please visit

www.philips.com/support or read the separate worldwide guarantee leaflet.

Troubleshooting


This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care in your country.

Problem**Possible cause****Solution**

The outside of the appliance becomes hot during use.

The pan, basket, fat reducer, and the inside of the appliance always become hot when the appliance is switched on to ensure the food is properly cooked. These parts are always too hot to touch.

If you leave the appliance switched on for a longer time, some areas get too hot to touch. These areas are marked on the appliance with the following icon:

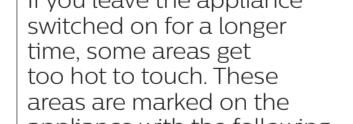

As far as you are aware of the hot areas, and avoid touching them, the appliance is completely safe to use.

You did not use the right potato type.

The amount of ingredients in the basket is too big.

You have not shaken your fries in between cooking.

Problem	Possible cause	Solution
The Airfryer does not switch on.	The appliance is not plugged in.	Check if the plug is inserted in the wall outlet properly.
Several appliances are connected to one outlet.	The Airfryer has a high wattage. Try a different outlet and check the fuse.	
After starting a Smart Chef program the appliance stopped the calculation phase.	The cooking chamber temperature is too high either because the appliance is pre-heated or has not cooled down sufficiently between two batches.	Keep the drawer open for some minutes to cool it down. Close it and start the Smart Chef program again.
The drawer is opened during the calculation phase.		Close the drawer and start the Smart Chef program again.
The drawer is not closed properly.		Make sure that the drawer is closed properly.
The appliance has stopped cooking with the Smart Chef program.	The drawer is opened during cooking before shaking of the ingredients is needed.	Only open the drawer when you see the shake indication.
I see some peeling off spots inside my Airfryer.	Some small spots can appear inside the pan of the Airfryer due to the incidental touching or scratching of the coating (e.g. during cleaning with harsh cleaning tools and/or inserting the basket).	You can prevent damage by lowering the basket into the pan properly. If you insert the basket at an angle, its side may knock against the wall of the pan, causing small pieces of metal to chip off. Please be informed that this is not harmful as all materials used are food-safe.
White smoke comes out of the appliance.	You are cooking fatty ingredients and the fat reducer is not put in the pan.	Carefully pour off any excess oil or fat from the pan, place the fat reducer in the pan and then continue cooking.
Breading or coating did not adhere properly to the food.	Pan still contains greasy residues from previous use.	Pan is still greasy and causes white smoke. Firmly press breading or coating to food to ensure it sticks.
Marinade, liquid or meat juices are splattering in the rendered fat or grease.		Pat food dry before placing it in the basket.
My display shows 5 dashes as illustrated in the picture below.	Safety feature has been activated due to overheating of the appliance.	Unplug the appliance and let it cool down for 1 minute before plugging in again.

- Bawalah selalu alat ke pusat servis resmi Philips untuk diperiksa atau diperbaiki. Jangan berburya memperbaiki sendiri alat, karena hal ini dapat membahayakan garansi.
- Jika alat ini digunakan tidak sebagaimana layaknya atau untuk tujuan profesional atau semi-profesional, atau digunakan dengan cara yang tidak sesuai dengan petunjuk penggunaan, garansi menjadi tidak berlaku dan Philips tidak bertanggung jawab atas setiap kerusakan yang disebabkannya.
- Selalu simpan dan gunakan alat pada permukaan yang stabil, rata dan pada posisi horizontal.
- Selalu mencabut steker setelah kali selesai menggunakan alat.
- Biarakan alat mendingin selama kira-kira 30 menit sebelum Anda memegang atau memberi makanstern lingkungan.
- Pastikan bahwa yang diolah dalam alat ini matang dengan warna kuning keemasan, bukan kehitaman atau kecokeletan.
- Buang masa makanan yang gosong. Jangan mengoreng keteng segera setelah dicampur dengan air atau 180°C (untuk meminimalisir produksi senyawa akrylamida).
- Berhati-hati ketika membersihkan bagian atas ruang pemasakan dengan elemen pemanas, pinggiran komponen logam.

Medan elektromagnet (EMF)

Alat Philips ini telah memenuhi semua standar dan peraturan yang berlaku terkait medan elektromagnet.

Mendaur ulang

- Jangan membuang alat bersama limbah rumah tangga biasa jika alat sudah tidak bisa dipakai lagi, tetapi serahkan ke titik pengumpulan resmi untuk dilanjut ulang. Dengan melakukannya hal ini, Anda ikut membantu melestarikan lingkungan.
- Patuh peraturan mengenai pengumpulan produk-produk elektronik dan elektrik di negara Anda. Pembuangan produk secara benar akan membantu mencegah dampak negatif terhadap lingkungan dan kesehatan manusia.

Garansi dan dukungan

Jika Anda membutuhkan informasi atau dukungan, harap kunjungi www.philips.com/support atau baca pamflet garansi internasional terpisah.

Penyelesaian masalah

Bab ini merangkum berbagai masalah umum yang mungkin Anda temui pada alat. Jika Anda tidak dapat mengatasi masalah dengan informasi di bawah, kunjungi www.philips.com/support untuk daftar pertanyaan yang sering diajukan atau hubungi Pusat Layanan Konsumen di negara Anda.

Masalah**Kemungkinan penyebab****Solusi**

Jika Alat ini tidak berfungsi dengan benar, silakan cek apakah ada masalah berikut.

Bagian atas alat akan menjadi panas sewaktu digunakan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

Pan yang digunakan tidak akan memenuhi standart yang ditentukan.

