

- According to the instructions prescribed in this user manual, use a soft damp cloth to clean the surfaces in contact with food and make sure to remove all the food residues stuck to the appliance.
- Check if the voltage indicated on the appliance corresponds to the local power voltage before you connect it.
- Only connect the appliance to a grounded power outlet. Always make sure that the plug is inserted firmly into the power outlet.
- Do not use the appliance if the plug, the power cord, the inner pot, the sealing ring, or the main body is damaged.
- Do not let the power cord hang over the edge of the table or worktop on which the appliance stands.
- Make sure the heating element, the temperature sensor, and the outside of the inner pot are clean and dry before you put the plug in the power outlet.
- Do not plug in the appliance or press any of the buttons on the control panel with wet hands.

Caution

- CAUTION: Surface of the heating element is subject to residual heat after use.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not expose the appliance to high temperatures, nor place it on a working or still hot stove or cooker.
- Do not expose the appliance to direct sunlight.
- Place the appliance on a stable, horizontal, and level surface.
- Always put the inner pot in the appliance before you put the plug in the power outlet and switch it on.
- Do not place the inner pot directly over an open fire to cook rice.
- Do not use the inner pot if it is deformed.
- The accessible surfaces may become hot when the appliance is operating. Take extra caution when touching the appliance.
- Beware of hot steam coming out of the steam vent during cooking or out of the appliance when you open the lid. Keep hands and face away from the appliance to avoid the steam.
- Do not lift and move the appliance while it is operating.
- Do not exceed the maximum water level indicated in the inner pot to prevent overflow which might cause potential hazard.
- Do not place the cooking utensils inside the pot while cooking, keeping warm or reheating rice.
- Only use the cooking utensils provided. Avoid using sharp utensils.
- To avoid scratches, it is not recommended to cook ingredients with crustaceans and shellfish. Remove the hard shells before cooking.
- Do not insert metallic objects or alien substances into the steam vent.
- Do not place a magnetic substance on the lid. Do not use the appliance near a magnetic substance.
- Always let the appliance cool down before you clean or move it.
- Always clean the appliance after use. Do not clean the appliance in a dishwasher.
- Always unplug the appliance if not used for a longer period.
- If the appliance is used improperly or for professional or semiprofessional purposes, or if it is not used according to the instructions in this user manual, the guarantee becomes invalid and Philips refuses liability for any damage caused.

Electromagnetic fields (EMF)


This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

3 What's in the box

Rice cooker main unit	Rice&Soup ladle
Measuring cup	Steam basket
User manual	Warranty card

Overview

① Sealing ring	⑦ Main body
② Water level indications	⑧ Heating element
③ Inner pot	⑨ Lid
④ Cook button	⑩ Lid release button
⑤ Keep-warm button	⑪ Detachable steam vent cap
⑥ Power cord	

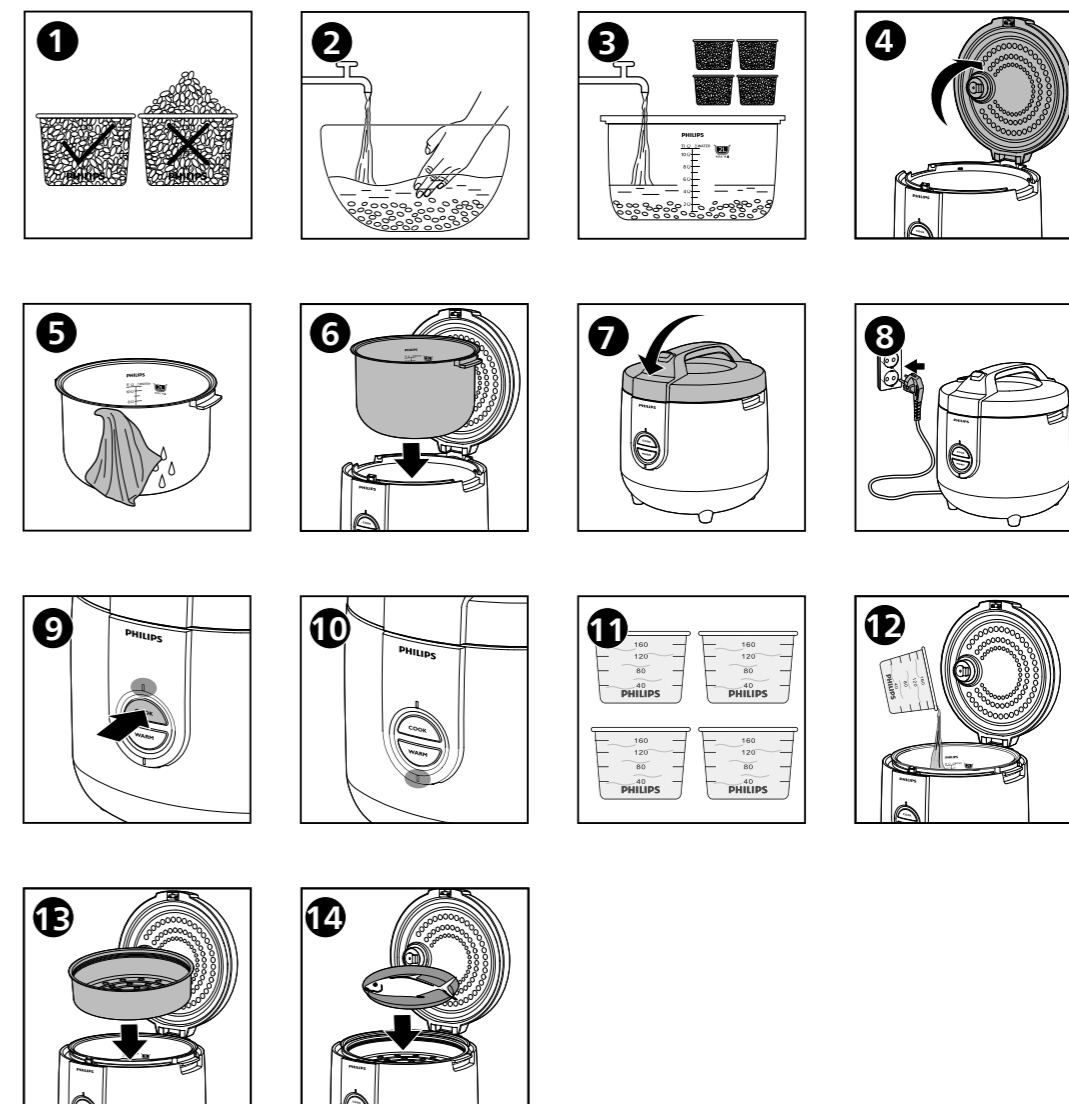

4 Using the rice cooker

Before first use

- 1 Take out all the accessories from the inner pot. Remove the packaging material of the inner pot.
- 2 Clean the parts of the rice cooker thoroughly before using the rice cooker for the first time (see chapter "Cleaning and Maintenance").

Note

- Make sure all parts are completely dry before you start using the rice cooker.

Preparations before use

Before using the rice cooker, you need to follow the preparation:

- 1 Measure the rice using the measuring cup provided (Fig. 1).
- 2 Wash the rice thoroughly (Fig. 2).
- 3 Put the pre-washed rice in the inner pot.
- 4 Add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used (Fig. 3). Then smooth the rice surface.
- 5 Press the lid release button to open the lid (Fig. 4).
- 6 Wipe the outside of the inner pot dry (Fig. 5), then put the inner pot in the rice cooker (Fig. 6). Check if the inner pot is in proper contact with the heating element.
- 7 Close the lid of the rice cooker (Fig. 7), put the plug in the power socket (Fig. 8).

Note

- Each cup of uncooked rice normally gives 3 cups of cooked rice. Do not exceed the quantities indicated on the inside of the inner pot.
- The level marked inside the inner pot is just an indication. You can always adjust the water level for different types of rice and your own preference. If the voltage is unstable at the area you live, it is possible that the rice cooker overflows.
- Besides following the water level indications, you can also add rice and water at 1:1-1.2 ratio for rice cooking. Do not exceed the quantities indicated on the inside of the inner pot.
- Use a separate container to wash the rice to avoid damaging the non-stick coating of the inner pot.
- Make sure that the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element or the magnetic switch.

Cooking Rice

- 1 Follow the steps in "Preparations before use".
- 2 Press the cook button (**Cook**), and the cook indicator lights up (Fig. 9).
- 3 When the cooking is finished, the cooking indicator will be off.
- 4 The rice cooker switches to the keep warm mode automatically, and the keep warm (**Warm**) indicator lights up (Fig. 10).

Note

- Do not exceed the volume indicated nor exceed the maximum water level indicated in the inner pot, as this may cause the rice cooker to overflow.
- Do not open the lid right after the rice cooker enters the keep-warm mode and ensure that rice is in keep-warm mode for 15 minutes if you cook much rice.

Steaming

- 1 Measure a few cups of water with the measuring cup (Fig. 11).
- 2 Pour the water into the inner pot (Fig. 12).
- 3 Put the steam basket into the inner pot (Fig. 13).
- 4 Put the food into the steam basket (Fig. 14).
- 5 Close the lid of the rice cooker, put the plug in the power socket.

- 6 Press the cook button (**Cook**), and the cook indicator lights up (Fig. 9).
- 7 When the steaming is finished, pull up the control lever.
- 8 The rice cooker switches to the keep warm mode, and the keep warm (**Warm**) indicator lights up (Fig. 10).

Note

- Use a kitchen glove or a cloth, as the plate and steam basket will be very hot.
- You can cook rice while steaming food. Do not exceed the volume indicated nor immerse the steam basket in the water, as this may cause the rice cooker to overflow.
- You can adjust the water level as needed.

5 Cleaning and Maintenance

Note

- Unplug the rice cooker before starting to clean it.
- Wait until the rice cooker has cooled down sufficiently before cleaning it.

Interior

Inside of the lid and the main body:

- Wipe with wrung out and damp cloth.
- Make sure to remove all the food residues stuck to the rice cooker.

Heating element:

- Wipe with wrung out and damp cloth.
- Remove food residues with wrung out and damp cloth or toothpicks.

Exterior

Surface of the lid and outside of the main body:

- Wipe with a cloth dampened with soap water.
- Only use soft and dry cloth to wipe the control panel.
- Make sure to remove all the food residues around the control buttons.

Accessories

Rice&Soup ladle, inner pot, steam basket, steam vent cap, detachable inner lid:

- Soak in hot water and clean with sponge.

6 Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

7 Guarantee and service

If you need service or information, or if you have a problem, visit the Philips website at www.philips.com or contact the Philips Customer Care Center in your country. You can find its phone number in the worldwide guarantee leaflet. If there is no Customer Care Center in your country, go to your local Philips dealer.

8 Specifications

Model Number	HD3119
Rated power output	650W
Rated capacity	6.0L
Rice capacity	2.0L



English

1 Your rice cooker

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

2 Important

Read this important information leaflet carefully before you use the rice cooker and save it for future reference.

Danger

- The appliance must not be immersed.

Warning

- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- Make sure that the damaged power cord is replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- WARNING: Make sure to avoid spillage on the power connector to avoid a potential hazard.
- WARNING: Always follow the instructions and use the appliance properly to avoid potential injury.

9 Troubleshooting

If you encounter problems when using this rice cooker, check the following points before requesting service. If you cannot solve the problem, contact the Philips Consumer Care Center in your country.

Problem	Solution
The lights on the buttons does not go on.	There is a connection problem. Check if the power cord is connected to the cooker properly and if the plug is inserted firmly into the power outlet. <p>The light is defective. Take the appliance to your Philips dealer or a service center authorized by Philips.</p>
The rice is not cooked.	There is not enough water. Add water according to the scale on the inside of the inner pot. <p>You did not press down the control key.</p> <p>Make sure that there is no foreign residue on the heating element and the outside of the inner pot before switching the rice cooker on.</p> <p>The heating element is damaged, or the inner pot is deformed. Take the cooker to your Philips dealer or a service center authorized by Philips.</p>
The rice is not well cooked.	Add more water.
The cooker does not switch to keep warm mode automatically in “Rice Cooking” mode.	The temperature control is defective. Take the appliance to your Philips dealer or a service center authorized by Philips.
The rice is scorched.	You have not rinsed the rice properly. Rinse the rice until water runs clear.
Water spills out of the rice cooker during cooking.	<ul style="list-style-type: none">Make sure that you add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used. Make sure the water does not exceed the next level on the scale, as this may cause the appliance to overflow during cooking.
Rice smells bad after cooking	Clean the inner pot with some washing detergent and warm water. <p>After cooking, make sure the steam vent cap, inner lid and inner pot is cleaned thoroughly.</p>

ภาษาไทย

1 หม้อหุงข้าวของคุณ

ขอแสดงความยินดีที่คุณเลือกซื้อผลิตภัณฑ์ของเรา และยินดีต้อนรับสู่ Philips เพื่อให้คุณได้รับประโยชน์อย่างเต็มที่จากบริการที่ Philips มอให้ โปรดลงทะเบียนผลิตภัณฑ์ของคุณที่ **www.philips.com/welcome**

2 ข้อมูลสำคัญ

โปรดอ่านข้อมูลที่สำคัญในแผ่นพับอย่างละเอียดก่อนใช้งานหม้อหุงข้าวและเก็บคู่มือไว้เพื่อใช้อ้างอิงในภายหลัง

อันตราย

- เครื่องจะต้องไม่จม

คำเตือน

- ไม่ควรให้บุคคล (รวมทั้งเด็กเล็ก) ที่มีสภาพร่างกายไม่แข็งแรง หรือสภาพจิตใจไม่ปกติ หรือขาดประสบการณ์และความรู้ความเข้าใจ นำอุปกรณ์นี้ไปใช้งาน เว้นแต่จะอยู่ในการควบคุมดูแล หรือได้รับคำแนะนำในการใช้งาน โดยผู้ที่รับผิดชอบในด้านความปลอดภัย
- เด็กเล็กควรได้รับการดูแลเพื่อป้องกันไม่ให้เด็กนำเครื่องนี้ไปเล่น
- ในระหว่างการหุง เครื่องควรได้รับการจัดวางในตำแหน่งที่มั่นคง โดยตั้งง (ถ้ามี) อยู่ในตำแหน่งเพื่อป้องกันไม่ให้ของเหลวร้อนหกส้นออกมา
- ตัวเครื่องเหมาะสำหรับใช้งานภายในครัวเรือนและการใช้งานที่มีวัตถุประสงค์คล้ายคลึงกัน
 - ภายในห้องครัวในร้าน สำนักงาน และสภาวะแวดล้อมการทำงานอื่นๆ
 - บ้านพักในฟาร์ม
 - ใช้งานภายในโรงแรม โมเต็ลและสภาวะแวดล้อมที่อยู่อาศัยอื่น
 - สภาวะแวดล้อมประเภทที่พืค
- ตรวจสอบให้แน่ใจว่าสายไฟที่ขั้วรถได้รับการเปลี่ยนโดยช่างผู้ชำนาญของ Philips, ศูนย์บริการที่ได้รับอนุญาตจาก Philips หรือผู้ที่ผ่านการฝึกอบรมเพื่อหลีกเลี่ยงอันตรายที่อาจเกิดขึ้น
- เครื่องนี้ไม่ได้มีวัตถุประสงค์ในการใช้งานร่วมกับเครื่องตั้งเวลาภายนอกหรือระบบโมคคอมโทรลแยก
- คำเตือน: ให้แน่ใจว่าได้มีการหลีกเลี่ยงการนำน้ำหกและเกาะบริเวณช่องเสียบไฟเพื่อหลีกเลี่ยงอันตรายที่อาจเกิดขึ้นได้
- คำเตือน: ให้ทำตามคำแนะนำและใช้งานเครื่องอย่างถูกต้องเพื่อหลีกเลี่ยงการบาดเจ็บที่อาจเกิดขึ้น
- ตามที่ระบุไว้ในคู่มือผู้ใช้นี้ ให้ใช้ผ้าที่นุ่มและชุ่มน้ำหมาดๆ ทำความสะอาดบริเวณที่สัมผัสกับอาหาร และตรวจสอบให้แน่ใจว่าได้นำอาหารที่ตกค้างอยู่ให้หมดไปตลอดเวลาในเครื่องได้
- ก่อนที่คุณจะเชื่อมต่อตัวเครื่อง โปรดตรวจสอบแรงดันไฟที่แสดงบนผลิตภัณฑ์ว่าตรงกับแรงดันไฟที่ใช้ภายในบ้านหรือไม่
- เชื่อมต่อเครื่องเข้ากับเต้ารับที่มีสายดินเท่านั้น ให้ตรวจสอบเสมอว่าได้เสียบปลั๊กเข้ากับเต้ารับแน่นดีแล้ว
- ห้ามใช้เครื่อง หากปลั๊กไฟ สายไฟ หม้อขึ้นใน ห่วงกันการรั่วซึม หรือตัวเครื่องเกิดการชำรุด
- ไม่ควรปล่อยให้สายไฟห้อยลงมาจากขอบโต๊ะหรือขึงวางที่วางเครื่องอยู่
- ตรวจสอบให้แน่ใจว่าแผ่นทำความร้อน เซนเซอร์ตรวจวัดอุณหภูมิ และด้านนอกของหม้อชั้นในสะอาดและแห้งก่อนเสียบปลั๊กไฟเข้ากับเต้ารับ
- ไม่ควรใช้นิ้วมือเปียกเสียบปลั๊กไฟเครื่องหรือกดปุ่มบนแผงควบคุม

ข้อควรระวัง

- ข้อควรระวัง: พื้นผิวของส่วนทำความร้อนอาจมีความร้อนตกค้างอยู่หลังจากการใช้งาน
- ห้ามใช้อุปกรณ์เสริมหรือชิ้นส่วนใดๆ ที่ผลิตจากผู้ผลิตอื่นหรือที่ไม่ได้รับการแนะนำจาก Philips หากคุณใช้อุปกรณ์เสริมหรือชิ้นส่วนจากผู้ผลิตอื่นหรือที่ไม่ได้รับการแนะนำจาก Philips การรับประกันของคุณจะไม่มีผลบังคับใช้
- ไม่ควรวางเครื่องลงบนบริเวณที่มีอุณหภูมิสูง หรือวางบนเตาไฟหรือเครื่องหุงต้มที่กำลังใช้งานหรือที่มีความร้อน
- ไม่ควรวางเครื่องในบริเวณที่ได้รับแสงแดดโดยตรง
- วางเครื่องบนพื้นราบที่มั่นคงและมีพื้นผิวเสมอกัน
- ควรวางหม้อขึ้นในไว้ในเครื่องก่อนที่คุณจะเสียบปลั๊กไฟเข้ากับเต้ารับและเปิดสวิตช์ทุกครั้ง
- ห้ามตั้งหม้อในไว้บนเตาไฟเพื่อหุงข้าวโดยตรง
- ห้ามใช้หม้อขึ้นในถ้าเกิดการบวม
- ขณะที่เครื่องกำลังทำงานอยู่ บริเวณรอบๆ พื้นที่วางเครื่องอาจจะมีความร้อน ใช้ความร้อนระวังเป็นพิเศษเมื่อมีการสัมผัสเครื่อง
- ควรระวังอย่าพู่่ออกจากช่องระบายของเครื่องหรือเมื่อเปิดฝา พยายามให้มีมือและใบหน้าอยู่ห่างจากเครื่องเพื่อหลีกเลี่ยงอันตราย
- ไม่ควรยก และเคลื่อนย้ายเครื่องขณะที่เครื่องกำลังทำงาน
- อย่าใส่ น้ำที่ระดับน้ำสูงสุดตามที่แสดงในหม้อขึ้นใน เพื่อป้องกันน้ำล้น ซึ่งอาจเป็นอันตราย
- ไม่ควรวางอุปกรณ์ประกอบอาหารไว้ภายในหม้อขณะหุงข้าว ตั้งอุ่น หรืออุ่นข้าวให้ร้อนอีกครั้ง
- ให้ใช้อุปกรณ์ประกอบอาหารที่จัดมาให้เท่านั้น และหลีกเลี่ยงการใช้อุปกรณ์ที่มีขอบคม
- ไม่ควรประกอบอาหารที่มีกุ้ง ปู และหอยเป็นส่วนผสม เพื่อหลีกเลี่ยงการดูดซึด ไม่เช่นนั้น ควรแกะเปลือกออกก่อนปรุงอาหาร
- อย่าเหย่หรือสับวัตถุดิบเป็นเหล็กหรือสิ่งแปลกปลอมลงในช่องระบายไอน้ำ
- อย่าวางวัตถุที่เป็นแม่เหล็กลงบนฝาปิด ไม่ควรใช้เครื่องใกล้กับวัตถุที่เป็นแม่เหล็ก
- ปล่อยให้เครื่องเย็นลงก่อนทำความสะอาดหรือเคลื่อนย้ายทุกครั้ง
- ทำความสะอาดเครื่องหลังใช้งานทุกครั้ง ห้ามทำความสะอาดเครื่องด้วยเครื่องล้างจาน
- ถอดปลั๊กไฟออกทุกครั้งหากไม่ใช้งานเป็นเวลานาน
- หากนำเครื่องไปใช้ในทางที่ไม่เหมาะสม นำไปใช้ในการค้าหรือกิจการค้า หรือใช้โดยไม่ปฏิบัติตามคำแนะนำการใช้งานในคู่มือนี้ การรับประกันจะถือเป็นโมฆะและ Philips จะไม่รับผิดชอบค่าเสียหายใดๆ ทั้งสิ้น

คลื่นแม่เหล็กไฟฟ้า (EMF)

ผลิตภัณฑ์ของ Philips นี้เป็นไปตามมาตรฐานและกฎข้อบังคับด้านคลื่นแม่เหล็กไฟฟ้าที่มีทุกประการ

3 ภายในกล่องมีอะไรบ้าง

หม้อหุงข้าวเครื่องหลัก	ทัพพีตักข้าวและชุป
ถ้วยตวง	ถาดสำหรับตั้งอาหาร
คู่มือผู้ใช้	ใบรับประกัน

ภาพรวม

①	ห้วงยางกับร้วซึม	⑦	ตัวหม้อ
②	ขีดแสดงระดับน้ำ	⑧	แผ่นทำความร้อน
③	หม้อภายใน	⑨	ฝา
④	ปุ่มหุงข้าว	⑩	ปุ่มปลดล็อคฝาปิด
⑤	ปุ่มอุ่น	⑪	ฝาปิดช่องไอน้ำถอดออกได้
⑥	สายไฟ		

4 การใช้หม้อหุงข้าว

ก่อนใช้งานครั้งแรก

- นำอุปกรณ์เสริมทั้งหมดออกจากหม้อขึ้นใน ถอดวัสดุบรรจุภัณฑ์ออกจากหม้อขึ้นใน
- ทำความสะอาดส่วนต่างๆ ของหม้อหุงข้าวให้เรียบร้อยก่อนการใช้งานครั้งแรก (ดูหัวข้อ "การทำความสะอาดและดูแลรักษา")

หมายเหตุ

- ขีดส่วนต่างๆ ให้แห้งก่อนเริ่มใช้งาน

การเตรียมพร้อมก่อนใช้งาน

ก่อนที่จะใช้หม้อหุงข้าว คุณต้องเตรียมการดังต่อไปนี้:

- ตวงข้าวด้วยถ้วยตวงที่จัดมาให้ (รูปที่ 1)
- ชวข้าวให้สะอาด (รูปที่ 2)
- เทข้าวที่ชวเรียบร้อยแล้วลงในหม้อใน
- เติมน้ำตามระดับน้ำที่แสดงอยู่ภายในหม้อขึ้นในตามปริมาณของข้าวที่ตวง (รูปที่ 3) เทสียให้ผิวหน้าของข้าวเรียบเสมอกัน
- กดปุ่มปลดล็อคฝาปิดเพื่อเปิดฝา (รูปที่ 4)
- ขีดทำความสะอาดด้านนอกของหม้อในให้แห้ง (รูปที่ 5) จากนั้นใส่ในหม้อในลงในหม้อหุงข้าว (รูปที่ 6) ตรวจสอบว่าหม้อขึ้นในสัมผัสกับแผ่นทำความร้อนแล้วหรือไม่
- ปิดฝาหม้อหุงข้าว (รูปที่ 7) เสียบปลั๊กไฟเข้ากับเต้ารับ (รูปที่ 8)

หมายเหตุ

- โดยปกติแล้วข้าวสารหนึ่งถ้วยตวงจะหุงได้ข้าวสวย 3 ถ้วย อย่าใส่ข้าวเกินกว่าปริมาณที่ระบุไว้ด้านในของหม้อขึ้นใน
- ระดับน้ำที่แสดงไว้ด้านในของหม้อขึ้นในเป็นเพียงสัญลักษณ์แสดงระดับเท่านั้น คุณสามารถปรับระดับน้ำได้ตามประเภทของข้าวและตามความพอใจของคุณ หากแรงดันไฟฟ้าในพื้นที่ของคุณไม่คงที่ อาจมีน้ำล้นออกจากหม้อหุงข้าว
- นอกจากจะเติมน้ำตามขีดแสดงระดับน้ำแล้ว คุณยังสามารถหุงข้าวโดยใช้อัตราส่วนข้าวต่อน้ำ 1 : 1-1.2 อย่าใส่ข้าวเกินกว่าปริมาณที่ระบุไว้ด้านในของหม้อขึ้นใน
- ไม่ควรใช้หม้อในชวข้าว เพราะผิวเคลือบอาจเสียหายได้
- ตรวจสอบให้แน่ใจว่าด้านบนของหม้อขึ้นในแห้งสะอาดและปราศจากสิ่งแปลกปลอมบนแผ่นนำความร้อนและสวิตช์แม่เหล็ก

การหุงข้าว

- ปฏิบัติตามขั้นตอนใน "การเตรียมพร้อมก่อนใช้งาน"
- กดปุ่มหุงข้าว (Cook) แล้วไฟแสดงการหุงจะติดขึ้น (รูปที่ 9)
- เมื่อหุงข้าวเสร็จแล้ว ไฟแสดงการหุงจะดับลง
- หม้อหุงข้าวจะสลับไปที่โหมดอุ่นโดยอัตโนมัติและไฟแสดงฟังก์ชันอุ่น (Warm) จะติดขึ้น (รูปที่ 10)

หมายเหตุ

- อย่าใส่น้ำในปริมาณเกินกว่าระดับน้ำสูงสุดในของหม้อขึ้นใน เนื่องจากอาจทำให้น้ำล้นออกจากหม้อหุงข้าวได้
- ห้ามเปิดฝาคับหลังจากหม้อหุงข้าวเข้าสู่โหมดอุ่น และให้แน่ใจว่าข้าวจะอยู่ในโหมดอุ่นเป็นเวลา 15 นาที หากคุณหุงข้าวในปริมาณมาก

การนึ่งอาหาร

- ตวงน้ำโดยใช้ถ้วยตวง (รูปที่ 11)
- ใส่น้ำลงในหม้อขึ้นใน (รูปที่ 12)
- วางถาดสำหรับนึ่งอาหารลงในหม้อขึ้นใน (รูปที่ 13)
- วางอาหารลงบนถาดสำหรับนึ่ง (รูปที่ 14)
- ปิดฝาหม้อหุงข้าว แล้วเสียบปลั๊กเข้ากับเต้ารับบนผนัง
- กดปุ่มหุงข้าว (**Cook**) แล้วไฟแสดงการหุงจะติดขึ้น (รูปที่ 9)
- เมื่อนึ่งเสร็จแล้ว ดึงคั่นยกควบคุมขึ้น
- หม้อหุงข้าวจะสลับไปที่โหมดอุ่น และสัญญาณไฟแสดงฟังก์ชันอุ่น (**Warm**) จะติดขึ้น (รูปที่ 10)

หมายเหตุ

- ควรใส่ถุงมือหรือใช้ผ้าหุ้ม เนื่องจากจานและถาดสำหรับนึ่งจะร้อนมาก
- คุณสามารถหุงข้าวได้ในขณะที่นึ่งอาหาร อย่าใส่น้ำในปริมาณเกินกว่าระดับน้ำสูงสุดที่ระบุไว้หรือจุ่มถาดสำหรับนึ่งลงในน้ำ เนื่องจากอาจทำให้น้ำล้นออกจากหม้อหุงข้าวได้
- คุณสามารถปรับระดับน้ำได้ตามต้องการ

5 การทำความสะอาดและดูแลรักษา

หมายเหตุ

- ถอดปลั๊กไฟหม้อหุงข้าวออกก่อนเริ่มทำความสะอาด
- รองก้นว้าหม้อหุงข้าวเย็นลงก่อนเริ่มทำความสะอาด

ภายใน

ภายในฝาปิดด้านบนและตัวเครื่อง:

- เช็ดด้วยผ้าเช็ดทำความสะอาดที่เปียกพอหมาด
- ตรวจสอบให้แน่ใจว่าได้ทำความสะอาดเศษอาหารที่ติดอยู่ภายในหม้อหุงข้าวออกจนหมด

แผ่นทำความร้อน:

- เช็ดด้วยผ้าเช็ดทำความสะอาดที่เปียกพอหมาด
- ทำความสะอาดเศษอาหารด้วยผ้าเช็ดทำความสะอาดหมาดๆ หรือไม้จิ้มฟัน

ภายนอก

พื้นผิวของฝาปิดด้านบนและด้านนอกตัวเครื่อง:

- เช็ดด้วยผ้าเช็ดทำความสะอาดเปียกพอหมาดชุบน้ำสบู
- ให้เช็ดแผงควบคุมด้วยผ้าที่เนื้อนุ่มและแห้งเท่านั้น
- ตรวจสอบให้แน่ใจว่าได้ทำความสะอาดเศษอาหารบริเวณปุ่มควบคุมออกจนหมด

อุปกรณ์เสริม

ทัพพีตักข้าวและชุปและหม้อขึ้นใน, ถาดสำหรับตั้งอาหาร, ฝาปิดช่องไอน้ำ, ฝาด้านใน ที่ถอดออกได้:

- ให้เข้ในน้ำร้อนและล้างด้วยฟองน้ำ

6 การรีไซเคิล

ห้ามทิ้งผลิตภัณฑ์นี้ร่วมกับขยะในครัวเรือนทั่วไปเมื่อเครื่องหมดอายุการใช้งานแล้ว แต่ควรนำไปทิ้งที่จุดรวบรวมขยะเพื่อการนำกลับไปใช้ใหม่ เพื่อช่วยรักษาสิ่งแวดล้อม ปฏิบัติตามกฎระเบียบของประเทศของคุณสำหรับการแยกเก็บผลิตภัณฑ์ไฟฟ้าและอิเล็กทรอนิกส์ การกำจัดอย่างถูกต้องช่วยป้องกันผลเสียเนื่องทางลบที่อาจเกิดขึ้นกับสิ่งแวดล้อมและสุขภาพของมนุษย์

7 การรับประกันและบริการ

หากคุณต้องการขอรับบริการหรือต้องการทราบข้อมูลหรือมีปัญหา โปรดเข้าชมเว็บไซต์ของ Philips ได้ที่ **www.philips.com** หรือติดต่อศูนย์บริการดูแลลูกค้าของบริษัท Philips ในประเทศของคุณ คุณสามารถค้นหาหมายเลขโทรศัพท์ได้ในแผ่นพับเกี่ยวกับการรับประกันทั่วโลก หากในประเทศของคุณไม่มีศูนย์บริการลูกค้า โปรดติดต่อตัวแทนจำหน่ายผลิตภัณฑ์ Philips ในประเทศ

8 ข้อมูลจำเพาะ

หมายเลขรุ่น	HD3119
กำลังไฟฟ้าที่กำหนด	650W
ความจุที่กำหนด	6.0 ลิตร
ความจุข้าว	2.0 ลิตร

9 การแก้ไขปัญหา

หากคุณประสบปัญหาในการใช้งานหม้อหุงข้าวนี้ โปรดตรวจสอบจุดต่อไปนี้ก่อนนำเครื่องเข้ารับบริการ หากคุณไม่สามารถแก้ปัญหาได้ กรุณาติดต่อศูนย์บริการดูแลลูกค้าของ Philips ในประเทศของคุณ

ปัญหา	การแก้ปัญหา
ไฟบนปุ่มต่างๆ ไม่สว่างขึ้น	มีปัญหาเกี่ยวกับการต่อสายไฟ ตรวจสอบว่าได้เชื่อมต่อสายไฟเข้ากับหม้อหุงข้าวแล้วและเสียบปลั๊กไฟเข้ากับเต้ารับแน่นดีแล้ว <p>สัญญาณไฟทำงานบกพร่อง นำเครื่องไปที่ตัวแทนจำหน่าย Philips หรือศูนย์บริการที่ได้รับบริการรองจาก Philips</p>
หม้อหุงข้าวไม่ทำงาน	ระดับน้ำไม่เพียงพอ <p>เติมน้ำให้ได้ปริมาณตามระดับที่แสดงภายในหม้อขึ้นใน</p> <p>คุณไม่ได้กดปุ่มควบคุม</p> <p>ตรวจสอบให้แน่ใจว่ามีคราบแปลกปลอมบนแผ่นทำความร้อนและบริเวณพื้นผิวภายนอกของหม้อขึ้นในก่อนเปิดสวิตช์หม้อหุงข้าว</p> <p>แผ่นทำความร้อนชำรุด หรือหม้อขึ้นในเกิดการบวม นำหม้อหุงข้าวไปที่ตัวแทนจำหน่าย Philips หรือศูนย์บริการที่ได้รับบริการรองจาก Philips</p>
ข้าวที่หุงยังไม่สุกดี	เติมน้ำลงไปอีก
หม้อหุงข้าวไม่สลับไปที่โหมดอุ่น โดยอัตโนมัติ ในโหมด "การหุงห้าว"	ปุ่มควบคุมอุณหภูมิมีความผิดปกติ นำเครื่องไปที่ตัวแทนจำหน่าย Philips หรือศูนย์บริการที่ได้รับบริการรองจาก Philips
ข้าวไม่สุกเรียบ	คุณไม่ได้ชวข้าวอย่างถูกต้อง <p>ชวข้าวจนกระทั่งน้ำใสขึ้น</p>
น้ำล้นออกจากหม้อหุงข้าวขณะหุงข้าว	<ul style="list-style-type: none">ตรวจสอบให้แน่ใจว่าคุณได้เติมน้ำตามระดับน้ำที่แสดงอยู่ภายในหม้อขึ้นในตามจำนวนข้าวที่ตวง ตรวจสอบระดับน้ำไม่ให้เกินขีดแสดงระดับน้ำระดับถัดไป เนื่องจากอาจเป็นเหตุให้น้ำล้นขณะหุงข้าวได้
ข้าวที่หุงเสร็จแล้วมีกลิ่นเหม็น	ทำความสะอาดหม้อขึ้นในด้วยน้ำยาล้างจานและน้ำอุ่น <p>ตรวจสอบให้แน่ใจว่าหลังจากทำอาหารเรียบร้อยแล้วได้ทำความสะอาดฝาหม้อ ฝาใน และหม้อขึ้นในอย่างทั่วถึง</p>