

PHILIPS

Shaver



フィリップス 電動シェーバー

品番 **S9090/43**

取扱説明書

保証書付

保証書は、この取扱説明書の最終
ページについておりますので販売店
で記入を受けてください。




フィリップス シェーバーをお買い上げいただき、まことにありがとうございます。長い間ご愛用いただきたために、ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。

また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。

商品のご確認

商品をご確認ください。

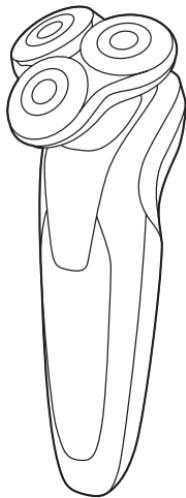

本体

洗顔ブラシ
保護キャップ




洗顔ブラシヘッド



保持板ホルダー



トリマー

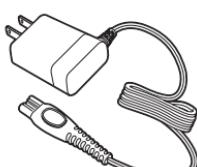

充電アダプタ



収納ケース

※改良の為、仕様を予告なく変更することがあります。

お買い上げのお客様へ

初めてご使用になる際は、ご使用前に充電してください。

目 次

●はじめに

商品のご確認	1
目次	2
必ずお守りください	3・4
各部の名称	5・6
主な表示(本体)	7
充電の仕方	8

●ご使用方法

シェービングの仕方	9～11
トリマーの使い方	12
洗顔の仕方	13
お手入れ方法	14・15
刃・洗顔ブラシの交換	16・17
保管の仕方	17

●廃棄について

シェーバーを廃棄するとき	18
--------------------	----

●困ったとき

故障かな?と思ったら	19・20
------------------	-------

●英文解説

Guidance in English	21～42
---------------------------	-------

●保証

保証とアフターサービス	43
仕様	44
無料修理規定	46
保証書	最終ページ

必ずお守り ください

安全上のご注意

- ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。
- 誤った取扱いをしたときに想定される内容を「警告」と「注意」とに区分けしています。

○絵表示について



記号は、「警告、注意」を示します。

図の中や近くに具体的な注意内容を示します。



警告 人が死亡または重傷を負う可能性が想定される内容。



注意 人が傷害を負う可能性及び物的損害のみの発生が想定される内容。

○絵表示の例



記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁止内容(左図の場合は分解禁止)を示します。



記号は、必ずしていただく「強制」を示します。図の中や近くに具体的な強制内容(左図の場合は電源プラグをコンセントから抜くこと)を示します。

警告



●シェーバー本体・充電アダプタは改造しないでください。また、修理技術者以外の人は、分解したり修理をしないでください。火災・感電・ケガの原因となります。修理はお買い上げの販売店または小泉成器修理センターにご相談ください。



●お手入れの際は必ず充電アダプタの電源プラグをコンセントから抜いてください。また、濡れた手で抜き差ししないでください。感電やケガをすることがあります。



●充電アダプタが傷んだり、コンセントの差込みが緩いときは使用しないでください。感電・ショート・発火の原因になります。



●充電アダプタを水につけたり、水をかけたりしないでください。故障や、ショート・感電の原因になります。



●充電アダプタを傷付けたり、電源コードを無理に曲げたり、引っ張ったり、ねじったり、たばねたり、重い物を載せたり、挟み込んだり、加工したりしないでください。電源コードが破損し、火災・感電の原因となります。




●乳幼児の手の届くところに本製品を置かないでください。



●充電アダプタには変圧器が内蔵されています。充電アダプタを切り離して別のプラグに接続するのは危険ですのでおやめください。



●自分で意思表示ができない人(幼児を含む)に使用させないでください。また、お体の不自由な人だけでは使用しないでください。



⚠ 注意



●充電アダプタの電源プラグを抜くときは、電源コード部を持たずに必ず先端の充電アダプタ部を持って引き抜いてください。感電やショートして発火することがあります。



●充電時以外は、充電アダプタをコンセントから抜いてください。ケガややけど、絶縁劣化による感電・漏電、火災の原因となります。



●刃が破損または故障した場合は、本製品を使用しないでください。ケガの原因になります。交換の際には必ずフィリップス社製の同型部品とお取り替えください。



●電源コネクタ受部にピンやごみを付着させないでください。感電・ショート・発火の原因になります。



●刃は強く押さえないでください。破損して皮膚を傷つけることがあります。





●充電アダプタは付属の専用アダプタを使用してください。また付属の専用アダプタで他の商品を充電しないでください。ショート、異常発熱による発火の原因になります。破損、故障した場合は、事故を避けるために必ずフィリップス社製の同型充電アダプタをお求めください。

使 用 上 の ご 注意


1. 本製品はヒゲ(あごヒゲ、口ヒゲ、もみあげなど)の長さを整えたり、シェーピングする、または洗顔するためのものです。それ以外の目的で使用しないでください。
2. フィリップスシェーバーを初めてお使いの方は、剃り方に慣れるまで2~3週間かかることがあります。
3. 60°C以上の水でシェーバーを洗浄しないでください。
4. 本製品の使用、充電、保管は室温5°C~35°Cの環境下で行ってください(尚、低温や高温で充電すると、充電池の寿命が短くなります)。
5. 外刃は、薄く仕上げてありますので、刃部を強く押さえたり、硬いものに当てないよう、ていねいに扱ってください。
6. 洗顔ブラシヘッドをお使いの際は、自分で作った洗顔料、刺激の強い化学物質や粗い粒子を含んだ洗顔料、スクランブル入りまたはピーリング作用のある洗顔料などを使用しないでください。
7. 洗顔ブラシヘッドは、1日に3回以上使用しないでください。
8. シェーピングユニット・洗顔ブラシヘッドの清掃や着脱は、必ず電源をOFFにしてから行ってください。
9. 切れ味が衰えてきたり、刃が破損した場合は、使用せず必ず新しいシェーピングヘッドと交換してください。
10. 直射日光の当たる場所には保管しないでください。夏場、車の中に放置しないでください。
11. 乳幼児の手の届かないところに保管してください。
12. シェーピングユニットは、クリーニング表示(蛇口マーク)が表示された場合、お手入れ方法(P14・15)に従って掃除してください。
13. シェーバー本体は防水加工をしておりますが、水や液体の中に浸けないでください。
14. プラグ式消臭・芳香剤を使用しているコンセント、あるいはその近くのコンセントに充電アダプタを接続しないでください。充電アダプタを傷める原因となります。

各部の名称

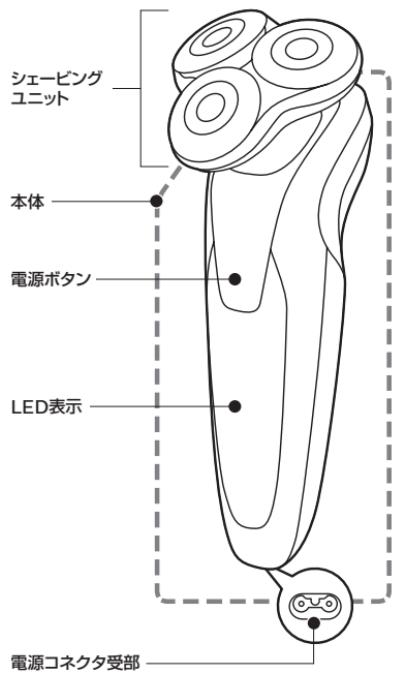

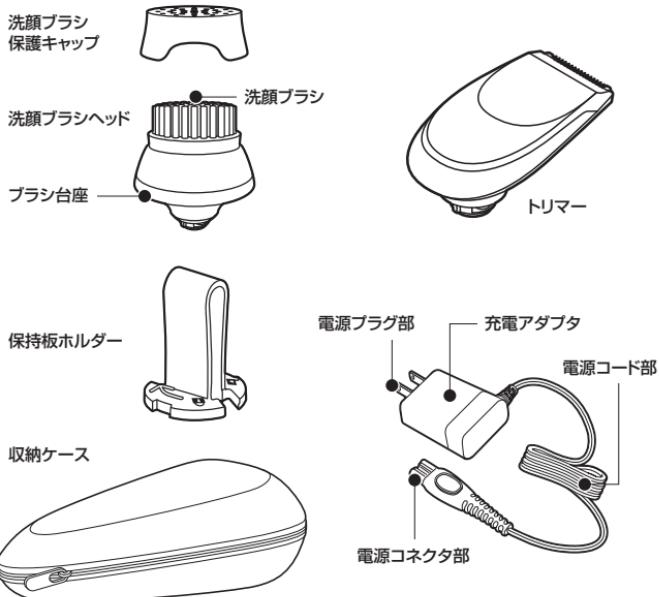

●シェービングユニット

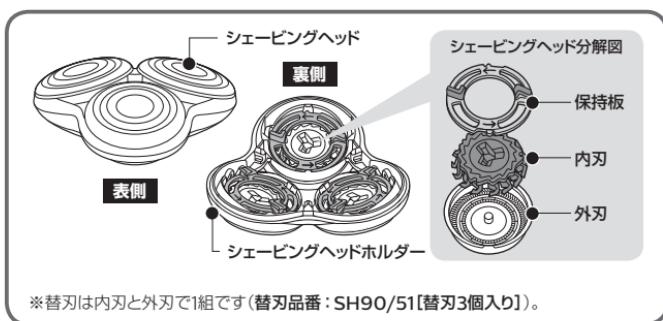

主な表示（本体）

初めてお使いになるときや、長い間ご使用にならなかったときは、表示が出るまでに時間がかかる場合があります。



- **残量表示** 満充電の時は全てのランプが点灯し、充電残量が少なくなるとともに充電表示ランプの表示が下がっていきます。電源ボタンを押した際に充電表示ランプが数秒間点灯します。
- **充電表示** 充電中は一番下の充電表示ランプが白色に点滅します。点灯に変わると、1つ上のランプが順次、点滅～点灯に変わります。
- **充電完了表示** 充電が完了すると、全ての充電表示ランプが点灯します。満充電後、約30分経過すると充電表示ランプが消えます。
※満充電後に本体を再び充電アダプタに接続すると、充電表示ランプが点灯しますが、故障ではありません。
- **充電催促表示** 充電残量が少くなると、一番下の充電表示ランプがオレンジ色に点滅します。電源をOFFにすると、一番下の充電表示ランプが数秒間オレンジ色に点滅し、ビープ音が鳴ります。
- **クリーニング表示** 電源をOFFにすると、クリーニングをうながすために蛇口マークが点滅します。表示されるタイミングは使用時間・状況により異なります。お手入れ方法(P14-15)をご参照ください。
- **シェーピングヘッド交換表示** シェーピングヘッドの交換マークが点滅すると、交換時期です。シェーピングヘッドを交換してください(P16参照)。
- **ブロック表示** シェーピングヘッドに長いヒゲがからまっていたりシェーピングヘッドが破損していると、「！」マーク、シェーピングヘッドの交換表示、クリーニング表示が同時に点滅しビープ音が鳴ります。この場合、電源をONにすることはできません。シェーピングヘッドをお手入れするか、交換してください(P14～17参照)。
- **ロック表示（カギマークが表示されていると電源は入りません）** 電源ボタンを約3秒長押しすると、カギマークが表示されてロックがかかります。再度、電源ボタンを約3秒長押しすると解除できます。充電アダプタに接続すると、ロックは自動的に解除されます。
- **オーバーヒーティング表示** 充電中、万が一シェーバーがオーバーヒートした場合、「！」マークが赤色に点滅します。その場合、充電が自動的に中断し、温度が下がると充電が再開されます。



浴室で充電をしないでください。
お客様による充電池の交換はできません。
この商品は通常1時間充電です。
満充電で約45分使用できます。

充電の仕方

※充電をしながらシェービングはできません。

初めてお使いになるとときや、長い間ご使用にならなかったときは、充電しないと使用できません。ご使用前に充電してください。充電時間は約1時間です。充電開始後数分間、充電表示ランプが点滅しないことがあります。そのまま充電すると充電表示ランプが点滅します。海外(100~240V)でのご使用も可能です。ただし、コンセントの形状や電圧など現地で充分お確かめのうえご使用ください。

※本製品はリチウムイオン電池を使用しているため、ご使用の都度充電をしても充電池の寿命には影響ありません。

1 シェーバー本体の電源がOFFになっていることを確認してください。



2 充電アダプタの電源コネクタ部をシェーバー本体の電源コネクタ受部に差し込みます。

3 ご家庭のコンセントに充電アダプタの電源プラグ部を差し込みます。

※通常の目安として満充電で1日3分使用し、約15日間使用できますが、ご使用状況(使用時間・ヒゲの濃さなど)により変わります。

4 充電が完了すると3つの充電表示ランプが全て点灯します。

※満充電後、約30分経過すると充電表示ランプが消えます。

クイックチャージ

充電残量が0の状態で充電アダプタで充電すると、シェーピング1回分が急速充電されます。

※クイックチャージ中は3つの充電表示ランプが順番に点滅します。

※クイックチャージが完了すると通常の充電が行われます。その際、一番下の充電表示ランプが点滅します。点灯に変わると、1つ上のランプが順次、点滅～点灯に変わります。



注意

- 専用の充電アダプタ以外での充電は行わないでください。
- 長期間使用しない場合は、充電池が過放電や液漏れして使えなくなることがあります。3~4カ月に一度は充電してください。
- 本製品を24時間以上コンセントに接続したままにしないでください。



シェービングの 仕方（ドライ）

肌が乾いた状態でのシェービングの
仕方です。

△ 警告

シェーバー本体は防水加工をしており、浴室でも使用できますが、水や
液体の中に浸けないでください（故障の原因となります）。

- モーターの始動時、微弱の振動がシェーバー本体に伝わりますが、問題はありません。
- ほこりなどで肌が汚れている場合、ふきとてからご使用ください。
- ご使用の前に外刃の破れや変形がないか確認してください
(外刃に破れや変形があると肌を傷つける原因になります)。
- ヒゲ剃り以外の目的(頭髪など)には、使用しないでください。

- 1 電源ボタンを押し、
電源をONにします。

*カギマークが表示さ
れる場合はロック機
能がONになっています。
ロックを解除し
てから電源をONにし
てください。



- 3 シェービング後は電源ボタンを押し、電
源をOFFにします。



- 2 刃を肌に軽く押し
あて、円を描くよう
に動かしながら剃り
ます。






上手に 剃るには

肌に強く押しつけるのではなく、軽く押しあてて円を描くように回転させながら剃るのがコツです。

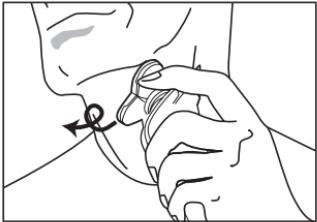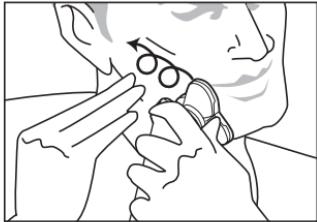

ほお

肌を伸ばし、ヒゲを立たせるように円を描くように小さく回転させながら剃ります。

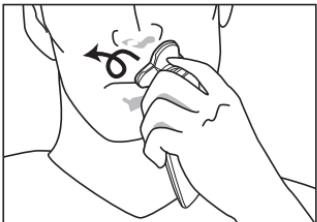

ほおの奥から首筋

片方の手で肌を後ろに引っ張りながら剃ります。

鼻の下

鼻の下を伸ばし、円を描くように小さく回転させながら剃ります。

フィリップスのシェーバーを初めてお使いの方は、剃り方に慣れるまで2~3週間かかることがあります。初めてのシェービングで思い通りの結果が得られないことや、少し肌にヒリヒリ感が残る場合がありますが、これは普通のことです。フィリップスのシェーバーに限らずシェービング方法を変える時には、肌もヒゲも新しいシェービング方法に慣れる時間が需要です。新しいシェーバーに肌を慣らす為、まずは3週間このシェーバーを使い続けてみてください(最低でも1週間に3回以上)。この3週間は、あまりシェービング方法を変えたりせず、同じシェーバーで肌を慣らすことが大切です。

シェービングフォームやシェービングジェルを使ったシェービングの仕方です。剃った部分を実感しながら、なめらかなシェービングができます。

シェービングの仕方（ウェット）



警告

シェーバー本体は防水加工をしており、浴室でも使用できますが、水や液体の中に浸けないでください（故障の原因となります）。

- モーターの始動時、微弱の振動がシェーバー本体に伝わりますが、問題はありません。
- ご使用の前に外刃の破れや変形がないか確認してください（外刃に破れや変形があると肌を傷つける原因になります）。
- ヒゲ剃り以外の目的（頭髪など）には、使用しないでください。
- 石けんもお使いいただけますが、肌の上で滑りをよくするため、シェービングフォームやジェルの使用をお勧めします。

1 顔を濡らし、市販のシェービングフォームまたはシェービングジェルを付けます。

2 シェービングヘッドを水で濡らし、肌の上でなめらかに動くようにします。

3 電源ボタンを押し、電源をONにします。

*カギマークが表示される場合はロック機能がONになっています。ロックを解除してから電源をONにしてください。

4 刃を肌に軽く押しあて、円を描くようにな動かしながら剃ります。

シェービングフォームやシェービングジェルにより、鏡を見た時に剃った部分を確認しやすくなります。

*途中、よりなめらかにシェービングするためには、シェービングヘッドを水で濡らすと効果的です。



5 シェービング後は電源ボタンを押し、電源をOFFにします。

6 シェーバーをきれいに洗います（P14「お手入れ方法」）。

【重要】

シェービング後は、シェービングフォームやシェービングジェルがしっかりと洗い流されているかを確認してください。お手入れが不十分な場合、臭いが出るばかりでなく、故障の原因にもなります。

トリマーの使い方

トリマーはヘアーライン、もみあげ、ヒゲなどを整えるのに便利です。

1 シェーピングユニットのはずし方


シェーピングユニットを本体からはずします。

※シェーピングユニットは、回さずにまっすぐ引き抜いてください。

※電源がOFFになっていることを確かめてください。



2 トリマーの突起部(図①)をシェーバー上部の溝(図②)に合わせ、カチッと音がするまで押し込み(図③)、本体に取り付けます。電源をONにすると、トリマー先端の刃が往復してカットします。

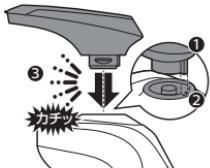

3 鏡を見ながらトリマーをカットしたいところに直角にあたるようにしてください。一度に切らずに、少しづつカットしてください。



4 シェーピングユニットのつけ方

トリマーをはずし(図①)、シェーピングユニットの突起部(図②)をシェーバー上部の溝(図③)に合わせ、カチッと音がするまで押し込み(図④)、本体に取り付けます。



※トリマーの切れ味を保つため、使用後は必ずぬるま湯または水ですぎ洗いをしてください(P15[トリマーのお手入れ方法])。



注意

強く押し当て過ぎると肌を傷めますのでご注意ください。

洗顔の仕方



警告

本体は防水加工をしており、浴室でも使用できますが、水や液体の中に浸けないでください（故障の原因となります）。

アタッチメントを取り付ける

- 1 シェービングユニットを本体からまっすぐ引き抜きます。

*シェービングユニットは、回さずにまっすぐ引き抜いてください。



- 2 洗顔ブラシヘッドの突起部を本体上部の溝に合わせ、力ちゅうと音がするまで押し込み、本体に取り付けます。



カチッ

洗顔する

- 1 顔表面と洗顔ブラシをぬるま湯で濡らします。

*シェービング前に洗顔ブラシをお使いいただくと、より効果的・衛生的にシェービングすることができます。

- 4 洗顔ブラシでTゾーン（図で示された箇所）を洗顔します。

*ヘアーバンドなどを使用し、髪が巻き込まれないようにご注意ください。



- 2 顔表面または洗顔ブラシに普段お使いの洗顔料を適量塗布します。

- 3 電源ボタンを押し、電源をONにします。

- 5 他の箇所も同じように洗顔していきます。



注意

- 洗顔以外の目的には、使用しないでください。
- 自分で作った洗顔料、刺激の強い（化学物質や粗い粒子を含んだ）洗顔料、スクラブ入りまたはピーリング作用のある洗顔料などを使用しないでください。
- 1回のご使用は1分間、1日2回までを目安してください。
- 肌にそって、円を描くよう洗顔ブラシをやさしく滑らせながら洗浄します。
- 肌の洗い過ぎを防ぐため、ひとつ箇所を20秒以上洗浄しないでください。
- 洗顔ブラシを肌に強く押付けないように気をつけてください。
- 目の周りの敏感な部分には製品を使用しないでください。
- 肌に異常（癢・はれもの・湿疹等）がある場合は製品を使用しないでください。
- ヘアーバンドなどを使用し、髪が巻き込まれないようにご注意ください。

お手入れ方法

水洗いによるお手入れ方法

△ 注意

- お手入れの際は、電源をOFFにしてから水洗いしてください。
- シェービングユニットは水洗いできますが、本体は水中に浸けないでください。
- シェービングユニットを乾燥させる時に、タオルやティッシュペーパーを使用しないでください。刃を傷める場合があります。

シェービングヘッドのお手入れ方法

※洗剤は使用しないでください。

※ぬるま湯(40℃前後)でのお手入れをおすすめします。臭いのもととなる皮脂や汗などが取れやすくなります。ただし、熱湯はお止めください。故障の原因となります。

※お手入れ中にシェーバーの底から水が漏れてくる場合がありますが、異常ではありません。


1 シェービングユニットを本体からはずします。



※シェービングユニットは、回さずにまっすぐ引き抜いてください。

※電源がOFFになっていることを確認してください。

2 シェービングユニットからシェービングヘッドホルダーを取り外してください。



3 シェービングヘッドホルダーおよび受部にたまつたビゲクズをぬるま湯または水で約30秒洗い流します。



4 シェービングヘッドホルダーの余分な水を切り、よく乾かします。

※周囲に気をつけてください。

5 乾いたことを確認したら、シェービングヘッドホルダーをシェービングユニットに取り付けてください。

6 シェービングユニットの突起部(図①)をシェーバー上部の溝(図②)に合わせ、カチッと音がするまで押し込み(図③)、本体に取り付けます。






トリマーのお手入れ方法

※トリマーは、使用後必ずお手入れしてください。

- 1 トリマーを取り付けた状態でシェーバーの電源をONにし、ぬるま湯または水ですすぎ洗いをします。

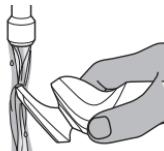


- 2 シェーバーの電源をOFFにし、トリマーを充分に乾燥させてください。
※トリマーはタオルやティッシュペーパーなどでふかないでください。
刃を傷める原因になります。

洗顔ブラシヘッドのお手入れ方法

※洗顔ブラシヘッドは、使用後必ずお手入れしてください。

- 1 お手入れする際には、電源を必ずOFFにします。



- 3 ぬるま湯で洗顔ブラシをしっかり洗います。

- 4 洗顔ブラシの水分を乾いたタオルでふき取る、または自然乾燥させてください。



刃・洗顔ブラシの交換

替刃(SH90/51)と交換する場合


- 1 シェービングユニットを本体から外します。

*シェービングユニットは、回さずにまっすぐ引き抜いてください。


*電源がOFFになっていることを確かめてください。



- 2 シェービングユニットからシェービングヘッドホルダーを取り外します。取り外したシェービングヘッドホルダーを裏返し、保持板ホルダーを保持板にセットし(図①)、反時計回りに回して(図②)シェービングヘッドホルダーからシェービングヘッドを取り外します(図③)。他の保持板も同様に保持板ホルダーを使って外します。

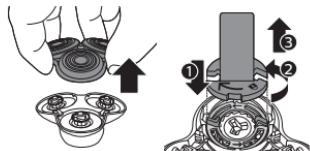


- 3 内刃、外刃を取り外し、新しい替刃に交換してください。

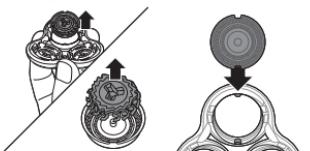

*外刃とシェービングヘッドホルダーの凸凹が合うように入れてください。

- 4 保持板ホルダーを保持板にセットし(図①)、シェービングヘッドホルダーに戻したら(図②)、時計回りに回して(図③)シェービングヘッドホルダーにセットします。他の保持板も同様に保持板ホルダーを使ってセットします。

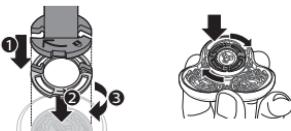

*この時、シェービングヘッドホルダーを手に持つて保持板をセットしてください。置いたままセットすると刃を傷つける原因となります。

- 5 シェービングヘッドホルダーをシェービングユニットに取り付けます。

- 6 シェービングユニットの突起部(図①)をシェーバー上部の溝(図②)に合わせ、カチッと音がするまで押し込み(図③)、本体に取り付けます。



- 7 電源ボタンを2回目のピープ音が鳴るまで約7秒間押し続けて、シェーバーをリセットしてください。





洗顔ブラシの交換


洗顔ブラシが摩耗した状態で使用すると肌にダメージを与える恐れがあります。そのため3~6ヶ月ごとにブラシ交換してください(使用頻度、使用方法により変化します)。万が一洗顔ブラシが変形したり破損した場合は、3~6ヶ月以内でも交換してください。

【替洗顔ブラシヘッド(ブラシ台座+洗顔ブラシ各1個) : RQ585/51】

【替洗顔ブラシ(1個) : RQ560/51】

【替洗顔ブラシ(3個) : RQ563/51】

1 ブラシ台座から
洗顔ブラシを取り外します。



2 新しい洗顔ブラシをブラシ台座に取り付けます。



保管の仕方

シェーバーを保管する前に
きちんと乾燥させてください。

●シェーバーを収納ケースに格納して保管します。



【洗顔ブラシ】

●洗顔ブラシ保護キャップを図のように取り付け汚れが付くのを防ぎます。

*取り付ける前に、完全に乾いているか確認してください。



- ※室温5°C~35°Cの環境で保管してください。
- ※直射日光の当たる場所には保管しないでください。
- ※夏場、車の中には放置しないでください。

シェーバーを 廃棄するとき

※お客様による充電池の
修理交換はできません。

リチウムイオン電池のリサイクルについて

このシェーバーはリチウムイオン電池を使用しています。
リチウムイオン電池はリサイクル可能な貴重な資源です。
ご使用済みの製品の廃棄に際しては、リチウムイオン電池
を取り出し、各自治体の処理方法に従い、リサイクル協力店
にお持ちください。



- 製品を廃棄するとき以外は、絶対に本体を分解しないでください。
- 本体内部の金具は鋭いので、ご注意ください。


充電池の取り外し方

電源をONにして、完全に動作しなくなるまで充電池を放電させてから、行ってください。

- 1 シェーピングユニット
をはずし、本体下部
の穴にドライバーを
こじ入れて(図①)、ユ
ニットカバーをはず
します(図②)。



- 3 モーターユニットに
ある左右3つずつ、計
6つのツメをはずし
(図①)、カバーを開け
ます(図②)。

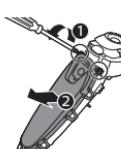

- 2 フロントカバーとモー
ターユニット(灰色の
部分)を固定している
2つの金具をはずし
て、フロントカバーを
取りはずします。



- 4 充電池ホルダーを持
ち上げて工具でワイ
ヤーを切断し、取り出
します。



※充電池を取り外した後は、通電しないでください。



故障かな? と思ったら

故障かな?と思ったら、
お調べください。

だんだん切れ味が悪くなつた

- ▶ シェーピングヘッド部が汚れていませんか?
- ▶ シェーピングヘッド部が損傷または摩耗していませんか?
損傷または摩耗しているときは、シェーピングヘッドを交換してください(替刃品番:SH90/51)。
- ▶ シェーピングヘッドに長いヒゲがからまつていませんか?

充電しても使用時間が極端に短い

- ▶ シェーバーが完全に止まるまで作動させてからもう一度充電してください。
それでも改善されないときは、充電池の寿命です。

シェーバーの電源ボタンを押しても作動しない

- ▶ 充電はしましたか?
1時間以上の充電をしてください。
- ▶ カギマークが表示されていませんか?
 カギマークが表示されたらロックを解除してください。P7「ロック表示」の項をお読みください。
- ▶ 下記の3つのマークが一度に点滅していませんか?
 刃が動かなくなるほど汚れているか、破損を示す表示です。
シェーピングヘッドをお手入れするか、交換をしてください。

シェーバー本体のモーターは回転しているが、内刃が回転しない

- ▶ 外刃にキズ、ヘコミはありませんか?
シェーピングヘッドを交換してください(替刃品番: SH90/51)。



充電できない

▶充電アダプタの電源プラグ部はコンセントにきちんと差し込まれていますか？

電源コネクタ受部に充電アダプタのコードがきちんと差し込まれていますか？確認してください。

▶充電アダプタの電源コードが断線していませんか？

充電アダプタの電源コードが断線している場合は、お買い上げの販売店または小泉成器部品センターで取扱いしているフィリップス社製の同型充電アダプタ（品番：HQ8505）をご注文していただき、交換してください。

洗顔中、洗顔後に刺激を感じる

▶肌、洗顔ブラシはしっかりと濡れていますか？

肌、洗顔ブラシを濡らしても刺激を感じる場合は、洗顔料を多めにご使用ください。

▶肌に洗顔ブラシを強く当てていませんか？

洗顔ブラシの先端が肌にそっと触れる程度当ててください。

▶1日2回のご利用目安を超えていませんか？

ご利用頻度を低くしてお試しください。

▶肌が乾燥していませんか？

肌が乾燥していると肌本来のバリア機能が弱まり刺激を感じることがあります。

洗顔ブラシが汚れている

▶ご使用後のすすぎは十分ですか？


洗顔ブラシはご使用の都度、水ですすいでください。

洗顔ブラシが動かないのにシェーバー本体から音がする、異音がする

▶洗顔ブラシは正しくセットされていますか？

洗顔ブラシ取付部に、カチッと音がするまで押し付けます。

以上の点検により、正常な状態に戻らない場合は、
お買い求めの販売店か小泉成器修理センターにお問い合わせ願います。

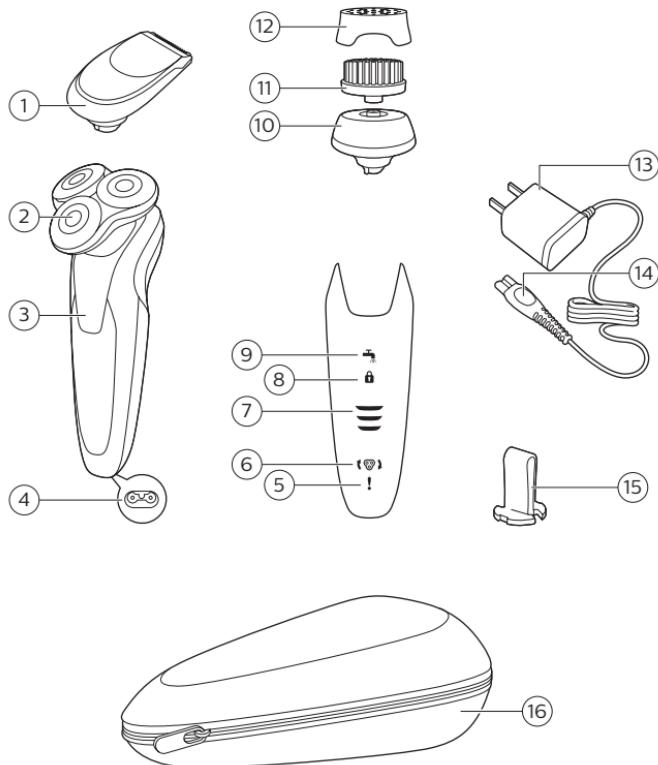

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Please read this user manual, as it contains information about the features of this shaver as well as some tips to make shaving easier and more enjoyable.

General description (Fig.1)

- 1 Click-on trimmer attachment
- 2 Click-on shaving unit
- 3 On/off button
- 4 Socket for small plug
- 5 Exclamation mark
- 6 Replacement reminder
- 7 Battery charge indicator
- 8 Travel lock symbol
- 9 Cleaning reminder
- 10 Attachment base
- 11 Click-on cleansing brush attachment
- 12 Protection cap for cleansing brush attachment
- 13 Supply unit
- 14 Small plug
- 15 Retaining ring holder
- 16 Pouch



English

Important safety information

Danger



- Keep the supply unit dry.

Warning

- To charge the battery, only use the detachable supply unit (HQ8505) provided with the appliance.
- The supply unit contains a transformer. Do not cut off the supply unit to replace it with another plug, as this causes a hazardous situation.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always unplug the shaver before you clean it under the tap.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.
- Do not open the appliance to replace the rechargeable battery.

Caution

- Never use water hotter than 60°C to rinse the shaver.
- Only use this appliance for its intended purpose as shown in the user manual.
- For hygienic reasons, the appliance should only be used by one person.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- Water may drip from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.

Electromagnetic fields (EMF)

- This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

The display



Note: Before you use the shaver for the first time, remove the protective foil from the display.



English

Charging



Quick charge: When you connect the shaver to the wall socket, the lights of the battery charge indicator light up one after another repeatedly. When the shaver contains enough energy for one shave, the bottom light of the battery charge indicator starts to flash slowly.

While the shaver continues to charge, first the bottom light of the battery charge indicator flashes and then lights up continuously. Then the second light flashes and lights up continuously, and so on until the shaver is fully charged (see 'Battery fully charged').

Battery fully charged



When the battery is fully charged, all lights of the battery charge indicator light up white continuously.

Note: This appliance can only be used without cord. When you press the on/off button during or after charging, you hear a sound to indicate that the shaver is still connected to the wall socket.

Note: When the battery is full, the display switches off automatically after 30 minutes.

Battery low




When the battery is almost empty, the bottom light of the battery charge indicator flashes orange and you hear a sound.

Remaining battery charge

The remaining battery charge is shown by the lights of the battery charge indicator that light up continuously.

Cleaning reminder




Clean the shaver after every shave for optimal performance. When you switch off the appliance, the cleaning reminder flashes to remind you to clean the appliance.

Travel lock

You can lock the appliance when you are going to travel. The travel lock prevents the appliance from being switched on by accident.

Activating the travel lock

- 1 Press the on/off button for 3 seconds to enter the travel lock mode.

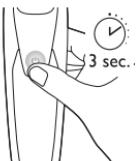


While you activate the travel lock, the travel lock symbol lights up white continuously. When the travel lock is activated, the appliance produces a sound and the travel lock symbol flashes.

Deactivating the travel lock

- 1 Press the on/off button for 3 seconds. The travel lock symbol flashes and then lights up continuously. The appliance is now ready for use again.

Note: You can also deactivate the travel lock by connecting the appliance to the wall socket.





English

Replacement reminder




For maximum shaving performance, we advise you to replace the shaving heads every two years.

The appliance is equipped with a replacement reminder which reminds you to replace the shaving heads. The shaving unit symbol lights up white continuously, the arrows flash white and the appliance beeps to indicate that you have to replace the shaving heads.

Note: After replacing the shaving heads, you need to reset the replacement reminder by pressing the on/off button for 7 seconds.

Exclamation mark



Overheating

If the appliance overheats during charging, the exclamation mark flashes orange. When this happens, the shaver switches off automatically. Charging continues once the temperature of the appliance has decreased to the normal level.



Blocked shaving heads

If the shaving heads are blocked, the exclamation mark lights up orange continuously. The replacement reminder and the cleaning reminder flash white alternately and you hear a sound. In this case, the motor cannot run because the shaving heads are soiled or damaged.

If the shaving heads are soiled, you have to clean them. If the shaving heads are damaged, you have to replace them.

Charging

Charge the shaver before you use it for the first time and when the display indicates that the

battery is almost empty. The battery charge is indicated by the lights of the battery charge indicator on the display.

When you connect the shaver to the wall socket, you hear a sound.

Charging takes approx. 1 hour. A fully charged shaver has a shaving time of up to 45 minutes.

Note: You cannot use the appliance while it is charging.

Charging with the supply unit



- 1 Make sure the appliance is switched off.
- 2 Put the small plug in the appliance and put the supply unit in the wall socket.
- 3 After charging, remove the supply unit from the wall socket and pull the small plug out of the appliance.

Using the appliance

Note: This appliance can only be used without cord.

Switching the appliance on and off



- To switch on the appliance, press the on/off button once.

The display lights up for a few seconds.

- To switch off the appliance, press the on/off button once.

The display lights up for a few seconds and shows the remaining battery charge.



English

Shaving

Skin adaptation period

Your first shaves may not bring you the result you expect and your skin may even become slightly irritated. This is normal. Your skin and beard need time to adapt to any new shaving system. To allow your skin to adapt to this new appliance, we advise you to shave regularly (at least 3 times a week) and exclusively with this appliance for a period of 3 weeks.

Shaving tips

- To ensure the best result, we advise you to pre-trim your beard if you have not shaved for 3 days or longer.
- Move the shaving heads over your skin in circular movements.

Dry shaving

- 1 Switch on the appliance.

The display lights up for a few seconds.

- 2 Move the shaving heads over your skin in circular movements to catch all hairs growing in different directions. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, this can cause skin irritation.

- 3 Clean the appliance after use.



Wet shaving

You can also use this appliance on a wet face with shaving foam or shaving gel.

To shave with shaving foam or shaving gel, follow the steps below:



English

- 1 Apply some water to your skin.



- 2 Apply shaving foam or shaving gel to your skin.



- 3 Rinse the shaving unit under the tap to ensure that the shaving unit glides smoothly over your skin.



- 4 Switch on the appliance.



- 5 Move the shaving heads over your skin in circular movements to catch all hairs growing in different directions. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, this can cause skin irritation.

Note: Rinse the shaving unit regularly to ensure that it continues to glide smoothly over your skin.

- 6 Dry your face.

- 7 Clean the appliance after use.

Note: Make sure you rinse all foam or shaving gel off the appliance.




English

Using the click-on attachments

Removing or attaching the click-on attachments

- 1 Make sure the appliance is switched off.
- 2 Pull the attachment straight off the appliance.

Note: Do not twist the attachment while you pull it off the appliance.



- 3 Insert the lug of the attachment into the slot in the top of the appliance. Then press down the attachment to attach it to the appliance ('click').

Using the trimmer attachment

You can use the trimmer attachment to groom your sideburns and moustache.

- 1 Attach the attachment to the appliance ('click').
- 2 Switch on the appliance.

The display lights up for a few seconds.

- 3 Hold the trimmer attachment perpendicular to the skin and move the appliance downwards while you exert gentle pressure.

- 4 Clean the attachment after use (see 'Cleaning and maintenance').

Note: Attach the click-on cleansing brush attachment on the attachment base first, before placing it on the appliance.

Using the cleansing brush attachment

Note: For better shaving results, use the click-on cleansing brush attachment before shaving.

Use the rotating cleansing brush with your daily cleansing cream. The cleansing brush removes oil and dirt, contributing to a healthy and oil-free skin. We advise you to use it no more than twice a day. Start with the lowest personal comfort setting to familiarize yourself with the attachment.

Do not use the appliance on damaged or irritated skin or on wounds.

- 1 Place the attachment on the attachment base.
- 2 Attach the attachment to the appliance ('click').



- 3 Moisten the attachment with water.

Note: Do not use the appliance with a dry brush attachment, as this can irritate the skin.

- 4 Moisten your face with water and apply a cleanser to your face.

- 5 Place the attachment on your cheek.

- 6 Switch on the appliance.

- 7 Gently move the attachment across your skin from the nose towards the ear. Do not push the attachment too hard onto the skin to make sure the treatment remains comfortable.

Note: Do not cleanse the sensitive area around your eyes.

English



- 8 After approx. 20 seconds, move the appliance to your other cheek and start cleansing this part of your face.



- 9 After approx. 20 seconds move the appliance to your forehead and start cleansing this part of your face. Gently move the brush head from left to right.

Note: We advise you to not overdo the cleansing and to not cleanse any zone longer than 20 seconds.



- 10 After the treatment, rinse and dry your face. Your face is now ready for the next step of your daily skincare routine.

- 11 Clean the attachment after use (see 'Cleaning and maintenance').

Cleaning and maintenance

Note: The accessories supplied may vary for different products. The box shows the accessories that have been supplied with your appliance.

Cleaning the shaver under the tap

Clean the shaver after every shave for optimal performance.


Be careful with hot water. Always check if the water is not too hot, to prevent burning your hands.

Never dry the shaving unit with a towel or tissue, as this may damage the shaving heads.

- 1 Switch on the shaver.



2 Rinse the shaving unit under a warm tap.

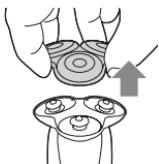


3 Switch off the shaver. Pull the shaving head holder off the bottom part of the shaving unit.



4 Rinse the hair chamber under the tap.



5 Rinse the shaving head holder under a warm tap.

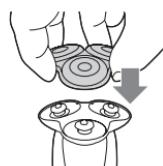

6 Carefully shake off excess water and let the shaving head holder air dry.

7 Attach the shaving head holder to the bottom part of the shaving unit ('click').

Cleaning the click-on attachments

Never dry trimmer or beard styler attachments with a towel or tissue, as this may damage the trimming teeth.



English

The accessories supplied may vary for different products. The box shows the accessories that have been supplied with your appliance.

Cleaning the trimmer attachment

Clean the trimmer attachment every time you have used it.

- 1 Switch on the appliance with the trimmer attachment attached.
- 2 Rinse the attachment under a warm tap.
- 3 After cleaning, switch off the appliance.
- 4 Carefully shake off excess water and let the attachment dry.

Tip: For optimal performance, lubricate the teeth of the attachment with a drop of sewing machine oil regularly.



Cleaning the cleansing brush attachment

Clean the cleansing brush attachment every time you have used it.

- 1 Switch off the appliance.
- 2 Detach the brush head from the attachment base.
- 3 Clean the parts thoroughly with warm water and soap.
- 4 Dry the cleansing brush attachment with a towel.



Storage



- Store the appliance in the pouch supplied.

Note: Make sure the appliance is dry before you store it in the pouch.




- Put the protection cap on the cleansing brush attachment to protect it from dirt accumulation.

Replacement


Replacing the shaving heads




For maximum shaving performance, we advise you to replace the shaving heads every two years. Replace damaged shaving heads immediately. Always replace the shaving heads with original Philips shaving heads (see 'Ordering accessories'). Replacement reminder

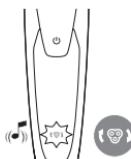

The replacement reminder indicates that the shaving heads need to be replaced. The shaving unit symbol lights up continuously, the arrows flash white and you hear a beep when you switch off the shaver.

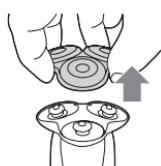

- 1 Switch off the appliance.
- 2 Pull the shaving head holder off the bottom part of the shaving unit.

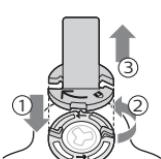

- 3 Place the retaining ring holder on the retaining ring (1), turn it anticlockwise (2) and lift it off the shaving head (3).

Remove the retaining ring from the retaining ring holder and repeat this process for the other retaining rings.




English




- 4** Remove the shaving heads from the shaving head holder.

Discard the used shaving heads immediately to avoid mixing them with the new shaving heads.

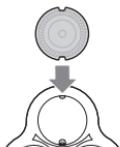

- 5** Place the shaving heads in the shaving head holder.


Note: Make sure the notches on both sides of the shaving heads fit exactly onto the projections in the shaving head holder.

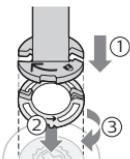

- 6** Place the retaining ring holder on the retaining ring (1), place it on the shaving head (2) and turn it clockwise (3) to reattach the retaining ring. Repeat this process for the other retaining rings.



- Each retaining ring has two recesses that fit exactly into the projections of the shaving head holder. Turn the ring clockwise until you hear a click to indicate that the ring is fixed.

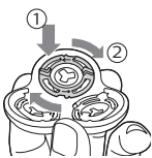

Note: Hold the shaving head holder in your hand when you reinser the shaving heads and reattach the retaining rings. Do not place the shaving head holder on a surface when you do this, as this may cause damage.

- 7** Attach the shaving head holder to the bottom part of the shaving unit ('click').




English



- 8 To reset the replacement reminder, press and hold the on/off button for approx. 7 seconds. Wait until you hear two beeps.

Replacing the cleansing brush attachment



The brush head should be replaced every 3 months or earlier if the brush hairs are bent or damaged (see 'Ordering accessories').

Ordering accessories

To buy accessories or spare parts, visit www.shop.philips.com/service or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

The following accessories and spare parts are available:

- SH90 Philips shaving heads
- HQ110 Philips shaving head cleaning spray
- RQ111 Philips beard styler attachment
- RQ585 Philips cleansing brush attachment
- RQ560/RQ563 Philips cleansing brush heads
- JC301/JC302/JC303/JC304/JC305 cleaning cartridge
- HQ8505 supply unit

Note: The availability of the accessories may differ by country.



English

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- This product contains a built-in rechargeable battery which shall not be disposed of with normal household waste. We strongly advise you to take your product to an official collection point or a Philips service centre to have a professional remove the rechargeable battery.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

Removing the rechargeable shaver battery

Only remove the rechargeable battery when you discard the shaver. Before you remove the battery, make sure that the shaver is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the shaver and when you dispose of the rechargeable battery.

Be careful, the battery strips are sharp.

- 1 Insert the screwdriver into the slot between the front and back panel in the bottom of the appliance. Remove the back panel.
- 2 Remove the front panel.
- 3 Unscrew the two screws at the top of the inner panel and remove the inner panel.



- 4 Remove the rechargeable battery with a screwdriver.

Warranty and support

If you need information or support, please visit www.philips.com/support or read the international warranty leaflet.

Warranty restrictions

The shaving heads (cutters and guards) are not covered by the terms of the international warranty because they are subject to wear.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Shaver

Problem	Possible cause	Solution
The appliance does not work when I press the on/off button.	The appliance is still attached to the wall socket. For safety reasons, the appliance can only be used without cord.	Unplug the appliance and press the on/off button to switch on the appliance.
	The rechargeable battery is empty.	Recharge the battery (see 'Charging').
	The travel lock is activated.	Press the on/off button for 3 seconds to deactivate the travel lock.



English

Problem	Possible cause	Solution
	The shaving unit is soiled or damaged to such an extent that the motor cannot run.	Clean the shaving heads thoroughly or replace them. Also see 'Hairs or dirt obstruct the shaving heads' for a detailed description of how to clean the shaving heads thoroughly.
The appliance does not shave as well as it used to.	The shaving heads are damaged or worn.	Replace the shaving heads (see 'Replacement').
	Hairs or dirt obstruct the shaving heads.	Clean the shaving heads in the regular way (see 'Cleaning and maintenance') or clean them thoroughly.
		To clean the shaving heads thoroughly, remove the shaving heads from the shaving head holder one by one (see 'Replacement'). Then separate the cutter from its guard and rinse each matching set under the tap. After rinsing, place the cutter back into its corresponding guard. Finally, put the shaving heads back into the shaving head holder (see 'Replacement').
I replaced the shaving heads, but the display still shows the replacement reminder.	You have not reset the appliance.	Reset the appliance by pressing the on/off button for approx. 7 seconds (see 'Replacing the shaving heads').

Problem	Possible cause	Solution
A shaving unit symbol has suddenly appeared on the display.	This symbol reminds you to replace the shaving heads.	Replace the shaving heads (see 'Replacement').
An exclamation mark has suddenly appeared on the display while the appliance is charging.	The appliance is overheated.	Disconnect the appliance from the wall socket for approx. 10 minutes.
An exclamation mark, the replacement reminder and the cleaning reminder have suddenly appeared on the display.	The shaving heads are damaged.	Replace the shaving heads (see 'Replacement').
	The shaving heads are soiled.	Clean the shaving heads (see 'Cleaning and maintenance'). Also see 'Hairs or dirt obstruct the shaving heads' for a detailed description of how to clean the shaving heads thoroughly.
Water is leaking from the bottom of the appliance.	During cleaning, water may collect between the inner body and the outer shell of the appliance.	This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the appliance.



保証と アフターサービス

保証書と修理サービスについて
(必ずお読みください)

〈保証書・最終ページに付属〉

- 保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取っていただき内容をよくお読みのあと大切に保管してください。

【補修用性能部品の保有期間】

- 補修用性能部品の保有期間は製造打ち切り後6年です。
- 性能部品とは、その製品の機能を維持するために必要な部品です。

保証期間	お買い上げ日から2年間
対象部分	本体、充電アダプタ(シェービングユニット、トリマー、洗顔ブラシヘッド、収納ケース、保護キャップ、保持板ホルダーを除く)

【ご不明な点や修理に関するご相談は】

- 修理に関するご相談ならびにご不明な点は、お買い上げの販売店または、小泉成器修理センターにお問い合わせください。

【修理を依頼されるときは】

- 修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。尚、異常のあるときはご使用を中止し、お買い上げの販売店へご依頼ください。

【保証期間中は】

- 製品に保証書を添えてお買い上げの販売店にご持参ください。
保証書の記載内容により無料修理いたします。

【保証期間が過ぎているときは】

- 修理によって商品の機能が維持できる場合は、補修用性能部品の保有期間に内であれば、ご希望により有料で修理させていただきます。


【海外での本製品の保証及びアフターサービスについて】

- 本製品の保証は海外においても有効です。(同シリーズ製品の取り扱いがある国に限ります)
- 日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。
- 海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お困りの点がございましたら下記までご連絡ください。

Philips Consumer Lifestyle Service Department P.O.Box 20100 9200 CA DRACHTEN
The Netherlands Fax:+31 51 259 2785

【お客様の個人情報のお取り扱いについて】

- お受けましたお客様の個人情報は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。



便利メモ

お買い上げ日	年　月　日	お買い上げ 店名	TEL. ()
--------	-------	-------------	----------

ご使用の時、このような症状はありませんか？

- 本体にさわると時々電気を感じる。
- こげくさい臭いがする。
- 電源コード部を動かすと通電したり、しなかつたりする。
- その他の異常、故障がある。

このような症状の時は、故障や事故防止のため、電源をOFFにし、充電アダプタをコンセントから外して、必ず販売店にご相談ください。



愛情点検

仕　様

品　番	S9090/43
電　源　方　式	充電式(専用充電アダプタ使用)
充電アダプタ品番	HQ8505
消費　電　力	9W(AC100V充電時)
定　格　電　圧	AC100-240V(50/60Hz)
本　体　質　量	約169g
充　電　時　間	約1時間
替　刃	SH90/51
替洗顔ブラシ	替洗顔ブラシヘッド(ブラシ台座+洗顔ブラシ各1個):RQ585/51 替洗顔ブラシ(1個):RQ560/51 替洗顔ブラシ(3個):RQ563/51

※改良の為、仕様を予告なく変更することがあります。

株式会社 フィリップス・ジャパン

〒108-8507 東京都港区港南2-13-37 フィリップスピル



45

無料修理規定

〈無料修理規定〉

1. 取扱説明書、本体貼付ラベル等の注意書に従った正常な使用状態で保証期間内に故障した場合には、無料修理します。
 2. 保証期間内に故障して無料修理をお受けになる場合には、商品と保証書をご持参、ご提示のうえ、お買い上げの販売店にご依頼ください。なお、商品を直接メーカーへ送付した場合の送料等はお客様の負担となります。
 3. ご贈答、ご転居でお買い上げの販売店に修理を依頼できない場合は、小泉成器修理センターにご依頼ください。
 4. 保証期間内でも次の場合には有料修理になります。
 - ① 使用上の誤り及び不当な修理や改造による故障及び損傷。
 - ② お買い上げ後の輸送、移動、落下等による故障及び損傷。
 - ③ 火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障及び損傷。
 - ④ 一般家庭以外(例えば、業務用の長時間使用)に使用された場合の故障及び損傷。
 - ⑤ 保証書の提示がない場合。
 - ⑥ 保証書にお買い上げ年月日、お客様名、販売店名の記入のない場合、或は字句を書き換えられた場合。
- ※ 保証書は、本書に明示した条件のもとにおいて無料修理をお約束するものです。従って保証書を発行している者(保証責任者)、及びそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。
- 保証期間経過後の修理についてご不明の場合は、お買い上げの販売店または小泉成器修理センターにお問い合わせください。
- ※ 保証期間経過後の修理・補修用性能部品の保有期間にについて詳しくは取扱説明書の保証とアフターサービスの項目をご覧ください。
- ※ お客様にご記入いただいた個人情報(保証書の控え)は保証期間内のサービス活動及びその後の安全点検活動のために利用させていただく場合がございます。ご了承ください。また個人情報は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。



キリトリ線

フィリップス 電動シェーバー 保証書

持込修理

CERTIFICATE OF PURCHASE

この保証書は、「無料修理規定」記載内容で無料修理を行うことをお約束するものです。
お買い上げの日から下記期間中に故障が発生した場合は、本書をご提示のうえ、お買い上げの販売店に修理をご依頼ください。
お客様にご記入いただいた個人情報(保証書の控え)は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

品 名	電動シェーバー
品 番	S9090/43
保 証 期 間	お買い上げより2年
対 象 部 分	本体、充電アダプタ(シェーピングユニット、トリマー、洗顔ブラシヘッド、収納ケース、保護キャップ、保持板ホルダーを除く)
お買 上げ 日	年 月 日
お 客 様	ご住所 〒
	ご芳名
	電話番号
★ 販 売 店	販売店名・住所・電話番号

- ★ 保証書は再発行しませんので、大切に保管してください。
- ★ ご販売店様へ この保証書はお客様へのアフターサービスの実施と責任を明確にするものです。贈答品、記念品の場合も含めて必ず記入捺印してお客様にお渡しください。

★ 製品に関するお問い合わせ

フィリップスお客様情報センター
ナビダイヤル(全国共通)

0570(07)6666

ナビダイヤルにかからない時は
TEL 06(6261)8230 FAX 06(6268)1432
日本販売代理店 小泉成器株式会社
〒541-0051 大阪市中央区備後町3-3-7

★ 修理に関するお問い合わせ

小泉成器修理センター
ナビダイヤル(全国共通)

0570(09)8888

ナビダイヤルにかからない時は
小泉成器東日本修理センター TEL 048(718)3340
〒344-0127 埼玉県春日部市水角1190
小泉成器西日本修理センター TEL 06(6613)3145
〒559-0033 大阪市住之江区南港中1丁目3番98号

★ 部品に関するお問い合わせ

小泉成器部品センター
ナビダイヤル(全国共通)

0570(09)2222

ナビダイヤルにかからない時は
TEL 06(6613)3211
〒559-0033 大阪市住之江区南港中1丁目3番98号

受付時間:平日9:00~17:30 (土・日・祝日・夏期休暇・年末年始を除く)

この印刷物は再生紙を使用しております。



3000.013.9576.1(04/18)

©2018 Philips Japan, Ltd.

キリトリ線