

PHILIPS

Shaver

Series 9000



フィリップス 電動シェーバー

品番 **S9041/43**


取扱説明書

フィリップス シェーバーをお買い上げいただき、まことにありがとうございます。長い間で愛用いただくために、ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。

また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。

商品のご確認

商品をご確認ください。

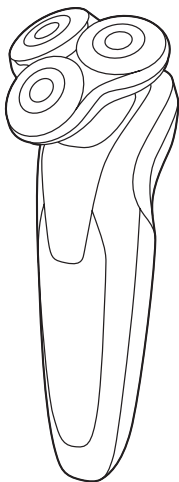

本体


洗顔ブラシ
保護キャップ



洗顔ブラシヘッド



トリマー

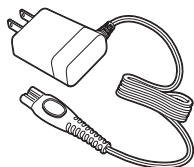

充電アダプタ



収納ケース

※改良の為、仕様を予告なく変更することがあります。

お買い上げのお客様へ

初めてご使用になる際は、ご使用前に充電してください。

目次

	はじめに	1
	商品のご確認	1
	目次	2
	必ずお守りください	3・4
	各部の名称	5・6
	主な表示(本体)	7
	充電のしかた	8
●ご使用方法	シェービングのしかた	9~11
	トリマーの使い方	12
	洗顔のしかた	13
	お手入れ方法	14~16
	刃・洗顔ブラシの交換	17
	保管のしかた	18
●廃棄について	シェーバーを廃棄するとき	19
●困ったとき	故障かな?と思ったら	20・21
●英文解説	Guidance in English	22~46
●保証証	保証とアフターサービス	47
	仕様	48
	無料修理規定	50
	保証書	最終ページ

必ずお守り ください

安全上のご注意

- ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。
- 誤った取扱いをしたときに想定される内容を「危険」、「警告」、「注意」に区分けしています。

○絵表示について



危険 人が死亡または重傷を負う可能性が大きい内容。



警告 人が死亡または重傷を負う可能性が想定される内容。



注意 人が傷害を負う可能性および物的損害のみの発生が想定される内容。

○絵表示の例



△記号は、「危険、警告、注意」を示します。図の中や近くに具体的な注意内容(左図の場合は高温注意)を示します。



○記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁止内容(左図の場合は分解禁止)を示します。



●記号は、必ずしていただく「強制」を示します。図の中や近くに具体的な強制内容(左図の場合は電源プラグをコンセントから抜くこと)を示します。

△ 危険



- 本機は充電式電池を内蔵しています。火中投入、加熱、高温での充電・使用・放置をしないでください。発熱・発火・破裂の原因になります。

△ 警告



- シェーバー本体・充電アダプタは改造しないでください。また、分解したり修理をしないでください。火災、感電、ケガの原因となります。修理はフィリップスサポートセンターにお問い合わせください。



- お手入れの際は必ず充電アダプタの電源プラグをコンセントから抜いてください。感電やケガをすることがあります。



- 濡れた手で電源アダプタを抜き差ししないでください。感電やけがをすることがあります。



- 充電アダプタを傷付けたり、電源コードを無理に曲げたり、引っ張ったり、ねじったり、たばねたり、重い物を載せたり、挟み込んだり、加工したりしないでください。電源コードが破損し、火災・感電の原因となります。



- 充電アダプタが傷んだり、コンセントの差込みが緩いときは使用しないでください。感電・ショート・発火の原因になります。



- 充電アダプタを水につけたり、水をかけたりしないでください。故障や、ショート・感電の原因になります。



- 乳幼児の手の届くところに本製品を置かないでください。



- 充電アダプタには変圧器が内蔵されています。充電アダプタを切り離して別のプラグに接続するのは危険ですのでおやめください。



- 自分で意思表示できない人(幼児を含む)に使用させないでください。また、お体の不自由な人だけでは使用しないでください。



- 刃が破損または故障した場合は、本製品を使用しないでください。ケガの原因になります。交換の際には必ずフィリップス社製の同型部品と取り替えてください。

⚠ 注意



●充電アダプタの電源プラグを抜くときは、電源コード部を持たずに必ず先端の電源アダプタ部を持って引き抜いてください。感電やショートして発火することがあります。



●刃は強く押さえないでください。破損して皮膚を傷つけることがあります。



●充電時以外は、充電アダプタをコンセントから抜いてください。ケガややけど、絶縁劣化による感電・漏電・火災の原因となります。



●充電アダプタは付属の専用アダプタを使用してください。また付属の専用アダプタで他の製品を充電しないでください。ショート、異常発熱による発火の原因になります。破損、故障した場合は、事故を避けるために必ずフィリップス社製の同型充電アダプタをお求めください。




●電源コネクタ受部にピンやごみを付着させないでください。感電・ショート・発火の原因になります。

使用上のご注意

1. 本製品はヒゲ(あごヒゲ、ロヒゲ、もみあげなど)の長さを整えたり、シェービングする、または洗顔するためのものです。それ以外の目的で使用しないでください。
2. フィリップスシェーバーを初めてお使いの方は、剃り方に慣れるまで2~3週間かかることがあります。
3. 60℃以上のお湯でシェーバーを洗淨しないでください。
4. 本製品の使用、充電、保管は室温5℃~35℃の環境下で行ってください(尚、低温や高温で充電すると、充電電池の寿命が短くなります)。
5. 外刃は、薄く仕上げてありますので、刃部を強く押さえたり、硬いものに当てないように、ていねいに扱ってください。
6. 洗顔ブラシヘッドをお使いの際は、自分で作った洗顔料、刺激の強い化学物質や粗い粒子を含んだ洗顔料、スクラブ入りまたはピーリング作用のある洗顔料などを使用しないでください。
7. 洗顔ブラシヘッドは、1日に2回以上使用しないでください。
8. シェービングユニット・洗顔ブラシヘッドの清掃や着脱は、必ず電源をOFFにしてから行ってください。
9. 切れ味が衰えてきたり、刃が破損した場合は、使用せず必ず新しいシェービングヘッドと交換してください。
10. 直射日光の当たる場所には保管しないでください。夏場、車の中に放置しないでください。
11. 乳幼児の手の届かないところに保管してください。
12. シェービングユニットは、クリーニング表示(蛇口マーク)が表示された場合、お手入れ方法(P14~16)に従って掃除してください。
13. シェーバー本体は防水加工をしておりますが、水や液体の中に浸けないでください。
14. プラグ式消臭・芳香剤を使用しているコンセント、あるいはその近くのコンセントに充電アダプタを接続しないでください。充電アダプタを傷める原因となります。

各部の名称

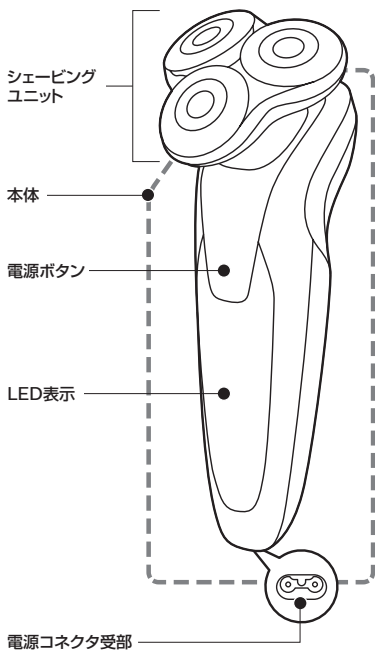


洗顔ブラシ
保護キャップ



洗顔ブラシヘッド

洗顔ブラシ

ブラシ台座

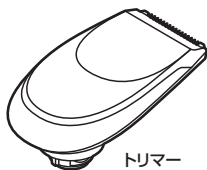

トリマー

収納ケース




電源プラグ部

充電アダプタ

電源コード部

電源コネクタ部

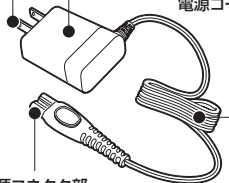

●シェービングユニット

シェービングヘッド

裏側

表側

シェービングヘッドホルダー

シェービングヘッド分解図

保持板

内刃

外刃

(替刃品番: SH90)

主な表示（本体）

初めてお使いになるときや、長い間ご使用にならなかったときは、表示が出るまでに時間がかかる場合があります。



●**残量表示** 満充電の時は全てのランプが点灯し、充電残量が少なくなるとともに充電表示ランプの表示が下がっていきます。電源ボタンを押した際に充電表示ランプが数秒間点灯します。



●**充電表示** 充電中は一番下の充電表示ランプが白色に点滅します。点灯に変わると、1つ上のランプが順次、点滅～点灯に変わります。



●**充電完了表示** 充電が完了すると、全ての充電表示ランプが点灯します。満充電後、約 30 分経過すると充電表示ランプが消えます。

※満充電後に本体を再び充電アダプタに接続すると、充電表示ランプが点灯しますが、故障ではありません。



●**充電催促表示** 充電残量が少なくなると、一番下の充電表示ランプがオレンジ色に点滅します。電源を OFF にすると、一番下の充電表示ランプが数秒間オレンジ色に点滅し、ピーブ音が鳴ります。



●**クリーニング表示** 電源を OFF にすると、クリーニングをうながすために蛇口マークが点滅します。表示されるタイミングは使用時間・状況により異なります。お手入れ方法（P14～16）をご参照ください。



●**シェービングヘッド交換表示** シェービングヘッドの交換マークが点滅すると、交換時期です。シェービングヘッドを交換してください（P17 参照）。



●**ブロック表示** シェービングヘッドに長いヒゲがからまっていたりシェービングヘッドが破損していると、「!」マーク、シェービングヘッドの交換表示、クリーニング表示が同時に点滅しピーブ音が鳴ります。この場合、電源を ON にすることができません。シェービングヘッドをお手入れするか、交換してください（P14～17 参照）。



●**ロック表示（カギマークが表示されていると電源は入りません）** 電源ボタンを約 3 秒長押しすると、カギマークが表示されてロックがかかります。再度、電源ボタンを約 3 秒長押しすると解除できます。充電アダプタに接続すると、ロックは自動的に解除されます。



●**オーバーヒート表示** 充電中、万が一シェーバーがオーバーヒートした場合、「!」マークが赤色に点滅します。その場合、充電が自動的に中断し、温度が下がると充電が再開されます。

浴室で充電をしないでください。

充電のしかた

※充電をしながらシェービングはできません。

初めてお使いになるときや、長い間ご使用にならなかったときは、充電しないと使用できません。ご使用前に充電してください。充電開始後数分間、充電表示ランプが点滅しないことがあります。そのまま充電すると充電表示ランプが点滅します。海外(100~240V)でのご使用も可能です。ただし、コンセントの形状や電圧など現地で充分お確かめのうえご使用ください。

※本製品はリチウムイオン充電電池を使用しているため、ご使用の都度充電をしても充電電池の寿命には影響ありません。

- 1 シェーバー本体の電源がOFFになっていることを確認してください。

- 2 充電アダプタの電源コネクタ部をシェーバー本体の電源コネクタ受部に差し込みます。

- 3 ご家庭のコンセントに充電アダプタの電源プラグ部を差し込みます。



- 4 充電が完了すると3つの充電表示ランプが全て点灯します。

※満充電後、約30分経過すると充電表示ランプが消えます。

クイックチャージ

充電残量が0の状態での充電アダプタで充電すると、シェービング1回分が急速充電されます。

※クイックチャージ中は3つの充電表示ランプが順番に点滅します。

※クイックチャージが完了すると通常の充電が行われます。その際、一番下の充電表示ランプが点滅します。点灯になると、1つ上のランプが順次、点滅～点灯に変わります。

※通常の目安として満充電で1日3分使用し、約20日間使用できますが、ご使用状況(使用時間・ヒゲの濃さなど)により変わります。



注意

- 専用の充電アダプタ以外での充電は行わないでください。
- 長期間使用しない場合は、充電電池が過放電や液漏れして使えなくなることがあります。3~4カ月に一度は充電してください。
- 本製品を24時間以上コンセントに接続したままにしないでください。

シェービングの しかた (ドライ)

肌が乾いた状態でのシェービングの
しかたです。

ご使用の際は本体から充電アダプタを抜いてご使用ください。接続されていると作動しません。



警告

シェーバー本体は防水加工をしており、浴室でも使用できますが、水や液体の中に浸けないでください(故障の原因となります)。

- モーターの始動時、微弱の振動がシェーバー本体に伝わりますが、問題はありません。
- ほこりなどで肌が汚れている場合、ふきとってからご使用ください。
- ご使用前に外刃の破れや変形がないか確認してください(外刃に破れや変形があると肌を傷つける原因になります)。
- ヒゲ剃り以外の目的(頭髪など)には、使用しないでください。


- 1 電源ボタンを押し、
電源をONにします。

※カギマークが表示される場合はロック機能がONになっています。ロックを解除してから電源をONにしてください。



- 3 シェービング後は電源ボタンを押し、
電源をOFFにします。

- 2 刃を肌に軽く押しあて、円を描くように動かしながら剃ります。

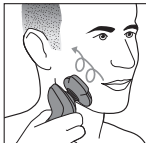


上手に 剃るには

肌に強く押しつけるのではなく、軽く押しあてて円を描くように回転させながら剃るのがコツです。




ほお

肌を伸ばし、ヒゲを立たせるように円を描くように小さく回転させながら剃ります。

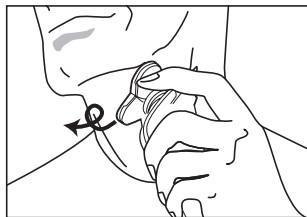


あごの裏側

刃を肌に軽くあて、図のようにあごを上げて円を描くように小さく回転させながら剃ります。

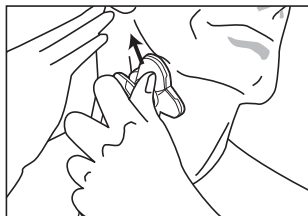

ほおの奥から首筋

片方の手で肌を後ろに引っ張りながら剃ります。

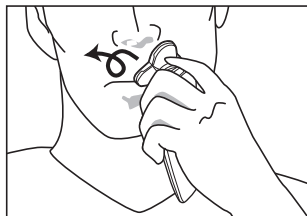

鼻の下

鼻の下を伸ばし、円を描くように小さく回転させながら剃ります。

フィリップスのシェーバーを初めてお使いの方は、剃り方に慣れるまで2~3週間かかることがあります。初めてのシェービングで思い通りの結果が得られないことや、少し肌にヒリヒリ感が残る場合がありますが、これは普通のことです。フィリップスのシェーバーに限らずシェービング方法を変える時には、肌もヒゲも新しいシェービング方法に慣れる時間が必要です。新しいシェーバーに肌を慣らす為、まずは3週間このシェーバーを使い続けてみてください(最低でも1週間に3回以上)。この3週間は、あまりシェービング方法を変えたりせず、同じシェーバーで肌を慣らすことが大切です。

シェービングのしかた (ウェット)

シェービングフォームやシェービングジェルを使ったシェービングのしかたです。剃った部分を実感しながら、なめらかなシェービングができます。



警告

シェーバー本体は防水加工をしており、浴室でも使用できますが、水や液体の中に浸けないでください(故障の原因となります)。

- モーターの始動時、微弱の振動がシェーバー本体に伝わりますが、問題はありません。
- ご使用前に外刃の破れや変形がないか確認してください(外刃に破れや変形があると肌を傷つける原因になります)。
- ヒゲ剃り以外の目的(頭髪など)には、使用しないでください。
- 石けんもお使いいただけますが、肌の上での滑りをよくするため、シェービングフォームやジェルの使用をお勧めします。

1 顔を濡らし、市販のシェービングフォームまたはシェービングジェルを付けます。

2 シェービングヘッドを水で濡らし、肌の上でなめらかに動くようにします。

3 電源ボタンを押し、電源をONにします。

※カギマークが表示される場合はロック機能がONになっています。ロックを解除してから電源をONにしてください。

4 刃を肌に軽く押しあて、円を描くように動かしながら剃ります。

シェービングフォームやシェービングジェルにより、鏡を見た時に剃った部分を確認しやすくなります。

※途中、よりなめらかにシェービングするために、シェービングヘッドを水で濡らすと効果的です。



5 シェービング後は電源ボタンを押し、電源をOFFにします。

6 シェーバーをきれいに洗います(P14・15「お手入れ方法」)。

【重要】

シェービング後は、シェービングフォームやシェービングジェルがしっかりと洗い流されているかを確認してください。お手入れが不十分な場合、臭いが出るばかりでなく、故障の原因にもなります。

トリマーはヘアーライン、もみあげ、ヒゲなどを整えるのに便利です。

トリマーの使い方


- 1** シェービングユニットのはずし方
シェービングユニットを本体からはずします。

※シェービングユニットは、回さずにまっすぐ引き抜いてください。


※電源がOFFになっていることを確かめてください。




- 2** トリマーの突起部(図①)をシェーバー上部の溝(図②)に合わせ、カチッと音がするまで押し込み(図③)、本体に取り付けます。電源をONにすると、トリマー先端の刃が往復してカットします。

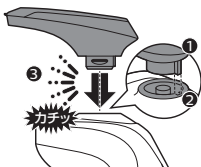

- 3** 鏡を見ながらトリマーをカットしたいところに直角にあたるようにしてください。一度に切らずに、少しずつカットしてください。

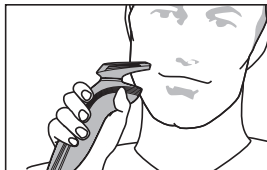

- 4** シェービングユニットのつけ方
トリマーをはずし(図①)、シェービングユニットの突起部(図②)をシェーバー上部の溝(図③)に合わせ、カチッと音がするまで押し込み(図④)、本体に取り付けます。

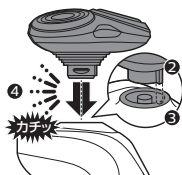

※トリマーの切れ味を保つため、使用後は必ずぬるま湯または水ですすぎ洗いをしてください(P16「トリマーのお手入れ方法」)。



注意

強く押し当て過ぎると肌を傷めますのでご注意ください。

洗顔のしかた



警告

本体は防水加工をしており、浴室でも使用できますが、水や液体の中に浸けないでください(故障の原因となります)。


アタッチメントを取り付ける

- 1 シェービングユニットを本体からまっすぐ引き抜きます。

※シェービングユニットは、回さずにまっすぐ引き抜いてください。



- 2 洗顔ブラシヘッドの突起部を本体上部の溝に合わせ、カチッと音がするまで押し込み、本体に取り付けます。

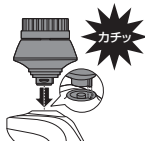

洗顔する

- 1 顔表面と洗顔ブラシをぬるま湯で濡らします。

※シェービング前に洗顔ブラシをお使いいただくと、より効果的・衛生的にシェービングすることができます。

- 2 顔表面または洗顔ブラシに普段お使いの洗顔料を適量塗布します。

- 3 電源ボタンを押し、電源をONにします。

- 4 洗顔ブラシでTゾーン(図で示された箇所)を洗顔します。

※ヘアバンドなどを使用し、髪が巻き込まれないようにご注意ください。



- 5 他の箇所も同じように洗顔していきます。



注意

- 洗顔以外の目的には、使用しないでください。
- 自分で作った洗顔料、刺激の強い化学物質や粗い粒子を含んだ洗顔料、スクラブ入りまたはピーリング作用のある洗顔料などを使用しないでください。
- 1回のご使用は1分間、1日2回までを目安としてください。
- 肌にとって、円を描くよう洗顔ブラシをやさしく滑らせながら洗浄します。
- 肌の洗い過ぎを防ぐため、ひとつの箇所を20秒以上洗浄しないでください。
- 洗顔ブラシを肌に強く押し付けないように気をつけてください。
- 目の周りの敏感な部分には製品を使用しないでください。
- 肌に異常(傷・はれもの・湿疹等)がある場合は製品を使用しないでください。
- ヘアバンドなどを使用し、髪が巻き込まれないようにご注意ください。

お手入れ方法

水洗いによるお手入れ方法



注意

- お手入れの際は、電源をOFFしてから水洗いしてください。
- シェービングユニットは水洗いできますが、本体は水中に浸けないでください。
- シェービングユニットを乾燥させる時に、タオルやティッシュペーパーを使用しないでください。刃を傷める場合があります。

シェービングヘッドのお手入れ方法

※洗剤は使用しないでください。

※ぬるま湯（40℃前後）でのお手入れをおすすめします。臭いのもととなる皮脂や汗などが取れやすくなります。ただし、熱湯はお止めください。故障の原因となります。

※お手入れ中にシェーバーの底から水が漏れてくる場合がありますが、異常ではありません。


- 1** シェービングユニットを本体からはずします。

※シェービングユニットは、回さずにまっすぐ引き抜いてください。

※電源がOFFになっていることを確認してください。



- 2** シェービングユニットからシェービングヘッドホルダーを取り外してください。



- 3** シェービングヘッドホルダーおよび受部にたまったヒゲクズをぬるま湯または水で約30秒洗い流します。




- 4** シェービングヘッドホルダーの余分な水を切り、よく乾かします。

※周囲に気をつけてください。

- 5** 乾いたことを確認したら、シェービングヘッドホルダーをシェービングユニットに取り付けてください。

- 6** シェービングユニットの突起部(図①)をシェーバー上部の溝(図②)に合わせ、カチッと音がするまで押し込み(図③)、本体に取り付けます。

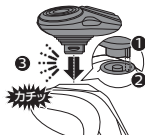


シェービングヘッドのお手入れ方法（分解+水洗い）

※1カ月に1度、またはシェーバーの切れ味が落ちてきたら、シェービングヘッドを分解して水洗いすることをオススメします。


※お手入れの際は、電源を OFF にしてから分解や水洗いをしてください。

- 1 シェービングユニットからシェービングヘッドホルダーを取り外し、シェービングヘッドおよび受部にたまったヒゲクズを、ぬるま湯または水で約30秒洗い流します。

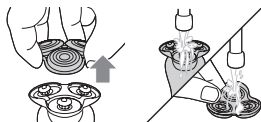

- 2 保持板を反時計回りに回して(図①)、シェービングヘッドホルダーから取り外します(図②)。他の保持板も同様に、反時計回りに回して外します。


※取り外した保持板はなくさないように安全な場所に保管してください。

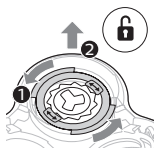

- 3 シェービングヘッドホルダーから内刃と外刃を取り外します。



- 4 内刃と外刃をぬるま湯または水でしっかり洗い流し、余分な水を切ってよく乾かします。

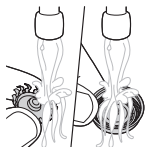


※周囲に気をつけてください。


※内刃と外刃は一組ずつ洗ってください。

※内刃と外刃の組み合わせを変えた場合、シェービング性能が回復するまで数週間かかることがあります。


- 5 シェービングヘッドホルダーに外刃と内刃を戻します。

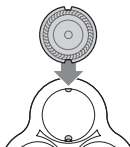

- 6 保持板をシェービングヘッドホルダーに戻し(図①)たら、時計回りに回し(図②)ます。保持板の矢印とシェービングヘッドホルダーの突起が合い、「カチッ」と音がするまで回してください。

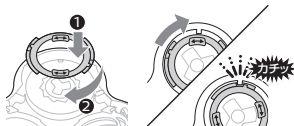

- 7 シェービングユニットにシェービングヘッドホルダーを取り付けます。

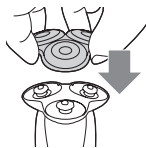


トリマーのお手入れ方法

※トリマーは、使用後必ずお手入れしてください。

- 1 トリマーを取り付けた状態でシェーバーの電源をONにし、ぬるま湯または水ですすぎ洗いをします。

- 2 シェーバーの電源をOFFにし、トリマーを十分に乾燥させてください。

※トリマーはタオルやティッシュペーパーなどでふかないでください。刃を傷める原因になります。

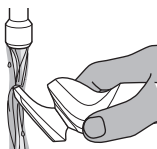


洗顔ブラシヘッドのお手入れ方法

※洗顔ブラシヘッドは、使用後必ずお手入れしてください。

- 1 お手入れする際には、電源を必ずOFFにします。

- 2 ブラシ台座から洗顔ブラシを取り外します。



- 3 ぬるま湯で洗顔ブラシをしっかりと洗います。

- 4 洗顔ブラシの水分を乾いたタオルでふき取る、または自然乾燥させてください。


刃・洗顔ブラシの交換

替刃(SH90)の交換


- ※シェービング性能を維持するために、刃は2年ごとに交換することをおすすめします。
 - ※交換する際は、必ずフィリップス社製の替刃にお取り替えください。
 - ※シェービングヘッド交換表示が点灯したら、刃の交換時期です。
- 専用の替刃(品番：SH90/81)と交換してください。

- 1 シェービングユニットからシェービングヘッドホルダーを取り外します。

※電源がOFFになっていることを確かめてください。

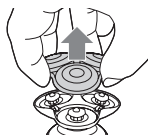

- 2 新しいシェービングヘッドホルダーを「カチッ」と音がするまで押し込み、シェービングユニット受部に取り付けます。

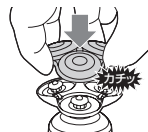

- 3 電源ボタンを約7秒間シェービングヘッド交換表示が点滅するまで押し続け、シェーバーをリセットしてください。




洗顔ブラシの交換

洗顔ブラシが摩耗した状態で使用すると肌にダメージを与える恐れがあります。そのため3~6カ月ごとにブラシ交換してください(使用頻度、使用方法により変化します)。万が一洗顔ブラシが変形したり破損した場合は、3~6カ月以内でも交換してください。


【替洗顔ブラシヘッド(ブラシ台座+洗顔ブラシ各1個)：RQ585/51】

【替洗顔ブラシ(1個)：RQ560/51】

- 1 ブラシ台座から洗顔ブラシを取り外します。



- 2 新しい洗顔ブラシをブラシ台座に取り付けます。



シェーバーを保管する前に
きちんと乾燥させてください。

保管のしかた

- シェーバーを収納ケースに格納して保管します。



※室温 5℃～35℃の環境で保管してください。
※直射日光の当たる場所には保管しないでください。
※夏場、車の中には放置しないでください。

[洗顔ブラシ]

- 洗顔ブラシ保護キャップを
図のように取り付け汚れが
付くのを防ぎます。
- ※取り付ける前に、完全に乾いて
いるか確認してください。



シェーバーを 廃棄するとき

※お客様による充電電池の
修理交換はできません。

リチウムイオン充電電池のリサイクルについて

このシェーバーはリチウムイオン充電電池を使用しています。リチウムイオン充電電池はリサイクル可能な貴重な資源です。ご使用済みの製品の廃棄に際しては、リチウムイオン充電電池を取り出し、各自治体の処理方法に従い、リサイクル協力店にお持ちください。




注意

- 製品を廃棄するとき以外は、絶対に本体を分解しないでください。
- 本体内部の金具は鋭いので、ご注意ください。

充電電池の取り外し方

電源をONにして、完全に動作しなくなるまで充電電池を放電させてから、行ってください。


- 1 シェービングユニットをはずし、本体下部の穴にドライバーをこじ入れて、ユニットカバーをはずします。

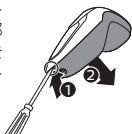

- 2 フロントカバーとモーターユニット(灰色の部分)を固定している2つの金具をはずして、フロントカバーを取りはずします。




- 3 モーターユニットにある左右3つずつ、計6つのツメをはずし、カバーを開けます。

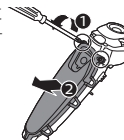

- 4 充電電池ホルダーを持ち上げて工具でワイヤーを切断し、取り出します。



- 5 充電電池ホルダーのツメをはずし、充電電池を取り出します。

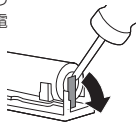

- ※充電電池を取り外した後は、通電しないでください。
※ショートしないように充電電池の端子をテープで覆ってください。
※充電電池を取り外した後の製品の廃棄については、お住まいの地域の条例などに従って処分してください。

故障かな?と思ったら、
お調べください。

故障かな?
と思ったら





だんだん切れ味が悪くなった

- ▶シェービングヘッド部が汚れていないか確認してください。
- ▶シェービングヘッド部が損傷または摩耗していないか確認してください。損傷または摩耗しているときは、シェービングヘッドを交換してください。
(替刃品番:SH90)。
- ▶シェービングヘッドに長いヒゲがからまっていないか確認してください。

充電しても使用時間が極端に短い

- ▶シェーバーが完全に止まるまで作動させてから、もう一度充電してください。
それでも改善されないときは、充電電池の寿命です。

シェーバーの電源ボタンを押しても作動しない

- ▶シェーバーに充電アダプタが接続されている場合は充電アダプタを外してください。
- ▶充電がされていない場合は1時間以上の充電をしてください。
- ▶カギマーク  が表示する場合はロックを解除してください。
(P.7「ロック表示」の頁をお読みください)
- ▶3つのマーク    が同時に点滅する場合は、刃が動かなくなるほど汚れているので、シェービングヘッドをお手入れするか、交換をしてください。
- ▶刃が破損している場合は交換をしてください。

シェーバー本体のモーターは回転しているが、内刃が回転しない

- ▶外刃にキズ、ヘコミがある場合はシェービングヘッドを交換してください。
(替刃品番:SH90)

充電できない

- ▶シェーバー本体の電源コネクタ受部に充電アダプタのコードがきちんと差し込まれているか確認してください。
- ▶充電アダプタの電源コードが断線している場合は新しい充電アダプタ（品番：HQ8505）をお買い求めください。

洗顔中、洗顔後に刺激を感じる

- ▶肌、洗顔ブラシを濡らしても刺激を感じる場合は、洗顔料を多めにご使用ください。
- ▶洗顔ブラシを肌に強く当てず、洗顔ブラシの先端が肌にそっと触れる程度当ててください。
- ▶1日2回よりご利用頻度を低くしてお試しください。
- ▶肌が乾燥していると肌本来のバリア機能が弱まり刺激を感じる場合があります。


洗顔ブラシが汚れている

- ▶洗顔ブラシはご使用の都度、水ですすいでください。

洗顔ブラシが動かないのにシェーバー本体から音がする、異音がある

- ▶洗顔ブラシ取付部に、カチッと音がするまで押し付けセットします。

以上の点検により、正常な状態に戻らない場合は、
フィリップスサポートセンターにお問い合わせください。

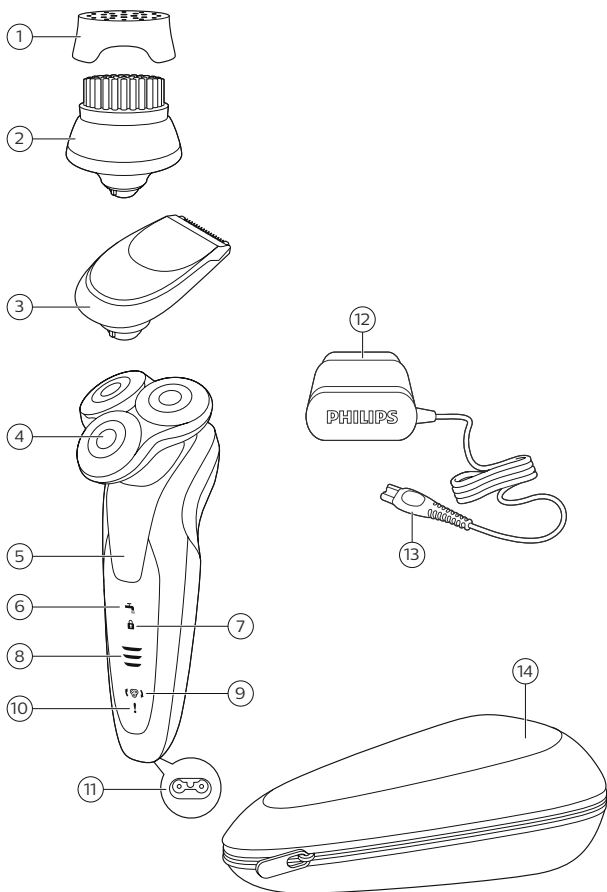

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at **www.philips.com/welcome**.

Please read this user manual, as it contains information about the features of this shaver as well as some tips to make shaving easier and more enjoyable.

General description (Fig. 1)

- 1 Protection cap for cleansing brush attachment
- 2 Click-on cleansing brush attachment
- 3 Click-on precision trimmer attachment
- 4 Click-on shaving unit
- 5 On/off button
- 6 Cleaning reminder
- 7 Travel lock symbol
- 8 Charge indicator
- 9 Replacement reminder
- 10 Notification symbol
- 11 Socket for small plug
- 12 Supply unit
- 13 Small plug
- 14 Pouch

Important safety information

Read this important information carefully before you use the appliance and save it for future reference.

Danger



- Keep the supply unit dry.

Warning

- To charge the battery, only use the detachable supply unit (type HQ8505) provided with the appliance.
- The supply unit contains a transformer. Do not cut off the supply unit to replace it with another plug, as this causes a hazardous situation.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Always unplug the shaver before you clean it under the tap.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.
- Do not open the appliance to replace the rechargeable battery.

Caution



- Never immerse the cleaning system or the charging stand in water and do not rinse it under the tap.
- Never use water hotter than 60°C to rinse the shaver.
- Only use this appliance for its intended purpose as shown in the user manual.
- For hygienic reasons, the appliance should only be used by one person.

- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- If your shaver comes with a cleaning system, always use the original Philips cleaning fluid (cartridge or bottle, depending on the type of cleaning system).
- Always place the cleaning system on a stable, level and horizontal surface to prevent leakage.
- If your cleaning system uses a cleaning cartridge, always make sure the cartridge compartment is closed before you use the cleaning system to clean or charge the shaver.
- When the cleaning system is ready for use, do not move it to prevent leakage of cleaning fluid.

- Water may drip from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.

Electromagnetic fields (EMF)


This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General



- This shaver is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can therefore only be used without cord.
- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100-240 volts to a safe low voltage of less than 24 volts.

The display

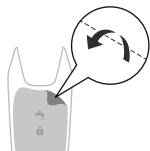

Note: Before you use the shaver for the first time, remove the protective foil from the display.

Charging



When the shaver is charging, first the bottom light of the battery charge indicator flashes, then the second light, and so on until the shaver is fully charged.

Quick charge: When the bottom light stops flashing and lights up continuously, the shaver contains enough charge for one shave.

Battery fully charged




Battery fully charged

When the battery is fully charged, all lights of the battery charge indicator light up white continuously.

Note: This product can only be used without a cord. When you press the on/off button during or after charging, you hear a sound to indicate that the shaver is still connected to the wall socket.

Note: When the battery is full, the display turns off automatically after 30 minutes.

Battery low




When the battery is almost empty, the bottom light of the battery charge indicator flashes orange and you hear a sound. At this point there is enough energy left for one shave.

Remaining battery charge

The remaining battery charge is shown by the lights of the battery charge indicator that light up continuously.

Cleaning reminder





Clean the shaver after every use for optimal performance (see 'Cleaning and maintenance'). When you turn off the product, the cleaning reminder flashes to remind you to clean the shaver.

Travel lock

When you are going to travel, you can lock the shaver to prevent it from accidentally turning on.

Activating the travel lock


- 1 Press the on/off button for 3 seconds to use the travel lock mode.

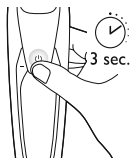

While you activate the travel lock, the travel lock symbol lights up briefly and the shaver produces a short sound. When the travel lock is activated, the appliance produces a sound and the travel lock symbol flashes.

Deactivating the travel lock


- 1 Press the on/off button for 3 seconds.



While you deactivate the travel lock, the travel lock symbol lights up briefly and the shaver produces a short sound. The appliance switches on and is now ready for use again.

Note: You can also deactivate the travel lock by connecting the appliance to the wall socket.

Replacement reminder

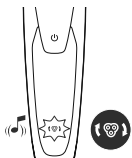


For maximum shaving performance, we advise you to replace the shaving heads every two years.

The shaver is equipped with a replacement reminder, which reminds you to replace the shaving heads. The shaving unit symbol lights up white continuously, the arrows flash white, and the shaver beeps to indicate that you have to replace the shaving heads.

Note: After replacing the shaving heads, you can reset the replacement reminder by pressing the on/off button for 7 seconds. If you do not reset the replacement reminder, the shaver resets automatically after 9 shaves.

Notification symbol



Overheating

If the appliance overheats during charging, the notification symbol flashes orange. When this happens, the shaver switches off automatically. Charging continues once the temperature of the appliance has decreased to the normal level.



Blocked shaving heads

If the shaving heads are blocked, the notification symbol lights up orange continuously. The replacement reminder and the cleaning reminder flash white alternately and the shaver beeps. In this case, the motor cannot run because the shaving heads are soiled or damaged.

If the shaving heads are soiled, you have to clean them. If the shaving heads are damaged, you have to replace them.


Charging

Charge the shaver before you use it for the first time and when the display indicates that the battery is almost empty. The battery charge is indicated by the lights of the battery charge indicator on the display.

Charging takes approx. 1 hour. A fully charged shaver has a shaving time of up to 60 minutes.

Note: You cannot use the shaver while it is charging.

Charging with the supply unit

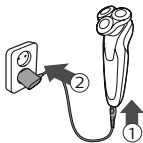

- 1 Make sure the appliance is switched off.
- 2 Put the small plug in the appliance and put the supply unit in the wall socket. When you connect the shaver to the wall socket, you hear a sound.
- 3 After charging, remove the supply unit from the wall socket and pull the small plug out of the appliance.

Using the appliance

Note: This appliance can only be used without cord.

Switching the appliance on and off



- To switch on the appliance, press the on/off button once.

The display lights up for a few seconds.

- To switch off the appliance, press the on/off button once.

The display lights up for a few seconds and shows the remaining battery charge.

Shaving

Skin adaptation period

Your first shaves may not bring you the result you expect and your skin may even become slightly irritated. This is normal. Your skin and beard need time to adapt to any new shaving system. To allow your skin to adapt to this new appliance, we advise you to shave regularly (at least 3 times a week) and exclusively with this appliance for a period of 3 weeks.

Shaving tips

- For the best results on skin comfort, pre-trim your beard if you have not shaved for 3 days or longer.
- Move the shaving heads over your skin in circular movements and apply gentle pressure.
- We advise you to shave a clean beard and face.

Dry shaving

- 1 Switch on the appliance.
The display lights up for a few seconds.



- 2 Move the shaving heads over your skin in circular movements to catch all hairs growing in different directions. Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, as this can cause skin irritation.

- 3 Clean the appliance after use (see 'Cleaning and maintenance').

Wet shaving

For a more comfortable shave, you can also use this appliance on a wet face with shaving foam or shaving gel.

To shave with shaving foam or shaving gel, follow the steps below:



- 1 Apply some water to your skin.



- 2 Apply shaving foam or shaving gel to your skin.



- 3 Rinse the shaving unit under the tap to ensure that the shaving unit glides smoothly over your skin.
- 4 Switch on the appliance.



- 5 Move the shaving heads over your skin in circular movements to catch all hairs growing in different directions. Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Rinse the shaving unit regularly to ensure that it continues to glide smoothly over your skin.

- 6 Dry your face.
- 7 Clean the appliance after use (see 'Cleaning and maintenance').

Note: Make sure you rinse all foam or shaving gel off the appliance.

Using the click-on attachments

Removing or attaching click-on attachments



- 1 Make sure the appliance is switched off.
- 2 Pull the attachment straight off the appliance.


Note: Do not twist the attachment while you pull it off the appliance.



- 3 Insert the lug of the attachment into the slot in the top of the appliance. Then press down the attachment to attach it to the appliance ('click').

Using the trimmer attachment

You can use the precision trimmer attachment to touch up your beard, sideburns and moustache.

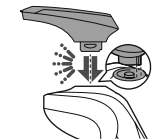

- 1 Attach the attachment to the appliance ('click').
- 2 Switch on the appliance.

The display lights up for a few seconds.




- 3 Hold the trimmer attachment perpendicular to the skin and move the appliance downwards while you exert gentle pressure.
- 4 Clean the attachment after use.

Using the cleansing brush attachment


Use the rotating cleansing brush with your daily cleansing cream. The cleansing brush removes oil and dirt, contributing to a healthy and oil-free skin.

- 1 Attach the attachment to the appliance ('click').

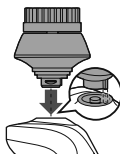

- 2 Moisten the attachment with water.

Note: Do not use the appliance with a dry cleansing brush attachment, as this can irritate the skin.



- 3 Moisten your face with water and apply a cleanser to your face.
- 4 Place the attachment on your cheek.
- 5 Switch on the appliance.





- 6 Gently move the brush across your skin from the nose towards the ear. Do not push the brush too hard onto the skin to make sure that the treatment remains comfortable.

Do not cleanse the sensitive area around your eyes.



- 7 After approx. 20 seconds, move the appliance to your other cheek and start cleansing this part of your face.



- 8 After approx. 20 seconds, move the appliance to your forehead and start cleansing this part of your face. Gently move the brush head from left to right.

Note: We advise you to not overdo the cleansing and to not cleanse any zone longer than 20 seconds.



- 9 After the treatment, rinse and dry your face. Your face is now ready for the next step of your daily skincare routine.
- 10 Clean the attachment after use.

Cleaning and maintenance

Cleaning the shaver under the tap

Clean the shaver after every use for optimal performance (see 'Cleaning and maintenance').


Be careful with hot water. Always check if the water is not too hot, to prevent burning your hands.

Note: Never dry the shaving unit with a towel or tissue, as this may damage the shaving heads.

- 1 Switch on the appliance.
- 2 Rinse the shaving unit under a warm tap.




- 3 Switch off the appliance. Pull the shaving head holder off the bottom part of the shaving unit.

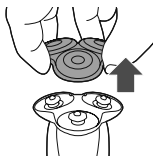


- 4 Rinse the hair chamber under the tap.



- 5 Rinse the shaving head holder under a warm tap.
- 6 Carefully shake off excess water and let the shaving head holder air-dry completely.

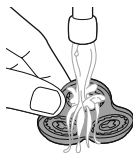


- 7 Attach the shaving head holder to the bottom part of the shaving unit ('click').

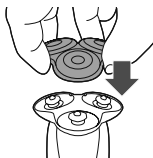


Thorough cleaning

We advise you to clean the shaving heads thoroughly once a month or when the shaver does not shave as well as it used to.


- 1 Switch off the shaver.
- 2 Pull the shaving head holder off the bottom part of the shaving unit.

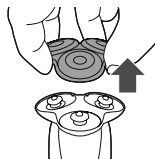

- 3 Rinse the hair chamber and shaving head holder under the tap.

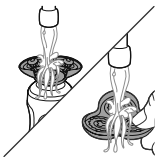


- 4 Turn the retaining ring anticlockwise and lift it off the shaving head.

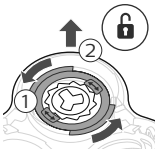


Repeat this process for the other retaining rings. Place them aside in a safe place.

- 5 Remove the shaving heads from the shaving head holder. Each shaving head consists of a cutter and guard.

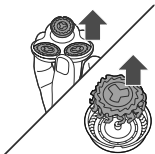


Note: Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally put a cutter in the wrong shaving guard, it may take several weeks before optimal shaving performance is restored.

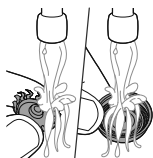


6 Clean the cutter and guard under the tap.

7 Shake off excess water.


8 Put the cutter back into the guard.

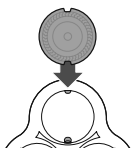


9 Place the shaving heads in the shaving head holder.

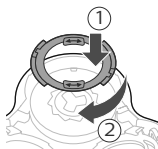

10 Place the retaining ring on the shaving head.

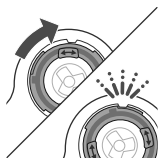

11 Align the arrows on the retaining ring with the projections in the shaving head holder. Turn the ring clockwise until it clicks to indicate that the ring is fixed.

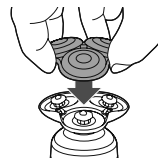

12 Attach the shaving head holder to the bottom part of the shaving unit ('click').

Cleaning click-on attachments


Cleaning the trimmer attachment

Never dry trimmer or beard styler attachments with a towel or tissue, as this may damage the trimming teeth.

Clean the trimmer attachment after each use.

- 1 Switch on the appliance with the precision trimmer attachment attached.
- 2 Rinse the attachment under a warm tap.
- 3 After cleaning, switch off the appliance.
- 4 Carefully shake off excess water and let the attachment air-dry completely.


Tip: For optimal performance, lubricate the teeth of the attachment with a drop of sewing machine oil regularly.

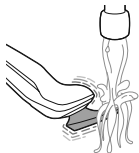

Cleaning the cleansing brush attachment

Clean the cleansing brush attachment after each use.

- 1 Switch off the appliance.
- 2 Detach the brush head from the attachment holder.
- 3 Clean the parts thoroughly with warm water and soap.
- 4 Dry the cleansing brush attachment with a towel.



Storage

Store the appliance in the pouch supplied.

Note: Make sure the appliance is dry before you store it in the pouch.



Replacement



Replacing the shaving heads




For maximum shaving performance, we advise you to replace the shaving heads every two years. Replace damaged shaving heads immediately. Always replace the shaving heads with original Philips shaving heads (see 'Ordering accessories').

Replacement reminder


The replacement reminder indicates that the shaving heads need to be replaced. The shaving unit symbol lights up continuously, the arrows flash white and you hear a beep when you switch the shaver on or off.

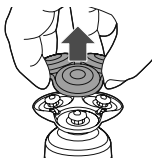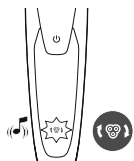

- 1 Switch off the shaver. Pull the shaving head holder off the bottom part of the shaving unit.

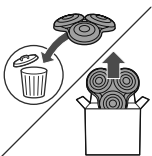

- 2 Discard the old shaving head holder and attach the new shaving head holder to the bottom part of the shaving unit ('click').

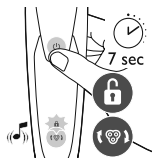

- 3 To reset the replacement reminder, press and hold the on/off button for approx. 7 seconds. Wait until the appliance produces a tune.

Ordering accessories

To buy accessories or spare parts, visit **www.philips.com/parts-and-accessories** or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

The following accessories and spare parts are available:

- SH90 Philips shaving heads
- HQ110 Philips shaving head cleaning spray
- RQ585 Philips cleansing brush attachment
- RQ560/RQ563 Philips cleansing brush heads
- HQ8505 supply unit

Note: The availability of the accessories may differ by country.

Recycling



- This symbol means that this product shall not be disposed of with normal household waste (2012/19/EU).




- This symbol means that this product contains a built-in rechargeable battery which shall not be disposed of with normal household waste (2006/66/EC). Please take your product to an official collection point or a Philips service center to have a professional remove the rechargeable battery.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

Removing the rechargeable shaver battery


Only remove the rechargeable battery when you discard the shaver. Before you remove the battery, make sure that the shaver is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the shaver and when you dispose of the rechargeable battery.

Be careful, the battery strips are sharp.

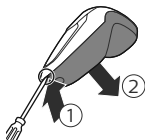


- 1 Insert the screwdriver into the slot between the front and back panel in the bottom of the appliance. Remove the back panel.

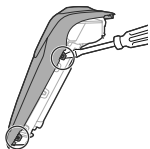


- 2 Remove the spring hooks from the front panel.




- 3 Remove the front panel.

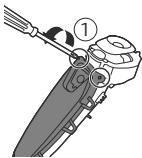


- 4 Unscrew the two screws at the top of the transparent cover of the power unit.

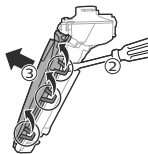

- 5 Bend the snap hooks aside and remove the transparent cover of the power unit.

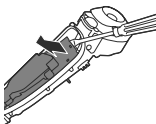

- 6 Lift out the battery holder and cut the wires with a pair of cutting pliers or scissors.

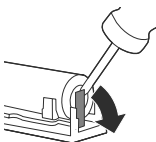

- 7 Bend the battery tags aside with a screwdriver.
8 Remove the rechargeable batteries.

Warranty and support

If you need information or support, please visit www.philips.com/support or read the international warranty leaflet.

Warranty restrictions

The shaving heads (cutters and guards) are not covered by the terms of the international warranty because they are subject to wear.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Shaver

Problem	Possible cause	Solution
The appliance does not work when I press the on/off button.	The appliance is still attached to the wall socket. For safety reasons, the appliance can only be used without cord.	Unplug the appliance and press the on/off button to switch on the appliance.
	The rechargeable battery is empty.	Recharge the battery (see 'Charging').
	The travel lock is activated.	Press the on/off button for 3 seconds to deactivate the travel lock.
	The shaving unit is soiled or damaged to such an extent that the motor cannot run.	Clean the shaving heads thoroughly or replace them.
The appliance does not shave as well as it used to.	The shaving heads are damaged or worn.	Replace the shaving heads (see 'Replacement').
	Hairs or dirt obstruct the shaving heads.	Clean the shaving heads in the regular way or clean them thoroughly.

Problem	Possible cause	Solution
I replaced the shaving heads, but the display still shows the replacement reminder.	You have not reset the appliance.	Reset the appliance by pressing the on/off button for approx. 7 seconds.
A shaving unit symbol has suddenly appeared on the display.	This symbol reminds you to replace the shaving heads.	Replace the shaving heads (see 'Replacement').
The notification symbol has suddenly appeared on the display while the appliance is charging.	The appliance is overheated.	Disconnect the appliance from the wall socket for approx. 10 minutes.
The notification symbol, the replacement reminder and the cleaning reminder have suddenly appeared on the display.	The shaving heads are damaged.	Replace the shaving heads (see 'Replacement').
	The shaving heads are soiled.	Clean the shaving heads.
Water is leaking from the bottom of the appliance.	During cleaning, water may collect between the inner body and the outer shell of the appliance.	This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the appliance.

保証と アフターサービス

保証書と修理サービスについて (必ずお読みください)

〈保証書・最終ページに付属〉

- 保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取っていただき内容をよくお読みのと大切に保管してください。

保証期間	お買い上げ日から2年間
対象部分	本体、充電アダプタ(シェービングユニット、トリマー、洗顔ブラシヘッド、収納ケース、保護キャップを除く)

【補修用性能部品の保有期間】

- 補修用性能部品の保有期間は製造打ち切り後6年です。
- 性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談は】

- 修理に関するご相談ならびにご不明な点は、フィリップスサポートセンターにお問い合わせください。

【修理を依頼されるときは】

- 修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。尚、異常のあるときはご使用を中止し、フィリップスサポートセンターにお問い合わせください。

【保証期間中は】

- 製品と保証書をご用意いただき、フィリップスサポートセンターにお問い合わせください。保証書の記載内容により無料修理いたします。

【保証期間が過ぎているときは】

- 修理によって商品の機能が維持できる場合は、補修用性能部品の保有期間内であれば、ご希望により有料で修理させていただきます。
- 部品の在庫がなくなった場合には、保有期間内でも修理できないことがあります。

【海外での本製品の保証及びアフターサービスについて】

- 本製品の保証は海外においても有効です。(同シリーズ製品の取り扱いがある国に限ります)
- 日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。
- 海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お困りの点がございましたら下記までご連絡ください。

Philips Consumer Lifestyle Service Department P.O.Box 20100 9200 CA DRACHTEN
The Netherlands Fax: +31 51 259 2785

【お客様の個人情報のお取り扱いについて】

- お受けしましたお客様の個人情報は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「プライバシーに関する通知」に基づき適切に管理いたします。

お買い上げ日	年 月 日	お買い上げ店名	TEL. ()
--------	-------	---------	----------

ご使用の時、このような症状はありませんか？

- 本体にさわると時々電気を感じる。
- こげくさい臭いがする。
- 電源コード部を動かすと通電したり、しなかつたりする。
- その他の異常、故障がある。

このような症状の時は、故障や事故防止のため、電源をOFFにし、充電アダプタをコンセントから外して、必ずフィリップスサポートセンターにお問い合わせください。



仕 様

品番	S9041/43
ハンドル品番	S9041
替刃品番	SH90
充電アダプタ品番	HQ8505
本体寸法 (高さ×幅×奥行)	164x59x70mm
質量	約167g
電源方式	充電式(専用充電アダプタ使用)
定格電圧	AC100-240V、50/60Hz
充電時間	約1時間
使用時間	約60分
使用充電電池	リチウムイオン充電電池 (Li-ion)
消費電力	9W (AC100V充電時)
替洗顔ブラシ品番	洗顔ブラシヘッド(ブラシ台座+洗顔ブラシ各1個):RQ585/51 替洗顔ブラシ(1個):RQ560/51

※改良の為、仕様を予告なく変更することがあります。

株式会社 フィリップス・ジャパン

〒108-8507 東京都港区港南2-13-37 フィリップスビル



無料修理規定

〈無料修理規定〉

1. 取扱説明書、本体貼付ラベル等の注意書に従った正常な使用状態で保証期間内に故障した場合には、無料修理します。
 2. 保証期間内に故障して無料修理をお受けになる場合には、フィリップスサポートセンターにお問い合わせください。
 3. ご贈答品の修理に関するご相談は、フィリップスサポートセンターにお問い合わせください。
 4. 保証期間内でも次の場合には有料修理になります。
 - ① 使用上の誤り及び不当な修理や改造による故障及び損傷。
 - ② お買い上げ後の輸送、移動、落下等による故障及び損傷。
 - ③ 火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障及び損傷。
 - ④ 一般家庭以外(例えば、業務用の長時間使用)に使用された場合の故障及び損傷。
 - ⑤ 保証書の提示がない場合。
 - ⑥ 保証書にお買い上げ年月日、お客様名、販売店名の記入のない場合、或は字句を書き換えられた場合。
- ※ 保証書は、本書に明示した条件のもとにおいて無料修理をお約束するものです。従って保証書を発行している者(保証責任者)、及びそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。
- 保証期間経過後の修理についてご不明の場合は、フィリップスサポートセンターにお問い合わせください。
- ※ 保証期間経過後の修理・補修用性能部品の保有期間について詳しくは取扱説明書の保証とアフターサービスの項目をご覧ください。
- ※ お客様にご記入いただいた個人情報(保証書の控え)は保証期間内のサービス活動及びその後の安全点検活動のために利用させていただく場合がございます。ご了承ください。また個人情報は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「プライバシーに関する通知」に基づき適切に管理いたします。

フィリップス 電動シェーバー 保証書

CERTIFICATE OF PURCHASE

この保証書は、「無料修理規定」記載内容で無料修理を行うことをお約束するものです。お買い上げの日から下記期間中に故障が発生した場合は、フィリップスサポートセンターにお問い合わせください。

お客様にご記入いただいた個人情報(保証書の控え)は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「プライバシーに関する通知」に基づき適切に管理いたします。

品名	電動シェーバー
品番	S9041/43
保証期間	お買い上げ日より2年
対象部分	本体、充電アダプタ(シェービングユニット、トリマー、洗顔ブラシヘッド、収納ケース、保護キャップを除く)
お買い上げ日	年 月 日
お客様	ご住所 〒
	ご芳名
	電話番号
★ 販売店	販売店名・住所・電話番号

- ★ 保証書は再発行しませんので、大切に保管してください。
- ★ ご販売店様へ この保証書はお客様へのアフターサービスの実施と責任を明確にするものです。贈答品、記念品の場合も含めて必ず記入捺印してお客様にお渡しください。

★ 製品の使用方法や修理に関するお問い合わせ

フィリップスサポートセンター

0120(944)859

受付時間:9:00~18:00(年末年始除く)

Webからの
お問い合わせ



MyPhilips 登録のご案内



フィリップスでは、製品をより快適にご使用いただくために製品登録をおすすめしております。

- ① MyPhilips では製品の保証書や購入証明書の写真も保管でき、万が一購入証明書を紛失された場合にも安心です。

URL <http://www.philips.co.jp/myphilips-about>

