

PHILIPS

S3561



© 2019 Koninklijke Philips N.V.  
All rights reserved  
保留所有权利  
3000.030.0602.3 (31/10/2019)  
> 75% 循环再造纸  
保留备用



>75 % recycled paper  
>75 % papier recyclé

## ENGLISH

### Danger

- Keep the supply unit dry (Fig. 1).

### Warning

- To charge the battery, only use the detachable supply unit (HQ8505) provided with the appliance.
- The supply unit contains a transformer. Do not cut off the supply unit to replace it with another plug, as this causes a hazardous situation.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always unplug the shaver before you clean it under the tap.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.
- This appliance contains batteries that are non-replaceable.
- Do not open the appliance to replace the rechargeable battery.

### Caution

- Never immerse the cleaning system or the charging stand in water and do not rinse it under the tap (Fig. 1).
- Never use water hotter than 60°C to rinse the shaver.
- Only use this appliance for its intended purpose as shown in the user manual.
- For hygienic reasons, the appliance should only be used by one person.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- If your shaver comes with a cleaning system, always use the original Philips cleaning fluid (cartridge or bottle, depending on the type of cleaning system).
- Always place the cleaning system on a stable, level and horizontal surface to prevent leakage.
- If your cleaning system uses a cleaning cartridge, always make sure the cartridge compartment is closed before you use the cleaning system to clean or charge the shaver.

- When the cleaning system is ready for use, do not move it to prevent leakage of cleaning fluid.
- Water may drip from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.

### Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

### General

- This shaver is waterproof (Fig. 2). It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can therefore only be used without cord.
- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100-240 volts to a safe low voltage of less than 24 volts.

### Removing the rechargeable battery

As the battery contains element that may have negative effect on the environment and human health, before you dispose the appliance find a Philips service center to have a professional disposal service, that follow below instructions:

- 1 The battery must be removed from the appliance before it is scrapped.
- 2 The appliance must be disconnected from the supply mains when removing the battery.
- 3 The battery needs to be disposed safely after being taken out.

## 危險

- 保持电源部件干燥 (图 1)。
- 警告符号注释：禁止在打开的水龙头下进行清洗 (图 1)。

## 警告

- 要给电池充电，请仅使用产品随附的可拆卸电源部件 (HQ8505)。
- 电源部件中包含一个变压器。请勿自行更换电源部件的插头，否则将导致严重后果。
- 本产品也可以由 8 岁或以上年龄的儿童以及肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人士使用，但前提是有人对他们使用本产品进行监督或指导，以确保他们安全使用，并且让他们明白相关的危害。切勿让儿童玩弄本产品。不要让儿童在无人监督的情况下对本产品进行清洁和保养。
- 将剃须刀手持部分与电源软线分开后，才能在水龙头下清洗手持部分。
- 使用前，请务必检查产品。请勿使用损坏的产品，否则可能对人体造成伤害。请务必用原装型号更换损坏的部件。
- 本产品包含的电池不可更换。
- 切勿拆开本产品更换充电电池。

## 注意

- 切勿将清洁系统或充电座浸入水中，也不要在水龙头下冲洗 (图 1)。
- 切勿使用温度高于 60° C 的热水冲洗剃须刀。只能将本产品用于用户手册中所示的原定用途。
- 出于卫生的目的，本产品只能供一个人使用。
- 切勿使用压缩气体、钢丝绒、研磨性清洁剂或腐蚀性液体（例如汽油或丙酮）来清洁产品。
- 如果剃须刀随附清洁系统，应始终使用原装飞利浦清洁液（滤芯或瓶，取决于清洁系统类型）。
- 清洁系统必须放在稳定、平坦的水平表面上，以防漏液。
- 如果清洁系统采用清洁滤芯，在使用清洁系统进行清洁或剃须刀充电之前，应始终确保滤芯仓已关闭。
- 清洁系统准备就绪时，切勿移动，以免清洁液漏出。
- 冲洗剃须刀时，水可能从产品底部的插口漏出。这是正常的，而且没有危险，因为所有电子元件都封闭在剃须刀内部的密封电源部件中。
- 请勿在包含电动空气清新器的墙壁插座上或其周围使用电源部件，以免电源部件受到不可修复的损坏。

## 电磁场 (EMF)

本 Philips 产品符合所有有关暴露于电磁场的适用标准和法规。

## 概述

- 符号注释：适合于在洗澡或淋浴时使用 (图 2)。允许在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本器具。
- 该剃须刀具有防水性能 (图 2)。适合在沐浴或淋浴时使用，也可以放在水龙头下清洗。出于安全原因，该剃须刀在使用时不能连接电线。
- 电源部件适合在 100 – 240 伏的电源电压下工作。
- 该电源部件可将 100–240 伏的电压转换为 24 伏以下的安全低电压。

## 拆下充电电池

因为电池含有对环境 and 人类健康有害的成分，在您弃置电池之前，请前往提供专业处理服务的飞利浦服务中心，服务人员会遵循以下说明进行操作：

- 必须从产品上卸下电池，然后才能将其弃置。
- 卸下电池时，请确保产品与电源断开连接。
- 取出电池后，需予以安全弃置。

<b>PHILIPS</b>	
产品：飞利浦电动剃须刀 型号：S3561	<b>IPX4</b> 
额定电压：220V – 额定频率：50Hz 额定输入功率：9W 生产日期：请见产品本体 产地：中国广东珠海	
珠海经济特区飞利浦家庭电器有限公司 中国珠海市三灶镇琴石工业区 全国顾客服务热线：4008 800 008	
本产品根据国标 GB4706.1-2005, GB4706.9-2008制造	

# 保留备用

发行日期：31/10/2019

产品中有害物质的名称及含量						
部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI) )	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
Internal metal parts 内部金属件	X	o	o	o	o	o
本表格依据SJ/T 11364的规定编制。						
o: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。						
X: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求						

- 该表格中所显示的“有害物质”在产品正常使用情况下不会对人身和环境产生任何伤害。
- 该表格中所显示的“有害物质”及其存在的部件向消费者和回收处理从业者提供相关物质的存在信息，有助于产品废弃时的妥善处理。

## 繁體中文

## 危險

- 電源供應裝置請保持乾燥 (圖 1)。

## 警示

- 如需為電池充電，僅可使用裝置隨附的可拆式電源供應裝置 (型號：HQ8505)。
- 電源供應裝置內含一個變壓器。請勿切斷電源供應裝置而以其他的插頭取代，否則會造成危險。
- 本產品可供 8 歲以上兒童、身體官能或心智能力退化者，或是經驗與使用知識缺乏者使用，但需有人從旁監督或指示如何安全使用本產品，且使用者需了解使用本產品的潛在危險。請勿讓小孩把玩本產品。若無人監督，請勿讓兒童進行清潔和使用者維護。
- 在水龍頭下沖洗電鬍刀之前，請先拔掉電鬍刀的插頭。
- 使用前請務必檢查本產品。若產品受損請勿使用，以免受傷。零件如有受損，請務必以原型號更換之。
- 本產品包含無法更換的電池。
- 請勿拆開本產品更換充電式電池。

## 警告

- 切勿將清潔系統或充電座浸入水中，或直接在水龍頭下沖洗 (圖 1)。
- 切勿使用超過 60° C 的熱水沖洗電鬍刀。
- 本產品僅限用於本使用手冊所述之相關用途。
- 為衛衛生起見，請勿多人共用本產品。
- 絕對不可使用壓縮空氣、鋼絲絨、磨蝕性的清潔劑或侵蝕性的液體（例如汽油或丙酮）清潔本產品。
- 如果您的電鬍刀配備清潔系統，請務必使用飛利浦原廠清潔液（補充匣或補充瓶，依清潔系統的類型而定）。
- 請務必將清潔系統放置在穩固、平整的水平面上，以防滲漏。
- 如果您的清潔系統使用的是補充匣，在使用清潔系統清潔電鬍刀或為電鬍刀充電之前，請務必確定補充匣蓋已關閉。
- 當清潔系統準備就緒可供使用時，應避免移動它，以防清潔液漏出。
- 在您沖洗時，電鬍刀底部的插孔可能會滴水。此為正常現象，並不會造成危險，因為所有的電子零件都密封於電鬍刀內的電力裝置中。
- 警告符号注释：禁止用在打开的水龙头下进行清洗。(图1)

## 電磁波 (EMF)

本Philips產品符合所有電磁場暴露的相關適用標準和法規。

## 一般

- 此符號表示：可於淋浴期間 (圖 2)使用。可以在浴缸、淋浴間或其他裝水容器附近使用本產品。
- 本電源供應裝置適用於 100 到 240 伏特的插座電壓。
- 電源供應裝置可以將 100–240 伏特的電壓轉換為低於 24 伏特的安全低電壓。

## 取出充電式電池

電池包含對環境及人體健康有害的物質，棄置產品前請聯絡飛利浦服務中心尋求專業的棄置服務，以符合以下規定：

- 本產品報廢之前，請務必從產品中卸除電池。
- 卸除電池之前，請務必切斷本產品的電源。
- 取出電池後，請以安全的方式棄置。



www.philips.com/support


图1



图2




包装盒内有什么？

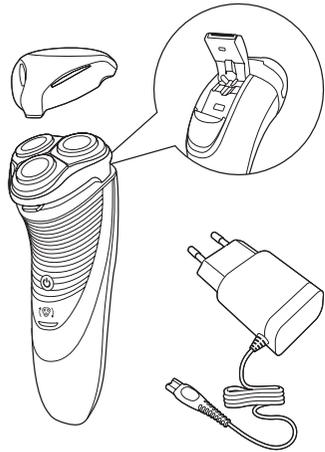

充电




湿剃

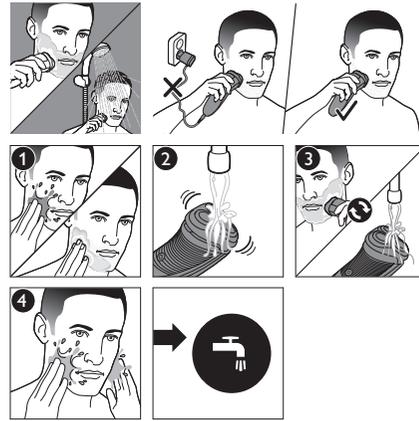


使用修剪器



在水龙头下冲洗剃须刀头部件

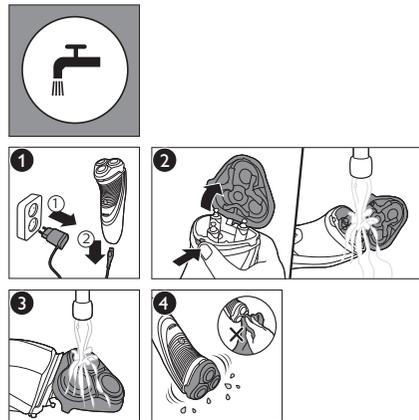

彻底清洁

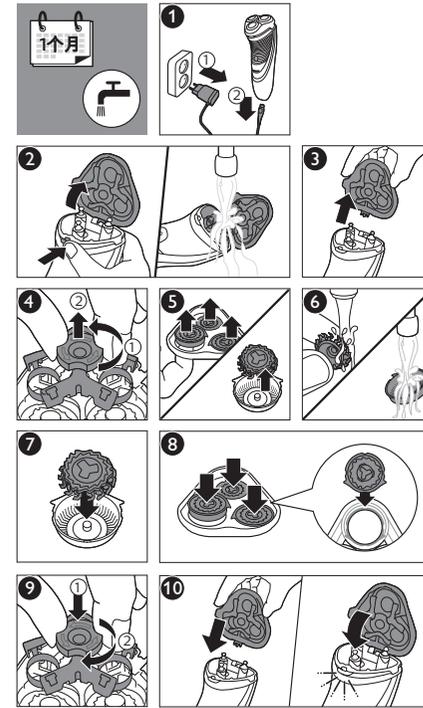

更换

