

PHILIPS

Shaver



フィリップス 電動シェーバー

品番 **PQ209/17**

取扱説明書

フィリップス シェーバーをお買い上げいただき、まことにありがとうございます。長い間で愛用いただくために、ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。

また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。

商品のご確認

商品をご確認ください



保護キャップ



クリーニングブラシ



本体



単3形アルカリ乾電池
(2本)



ポーチ

※改良の為、仕様を予告なく変更することがあります。

目次

●はじめに	商品のご確認 1 目次 2 必ずお守りください 3・4 各部の名称／ 保護キャップの取り付け方・携帯の仕方 ... 5・6 シェーバーの準備 7
●ご使用方法	シェービングの仕方 8・9 お手入れ方法 10 刃の交換と分解掃除の仕方 11・12
●廃棄について	シェーバーを廃棄するとき 12
●困ったとき	故障かな?と思ったら 13
●英文解説	Guidance in English ... 14～25
●保証	保証とアフターサービス 27 仕様 28 無料修理規定 30 保証書 最終ページ

必ずお守り ください

安全上のご注意

- ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。

○絵表示について



注意 人が傷害を負う可能性及び物的損害のみの発生が想定される内容。

○絵表示の例



・記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁止内容(左図の場合は分解禁止)を示します。



注 意



- シェーバー本体は改造しないでください。また、修理技術者以外の方は、分解したり修理をしないでください。火災、感電、ケガの原因となります。修理はフィリップスサポートセンターにお問い合わせください。



- 浴室での使用は絶対にしないでください。ショート・感電の原因になります。



- シェーバー本体を水に浸けたり、水をかけたりしないでください。故障や、ショート・感電の原因になります。



- 乳幼児の手の届くところに本製品を置かないでください。



- 刃は強く押さえないでください。破損して皮膚を傷つけることがあります。

⚠ 注意


- ❗ ● 刃が破損または故障した場合は、本製品を使用しないでください。ケガの原因になります。交換の際には必ずフィリップス社製の同型部品とお取り替えください。
- ❗ ● 乾電池は幼児の手の届かないところに保存してください。
- ❗ ● 乾電池に表示してある注意内容は必ずお守りください。
 - ・乾電池は+端子と-端子の向きを確かめ、正しく入れてください。
 - ・使い切った乾電池は、すぐに取り出してください。
 - ・長期間使用しないときは、乾電池を取り出しておいてください。
 - ・使用推奨期限内の乾電池を使用してください。
 - ・乾電池を火の中に投入したり、ショート分解しないでください。乾電池の発熱、破裂、液漏れによるケガや周囲汚損の原因になります。

使用上のご注意

1. 本製品は、ヒゲを剃るためのものです。頭髮を刈るなど、それ以外の目的で使用しないでください。
2. フィリップスのシェーバーを初めてお使いの方は、剃り方に慣れるまで2～3週間かかることがあります。
3. 本製品の使用、保管は室温5℃～35℃の環境下で行ってください。(尚、低温や高温で使用すると、乾電池の寿命が短くなります。また本体が作動しない場合があります。)
4. 本製品は水洗いできません。水や液体の中に浸したり、水道水ですすいだりしないでください。
5. 本製品を浴室やシャワー中に使用しないでください。
6. 外刃は、薄く仕上げてありますので、刃部を強く押さえたり、硬いものに当てないように、ていねいに扱ってください。
7. シェービングユニットの清掃や着脱は、必ずスイッチを切ってから行ってください。
8. 切れ味が衰えてきたり、刃が破損した場合は、使用せず必ず新しい替刃と交換してください。
9. 直射日光の当たる場所には保管しないでください。夏場、車の中に放置しないでください。
10. シェービングユニットは、使用の都度、クリーニングブラシを使って掃除をしてください。
11. 長期間ご使用にならない場合は、本製品から乾電池を取り外してください。
12. 使用済みの乾電池は、ゴミ箱に捨てずに各自治体の指示に従って処理してください。

各部の名称

本体

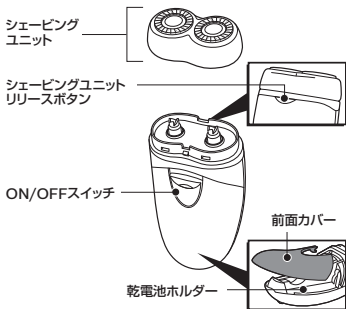

●シェービングユニット分解部品 ▶P.11




※分解掃除する場合は、内刃と外刃の組み合わせを変えないようご注意ください。
※替刃は内刃と外刃で1組です(替刃品番HQ56/51[替刃3個入り]
*交換の際、1個余りますのでスペアとして保管してください)。

保護キャップ ▶ P.6



ポーチ ▶ P.6



単3形アルカリ乾電池(2本)
▶ P.7



クリーニングブラシ
▶ P.10



携帯する場合は、保護キャップ
を取り付けてください。

保護キャップの取り付け方・
携帯の仕方


1 保護キャップの取り付け方

保護キャップを図のようには
め込み、シェービングユニット
に取り付け、保護します。

2 携帯の仕方

シェーバーをポーチに入れて、
携帯します。

※ 携帯する場合は、保護キャップ
を取り付けてください。

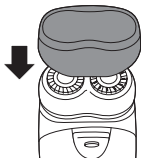

シェーバーの準備

新品の単3形アルカリ乾電池2本で
約60分使用できます。

乾電池を入れる

本製品はアルカリ乾電池式です。ご使用前にシェーバー本体に乾電池がセットされているか確認してください。新品の単3形アルカリ乾電池2本で、約60分ご使用になれます。

- 1 乾電池をセットする際には、スイッチを必ずOFFにしてください。




- 2 前面カバーを矢印の方向に引き上げて取り外します。



- 3 乾電池ホルダーに乾電池をセットします。

※+端子と-端子の向きにご注意ください。



- 4 前面カバー上部の突起を溝に合わせ(図①)、前面カバー全体をカチッと音がするまではめ込みます(図②)。



※通常の目安として新品の単3形アルカリ乾電池2本で1日3分使用し、約20日間使用できますが、ご使用状況(使用頻度、ヒゲの質等)により異なります。



注意

乾電池の液漏れによる故障を防ぐために、次のことをお守りください。

- 本製品を直射日光の当たる場所に放置しないでください。
- 気温35℃以上の環境下で使用しないでください。
- 本製品を1か月以上ご使用にならない場合は、乾電池を取り外してください。
- 消耗した乾電池を本製品に入れたままにしないでください。また、ご使用済みの乾電池は、各自治体の指示に従って処理してください。

シェービングの 仕方




警告

浴室やシャワー中に使用しないでください。シェーバー本体は、水や液体の中に浸けないでください(故障の原因となります)。

- ほこりなどで肌が汚れている場合、ふきとってからご使用ください。
- ご使用前に外刃の破れや変形がないか確認してください(外刃に破れや変形があると肌を傷つける原因になります)。
- ヒゲ剃り以外の目的(頭髪など)には、使用しないでください。
- 肌が乾いた状態でご使用ください。
- シェービングフォーム、ジェル、石けん等はお使いいただけません。

- 1 スイッチを上スライドさせて、電源をONにします。



- 2 刃を肌に軽く押しあて、円を描くように動かしながら剃ります。



- 3 シェービング後はスイッチを下にスライドさせて、電源をOFFにします。

上手に
剃るには

肌に強く押しつけるのではなく、軽く押しあてて
円を描くように回転させながら剃るのがコツです。



ほお

肌を伸ばし、ヒゲを立たせるように円を描くように小さく回転させながら剃ります。



あごの裏側

刃を肌に軽くあて、図のようにあごを上げて円を描くように小さく回転させながら剃ります。



ほおの奥から首筋

片方の手で肌を後ろに引っ張りながら剃ります。



鼻の下

鼻の下を伸ばし、円を描くように小さく回転させながら剃ります。

フィリップスのシェーバーを初めてお使いの方は、剃り方に慣れるまで2～3週間かかることがあります。初めてのシェービングで思い通りの結果が得られないことや、少し肌にヒリヒリ感が残る場合がありますが、これは普通のことです。フィリップスのシェーバーに限らずシェービング方法を変える時には、肌もヒゲも新しいシェービング方法に慣れる時間が必要です。新しいシェーバーに肌を慣らす為、まずは3週間このシェーバーを使い続けてみてください(最低でも1週間に3回以上)。この3週間は、あまりシェービング方法を変えたりせず、同じシェーバーで肌を慣らすことが大切です。

シェーピングユニットについてはなるべく使用の都度クリーニングブラシで掃除をしてください。

お手入れ方法



注意

- お手入れの際は、スイッチをOFFにしてください。
- 本体の汚れは、乾いた布で拭取ってください。とれにくい汚れは中性洗剤を含ませた布で拭取り、その後水分や洗剤を拭取ってください。本体を水に浸したり水洗いする事は故障の原因となりますので絶対にやめてください。

1 スイッチをOFFにします。



2 シェーピングユニット表面をクリーニングブラシで掃除してください。



3 シェーピングユニットリリースボタン(図①)を押し、シェーピングユニット(図②)を引き上げて取り外します。



4 シェーピングユニット裏面をクリーニングブラシで掃除してください。

※より細かいお手入れ方法は、P11をご参照ください。



5 シェーピングユニット内部をクリーニングブラシで掃除してください。



6 本体にシェーピングユニットを戻します。



刃の交換と 分解掃除の仕方

- 分解掃除は約2カ月に1回が目安です。
- 分解掃除する場合は、内刃と外刃の組み合わせを変えないようにご注意ください。組み合わせが変わると、刃の状態が元通りになるまで数週間かかる場合があります。

刃の取り外し方


- 1 スイッチをOFFにします。




- 2 シェービングユニットリリースボタン(図①)を押し、シェービングユニット(図②)を引き上げて取り外します。



- 3 保持板はつまみを図①の方向に押しながら、図②の方向に持ち上げると外れます。



- 4 シェービングヘッドを1組ずつ保持板より取り外します。



- 5 取り外したシェービングヘッドを内刃と外刃に分解します。



- 6 内刃をクリーニングブラシで掃除します。矢印のようにクリーニングブラシを丁寧に動かします。




- 7 外刃をクリーニングブラシで掃除します。




お買い上げ時に装着されている刃と形状は異なりますが、替刃はHQ56/51となります。

刃の取り付け方


- 1 内刃と外刃を正しい組み合わせにセットし、シェービングヘッドを保持板に戻します。



- 2 保持板をユニットフレームにカチッと音がするまではめ込みます。



- 3 本体にシェービングユニットを取り付けます。



シェーバーを 廃棄するとき

- 古くなったシェーバーを廃棄するときは、乾電池を取り出してください。乾電池には環境を汚染するおそれのある物質が含まれています。各自治体の指示に従って処理してください。

故障かな？ と思ったら

故障かな？と思ったら、
お調べください。

だんだん切れ味が悪くなった

- ▶シェービングユニットが汚れていませんか？
- ▶刃が損傷または摩耗していませんか？
損傷または摩耗しているときは、刃を交換してください。
(替刃品番：HQ56/51)
- ▶シェービングユニットに長いヒゲがからまっていますか？
P11・12「刃の交換と分解掃除の仕方」の項をお読みください。


使用時間が極端に短い

- ▶刃の掃除はしていますか？
それでも改善されないときは、乾電池の寿命です。
新しい乾電池に取り替えてください。

シェーバーのスイッチを入れても作動しない

- ▶前面カバーが開いていませんか？
前面カバーは、しっかり閉じてください。
- ▶乾電池が逆方向に入っていないですか？
乾電池の方向を確認してください。
- ▶乾電池が切れていませんか？
新しい乾電池に取り替えてください。
※乾電池を取り替えても作動しない場合は、絶対にご自身で分解したり修理したりせず、フィリップスサポートセンターにお問い合わせください。
- ▶刃が動かなくなるほど汚れているか、刃にキズがあるか、または刃が破損していませんか？
シェービングユニットをお手入れするか、刃を交換してください。

以上の点検により、正常な状態に戻らない場合は、
フィリップスサポートセンターにお問い合わせください。

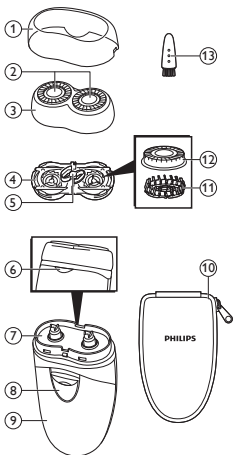

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at **www.philips.com/welcome**.

General description (Fig. 1)

- 1 Protection cap
- 2 Shaving heads
- 3 Shaving unit
- 4 Retaining frame
- 5 Central spring of retaining frame
- 6 Release button
- 7 Hair chamber
- 8 On/off slide
- 9 Lid of battery compartment
- 10 Pouch
- 11 Cutter
- 12 Guard
- 13 Cleaning brush

Important

Read this user manual carefully before you use the shaver and save it for future reference.

Danger

- Keep the shaver and the mains cord dry.

Warning

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.





- Children should be supervised to ensure that they do not play with the appliance.

Caution

- This appliance is not washable. Never immerse the appliance in water; nor rinse it under the tap.
- Do not use the shaver, the mains cord or any other part if it is damaged, as this may cause injury. Always replace a damaged mains cord or part with one of the original type.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General

- The shaver is equipped with an automatic voltage selector and is suitable for mains voltages ranging from 100 to 240 volts.
- Maximum noise level: $L_c = 69\text{dB(A)}$

Preparing for use

Inserting the batteries

The appliance operates on two R6 AA 1.5-volt alkaline batteries. Preferably insert new Philips alkaline batteries to get optimal shaving performance.

Make sure that your hands are dry when you insert the batteries.

ENGLISH



- 1** Remove the lid of the battery compartment



- 2** Place two batteries in the battery compartment.

Note: Make sure the + and - indications on the batteries match the indications in the battery compartment.

Note: The shaver does not work if the batteries have been placed incorrectly.



- 3** Put the lid of the battery compartment back onto the appliance. First place the top part of the lid (1) and then press down the bottom part until you hear a click (2).

How to avoid damage due to battery leakage

- Do not expose the appliance to temperatures higher than 35°C.
- Remove the batteries if you are not going to use the appliance for a month or more.
- Do not leave empty batteries in the appliance.

Shaving time

Two new Philips alkaline batteries offer a shaving time of 60 minutes.

Using the appliance

- 1** Remove the protection cap.



- 2** Press the on/off slide to unlock it and push it upwards to switch on the shaver.

The on/off slide has an integrated switch lock to prevent accidental switching on of the shaver.



- 3** Move the shaving heads over your skin. Make both straight and circular movements.

Note: Shave on a dry face only. Do not use the shaver in combination with gel, foam or water.

Note: Your skin may need 2 or 3 weeks to get accustomed to the Philips shaving system.

- 4** Push the on/off slide downwards to switch off the shaver.

- 5** Clean the shaver after every shave, see chapter 'Cleaning and maintenance'.

- 6** Put the protection cap on the shaver after use to prevent damage and to avoid dirt accumulation in the shaving heads.



Cleaning and maintenance

Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Clean the shaver after every shave to guarantee better shaving performance.

After every shave: shaving unit and hair chamber

- 1** Switch off the shaver.

ENGLISH



- 2** Clean the top of the appliance with the cleaning brush supplied.



- 3** Press the release button (1) and pull the shaving unit a straight up off the shaver (2).



- 4** Clean the inside of the shaving unit with the cleaning brush.



- 5** Clean the hair chamber with the cleaning brush.



- 6** Put the shaving unit back onto the shaver.

Every two months: shaving heads

Note: Do not use cleaning agents or alcohol to clean the shaving heads.



- 1** Switch off the shaver.
- 2** Press the release button (1) and pull the shaving unit straight up off the shaver (2).



- 3** To remove the retaining frame, push the sides of the central spring towards each other (1). Then lift the retaining frame out of the shaving unit (2).



- 4** Slide the shaving heads out of the retaining frame. Remove and clean one shaving head at a time. Each shaving head consists of a cutter and a guard.

Note: Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally mix up the cutters and guards, it may take several weeks before optimal shaving performance is restored.



- 5** Remove the guard from the cutter.



- 6** Clean the cutter with the cleaning brush. Brush carefully in the direction of the arrows.

ENGLISH



- 7** Clean the guard with the cleaning brush.



- 8** Put the cutter back into the guard after cleaning.



- 9** Slide the shaving heads back into the retaining frame.



- 10** Put the retaining frame back into the shaving unit ('click').



- 11** Put the shaving unit back onto the shaver.

Storage

Keep the appliance dry.



Use and store the appliance at a temperature between 5°C and 35°C.

- 1** Switch off the shaver.
- 2** Put the protection cap on the shaver after use to prevent damage and to avoid dirt accumulation in the shaving heads.
- 3** Store the shaver in the pouch supplied.

Replacement

Replace the shaving heads every two years for optimal shaving results.

Replace damaged or worn shaving heads with Philips HQ56 shaving heads only.

For instructions on how to remove the shaving heads, see chapter 'Cleaning and maintenance', section 'Every two months: shaving heads'.

Ordering accessories

To buy accessories or spare parts, visit **www.shop.philips.com/service** or go to your Philips dealer. You can also contact the Philips Consumer Care Centre in your country (see the worldwide guarantee leaflet for contact details).

To retain the top performance of your shaver, make sure you clean it regularly and replace its shaving heads at the recommended time.

Shaving heads

- We advise you to replace your shaving heads every two years. Always replace them with Philips HQ56 shaving heads only.



ENGLISH

Environment

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Guarantee and support

If you need information or support, please visit **www.philips.com/support** or the separate worldwide guarantee leaflet.

Guarantee restrictions

The shaving heads (cutters and guards) are not covered by the terms of the international guarantee because they are subject to wear.

Troubleshooting

This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, contact the Consumer Care Centre in your country.

Problem	Possible cause	Solution
The shaver does not shave as well as it used to.	The shaving heads are dirty. You have not cleaned the shaver well enough or you have not cleaned it for a long time.	Clean the shaver thoroughly before you continue shaving. See chapter 'Cleaning and maintenance'.

Problem	Possible cause	Solution
	Long hairs obstruct the shaving heads.	Clean the cutters and guards with the cleaning brush supplied. See chapter 'Cleaning and maintenance', section 'Every two months: shaving heads'.
	The shaving heads are damaged or worn.	Replace the shaving heads. See chapter 'Replacement'.
The shaver does not work when I push the on/off slide upwards.	The batteries are placed incorrectly.	Make sure the + and - indications on the batteries match the indications in the battery compartment.
	The batteries are empty.	Replace the batteries. See chapter 'Preparing for use'.
My skin is irritated after shaving.	Your skin needs time to get used to the Philips shaving system.	Skin irritation during the first 2-3 weeks of use is possible. After this period, the skin irritation usually disappears.
The rotation speed of the shaving heads is slower than usual.	Too much dirt has collected in the shaving heads.	Clean the shaving heads. See chapter 'Cleaning and maintenance'.
	The batteries are empty	Replace the batteries. See chapter 'Preparing for use'.

ENGLISH

Problem	Possible cause	Solution
The appliance makes a strange noise.	Too much dirt has collected in the shaving heads.	Clean the shaving heads. After cleaning, lubricate the central point on the inside of the guards with Philips Cleaning Spray (HQ110). See chapter 'Cleaning and maintenance'.
	The shaving heads are damaged or worn.	Replace the shaving heads. See chapter 'Replacement'.

保証と アフターサービス

保証書と修理サービスについて
(必ずお読みください)

〈保証書・最終ページに付属〉

- 保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取っていただき内容をよくお読みのと大切に保管してください。

保証 期間	お買い上げ日から2年間
対象 部分	本体(シェービングユニット、 保護キャップ、クリーニング ブラシ、ポーチ、単3形ア ルカリ乾電池を除く)

【補修用性能部品の保有期間】

- 補修用性能部品の保有期間は製造打ち切り後6年です。
- 性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談は】

- 修理に関するご相談ならびにご不明な点は、フィリップスサポートセンターにお問い合わせください。

【修理を依頼されるときは】

- 修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。尚、異常のあるときはご使用を中止し、フィリップスサポートセンターにお問い合わせください。

【保証期間中は】

- 製品と保証書をご用意いただき、フィリップスサポートセンターにお問い合わせください。保証書の記載内容により無料修理いたします。

【保証期間が過ぎているときは】

- 修理によって製品の機能が維持できる場合は、補修用性能部品の保有期間内であれば、ご希望により有料で修理させていただきます。

【海外での本製品の保証及びアフターサービスについて】

- 本製品の保証は海外においても有効です。
(同シリーズ製品の取り扱いがある国に限ります)
- 日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。
- 海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お困りの点がございましたら下記までご連絡ください。

Philips Consumer Lifestyle Service Department P.O.Box 20100 9200 CA
DRACHTEN The Netherlands Fax:+31 51 259 2785

【お客様の個人情報のお取り扱いについて】

- お受けしましたお客様の個人情報は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

お買い上げ日	年 月 日	お買い上げ店名	TEL. ()
--------	-------	---------	----------

ご使用の時、このような症状はありませんか？

- 本体にさわると時々電気を感じる。
- こげくさい臭いがする。
- その他の異常、故障がある。

長年ご使用のシェーバーの点検を！



愛情点検

このような症状の時は、故障や事故防止のため、電源をOFFにし、必ずフィリップスサポートセンターにお問い合わせください。

仕 様

品 番	PQ209/17
電 源 方 式	単3形アルカリ乾電池2本
本 体 質 量	約141g (乾電池装着時)
替 刃	HQ56/51

※改良の為、仕様を予告なく変更することがあります。

株式会社 フィリップス・ジャパン

〒108-8507 東京都港区港南2-13-37 フィリップスビル



無料修理規定

〈無料修理規定〉

1. 取扱説明書、本体貼付ラベル等の注意書に従った正常な使用状態で保証期間内に故障した場合には、無料修理します。
2. 保証期間内に故障して無料修理をお受けになる場合には、フィリップスサポートセンターにお問い合わせください。
3. ご贈答品の修理に関するご相談は、フィリップスサポートセンターにお問い合わせください。
4. 保証期間内でも次の場合には有料修理になります。
 - ① 使用上の誤り及び不当な修理や改造による故障及び損傷。
 - ② お買い上げ後の輸送、移動、落下等による故障及び損傷。
 - ③ 火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障及び損傷。
 - ④ 一般家庭以外（例えば、業務用の長時間使用）に使用された場合の故障及び損傷。
 - ⑤ 保証書の提示がない場合。
 - ⑥ 保証書にお買い上げ年月日、お客様名、販売店名の記入のない場合、或は字句を書き換えられた場合。

※保証書は、本書に明示した条件のもとにおいて無料修理をお約束するものです。従って保証書を発行している者（保証責任者）、及びそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。

保証期間経過後の修理についてご不明の場合は、フィリップスサポートセンターにお問い合わせください。

※保証期間経過後の修理・補修用性能部品の保有期間について詳しくは取扱説明書の保証とアフターサービスの項目をご覧ください。

※お客様にご記入いただいた個人情報（保証書の控え）は保証期間内のサービス活動及びその後の安全点検活動のために利用させていただく場合がございます。ご了承ください。また個人情報は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

＜ フィリップス 電動シェーバー 保証書 ＞

CERTIFICATE OF PURCHASE

この保証書は、「無料修理規定」記載内容で無料修理を行うことをお約束するものです。お買い上げの日から下記期間中に故障が発生した場合は、フィリップスサポートセンターにお問い合わせください。

お客様にご記入いただいた個人情報(保証書の控え)は、株式会社フィリップス・ジャパンのホームページ<http://www.philips.co.jp/>に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

品 名	電動シェーバー
品 番	PQ209/17
保 証 期 間	お買い上げ日より2年
対 象 部 分	本体(シェーピングユニット、保護キャップ、クリーニングブラシ、ポーチ、単3形アルカリ乾電池を除く)
お買い上げ日	年 月 日
お 客 様	ご住所 〒
	ご芳名
	電話番号
★ 販 売 店	販売店名・住所・電話番号

★ 保証書は再発行しませんので、大切に保管してください。

★ ご販売店様へ この保証書はお客様へのアフターサービスの実施と責任を明確にするものです。贈答品、記念品の場合も含めて必ず記入捺印してお客様にお渡しください。

★ 製品の使用方法や
修理に関するお問い合わせ

フィリップスサポートセンター
0120(944)859

受付時間:9:00~18:00(年末年始除く)

Webからのお問い合わせ▶



MyPhilips 登録のご案内

フィリップスでは、製品をより快適にご使用いただくために製品登録をおすすめしております。MyPhilips では製品の保証書や購入証明書の写真も保管でき、万が一購入証明書を紛失された場合にも安心です。

URL <http://www.philips.co.jp/myphilips-about>

この印刷物は再生紙を使用しております。



3000.037.3020.1 (04/19)