



品番 BT3206/14

取扱説明書

フィリップスヒゲトリマーをお買い上げいただき、まことにありがとうございます。長い間愛用いただくために、ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。



●商品のご確認

商品をご確認ください。



※改良の為、仕様を予告なく変更することがあります。

お買い上げのお客様へ 初めてご使用になる際は、ご使用前に充電してください。

△ 注意

- 充電アダプタの電源プラグを抜くときは、電源コード部を持たずに必ず先端の充電アダプタ部を持って引き抜いてください。燃電やショートで発火することがあります。
- 刃は強く押さないでください。刃が傷ついて皮膚を傷つけることがあります。
- 刃やコームなど部品が破損または故障した場合は、本製品を使用しないでください。刃が傷ついて皮膚を傷つけることがあります。
- 刃やコームなど部品が破損または故障した場合は、本製品を使用しないでください。刃が傷ついて皮膚を傷つけることがあります。
- 刃やコームなど部品が破損または故障した場合は、本製品を使用しないでください。刃が傷ついて皮膚を傷つけることがあります。
- 刃やコームなど部品が破損または故障した場合は、本製品を使用しないでください。刃が傷ついて皮膚を傷つけることがあります。

使用上の注意

- 本体は水洗いでできません。水や液体の中に浸れないようご注意ください。また水ですすぎないでください。
 - 本製品は、ヒゲ、もみあげ、足のカット専用です。それ以外の目的で使用しないでください。
 - 本製品の使用、充電、保管は室温5°C~35°Cの環境下で行ってください。(ぬれ湯や高温で充電すると、充電池の寿命が短くなります。)
 - 刃の清掃やコームの磨耗は必ず電源をOFFにしてから行ってください。
 - 刃は、薄く仕上げられていますので、刃を強く押さえたり、硬いものに当たらないよう、ていねいに扱ってください。
 - 直射日光が当たる場所には保管しないでください。夏場、車の中には放置しないでください。
 - 乳幼児の手の届かないところに保管してください。
 - 本製品は、使用の都度、掃除をしてください。
 - 衛生上、他の人は共有しないでください。
- 10. フラフ式道具、芳香剤を使用しているコンセントあるいはその近くのコンセントに充電アダプタを接続しないでください。充電アダプタを傷める原因となります。**

④ 基本的な使い方

- 警告** ●浴室やシャワー中に使用しないでください(感電することがあります)。●ヒゲtrimmer一本体は水や液体の中に浸れないでください(故障の原因となります)。

※使用後は電源をOFFにして、ご使用のために掃除をしてください。

1 トリミングの準備

トリミングを始める前に、必ず目の細かいヒゲの流れを整えてください。


2 長さの設定

ヒゲの長さ
0.5mm
1mm
2mm
3mm
4mm
5mm
6mm
7mm
8mm
9mm
10mm



3 電源のON/OFF

電源スイッチを上にスライドするとON、下にスライドするとOFFになります。

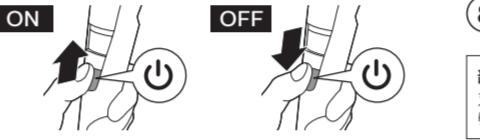

5 トリミングの仕方

1 上手にトリミングするには
上手にトリミングするには、ヒゲの流れに逆らってヒゲトリマー本体を動かします。コーム表面が常に肌に触れているようにしてください。

- ポイント(初めてご使用になる時は)**
- 初めてトリミングするときは体重で重ってください。ヒゲトリマーはゆっくりと、静かに動きやすく動かすようにしましょう。
 - 刃は常に同じ位置で使用されることが可能です。刃は常に同じ方向で動かすことをおすすめします。
 - ヒゲは様々な方向に生えていますので、ヒゲの流れに逆らって様々な方向にヒゲトリマーを動かしてください。
 - 肌やヒゲが乾いている状態でご使用されることをおすすめします。

6 無精ヒゲを作る／ごく短くカットする

無精ヒゲを作る

1 ズームロック長さ調整リングを回して、コームの長さを「0.5」(0.5mm)に設定して使用します。

ごく短くカットする

あごヒゲやヒゲ、もみあげ、襟巻などをごく短くカットしたい場合は、コームをはずしてヒゲトリマーを使います。

1 コームを取り外します。

2 電源をONにします。

3 ヒゲトリマーを軽くカットしたい部分に向けて、丁寧に動かしています。

5 ポイント

- 刃やコームが傷んでしまう前に刃を大切にします。
- 刃やコームをカットする場合は刃を前に正面に動かしてください。

6 モータユニットと本体のすき間に電線を差し込み、モータユニットを差し込みます。

7 モータユニットと充電池のすき間にドライバーを差し込み、充電池を押上げて外します。

8 刃の交換

部品の取り替え

刃やコームが破損・摩耗した場合は、必ずフィリップス社製の同型部品とお取替えください。

1 刃の中央部に親指を当て刃を矢印の方向に押して、刃を取り外します。

2 取り外した刃を刃の付属のクリーニングブラシラジで掃除するか、水ですすぎます。

3 掃除後、刃を本体に押し込んで取り付けます(図②)。

4 刃の中央部に親指を当て刃を矢印の方向に押して、刃を取り外します。

5 刃の中央部に親指を当て刃を矢印の方向に押して、刃を取り外します。

6 掃除後、刃を本体に押し込んで取り付けます(図②)。

9 製品を廃棄するとき

お客様による充電池の修理交換はできません。

ニッケル水素電池のリサイクルについて

本製品はニッケル水素電池を使用しています。

ニッケル水素電池はリサイクル可能な貴重な資源です。

ご使用済みの製品の廃棄に際しては、ニッケル水素電池を取り出し、各自治体の処理方法に従い、リサイクル協力にお持ちください。

10 故障かな?と思ったら

故障かな?と思ったら、お調べください。

充電しても使用時間が短い

- 刃の掃除はしていますか?
- 本製品が充電しても止まるまで作動させてからもう一度約10時間充電してください。
- それでも改善されないときは、充電池の寿命です。

だんだん切れ味が悪くなつた

- 刃が損耗または耗耗していませんか?
- 刃の寿命は約15回、通常2回の使用で約4年が目安ですが使用時間・回数により異なります。刃が耗耗しているときは、刃を交換してください。

電源をONにしても作動しない

- 刃の掃除はしていますか?
- 充電されているか?
- 刃と本体が正しくセットされていますか?

異なる音がする

- 刃に傷が付いていませんか?
- 刃が正しくセッティングされていますか?

充電できない

- 充電アダプタの電源コードが断線していませんか?
- 新しく充電アダプタを買いましたか?

充電アダプタの電源プラグ部はコンセントにきちんと差し込まれていますか?

刃のコネクタ部が充電アダプタの電源コネクタ部にきちんと差し込まれていますか?

本製品がONの状態で充電していませんか?

充電する間に電源を必ずOFFにしてから充電してください。

11 保証とアフターサービス

保証書と修理サービスについて(必ずお読みください。)

①保証書・表面左側に付属

●保証書は、必ずお買い上げ日と販売店名等の記入をお確かめのうえ、販売店から受け取ったときに内容をよくお読みあと大切に保管してください。

②保証期間とお買い上げ日から2年間

対象部分 本体、充電アダプタ、コーム、クリーニングブラシを除く

【補修用性能部品の保有期間】

●補修用性能部品の保有期間は製造打ち切り後 6 年です。

●性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談】

●修理をご依頼されるときは、フィリップスサポートセンターにお問い合わせください。

【保証期間中の修理】

●修理によって商品の機能が復旧できる場合、修理用性能部品の保有期間に渡って、ご希望により有料で修理させていただきます。

【海外での本製品の保証とアフターサービスについて】

●本製品の保証は海外においても有効です。(同シリーズ製品の取り扱いがある国に限ります)

●日本国内へのフィリップスサービス部門においても保証期間及び保証期間の経過後のアフターサービスを受ける場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お問い合わせの際はご連絡ください。

Philips Consumer Lifestyle Service Department P.O.Box 100 9200 CA DRACHTEN
The Netherlands Fax +31 29 278 985

【お客様の個人情報の取り扱いについて】

●お問い合わせいただいた際の個人情報の取り扱いは、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp> に掲載されている「お客様の個人情報の取り扱いについて」の内容でござります。お問い合わせください。

便 メ ノ

お買い上げ日 年 月 日

お買い上げ店名 TEL. ()

ご使用の時、このような症状はありませんか?

- 本体にさわると時々電気を感じる。
- こびりたい感じがある。
- 電源コードが動かす音がする。
- 他の異常、故障がある。

愛情点検

このような症状の時は、故障や事故防止のため、電源をOFFにして充電アダプタをコンセントから外して、必ずフィリップスサポートセンターにお問い合わせください。

12 仕様

品番 BT3206/14

電源方式 充電式(専用充電アダプタ使用)

充電アダプタ品番 A00390

消費電力 2W (AC100V充電時)

定格電圧 AC100-240V (50/60Hz)


本体質量 約122g (コーム含まず)

充電時間 約10時間

※改良の為、仕様を予告なく変更することがあります。

株式会社 フィリップス・ジャパン

〒108-8507 東京都港区港南2-13-37 フィリップスビル

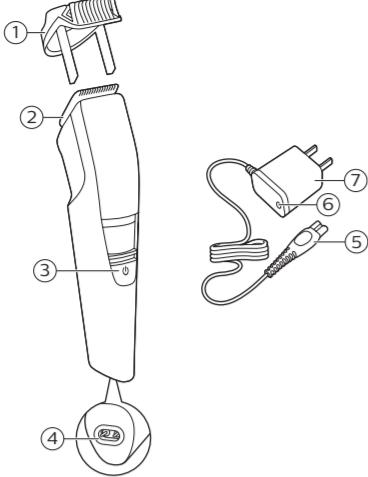

Optimizing the lifetime of the rechargeable battery

When you have charged the appliance for the first time, we advise you to use it until the battery is completely empty. Continue to use the appliance until the motor almost stops running during a session. Then recharge the battery. Follow this procedure at least twice a year.

- Slide the on/off button up to switch the product on or off (Fig. 3).

Using the appliance

Note: Switch off and clean the appliance after each use.

Always comb the beard and/or moustache with a fine comb before you start trimming.

Be careful when you trim for the first time. Do not move the trimmer too fast. Make smooth and gentle movements.

Trimming with comb

Note: When you trim for the first time, start at the highest length setting to familiarize yourself with the appliance.

Use the trimming comb attached to the cutting element to trim your beard and moustache in your preferred style. Turn the zoom wheel to choose from 11 length settings ranging from 0.5mm to 10mm (1/32in. to 13/32in.).

- 1 Slide the trimming comb straight into the guiding groove of the appliance (Fig. 4).

- 2 Turn the zoom wheel to the desired setting (Fig. 5). The desired hair length setting is shown in the center of the zoom wheel.

- 3 Switch the appliance on.

- 4 To trim most effectively, move the appliance against the hair growth direction. Make sure that the surface of the comb always stays in contact with the skin.

Note: Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e., upwards, downwards, or across). Practice is best for optimum results.

- 5 Regularly remove cut hair from the comb. If a lot of hair has accumulated in the comb, remove it from the appliance and blow and/or shake out the hair (Fig. 6). The selected hair length setting does not change when the comb is removed.

- 6 Switch off and clean the product after each use (see 'Cleaning').

Trimming for 'stubble look'

- 1 Be certain trimming comb is attached to the appliance and use setting 0.5mm (1/32in.) to create a 'stubble look' trim (Fig. 7).

Trimming without comb

Use the trimmer without the trimming comb to trim the edges and single hairs.

Be careful when you trim without the comb as the cutting unit will remove every hair it touches.

- 1 Pull the trimming guard straight off the appliance (Fig. 9).

- 2 Switch the appliance on.

- 3 Make well-controlled movements. Touch the hair lightly with the trimmer (Fig. 8).

Cleaning

Never use scouring pads, abrasive cleaning agents or aggressive liquids such as gasoline or acetone to clean the product.

Never dry the trimmer teeth with a towel or tissue, as this may damage the trimmer teeth.

Caution: Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

- 1 Switch off the appliance and disconnect it from the power outlet.

- 2 Wipe the housing of the appliance with a dry cloth.

Caution: Never immerse the appliance in water, or rinse it under the tap. Only the cutting unit can be rinsed under the tap.

- 3 Remove the comb (Fig. 9) and clean it with the cleaning brush and/or rinse it under the tap.

- 4 Remove the cutting unit by pushing against the teeth of the cutting unit (Fig. 10) and clean it with the brush or rinse it under the tap.

- 5 Carefully shake off excess water and let air dry completely.

- 6 Insert the lug of the cutting unit into the guiding slot and push the cutting unit back onto the appliance (Fig. 11).

Ordering accessories

To buy accessories or spare parts, visit www.shop.philips.com/service or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

- This product contains a built-in rechargeable battery which shall not be disposed of with normal household waste. We strongly advise you to take your product to an official collection point or a Philips service centre to have a professional remove the rechargeable battery.

- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

Removing the rechargeable battery

Only remove the rechargeable battery when you discard the product. Before you remove the battery, make sure that the product is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the product and when you dispose of the rechargeable battery.

- 1 Take the comb and the cutting element from the handle and remove the on/off slide by using a flathead screwdriver (Fig. 12).

- 2 Remove the axe by pushing it upwards (Fig. 13).

- 3 Remove two screws from the top of the appliance (Fig. 14).

- 4 Remove one screw above the zoom wheel (Fig. 15).

- 5 Remove one screw on the bottom of the appliance (Fig. 16).

- 6 Remove the front shell with a flathead screwdriver, by placing the screwdriver on the bottom of the appliance and twisting the screwdriver up and down until it comes loose (Fig. 17).


- 7 Cut both wires in the bottom (Fig. 18) and take out the internal structure (Fig. 19).

- 8 Cut the battery wire with a cutter (Fig. 20) and remove the battery (Fig. 21).

Warning: The battery tags can be very sharp.

Warranty and support

If you need information or support, please visit www.philips.com/support or read the international warranty leaflet.

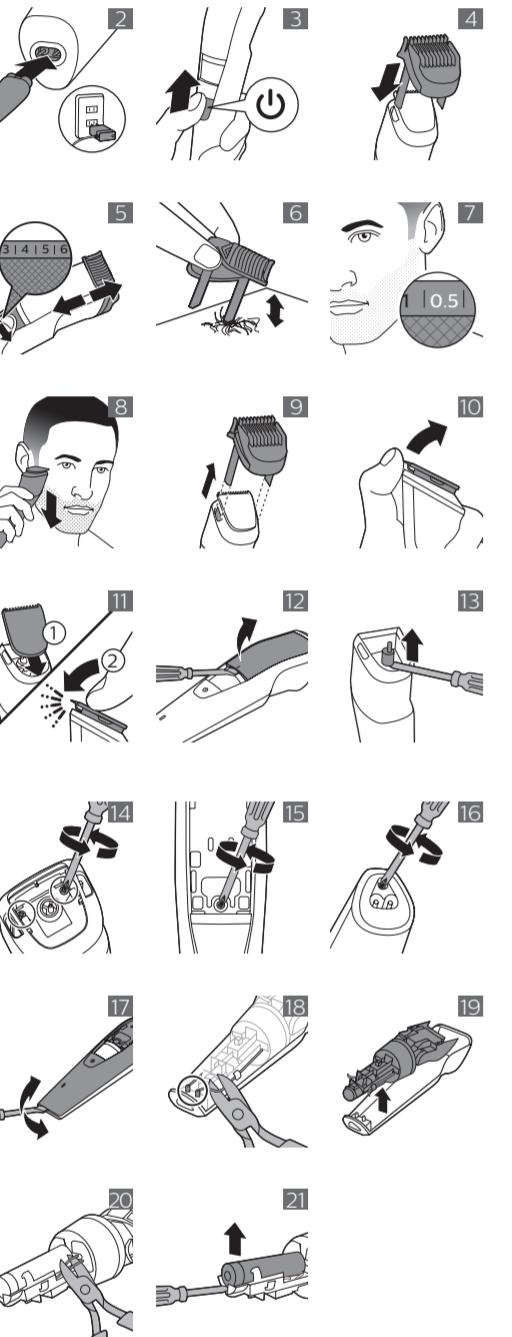

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

General description (fig. 1)

- 1 Trimming guard
- 2 Cutting unit
- 3 On/off button
- 4 Socket for small plug
- 5 Small plug
- 6 Battery charge indicator
- 7 Supply unit
- not shown: cleaning brush

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Danger

- Keep the supply unit dry.

Warning

- To charge the battery, only use the detachable supply unit (A00390) provided with the appliance.
- The supply unit contains a transformer. Do not cut off the supply unit to replace it with another plug, as this causes a hazardous situation.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.
- Do not open the appliance to replace the rechargeable battery.

Caution

- This appliance is not washable. Never immerse the appliance in water and do not rinse it under the tap.
- Only use this appliance for its intended purpose as shown in the user manual.
- For hygienic reasons, the appliance should only be used by one person.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General

- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100-240 volts to a safe low voltage of less than 24 volts.

Charging

Charge the appliance fully before you use it for the first time and after a long period of disuse. It takes approximately 10 hours to fully charge the appliance. When it is fully charged, the appliance has a cordless operating time of up to 45 minutes.

- 1 Make sure the appliance is switched off.
- 2 Insert the small plug into the appliance (Fig. 2).
- 3 Put the supply unit in the wall socket.
- The charging light on the supply unit lights up green to indicate that the product is charging.

Note: The charging light on the supply unit does not change color and does not go out when the product is fully charged.

- 4 After charging, remove the supply unit from the wall socket and pull the small plug out of the appliance.