

**PHILIPS**

Style shaver



フィリップス  
スタイルシェーバー

品番 **QS6162/32**

### 取扱説明書

保証書付


保証書は、この取扱説明書の最終ページについておりますので販売店で記入を受けてください。

フィリップス スタイルシェーバーをお買い上げいただき、まことにありがとうございます。長い間で愛用いただくために、ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。

また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。

## 商品のご確認

商品をご確認ください。

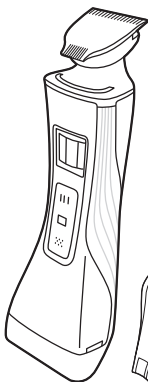

本体



ヒゲコーム



ディテールコーム



クリーニングブラシ



保護キャップ



充電アダプタ



充電スタンド



ソフトポーチ

※改良の為、仕様を予告なく変更することがあります。

## ■品番別 付属品一覧

お買い上げの商品によって付属品が異なります。

該当する品番を下記の一覧よりお選びいただき、付属品をご確認ください。

付属品	品番	QS6162/32
保護キャップ		●
クリーニングブラシ		●
ソフトポーチ		●
充電スタンド		●
充電アダプタ (HQ8505)		●
ヒゲコーム		●
ディテールコーム		●

## **お買い上げのお客様へ**

初めてご使用になる際は、ご使用前に充電してください。

# 目次

●はじめに	商品のご確認 ..... 1・2
	目次 ..... 4
	必ずお守りください ..... 5・6
	各部の名称 ..... 7・8
	充電の仕方 ..... 9
●ご使用方法	基本的な使い方 ..... 10
	トリミングの仕方 ..... 11~13
	シェービングの仕方 ..... 14・15
	お手入れ方法 ..... 16・17
	刃の交換 ..... 18・19
	保管の仕方 ..... 19
●廃棄について	シェーバーを廃棄するとき ..... 20
●困ったとき	故障かな?と思ったら ..... 21
●英文解説	Guidance in English ..... 23~41
●保証	保証とアフターサービス ..... 43
	仕様 ..... 44
	無料修理規定 ..... 46
	保証書 ..... 最終ページ

# 必ずお守り ください

## 安全上のご注意

- ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。
- 誤った取扱いをしたときに想定される内容を「警告」と「注意」とに区別しています。

### ○絵表示について



記号は、「危険、警告、注意」を示します。  
図の中や近くに具体的な注意内容を示します。



**警告** 人が死亡または重傷を負う可能性が想定される内容。



**注意** 人が傷害を負う可能性及び物的損害のみの発生が想定される内容。

### ○絵表示の例



・記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁止内容(左図の場合は分解禁止)を示します。



・記号は、必ずしていただく「強制」を示します。図の中や近くに具体的な強制内容(左図の場合は電源プラグ部をコンセントから抜くこと)を示します。



## 警告



●本製品の電源を入れる前に、充電アダプタに表示されている電圧が、ご使用になる地域の電圧に適しているか確認してください。



●充電アダプタを水に浸けたり、水をかけたりしないでください。故障や、ショート・感電の原因になります。



●シェーバー本体ならびに充電アダプタは改造しないでください。また、修理技術者以外の人は、分解したり修理をしないでください。火災・感電・ケガの原因となります。修理はお買い上げの販売店または小泉成器修理センターにご相談ください。



●充電アダプタを傷付けたり、電源コードを無理に曲げたり、引っ張ったり、ねじったり、たばねたり、重い物を載せたり、挟み込んだり、加工したりしないでください。電源コードが破損し、火災・感電の原因となります。



●お手入れの際は必ず充電アダプタの電源プラグ部をコンセントから抜いてください。また、濡れた手で抜き差ししないでください。感電やケガをすることがあります。



●乳幼児の手の届くところに本製品を置かないでください。



●充電アダプタには変圧器が内蔵されています。充電アダプタを切り離して別のプラグに接続するのは危険ですのでおやめください。









●充電アダプタが傷んだり、コンセントの差込みが緩いときは使用しないでください。感電・ショート・発火の原因になります。



●本製品は、責任者による指導監督の下でない限り、運動能力、感覚能力、知的能力に障害のある方、または経験や知識の少ない方(子供を含む)によるご使用を目的とした製品ではありません。

## ⚠ 注意


-  ● 充電アダプタの電源プラグ部を抜くときは、電源コード部を持たずに必ず先端の電源プラグ部を持って引き抜いてください。感電やショートして発火することがあります。
-  ● 刃が破損または故障した場合は、本製品を使用しないでください。ケガの原因になります。交換の際には必ずフィリップス社製の同型部品と取り替えてください。
-  ● 充電時以外は、充電アダプタをコンセントから抜いてください。ケガややけど、絶縁劣化による感電・漏電・火災の原因となります。
-  ● 刃は強く押さえないでください。破損して皮膚を傷つけることがあります。
-  ● 電源コネクタ受部にピンやごみを付着させないでください。感電・ショート・発火の原因になります。
-  ● 充電アダプタは付属の専用アダプタを使用してください。また付属の専用アダプタで他の商品を充電しないでください。ショート、異常発熱による発火の原因になります。

## 使用上のご注意

1. 本製品はヒゲ(あごヒゲ、口ヒゲ、もみあげなど)の長さを整えたり、シェービングするためのものです。それ以外の目的で使用しないでください。
2. 本製品の使用、充電、保管は室温5℃～35℃の環境下で行ってください。(尚、低温や高温で充電すると、充電電池の寿命が短くなります。また本体が作動しない場合があります。)
3. 刃は、薄く仕上げてありますので、刃部を強く押さえたり、硬いものに当たらないよう、ていねいに扱ってください。
4. リバーシブルトリマー、シェーバーの清掃や着脱は、必ずスイッチを切ってから行ってください。
5. 切れ味が衰えてきたり、刃が破損した場合は、使用せず必ず新しい替刃と交換してください。
6. 極端に高温または低温の場所、直射日光の当たる場所には保管しないでください。夏場、車の中に放置しないでください。
7. 乳幼児の手の届かないところに保管してください。
8. 本製品をソフトポーチに入れたまま充電しないでください。
9. 充電アダプタや充電スタンドは付属の専用アダプタ、専用スタンドを使用してください。
10. 本製品は防水加工をしておりますが、水や液体の中に浸けないでください。
11. 室温、気圧、湿度が急激に変化する状況でご使用になる場合は、本製品をその環境下で30分ほど慣らしてからお使いください。
12. 充電アダプタや充電スタンドが破損、故障した場合は、事故を避けるために必ずフィリップス社製の同型充電アダプタや充電スタンドをお求めください。
13. シェーバーやコームが破損または故障した場合は、本製品を使用しないでください。ケガの原因になります。

# 各部の名称

## 本体

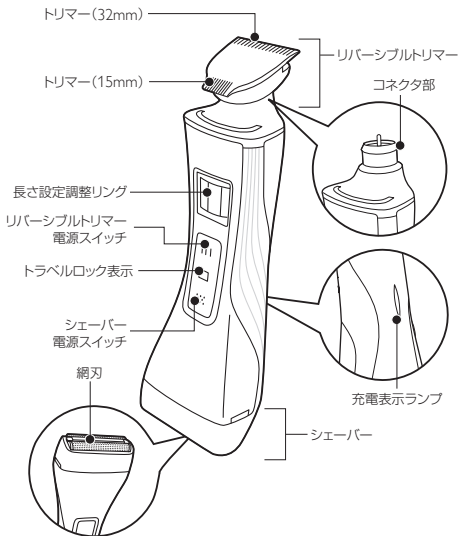



コーム▶P.11・12



ヒゲコーム



ディテールコーム

充電スタンド▶P.9




保護キャップ▶P.19



保護キャップ


クリーニングブラシ▶P.16・17



クリーニングブラシ

充電アダプタ▶P.9

充電アダプタ(HQ8505)

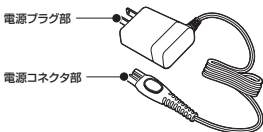

ソフトポーチ



ソフトポーチ

# 充電の仕方

お客様による充電電池の交換はできません。

この商品は通常約1時間充電です。

満充電で約75分使用できます。

## 充電専用タイプ

初めてお使いになるときや、長い間ご使用にならなかったときは、充電しないと使用できません。ご使用前に充電してください。海外(100~240V)でのご使用も可能です。ただし、コンセントの形状や電圧など現地で充分お確かめのうえご使用ください。

※本製品はリチウムイオン電池を使用していますが、ご使用の都度充電をしても充電電池の寿命には影響ありません。

1 充電表示ランプがオレンジ色に点滅したら、充電が少なくなっています(残りの使用時間は約10分です)ので、本製品を充電する必要があります。

2 充電する際には、スイッチを必ずOFFにしてください。動作中はスイッチを1回押すとOFFになります。

※ONの状態では充電できません。

3 充電アダプタの電源コネクタ部を、充電スタンドの電源コネクタ受部に差し込みます。充電スタンドを折りたたんだ状態で電源コネクタ部を差し込むと簡単にできます。



4 カチッと音がするまで充電スタンドを開きます。



5 ご家庭のコンセントに電源プラグ部を差し込みます。

6 スタイルシェーバー本体を充電スタンドに置きます。



7 充電中は、本体の充電表示ランプが白色に点滅し、充電中であることを示します。満充電になると充電表示ランプが白色に点灯します。



※充電完了後、約30分経過すると充電表示ランプが消えます。

※充電表示ランプがオレンジ色に点滅している場合、充電が少なくなっています(残りの使用時間は約10分です)。充電表示ランプがオレンジ色に急速に点滅している場合、充電がなくなっています。再度使用前に充電してください。



注意

- 当社専用の充電アダプタ以外での充電はしないでください。
- 長期間使用しない場合や、使ったり使わなかったりして保管しておく、充電電池が過放電や液漏れして使えなくなることがあります。

## 基本的な使い方

スタイルシェーバーは、ヒゲ(あごヒゲ、口ヒゲ、もみあげ)の長さを整えたり、シェービングすることができます。

### ●トリミングする時

ヒゲの長さを整える時はリバーシブルトリマーを使用します。

トリミングの仕方▶P.11~13

#### 【持ち方】

リバーシブルトリマーが上にくるようにしてスタイルシェーバーを持ち、コームまたはトリマーを皮膚にあてます。



#### 【電源スイッチのON/OFF】

動作していない状態でリバーシブルトリマー電源スイッチを1回押すとON、もう1回押すとOFFになります。

### ●シェービングする時

ヒゲをシェービングしたい時はシェーバーを使用します。

シェービングの仕方▶P.14・15


#### 【持ち方】

シェーバーが上にくるようにしてスタイルシェーバーを持ち、網刃を皮膚にあてます。



#### 【電源スイッチのON/OFF】

動作していない状態でシェーバー電源スイッチを1回押すとON、もう1回押すとOFFになります。

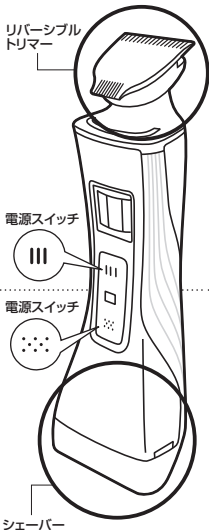

#### 警告

本製品は防水加工をしており、浴室でも使用できますが、水や液体の中に浸けないでください(故障の原因となります)。









#### 注意

ヒゲの長さを整えたり、ヒゲを剃るなど、本来の目的以外で使用しないでください。

# トリミングの仕方

トリミングコームで、ヒゲを様々な長さに整えることができます。  
本製品を初めてお使いいただく際には、最長(10)の設定から始められることをおすすめします。

## ヒゲコームを使ったトリミングの仕方

- リバーシブルトリマーが上になり、シェーバーが下にくるようにしてスタイルシェーバーを持ちます。  

- コームをガイド溝にカチッと音がするまで差し込みます。  
**カチッ**  

- 長さ設定調整リングを左右に動かし、お好みの長さ設定を選びます。長さ設定調整リング上部の縦の線が、選択した長さ設定を示します。  

- リバーシブルトリマー電源スイッチを押し、電源を入れます。  
\*電源スイッチが点灯し、リバーシブルトリマーが作動していることを示します。  

- ヒゲの流れに逆らうように動かします。  

- トリミング後は、リバーシブルトリマー電源スイッチを再度押し、電源を切ります。  


設定	1	・	2	・	3	1mm間隔		8	9	10
長さ	1mm	1.5mm	2mm	2.5mm	3mm			8mm	9mm	10mm

### ポイント

- コームの先端は、スタイルシェーバーを動かす方向に向けてください。
- カットの仕上がりが均一になるように、コームの平らな部分を常に皮膚に密着させ、強く押し付けず、すべらすように動かしてください。
- ヒゲは部位によって毛の向きが異なります。毛の向きに合わせて、カットする方向(上下、左右)を変えてみてください。
- シェーバーを作動中にリバーシブルトリマーの電源を入れることができます。その場合シェーバーの電源はすぐに切れます。
- 皮膚やヒゲは、乾いている方がよりスムーズにトリミングできます。



## 警告

本製品は防水加工をしており、浴室でも使用できますが、水や液体の中に浸けないでください(故障の原因となります)。

- ほこりなどで肌が汚れている場合、ふきとってからご使用ください。
- ご使用前に刃の破れや変形がないか確認してください(刃に破れや変形があると肌を傷つける原因になります)。
- ヒゲの長さを整えたり、ヒゲ剃り以外の目的(頭髪など)には使用しないでください。
- 肌が乾いた状態でご使用ください。
- リバーシブルトリマーにはシェービングフォーム、ジェル、石けん等はお使いいただけません。

## ディテールコームを使ったトリミングの仕方



ディテールコームは、細かな部分のヒゲの長さをより簡単に調整することができます。刃の前面をコームが覆っていないためヒゲが見えやすく、細かな部分までしっかり刃が届きます。

ディテールコームのセットの仕方・長さ設定の方法は、ヒゲコームの場合と同様です。  
(コームのセットの仕方・長さ設定の方法はP11をご参照ください)

## コームなしでのトリミングの仕方

リバーシブルトリマーはコームなしでも使用できます。コームなしで使用した場合、非常に短く(肌から約0.5mm)カットすることができます。また、トリマー(15mm)は、トリマー(32mm)の約半分の幅なので、耳まわりやもみあげ、口まわり、鼻の下などをより細密にスタイリングできます。

### 【トリマー(32mm)の使い方】

- 1 コームを引き抜いて取り外します。引き抜くときは必ずコームの根元部分を持ち、コーム上部は引っ張らないでください。



- 2 リバーシブルトリマー電源スイッチを押し、電源を入れます。  
※電源スイッチが点灯し、リバーシブルトリマーが作動していることを示します。



- 3 リバーシブルトリマーを上にして持ち、リバーシブルトリマーの幅広い刃(32mm)を下方向に動かします。



### 【トリマー(15mm)の使い方】

- 1 リバーシブルトリマーを上にして持ち、リバーシブルトリマーの狭い刃(15mm)が本体前方に向くようリバーシブルトリマーを回します。



上面図

背面側  
(前方)



正面側

- 2 リバーシブルトリマー電源スイッチを押し、電源を入れます。  
※電源スイッチが点灯し、リバーシブルトリマーが作動していることを示します。



- 3 トリマー(15mm)を下方向に動かします。



## シェービングの 仕方(ドライ)

肌が乾いた状態でのシェービングの  
仕方です。



### 警告

本製品は防水加工をしており、浴室でも使用できますが、水や液体の中に浸けないでください(故障の原因となります)。

- ほこりなどで肌が汚れている場合、ふきとってからご使用ください。
- ご使用前に網刃の破れや変形がないか確認してください(網刃に破れや変形があると肌を傷つける原因になります)。
- ヒゲ剃り以外の目的(頭髪など)には、使用しないでください。

- 1 シェーバーが上、リバーシブルトリマーが下にくるようにしてスタイルシェーバーを持ちます。



- 3 網刃を皮膚にあて、スタイルシェーバーを軽く押さえたまま、ヒゲの流れに逆らうようにして動かします。



- 2 シェーバー電源スイッチを押し、電源を入れます。  
※電源スイッチが点灯し、シェーバーが作動していることを示します。



- 4 シェービング後は、シェーバー電源スイッチを再度押し、電源を切ります。



### ポイント

- 刃が皮膚にびったり触れるようにしてください。
- リバーシブルトリマーを作動中にシェーバーの電源を入れることができます。その場合リバーシブルトリマーの電源はすぐに切れます。

### 押しつけ防止機能

リバーシブルトリマーやシェーバーを肌に押しつけすぎたり、本来の使用目的以外での使用で刃が詰まってしまった場合、リバーシブルトリマーまたはシェーバーの電源スイッチが急速に点滅し、自動的に電源が切れます。詰まったものを取り除いて再度お使いください。

# シェービングの 仕方(ウェット)

シェービングフォームやシェービングジェルを使ったシェービングの仕方です。剃った部分を実感しながら、なめらかなシェービングができます。



## 警告

本製品は防水加工をしており、浴室でも使用できますが、水や液体の中に浸けないでください(故障の原因となります)。

- ご使用の前に網刃の破れや変形がないか確認してください(網刃に破れや変形があると肌を傷つける原因になります)。
- ヒゲ剃り以外の目的(頭髪など)には、使用しないでください。
- 石けんもお使いいただけますが、肌の上での滑りをよくするため、シェービングフォームやジェルの使用をお勧めします。粘度の高いどろどろしたタイプのクリームやシェービングオイルは、使用しないでください。

- 1 顔を濡らし、市販のシェービングフォームまたはシェービングジェルを付けます。



- 2 シェーバーが上に、リバーシブルトリマーが下にくるようにしてスタイルシェーバーを持ちます。



- 3 シェーバーの網刃部分を水で濡らし、肌の上でなめらかに動くようにします。

- 4 シェーバー電源スイッチを押して、電源を入れます。

※電源スイッチが点灯し、シェーバーが作動していることを示します。



- 5 網刃を皮膚にあて、スタイルシェーバーを軽く押さえたまま、ヒゲの流れに逆らうようにして動かします。シェービングフォームやシェービングジェルにより、鏡を見た時に剃った部分を確認しやすくなります。

※途中、よりなめらかにシェービングするために、シェービングユニットを水で濡らすと効果的です。



- 6 シェービング後は、シェーバー電源スイッチを再度押し、電源を切ります。



- 7 ご使用の都度シェーバーをきれいに洗います(P17「お手入れ方法」)。

## 【重要】

シェービング後は、シェービングフォームやシェービングジェルがしっかりと洗い流されているかを確認してください。お手入れが不十分な場合、臭いが出るばかりでなく、故障の原因にもなります。



本製品をご使用のたびに掃除をしてください。

※リバーシブルトリマー コネクタ部は少なくとも3カ月に1回は掃除をしてください。

※本製品に潤滑剤を使う必要はありません。

## お手入れ方法

### リバーシブルトリマーのお手入れ

- 1 本体の電源を切ります。



- 2 コームをスライドさせ、本体から取り外します。



- 3 リバーシブルトリマーを水で洗い流します。



### リバーシブルトリマー コネクタ部のお手入れ

- 1 本体の電源を切ります。



- 2 リバーシブルトリマーをやさしく引っ張り本体から取り外します。



- 3 クリーニングブラシでリバーシブルトリマー コネクタ部に溜まったヒゲグズを取り除きます。



- 4 クリーニングブラシでリバーシブルトリマー内に溜まったヒゲグズを取り除きます。



- 5 お手入れ後、リバーシブルトリマーを本体に取り付けます。



シェーバーについてはなるべく使用の都度クリーニングブラシで掃除をしてください。

## 水洗いによるお手入れ方法

※洗剤は使用しないでください。

※ぬるま湯(40℃前後)でのお手入れをおすすめします。臭いのもととなる皮脂や汗などが取れやすくなります。ただし、熱湯はお止めください。故障の原因となります。

※お手入れ中にシェーバーの底から水が漏れてくる場合がありますが、これは正常な状態です。電子部品はすべてシェーバー内部の密閉された部分に内蔵されているので、危険はありません。



**注意**

- お手入れの際は、スイッチをOFFにしてから水洗いしてください。
- 本体は水洗いできますが、水中に浸けないでください。

## シェーバーのお手入れ

※シェービングフォーム等を使ったウェットシェービング後のお手入れ方法です。

1 本体の電源を切ります。



2 水を流しながら、手の平でカップのような形をつくり、そこに水が溜まるようにします。



3 シェーバー電源スイッチを押し、電源を入れます。

※モーターの動きがシェーバーの内部をお手入れするのを助けます。

4 シェービングフォームやヒゲクズがとれるまで、シェーバーを手で動かします。



**注意**

- 網刃は非常に壊れやすいので、取扱いには充分ご注意ください。
- 網刃が破損している場合には、すぐに交換してください。

替刃は網刃・内刃・保護キャップのセットとなります。セットでの交換を行ってください。

替刃品番 網刃 内刃 保護キャップ  
QS6101

## 刃の交換

### 部品の取り替え

刃が破損した場合や切れ味が落ちた場合は、フィリップス製品取扱店または小泉成器部品センターで取扱いしているフィリップス社製の同型部品をご注文していただき、交換してください。

## シェーバー

### [網刃]

- 1 シェーバーを引っ張り本体から取り外します。



- 2 シェーバーから網刃を取り外します。



- 3 新しい網刃をシェーバーにカチッと音がするまで押し込みます。



- 4 シェーバーをカチッと音がするまで本体に押し込み、元の状態に戻します。



### [内刃]

- 1 シェーバーを引っ張り本体から取り外します。



- 2 内刃を取り外します。



- 3 新しい内刃をカチッと音がするまで押し込み取り付けます。



- 4 シェーバーをカチッと音がするまで本体に押し込み、元の状態に戻します。



## リバーシブルトリマー

- 1 リバーシブルトリマーをやさしく引っ張り、本体から取り外します。



- 2 新しいリバーシブルトリマーを本体に取り付けます。



充電スタンドは折りたたんで持ち運んだり保管することができます。

## 保管の仕方

- 1 充電スタンドを折りたたむ  
充電スタンドの底をスタイルシェーバーを立てかけるスタンドの方に向けて折りたたみます。




- 2 シェーバーに保護キャップを取り付けます。



## トラベルロック機能

本製品には、移動中の誤作動を防止するトラベルロック機能が搭載されています。

- 1 トラベルロック機能を作動させるには、リバーシブルトリマー電源スイッチ、シェーバー電源スイッチ、または両方を最低4秒押したままの状態にし、トラベルロック表示を3回点滅させます。  
※トラベルロック機能は、トラベルロック表示が点灯した時のみ作動します。
- 2 トラベルロック機能を解除するには、リバーシブルトリマー電源スイッチ、シェーバー電源スイッチ、または両方を最低4秒押したままの状態にし、トラベルロック表示を4回点滅させます。  
※トラベルロック機能は解除され、本体の電源が入ります。

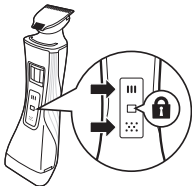

※本体の充電を開始することでもトラベルロック機能は解除されます。

※お客様による充電電池の  
修理交換はできません。

## シェーバーを 廃棄するとき

### リチウムイオン電池のリサイクルについて

このシェーバーはリチウムイオン電池を使用しています。  
リチウムイオン電池はリサイクル可能な貴重な資源です。  
ご使用済みの製品の廃棄に際しては、リチウムイオン電池を  
取り出し、各自治体の処理方法に従い、リサイクル協力店に  
お持ちください。



**注意**

- 製品を廃棄するとき以外は、絶対に本体を分解しないでください。
- 本体内部の金具は鋭いので、ご注意ください。

### 充電電池の取り外し方

スイッチをONにして、完全に動作しなくなるまで充電電池を放電させてから、行ってください。

- 1 シェーバー(図①)  
と内刃(図②)を  
本体から取り外し  
ます。



- 2 ドライバーを使っ  
て4本のねじを外  
します。



- 3 カバーを取り外し  
ます。



- 4 ドライバーをバック  
パネルの下に入れ、  
パネルを取り外  
します。



- 5 ドライバーを本体  
のカバーの下に  
入れ、カバーを取  
り外します。



- 6 プリント回路基板  
が見えますので、  
プリント回路基板  
から充電電池を外  
します。



※充電電池を取り外した後は、通電しないでください。

## 故障かな？ と思ったら

故障かな？と思ったら、  
お調べください。

### だんだん切れ味が悪くなった

- ▶リバーシブルトリマーやシェーバーが汚れていませんか？
- ▶刃が損傷または摩耗していませんか？  
損傷または摩耗しているときは、刃を交換してください。(替刃品番：QS6101)
- ▶シェーバーに長いヒゲがからまっていませんか？  
P16・17「お手入れ方法」の項をお読みください。

### 充電しても使用時間が極端に短い

- ▶シェーバーが完全に止まるまで作動させてからもう一度充電してください。  
それでも改善されないときは、充電電池の寿命です。

### スイッチを押しても作動しない

- ▶充電はしましたか？  
約1時間、充電してください。
- ▶刃が動かなくなるほど汚れているか、刃にキズがあるか、または刃が破損していませんか？  
シェーバーをお手入れするか、刃を交換してください。

### 充電できない


- ▶充電アダプタの電源プラグ部はコンセントにきちんと差し込まれていますか？  
充電スタンドの電源コネクタ受部に充電アダプタのコードがきちんと差し込まれていますか？  
確認してください。
- ▶充電アダプタの電源コードが断線していませんか？  
新しい充電アダプタをお買い求めください。  
・アダプタ品番：HQ8505

以上の点検により、正常な状態に戻らない場合は、  
お買い求めの販売店か小泉成器修理センターにお問い合わせ願います。







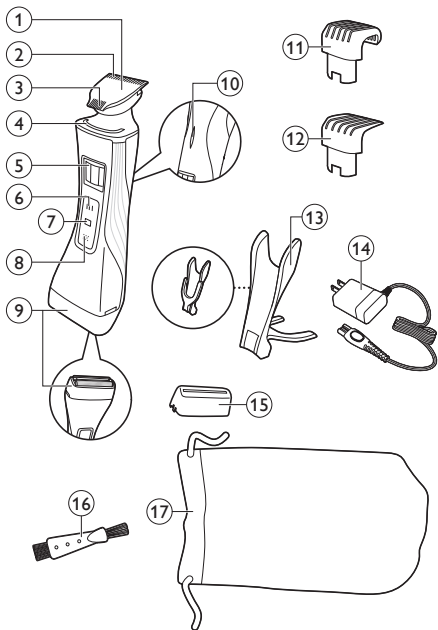

## Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

## General description (Fig. 1)

- 1 Trimming head
- 2 Regular trimming side (32 mm)
- 3 Precision trimming side (15 mm)
- 4 Guiding groove
- 5 Hair length setting selector
- 6 Trimming head on/off button
- 7 Travel lock indication
- 8 Shaving head on/off button
- 9 Shaving head
- 10 Battery status indicator
- 11 Regular trimming comb
- 12 Precision trimming comb
- 13 Charging stand
- 14 Adapter with small plug
- 15 Protection cap
- 16 Cleaning brush
- 17 Storage pouch

## Important

Read this user manual carefully before you use the appliance and save it for future reference.

### **Danger**

- Keep the adapter dry.

### **Warning**

- Check if the voltage indicated on the adapter corresponds to the local mains voltage before you connect the appliance.

- The adapter contains a transformer. Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children shall not play with the appliance.

**Caution**

- Use, charge and store the appliance at a temperature between 5°C and 35°C.
- Do not charge the appliance in the storage pouch.
- Only use the adapter and the charging stand supplied.
- Never immerse the appliance in water or any other liquid. Only rinse the appliance under the tap to clean it.
- If the appliance is subjected to a major change in temperature, pressure or humidity, let the appliance acclimatise for 30 minutes before you use it.
- If the adapter or the charging stand is damaged, always have it replaced with one of the original types in order to avoid a hazard.
- Do not use the appliance if the shaving head or one of the trimming combs is damaged or broken, as this may cause injury.
- This appliance is only intended for trimming and dry shaving facial hair (beard, moustache and sideburns).



### Compliance with standards

- The appliance complies with the internationally approved IEC safety regulations and can be safely used in the bath or shower.
- This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

### Charging

Charging normally takes approx. 1 hour.

When the appliance is fully charged, it has an operating time of 75 minutes.

Battery status indicator:

- When the battery status indicator flashes white, the battery is charging.
- When the battery status indicator lights up white continuously, the battery is fully charged. This indication is shown for 30 minutes. Then the battery status indicator goes out.
- When the battery status indicator flashes orange, the battery is almost empty (approx. 10 minutes of operating time left).
- When the battery status indicator flashes orange quickly, the battery is empty. You have to charge the appliance before you can use it again.

**Note:** *The appliance can only be charged in the charging stand.*



**1** Insert the small plug into the charging stand.

*Note: The small plug is easiest to insert when the charging stand is folded.*



**2** Unfold the charging stand ('click').

**3** Put the adapter in the wall socket.



**4** Put the appliance in the charging stand.



▶ The battery status indicator starts to flash white to indicate that the battery is charging.

▶ When the battery is fully charged, the battery status indicator lights up white continuously.

## Using the appliance

You can use the appliance to trim or dry shave facial hair (beard, moustache and sideburns). This appliance is not intended for shaving or trimming lower body parts.

*Tip: Take your time when you first start to shave. You have to acquire practice with the appliance. Your skin also needs some time to adjust to the procedure.*

### Trimming with comb

The trimming combs allow you to trim to different lengths.

Start at the highest setting to acquire practice with this appliance.


See the table below for an overview of the hair length settings and the corresponding hair lengths.

Setting	Hair length after trimming
1	1 mm - 3/64 inch
.	1.5 mm - 1/16 inch
2	2 mm - 5/65 inch
.	2.5 mm - 3/32 inch
3	3 mm - 1/8 inch
4	4 mm - 5/32 inch
5	5 mm - 3/16 inch
6	6 mm - 1/4 inch
7	7 mm - 9/32 inch
8	8 mm - 5/15 inch
9	9 mm - 3/8 inch
10	10 mm - 13/32 inch

\* no comb = 0.5mm - 1/32 inch



- 1** Hold the appliance in the trimming position, with the trimming head pointing upwards and the shaving head pointing downwards.




- 2** Slide the comb into guiding groove of the appliance ('click').




- 3** Press the hair length setting selector and then move it from left to right or right to left to select a setting.



- The line above the hair length setting selector shows which setting you have selected.



- 4** Press the trimming head on/off button once to switch on the trimming head.
  - ▶ The on/off button lights up to indicate that the trimming head is operating.



- 5** To trim the hair, move the trimming comb through the hair slowly.

### Tips


- Always make sure that the tips of the trimming comb points in the direction in which you move the appliance.
- Make sure that the flat part of the trimming comb is always in full contact with the skin to obtain an even hair length result.
- Since hair grows in different directions, you need to move the appliance in different directions as well (upward, downward or across).
- You can switch on the trimming head while the shaving head is operating. If you do this, the shaving head is switched off immediately.
- Trimming is easier when the skin and hair are dry.



- 6** When you are finished, press the trimming head on/off button again to switch off the trimming head.

### Trimming without comb

The comb keeps the trimming head at a set distance from your head. You can use the trimming head without comb. If you use the trimming head without comb, your hair is cut off close to the skin (approx. 0.5 mm).



- 1** To remove the comb, pull it off the appliance. Never pull at the flexible top of the comb. Always pull at the bottom part.





- 2** Press the trimming head on/off button to switch on the trimming head.
- 3** Hold the appliance with the trimming head pointing upwards and make downward strokes with the regular side of the trimming head.

### Using the precision side of the trimming head

The precision trimming head is only half as wide as the regular trimming head. It therefore allows more precise styling of the area around the ears, the sideburns and also around the mouth and under the nose.



- 1** To use the precision side of the trimming head, simply turn the trimming head until the precision side points towards the front of the appliance.
- 2** Press the trimming head on/off button to switch on the trimming head.
- 3** Hold the appliance with the trimming head pointing upwards and make downward strokes with the precision trimming head.



### Shaving

Before you use the shaving head, always check it for damage or wear. If the shaving head is damaged or worn, do not use it, as injury may occur. Replace a damaged shaving head before you use it again (see chapter 'Replacement').

#### Shaving tips and tricks

- The shaving head is suitable for both wet and dry use. Use the shaving head with shaving gel or foam

for extra skin comfort, or use the shaving head dry for extra convenience.

**Note:** We advise you to use the shaving head with shaving gel or foam when you use it for a wet shave. Do not use thick shaving cream or shaving oil with this shaver.

- For optimal shaving results, make circular movements during use.
- Make sure that the shaving head is in full contact with the skin.
- You can switch on the shaving head while the trimming head is operating. If you do this, the trimming head is switched off immediately.
- Your skin may need 2 or 3 weeks to get accustomed to the Philips shaving system.



### Wet shaving

- 1** Apply some water to your skin.
- 2** Apply shaving foam or shaving gel to your skin.
- 3** Rinse the shaving unit under the tap to ensure that the shaving unit glides smoothly over your skin.
- 4** Hold the appliance in the shaving position, with the shaving head pointing upwards and the trimming head pointing downwards.



- 5** Press the shaving head on/off button once to switch on the shaving head.
- ▶ The on/off button lights up to indicate that the shaving head is operating.



- 6** Place the shaving head on the skin and move the appliance against the direction of hair growth while you press it lightly.



*Note: Rinse the shaving head under the tap regularly to ensure that it continues to glide smoothly over your skin.*



- 7** To switch off the shaving head after use, press the shaving head on/off button again.
- 8** Clean the shaving head (see chapter 'Cleaning and maintenance', section 'Quick cleaning the shaving head after wet shaving').

*Note: Make sure you rinse all foam or shaving gel off the shaver.*

### **Dry shaving**



- 1** Hold the appliance in the shaving position, with the shaving head pointing upwards and the trimming head pointing downwards.



- 2** Press the shaving head on/off button once to switch on the shaving head.  
▶ The on/off button lights up to indicate that the shaving head is operating.



- 3** Place the shaving head on the skin and move the appliance against the direction of hair growth while you press it lightly.



- 4** To switch off the shaving head after use, press the shaving head on/off button again.

### Overload protection

If you press the trimming head or shaving head too hard onto your skin or if its cutters gets blocked (e.g. by clothes etc.), the on/off button of the blocked trimming head or shaving head flashes quickly and the appliance switches off automatically. Remove whatever is blocking the cutters before you use the appliance again.

### Cleaning and maintenance

Clean the appliance after every use.

Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Only clean the appliance and the adapter with the cleaning brush supplied.

*Note: The trimming head and shaving head do not need any lubrication.*

### Cleaning the trimming head

- 1 Switch off the appliance.
- 2 Pull the comb off the trimming head.

- 3 Clean the trimming head under the tap.


### Cleaning the trimming head connector

*Note: Make sure that you clean the trimming head connector at least once every three months.*

- 1 Switch off the appliance.

- 2 Gently pull the trimming head off the appliance.

- 3 Remove the hairs from the inside of the trimming head connector with the cleaning brush.





- 4 Clean the inside of the trimming head with the cleaning brush.



- 5 After cleaning, put the trimming head back onto the appliance.

### Quick cleaning of the shaving head after wet shaving or shaving with shaving foam

- 1 Cup your hand under a running tap and fill it with water.



- 2 Switch on the appliance and hold the shaving head in the water collected in your cupped hand.

The running motor will help clean the inside of the shaving head.




- 3 Move the shaving head around until all visible foam has disappeared.

*Note: The shaving head is fragile. Handle it carefully. Replace the shaving head if it is damaged.*

### Thoroughly cleaning of the shaving head

- 1 Switch off the appliance.





- 2** Pull the shaving head off the appliance.

*Note: The shaving head is fragile. Handle it carefully. Replace the shaving head if it is damaged.*



- 3** Rinse the shaving head with lukewarm water.

Do not clean the shaving head with the cleaning brush, as this may cause damage.



- 4** Remove hairs from the cutters with the cleaning brush.

*Note: Do not brush the cutters in a different direction than indicated, as this may cause damage.*



- 5** After cleaning, snap the shaving head back onto the appliance ('click').

## Replacement

In case of frequent use, replace the shaving foil and the cutters every year.

## Shaving foil

- 1** Pull the shaving head off the appliance.
- 2** Remove the old shaving foil from the shaving head.

- 3 Snap the new shaving foil into the shaving head ('click').

### Cutters

---


- 1 Pull the shaving head off the appliance.
- 2 Remove the cutters.
- 3 Snap the new cutters onto the appliance ('click').

### Storage



You can fold the charging stand for easy travelling or storage.

- 1 To fold the charging stand: fold the base of the charging stand against the appliance holder.



- 2 Put the protection cap on the shaving unit.

### Travel lock

---

The appliance has an integrated travel lock which prevents the appliance from accidentally being switched on during travel.

- 1 To activate the travel lock, press and hold the trimming head on/off button, the shaving head on/off button or both for at least 4 seconds while the travel lock indication flashes 3 times.
- ▶ The travel lock is only activated when the indication lights up continuously.



- 2 To deactivate the travel lock, press and hold the trimming head on/off button, the shaving head on/off button or both for at least 4 seconds while the travel lock indication flashes 4 times.
- ▶ The travel lock is now deactivated and the appliance switches on.

*Note: You can also deactivate the travel lock by charging the appliance.*

### Ordering accessories

To buy accessories or spare parts, visit **www.shop.philips.com/service** or go to your Philips dealer. You can also contact the Philips Consumer Care Centre in your country (see the worldwide guarantee leaflet for contact details).

### Environment



- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.



- The built-in rechargeable battery contains substances that may pollute the environment. Always remove the battery before you discard and hand in the appliance at an official collection point. Dispose of the battery at an official collection point for batteries. If you have trouble removing the battery, you can also take the appliance to a Philips service centre. The staff of this centre will remove the battery for you and will dispose of it in an environmentally safe way.

### Removing the rechargeable battery

Only remove the rechargeable battery if it is completely empty.

- 1** Disconnect the appliance from the mains and let the appliance run until the motor stops.
  - 2** Remove the shaving head and the cutters from the appliance.
  - 3** Undo the four screws of the top cover with a screwdriver.
  - 4** Remove the cover.
  - 5** Insert a screwdriver under the back panel and remove the panel.
  - 6** Insert the screwdriver under the cover of the basic body and remove the cover.
- Now you see a printed-circuit board.
- 7** Break the battery from the printed-circuit board.

Be careful, the battery strips are very sharp.

### Guarantee and support

If you need information or support, please visit **[www.philips.com/support](http://www.philips.com/support)** or read the separate worldwide guarantee leaflet.



# 保証と アフターサービス

保証書と修理サービスについて  
(必ずお読みください)

## 〈保証書・最終ページに付属〉

- 保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取っていただき内容をよくお読みのと大切に保管してください。

## 【補修用性能部品の保有期間】

- 補修用性能部品の保有期間は製造打ち切り後6年です。
- 性能部品とは、その製品の機能を維持するために必要な部品です。

保証 期間	お買い上げ日から2年間
対象 部分	本体(シェーバー・ リバーシブルトリマー・ コーム・保護キャップ・ クリーニングブラシ・ ソフトポーチ・充電アダプタ・ 充電スタンドを除く)

## 【ご不明な点や修理に関するご相談は】

- 修理に関するご相談ならびにご不明な点は、お買い上げの販売店または、小泉成器修理センターにお問い合わせください。

## 【修理を依頼されるときは】

- 修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。尚、異常のあるときはご使用を中止し、お買い上げの販売店へご依頼ください。

## 【保証期間中は】

- 製品に保証書を添えてお買い上げの販売店にご持参ください。  
保証書の記載内容により無料修理いたします。

## 【保証期間が過ぎているときは】

- 修理によって商品の機能が維持できる場合は、補修用性能部品の保有期間内であれば、ご希望により有料で修理させていただきます。

## 【海外での本製品の保証及びアフターサービスについて】

- 本製品の保証は海外においても有効です。(同シリーズ製品の取り扱いがある国に限りです)
- 日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。
- 海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お困りの点がございましたら下記までご連絡ください。

Philips Consumer Lifestyle Service Department P.O.Box 20100 9200 CA DRACHTEN  
The Netherlands Fax:+31 51 259 2785

## 【お客様の個人情報のお取り扱いについて】

- お受けしましたお客様の個人情報は、株式会社フィリップスエレクトロニクスジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

お買い上げ日	年 月 日	お買い上げ 店名	TEL. ( )
--------	-------	-------------	----------

## ご使用の時、このような症状はありませんか？

- 本体にさわると時々電気を感じる。
- こげくさい臭いがする。
- 電源コード部を動かすと通電したり、しなかったりする。
- その他の異常、故障がある。

このような症状の時は、故障や事故防止のため、スイッチを切り、充電アダプタをコンセントから外して、必ず販売店にご相談ください。



## 仕 様

品 番	QS6162/32
電 源 方 式	充電式(専用充電アダプタ使用)
充電アダプタ品番	HQ8505
消 費 電 力	9W
定 格 電 圧	AC100-240V(50/60Hz)
本 体 質 量	225g
充 電 時 間	約1時間
替 刃	QS6101

※改良の為、仕様を予告なく変更することがあります。

株式会社 フィリップス エレクトロニクス ジャパン

日本販売代理店 小泉成器株式会社 〒541-0051 大阪市中央区備後町3-3-7



### 〈無料修理規定〉

1. 取扱説明書、本体貼付ラベル等の注意書に従った正常な使用状態で保証期間内に故障した場合には、無料修理します。
2. 保証期間内に故障して無料修理をお受けになる場合には、商品と保証書をご持参、ご提示のうえ、お買い上げの販売店にご依頼ください。なお、商品を直接メーカーへ送付した場合の送料等はお客様の負担となります。
3. ご贈答、ご転居でお買い上げの販売店に修理を依頼できない場合は、小泉成器修理センターにご依頼ください。
4. 保証期間内でも次の場合には有料修理になります。
  - ① 使用上の誤り及び不当な修理や改造による故障及び損傷。
  - ② お買い上げ後の輸送、移動、落下等による故障及び損傷。
  - ③ 火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障及び損傷。
  - ④ 一般家庭以外(例えば、業務用の長時間使用)に使用された場合の故障及び損傷。
  - ⑤ 保証書の提示がない場合。
  - ⑥ 保証書にお買い上げ年月日、お客様名、販売店名の記入のない場合、或は字句を書き換えられた場合。

※保証書は、本書に明示した条件のもとにおいて無料修理をお約束するものです。従って保証書を発行している者(保証責任者)、及びそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。

保証期間経過後の修理についてご不明の場合は、お買い上げの販売店または小泉成器修理センターにお問い合わせください。

※保証期間経過後の修理・補修用性能部品の保有期間について詳しくは取扱説明書の保証とアフターサービスの項目をご覧ください。

※お客様にご記入いただいた個人情報(保証書の控え)は保証期間内のサービス活動及びその後の安全点検活動のために利用させていただく場合がございます。ご了承ください。また個人情報は、株式会社フィリップスエレクトロニクスジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

# フィリップス スタイルシェーバー 保証書 持込修理

## CERTIFICATE OF PURCHASE

この保証書は、「無料修理規定」記載内容で無料修理を行うことをお約束するものです。お買い上げの日から下記期間中に故障が発生した場合は、本書をご提示のうえ、お買い上げの販売店に修理をご依頼ください。

お客様にご記入いただいた個人情報(保証書の控え)は、株式会社フィリップスエレクトロニクスジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

品名	スタイルシェーバー		
品番	QS6162/32		
保証期間	お買い上げ日より2年		
対象部分	本体(シェーバー・リバーシブルトリマー・コム・保護キャップ・クリーニングブラシ・ソフトポーチ・充電アダプタ・充電スタンドを除く)		
お買い上げ日	年	月	日
お客様	ご住所 〒		
	ご芳名		
	電話番号		
★販売店	販売店名・住所・電話番号		

- ★ 保証書は再発行しませんので、大切に保管してください。
- ★ ご販売店様へ この保証書はお客様へのアフターサービスの実施と責任を明確にするものです。贈答品、記念品の場合も含めて必ず記入捺印してお客様にお渡しください。

### ★ 製品に関するお問い合わせ

フィリップスお客様情報センター  
ナビダイヤル(全国共通)  
**0570(07)6666**

ナビダイヤルにかからない時は  
TEL 06(6261)8230 FAX 06(6268)1432  
日本販売代理店 小泉成器株式会社  
〒541-0051 大阪市中央区備後町3-3-7

### ★ 修理に関するお問い合わせ

小泉成器修理センター  
ナビダイヤル(全国共通)  
**0570(09)8888**

ナビダイヤルにかからない時は  
小泉成器東日本修理センター TEL 048(718)3340  
〒344-0127 埼玉県春日部市水角1190  
小泉成器西日本修理センター TEL 06(6613)3145  
〒559-0033 大阪市住之江区南港中1丁目3番98号

### ★ 部品に関するお問い合わせ

小泉成器部品センター  
ナビダイヤル(全国共通)  
**0570(09)2222**

ナビダイヤルにかからない時は  
TEL 06(6613)3211  
〒559-0033 大阪市住之江区南港中1丁目3番98号

受付時間：平日9:00～17:30 (土・日・祝日・夏期休暇・年末年始を除く)

