


PHILIPS

BHB868

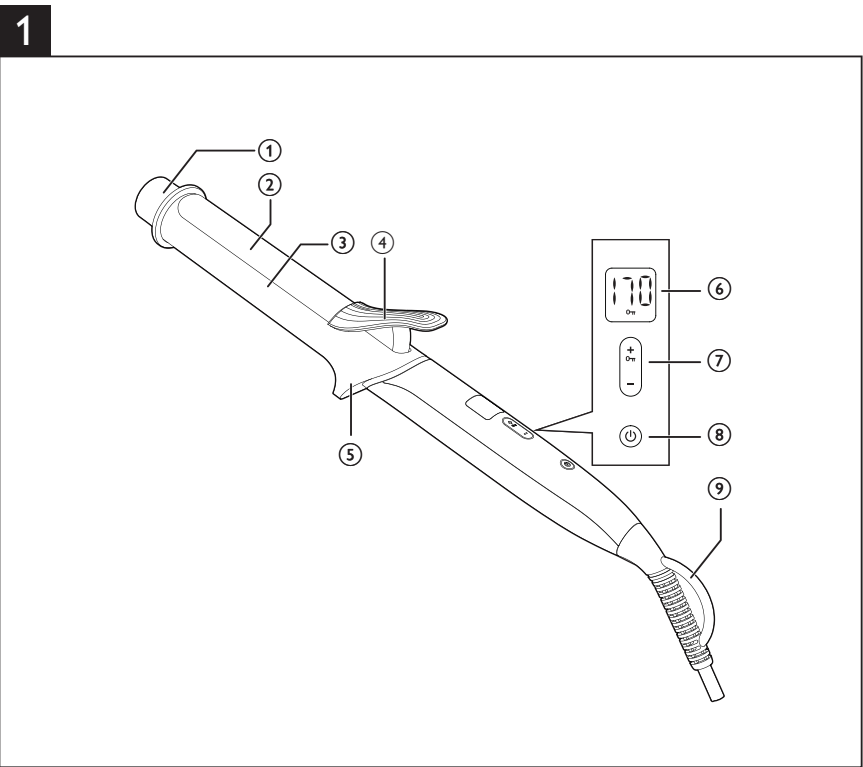

English

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.


- WARNING: Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard, even when the appliance is switched off.
- WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Always unplug the appliance after use.
- The supply cord cannot be replaced. If the supply cord is damaged, you must have the appliance replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



Specifications are subject to change without notice
© 2022 Koninklijke Philips N.V.
All rights reserved.




3140.035.4241.4 (14/11/2022)

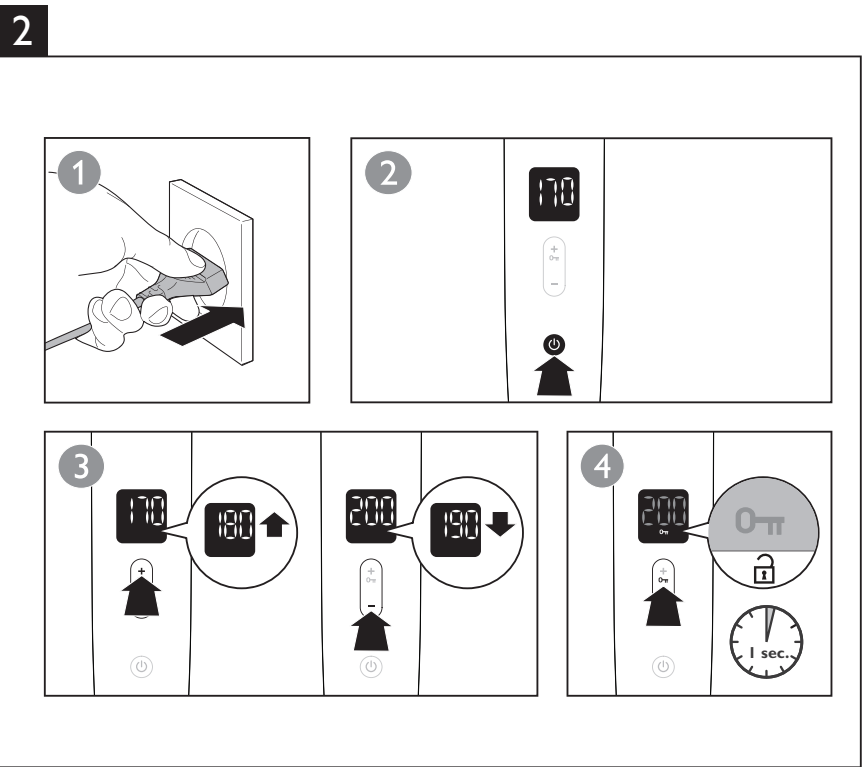

- Prevent the supply cord from coming into contact with the hot parts of the appliance.
- Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.
- Keep the heating plate/barrel clean and free of dust and styling products such as mousse, spray and gel. Never use the appliance in combination with styling products.
- The heating plate/barrel has coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.
- If the appliance is used on color-treated hair, the heating plate/barrel may be stained.
- Always place the appliance with the stand on a heat-resistant, stable flat surface. The hot heating plate/barrel should never touch the surface or other flammable material.
- Keep the appliance away from flammable objects and material when it is switched on.
- Only use the appliance on dry hair.
- Do not insert metal object into openings (e.g. ionizer outlet if present) to avoid electric shock.
- Burn hazard. Keep appliance out of reach from young children, particularly during use and when it is cooling down.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

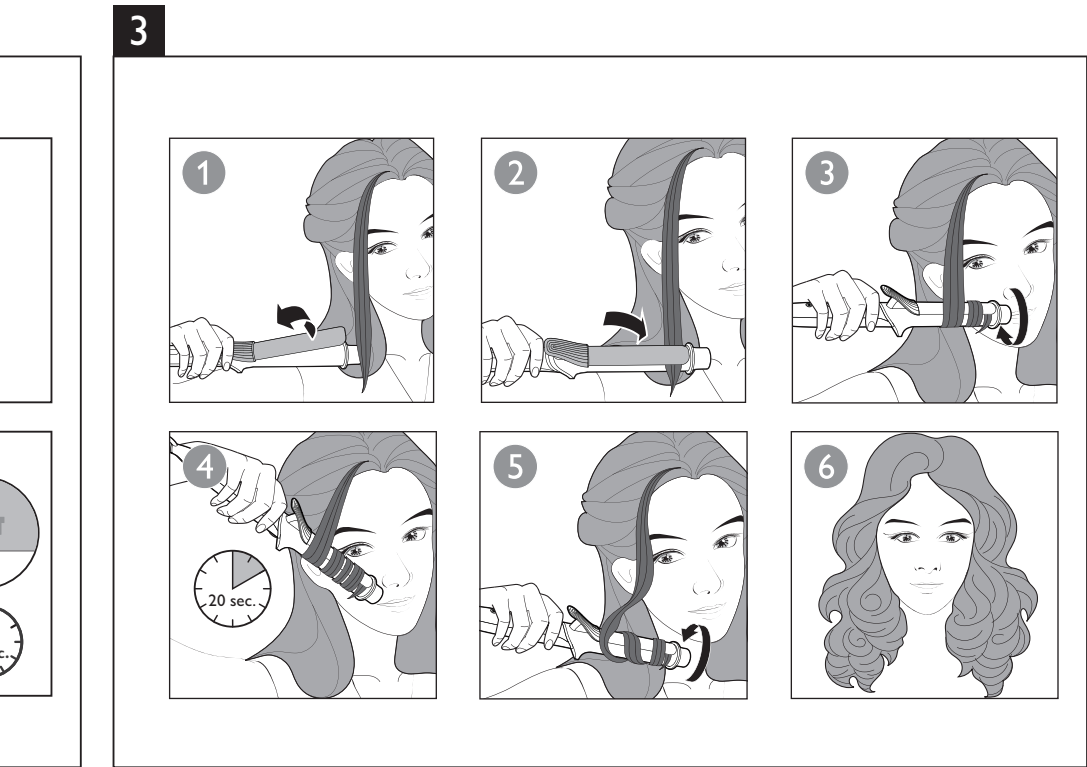

Recycling

- This symbol means that electrical products shall not be disposed of with normal household waste.
- Follow your country's rules for the separate collection of electrical products.



2 Introduction

The curler with 32 mm barrel helps you easily achieve vivid, bouncy curls and ringlets for joyful and young look. Protective ceramic coating ensures even heat distribution and takes good care of your hair while curling. Top temperature of 200 °C guarantees optimal result while minimizing hair damage. We hope you will enjoy using your curler.

• Key Lock Function

If no buttons pressed for 5 seconds, the Key Lock is activated automatically and key lock icon will be displayed (⑥). The first automatic activation after switching on the appliance is after 15 seconds. To unlock the appliance, press the (⑦) for 1 second.

3 Curl your hair (Fig.3)

- 1 Connect the plug to a power supply socket.
- 2 Press and hold the button (⑧) for one second to switch on the appliance.
→ The default temperature setting 170°C is displayed (⑥).
- 3 Select your desired temperature setting by pressing + or - (⑦) according to the Hair type table below.

Hair type	Temperature settings
Fine	130-150 °C
Normal	160-180 °C
Thick	190-200 °C

- 4 Before you start to curl, comb and divide your hair into small sections. Press the lever (④) and place a section of hair between the barrel (③) and clip (②).
- 5 Close the clip by releasing the lever and slide the barrel down to the hair tips.
- 6 At the hair tips, turn and rotate the curler naturally so that hair is wrapped around the barrel from tip to root.
- 7 Hold the curling iron in position.
- 8 Unwind the section of hair until you can open the clip again with the lever.
- 9 To curl the rest of your hair, repeat steps 4 to 8.

After use:

- 1 Switch off the appliance and unplug it.
- 2 Place it on the resting stand (⑤) until it cools down.
- 3 Remove hair and dust from the barrel and clip.
- 4 Clean the barrel and the clip with damp cloth.
- 5 Keep it in a safe and dry place, free of dust. You can also hang it with the hanging loop (⑨).

4 Support

If you need information or support, please visit www.philips.com/support.

한국어

필립스코리아 제품을 구입해 주셔서 감사합니다!
필립스코리아가 드리는 모든 지원 혜택을 받으실 수 있도록 www.philips.com/welcome 에서 제품을 등록하십시오.

1 주의 사항

본 제품을 사용하기 전에 이 사용 설명서를 주의 깊게 읽고 나중에 참조할 수 있도록 잘 보관하십시오.

- 경고: 본 제품은 물이 없는 곳에서 사용하십시오.
- 욕실에서 사용할 경우 사용 후에는 반드시 전원 플러그를 뽑으십시오. 전원이 꺼져 있더라도 물에 닿으면 위험할 수 있습니다.
- 경고: 본 제품을 욕조, 샤워기, 대야 또는 기타 물이 있는 용기 근처에서 사용하지 마십시오.
- 사용 후에는 반드시 제품의 전원 코드를 뽑으십시오.




- 전원 코드는 교체할 수 없습니다. 전원 코드가 손상된 경우, 안전을 위해 제품을 필립스코리아 공인 서비스 센터 또는 필립스코리아 서비스 지정점에 의뢰하여 교체하십시오.

- 8세 이상의 아이들과 신체적인 감각 및 정서적인 능력이 떨어지거나 경험과 지식이 풍부하지 않은 성인이 이 제품을 사용하려면 제품 사용과 관련하여 안전하게 사용할 수 있도록 지시사항을 충분히 숙지한 사람의 도움을 받아야 합니다. 어린이가 제품을 가지고 놀지 않도록 하십시오. 어린이가 혼자 제품 청소나 정비를 하지 않도록 하십시오.

- 추가 안전을 위하여 잔여 전류 소멸 장치(RCD)를 욕실 전원에 설치할 것을 권장합니다. 이 RCD의 정격 잔여 전류는 30mA 이하여 합니다. 자세한 설치 방법은 전기 설비업체에 문의하십시오.

- 사용 후 전원 코드를 당기지 마십시오. 항상 플러그를 잡고 제품의 전원 코드를 뽑으십시오.
- 제품에 전원을 연결하기 전에 제품에 표시된 전압과 해당 사용 지역의 전압이 일치하는지 확인하십시오.
- 이 사용자 설명서에 나와있는 이외의 용도로 제품을 사용하지 마십시오.
- 인조 모발에 제품을 사용하지 마십시오.
- 제품이 전원에 연결된 상태로 외출하거나 자리를 비우지 마십시오.
- 다른 제조업체에서 만들었거나 필립스코리아에서 권장하지 않은 제품 액세서리 또는 부품을 절대 사용하지 마십시오. 이러한 액세서리나 부품을 사용했을 경우에는 품질 보증이 무효화됩니다.

- 전원 코드를 제품에 감지 마십시오.
- 제품이 충분히 식은 다음 보관하십시오.
- 젖은 손으로 제품을 작동하지 마십시오.
- 검사 또는 수리가 필요한 경우에는 항상 필립스코리아 서비스 지정점으로 문의하십시오. 비공인업체에서 수리하는 경우 제품 사용자에게 심각한 상황을 초래할 수 있습니다.
- 플러그 어댑터로 제품을 연결하지 마십시오. 불가피한 경우 반드시 인증 받은 플러그 어댑터를 사용하십시오.
- 이 제품은 매우 뜨거우므로 제품 사용 중에 극히 주의해야 합니다. 다른 부위는 뜨거우므로 피부에 닿지 않도록 주의하고 핸들뿐만 제품을 잡으십시오.
- 전원 코드가 제품의 뜨거운 부분에 닿지 않도록 주의하십시오.
- 가열된 상태에서 제품에 타월이나 옷 등 어떤 것으로도 덮지 마십시오.

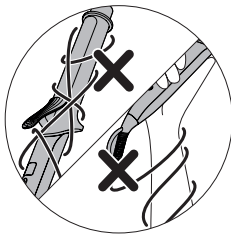

EMF(전자기장)

이 제품은 EMF(전자기장)와 관련된 모든 기준 및 규정을 준수합니다.

재활용

- 이 기호는 전기 제품을 일반 가정용 쓰레기와 함께 폐기하면 안 된다는 것을 의미합니다.
- 전기 제품의 분리 수거에 대한 해당 국가의 규정을 준수하십시오.



2 소개

32mm의 브러시가 장착된 컬러를 이용하면 활력과 생기가 넘치는 풍성한 컬과 링릿을 간단하게 연출할 수 있습니다. 보호용 세라믹 코팅으로 열이 고르게 분산되고 컬링 중에도 머릿결이 보호됩니다. 200°C의 스타일링 온도로 모발의 손상을 최소화하면서 최적의 결과를 얻으세요. 컬러로 멋진 헤어스타일을 연출하십시오.

• 키 잠금 기능

5초 간 아무 버튼도 누르지 않을 경우 키 잠금이 자동으로 활성화되고 키 잠금 아이콘 이 표시됩니다(⑥). 제품을 켜 후 첫 번째 자동 활성화는 15초 후입니다. 제품의 잠금을 해제하려면 (⑦)를 1초간 누릅니다.

3 모발 컬링(그림 3)

- 1 전원 공급 장치 콘센트에 플러그를 꽂습니다.
- 2 전원을 켜려면 버튼(⑧)을 1초 동안 누릅니다.
→ 기본 온도 설정인 170°C가 표시됩니다(⑥).
- 3 아래의 모발 타입 기준표를 참고하여 + 또는 - (⑦) 버튼을 눌러 원하는 온도 설정을 선택합니다.

모발 타입	온도 설정
가는 모발	130~150°C
보통 모발	160~180°C
굵은 모발	190~200°C

